
50700-0045-06 P3+蓝讯-说明书 56.0*64.0\80g书纸黑色印刷\中英文

Product Diagram

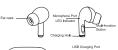







- Package List · P3+ Wireless Earbuds P3+ Charging Case
- Type-C Charging Cable User Manual

Functional Operation Instructions

OR hold the MHB for as to power on.

2. Turn off
Put the earbuds into the case, they will turn off automatically and begin to
charge. Also, they will turn off when there is no connection in 5 minutes.
You can turn them off manually by holding MFB 5s when no connection.

on, wincommakes mem automaticary recommers to the previous device.

4. Flay/Pass,
In standby mode, press the multi-function button on either earbuid to play,
a track directly. Press the multi-function button on either earbuid to pause
the track on the go.

5. NextPrevious Track
Press twice quicity left earbud's multi-function button to back to the previous song while playing music, and the right earbud's multi-function button to skip to the next track.

to the host track.

6. Volume Up/Down
Hold the left one's mult-function button for 2s until you hear a beep sound to
decrease the volume step by step. Hold the right one's multi-function button
for 2s until you hear a beep sound to increase the volume step by step.

Warm notice

For each single earbud, you cannot play the previous track or turn dow the volume with multi-function button when it is working individually.

7. Answer Call
When a phone call comes, press either earbud's multi-function button to

8. Hang Up
When calling, click either earbud's multi-function button one time to hang
up the call.

9. Reject Cell
When a phone cell rings, hold either earbud's multi-function button for 1x to reject it

10. Voice Assistant
Press the right earbud's multi-function button three times to activate Apple Siri or Google Voice Assistant for voice control.

11. Low Battery Alert
When the wireless earbuds are in low battery, a low-battery alert will be played every 30s until it turns off.





Product Specifications

•Model Number:P3+ 1. There off the insulating fain.
2. Further exhausts been into occase to change (when charging, the 2. Further exhausts been into the coarson of change (when charging, the 2. Open the case and these out the earthough, they will power on thermal and was for paring red and the large light flashing alternately), out, deep put them bed, in the case and does in the deep men that they are changed and the large them took to the case of does in the deep men that they are changed alternately. Act, paring, one given the power of the property of the large from the deep of the large from the fill the deep of the large from the fill the deep of the large from the fill the fill the large from the fill the large from the fill the large from the fill the fill the fill the fill the large from the fill t

*Moder Number: 1-3
 *Bluetooth Version: V5.3+EDR
 *Compatible Mode: A2DP,AVRCP,HFP,HSP
 *Transmission Distance: 10 Meters (No Barriers)
 *Frequency range: 2.402GHz~2.480GHz

•HI-Fi Equipment:Φ10mm*2 Impedance: 32Ω Standby Time: About 60hrs

 Standby Time: About others
 Flay Time: About 3:hrs
 Gall Time: About 3:hrs
 Gall Time: About 3:hrs
 Gall Time: About 3:hrs
 Gallery Specificatine: Earbod(s) 3:7V/25mAh; Changing Case 3:7V/180mAh
 Charging Time: About 1 hour Weight(Single Earbud):3.1 g

Earbuds indicator

Power on: Blue light flashes for 1s Power off: Red light flashes for 1s

Power off: Red light flashes for 1s and goes out Pairing: Red and blue light flashes afternately Connected: No light Musio/Call: No light Low battery: Red light flashes every Charging: Red light on Fully charged: Red light off

Restore factory setting

1. Clear the record: Turn off Bluetooth on the phone, and quickly press MFB button four times when the earbuds power on but not connected.

After resetting, please delete 'P3+', and search for 'P3+' again for

Attention

Please charge in a safe environment. When charging the case, please separate the charging case from the USB charging case as soon as possible after the charging indicator light indicates full charge to avoid damage to the charging case if it is left plugged in for a long period of time.

Try to avoid using the headset in a corrosive environment, so as not to affect the function of the earbuds

Warm reminder: When you use them for music listening or call answering, please pay attention to the volume, so as to avoid excessive volume to your hearing!

リセットしてください!


除し、接続を再検索する必要があります。

P3+ ワイヤレス イヤホン



使用説明書

製品展示図

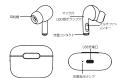

パッケージ内容 • P3+ワイヤレスイヤホン

・P3+ソイヤレスイヤホン・P3+充電ケース・Type-C充電ケーブル・予備の大、小イヤーキャップ

機能操作の説明

替わります。

左側のイヤホンのマルナファンクションボタンを2秒間最昇しし、「ビー」という音が 聞こえたら手を放し、徐々に音量を下げてください。 右イヤホンのマルチファンクションボタンを「ビー」という音が閉こえるまで2秒間押 し続けてから放し、徐々に音量を上げてください。

ご注意:片耳として、曲戻りと音量減少をサポートできません

7. 電話に出る 携帯電話の着信時には、左/右イヤホンの多機能ボタンをクリックして電話に出る

ことができます。 **8**、 適信して携帯電話の通話を切る時、左右のイヤホンの多機能ボタンをクリッ クしてすべて電話を切ることができる 9、 着信拒否携等電話の着信時、左右のイヤホンの多機能ボタンを1秒長く押す

と着信を担否することができる。 10、 音声アシスタントを起動さイヤホンの多機能ボタンを3回クリックすると、アップルSiriまたはグーグル音声アシスタントを起動して音声削強携帯電話の操作を

ファクスははないなンーフから用アノスティアな影響して、日本の次のかが中央のジョンド 行うことかできる。 11、 仕電力量の提示 Blustooth でおよのパッテリ容量が不足している場合は、30秒間隔でイヤホン の低電力電源がオフになるまで電力不足の警告音を再生します。



イヤーキャップが下を向い



ていることを イヤホンを装着した後、上の回に示す快 重でイヤホン 適で安全な位置までイヤホンをゆっくり と回転させます。イヤホンが正しく取りた けられました。

Charging



If the charging case is out of power, it may cause the earbuds to fall to shut down and remain connected to the phone even when they are placed in the charging case. So please remerber to charge the charging case in

urne.

2. Please use a charger with an output voltage of DCSV/1A to charge the charging case. You can also use a computer USB or other USB interface charger to charge (Please choose a charger certified by a regular manufacturer)

₽**₩**

2-4799 | 149(IXGA)では1911年17年には137年にある449/。 おカバーを開けて2つのイヤホンを取り出し、自動的に電源を入れて相互接続し、ペ アリング持ちモードに入る (赤/青ランプ交互点談)、ヒント:イヤホンの電源が入

っていない場合や無音の場合は、4.5---度を書ケースに買してください、著をして在 っていない場合や解析の場合は、もつ一級労働アー人に関していませい。 最初級になってからか出出て使用するとを検認します。(おサーランプが交互に会え 4 左右ペアリング自動に完成後、イヤホンの1つは点滅が消えますが別のイヤホ ンはお得うンプ交互に活起します。 5スマネのフルールース機能をオンにし、デバイス一覧から(P3+)というデバイ 太を選択して接続させてください。

△別のデバイスに切り替える場合は、最初に以前に接続したデバイスのBluetooth 機能をオフにするか、P3+ベアリング名を削除する必要があります。そうすれば、新 しいデバイスで接続を検索できます。

充電操作

ンロース・ロース は常量がない場合、イヤホンを充電ケースに入れたときにイヤホンはシャットダウンしません。またスマホとの接続を維持しています。そのときはすぐに充電ケ ースに充電してください。

2.必ず出力DCSV/1Aの充電器を使用してください。パソコン等USBの挿し口がある機器を利用可能です。(ご注意:認証済みの充電器をご利用ください。)



Bluetoothバージョン: V 5.3
 電池映修: イヤホン3.7 V / 25 mAh, 充電ボックス3.7 V / 180 mAh
 サポートモード: HFP/HSP/A 2 DP/AVRCP

使用研接收·2.402GHz~2.480GHz

オーディオ: Φ10mm*2 電気抵抗:32Ω

信号距離: 10メートル (大きな障害物がない理想的な環境で)

再生時間: 約3.58時間

充電時間: 約1時間充電する。
 充電ケースのイヤホンへの充電回数: 約1回

片耳イヤホンの重量3.1g イヤホンインジケータ

イヤホンインジケータ 酸溶シストランダイト部側の以上す。 シャットダンスか・ランブイト部側の域 して表えます。 イヤホー体操作・また音が交互に内域 ・音楽ステータス制態や中面がない。 パッテリー機能所・イヤルンのポリテッ 万勢中等とした機能します。 万勢中等のが成立したまま 万場流す。 カランブが消えます

充電ケースインジケータ 充電中: 赤ランブが貞雄 充電高了: 赤ランブが常に貞灯します。 イヤホンが充電中: 南ランブが成打した 「ヤホンか光地中: 青ランフか高() した くッテリー残量低下: 赤ランプが点質

Charging case indicator

Charging: Red light flashing Fully charged: Red light on

Low battery: Red light flashin

Charging Earbud(s): Blue light or

1.安全な環境で充電してください、充電器を充電するときは、充電ランプ が満充電になった後、充電器をUSB充電ケーブルからできるだけ早く分離して、長時間充電器を差し込んで充電器に損傷を与えないようにしてく 2音楽の再生中は、長時間の大音量による聴覚障害を避けるために、音 楽を適切な音量に調整してください。

1 記録をクリアする:まず推帯電話のRivetoothをオフにし、イヤホンを

起動して携帯電話に接続していない状態で、MFBキーを素早く4クリック

"メッナする。 イヤホンが出荷時の設定に戻ったら、携帯電話の接続履歴「P 3+」を削

3イヤホン信号に影響を与える可能性があるため、干渉源のある場所で イヤホンを使用しないようにしてください。

4. ヘッドセットの機能に影響を与えないように、腐食環境でのヘッドセッ

ご注意:この Bluetooth ヘッドセットを使用して音楽を聴いたり、 適話したりする場合は、音量が大きすぎて聴覚に影響を与えないよう、音量を適切に調整するように注意してください。



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.