

Video Baby Monitor

Version 1.0

Content (1) Baby Unit installation (3) Music player (4) Intercom function (5) Volume adjustment (6) Reset the Parent Unit (1) Main menu (3) Alarm clock a. Time and date b. Temperature unit c. Anti-flicker d. Mode setting e. VOX sensitivity setting Language setting..

A Attention

Thank you for purchasing Voger Video Baby Monitor VM300. Now you can see and hear your baby sleeping in the other room or you can monitor your elder kids in their playroom. Before you use the device, please read this EN User Manual carefully.


This product should be assembled by adults

 This product is not a toy, do not allow children to play with it as a toy. This baby monitor is not a substitute for responsible adult supervision. Do not place the baby monitor cables in the cot or with the baby arm's reach (at least

 Keep the cords out of reach of children. Do not use the baby monitor near water or a heat source.

 Only use the power adapters provided. Do not touch the power plug with sharp or metal objects.

Package Content

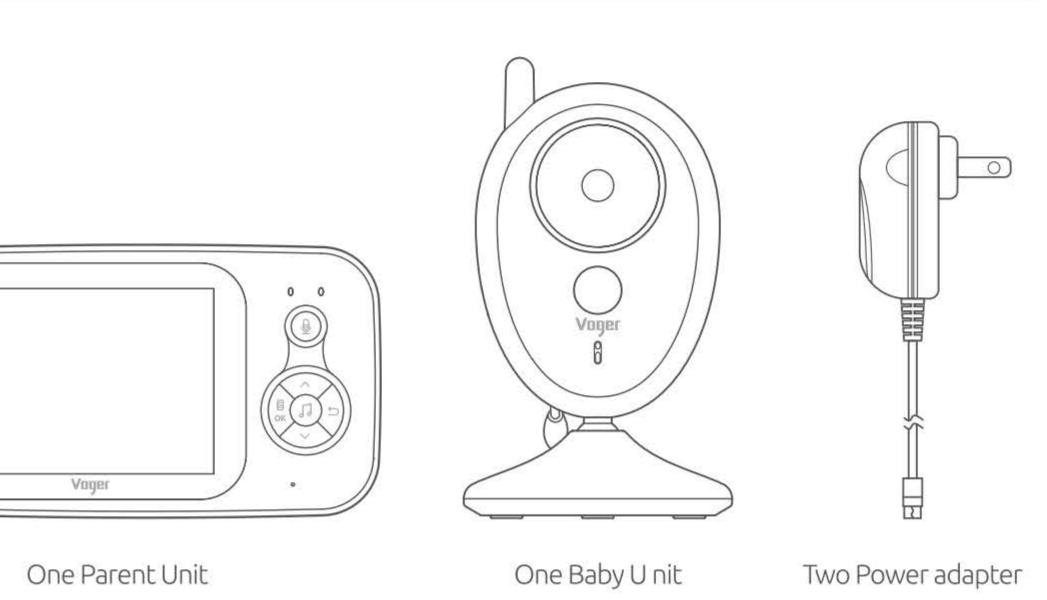

Product Introduction

Overview of your Parent Unit

4. Vox Indicator light

7. Return Button

5. Push to talk Button


6. Volume + Button / Up Button 13. Charging Interface

6. Lautstärke + Taste / Aufwartstaste 13. Einschaltknopf

2. Menütaste / OK-Taste

Sprechtaste

7. Return-Taste

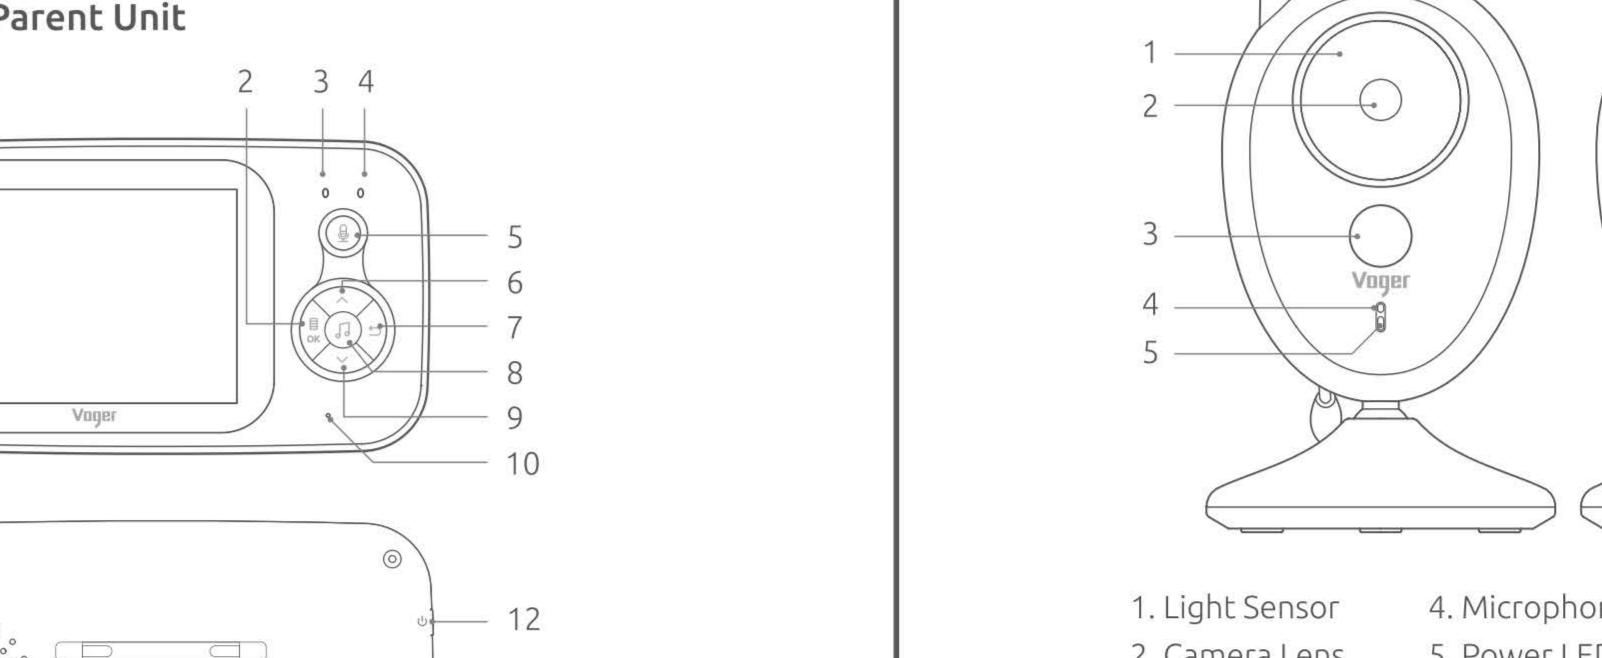


Baby unit installation

until you are satisfied with the image in the parent unit.

(2) To mount the baby unit on the wall Use the template below to mark the wall in the correct places to drill holes

screws. Then, align your baby unit with the screws and push it down.

Overview of your Baby Unit

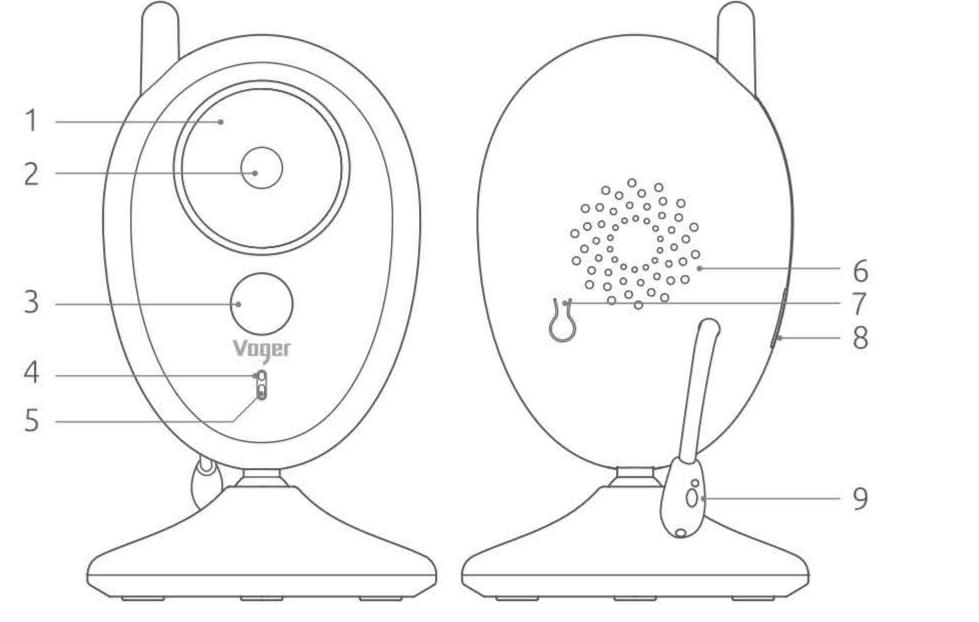

 Light Sensor
 Microphone
 Pair Button Infrared LED
 Speaker 9. Temperature Sensor

Product Introduction

camera lens towards the area you want to monitor. Adjust the baby unit

for wall-mounting screws. Insert 4mm head screws (not supplied) into the holes and tighten the

the picture or sound, try moving the units to different location, and ensure

end to the mains socket. Please fully charge the parent unit before use, so


The LCD screen illuminates and starts up automatically after a few seconds.

Press and hold the power button at least 3 seconds to turn on the parent

unit, then two units will be connect□ed automatically.

that it could continue working without connecting to the power socket.

they are not close to other electronic equipment.

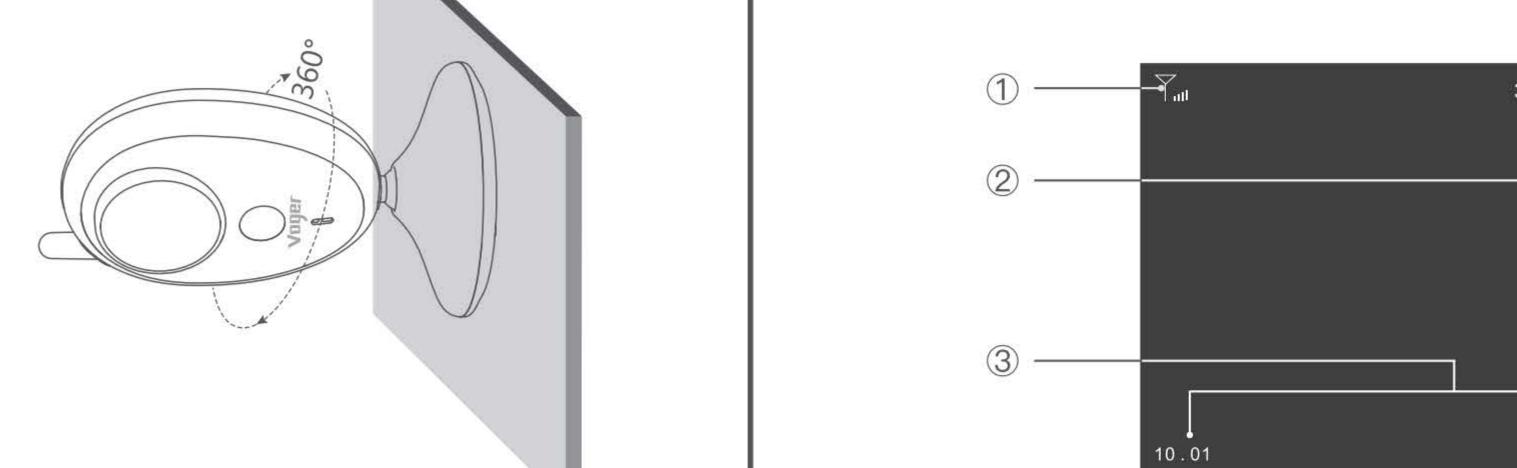

Do not place the baby unit within baby's reach! If there is interference on

Product function introduction

seconds again will turn off it.

Press and hold the Push to talk button on the parent unit to talk to your baby through the baby unit loud□speaker. Volume adjustment

When the video is playing, press the Volume — Button to decrease volume or Volume + Button to increase volume, the display will show the current volume for 5 seconds.

Press and hold the power button at least 3 seconds, the parent unit will be forced to restart.

1. LCD display icon introduction

klarer Bilder im Dunkeln.

Gegensprechfunktion

Lautstärke einsteLleng

Zurücksetzen der Elterneinheit

Neustart der Elterneinheit zu erzwingen.

rat einzuschalten,

Anzeige Signalstarke
 Temparatur im Baby-Schlafzimmer

4 Batterieanzeige

Die Babyeinheit verfugt uber 1 hochintensive Infrarot-LEDzur Aufnahme

Halten Sie die Musiktaste mindestens 3 Sekunden lang gedruckt, um das Ge

Driicken Sie die Taste erneut 3 Sekunden lang, um den Musik-Player und das

Driicken Sie wahrend derWiedergabe des Videos die Lautstarketaste, um die

Halten Sie den Netzschalter mindestens 3 Sekunden lang gedriickt, um den

Halten Sie die Sprechtaste an der Elterneinheit gedruckt, um uber den

Lautstarke zu verringern, oderdie Lautstarketaste, um die Lautstarke zu

erhdhen. Das Display zeigt 5 Sekunden lang die aktuelle Lautstarke an.

Wiegenlied uber die Babyein□heit auszuschalten.

Lautsprecher der Babyeinheit mit Ihrem Baby zu sprechen.

Product Menu introduction

1. Main menu

a. Camera

The enclosed baby unit has already registered, you do not need to register it again Italian German Turkish Russian unless the baby unit loses its link with parent unit.

Otherwise, you just restart the parent unit, and the press the Pair Button back of

the Baby Unit, then they will re-connect 3. Alarm clock Alarm ✓ OFF


press Music Button to change the Value. Press Music Button to choose item, press UP/ DOWN Button to change the setting.

a. Time and date b. Temperature unit Switch the unit to Celsius of Fahrenheit

You are able to adjust the frequency of 50/60Hz to suit your lighting for anti-flicker.

b. Alarm c. Settings

selected. Press the Return Button back to main menu.

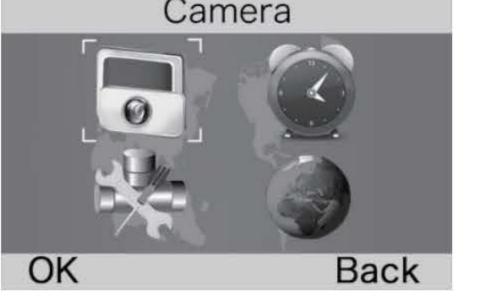

Time and date

backlight active time in the menu operation.

Normal mode/Vox Mode

e. VOX sensitivity setting

Warranty

Language setting

If you have any questions or confusions about our product or warranty, please feel free to contact us. We will do our best to help you solve the problem until you are

,

Charging and Power On/Off

Parent unit p ower supply

unit is on working.

FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and caradiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the • Reorient or relocate the receiving antenna.• Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. RF Exposure Information

For One Parent Unit
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

> If you have any problem, please feel free to let us know. Customer Service E-mail: support@vogerhome.com www.vogerhome.com



(1) Installation der Baby Einheit

(2) Nachtsichtfunktion

f. Einstellung LCD Helligkeit Hintergrundbeleuchtung

(2) Koppeln der Kamera

(4) Grundeinstellunger

6. Spracheinstellung.....

7. Garantie...

a. Zeit und Datum


b. Temparatureinheit

c. Flackern reduzieren

(3) Wecker


(3) Musilcwiedergabe (4) Gegensprechfunktion

(5) Lautstärkeregelung Halten Sie die Kabel von Kindern fern. (6) Reset der Elterneinheit Verwenden Sie nur die mitgelieferten Netzteile. (1) Hauptmenü • Beruhren Sie den Netzstecker nicht mit spitzen oder metallischen Gegenstanden.

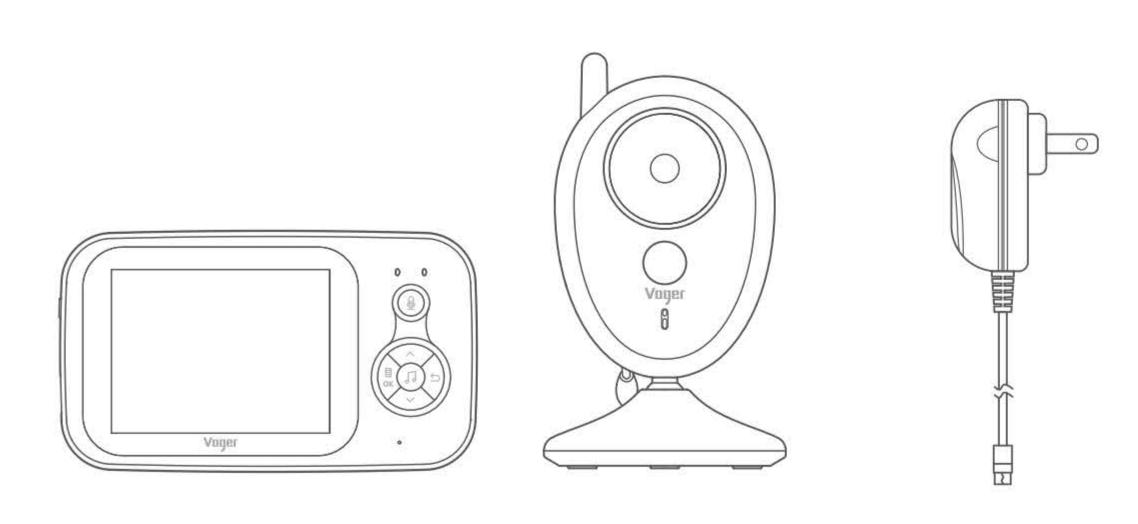

A Hinweis

Vielen Dank, dass Sie sich für Voger Babyphone mit Kamera VM300 entschieden haben. Jetzt konnen Sie sehen und horen, wie Ihr Baby in einem anderen Raum schlaft, oder Sie kdnnen Ihre alteren Kinder in ihrem Spielzimmer iiberwachen. Lesen Sie diese Bedienungsanleitung sorgfaltig durch, bevor Sie das Gerat verwenden. Dieses Produkt sollte von Erwachsenen zusammengebaut werden.

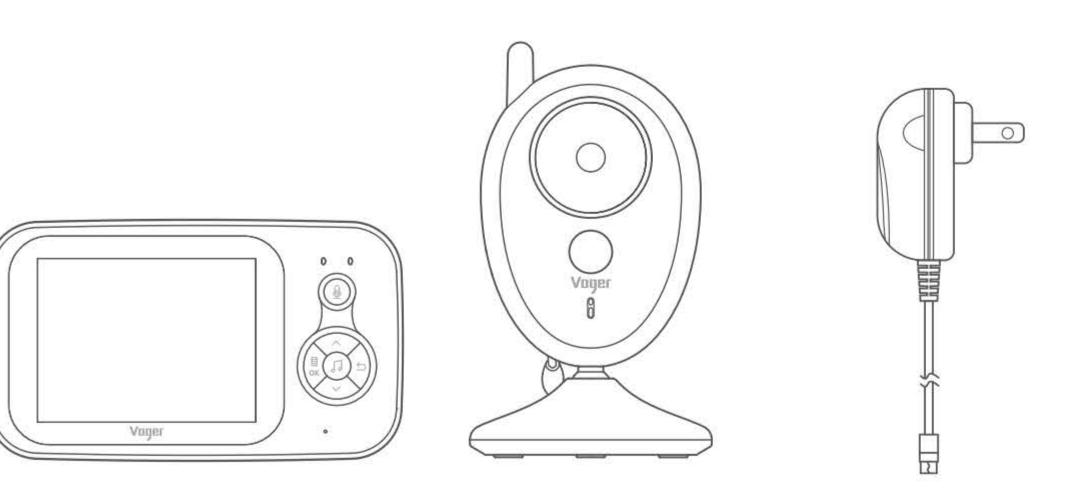

Babyeinheit X1

Netztell/Stromversorgung X2

 Halten Sie beim Zusammenbau kleine Teile von Kindern fern. Dieses Produkt ist kein Spielzeug. Lassen Sie Kinder nicht als Spielzeug damitspielen. • Dieses Babyphone ist kein Ersatz fur die verantwortungsvolle Beaufsichtigung von Verlegen Sie die Kabel des Babymonitors nicht im Kinderbett oder in Reichweite


des Babyarms (mindestens 1 Meter entfernt). Verwenden Sie das Babyphone nicht in der Nahe von Wasser oder einer Warmequelle.

Produktbeschreibung

9. Lautstärke - Taste/Abwartstaste

10. Mikrofon


12. Ladeschnittstelle

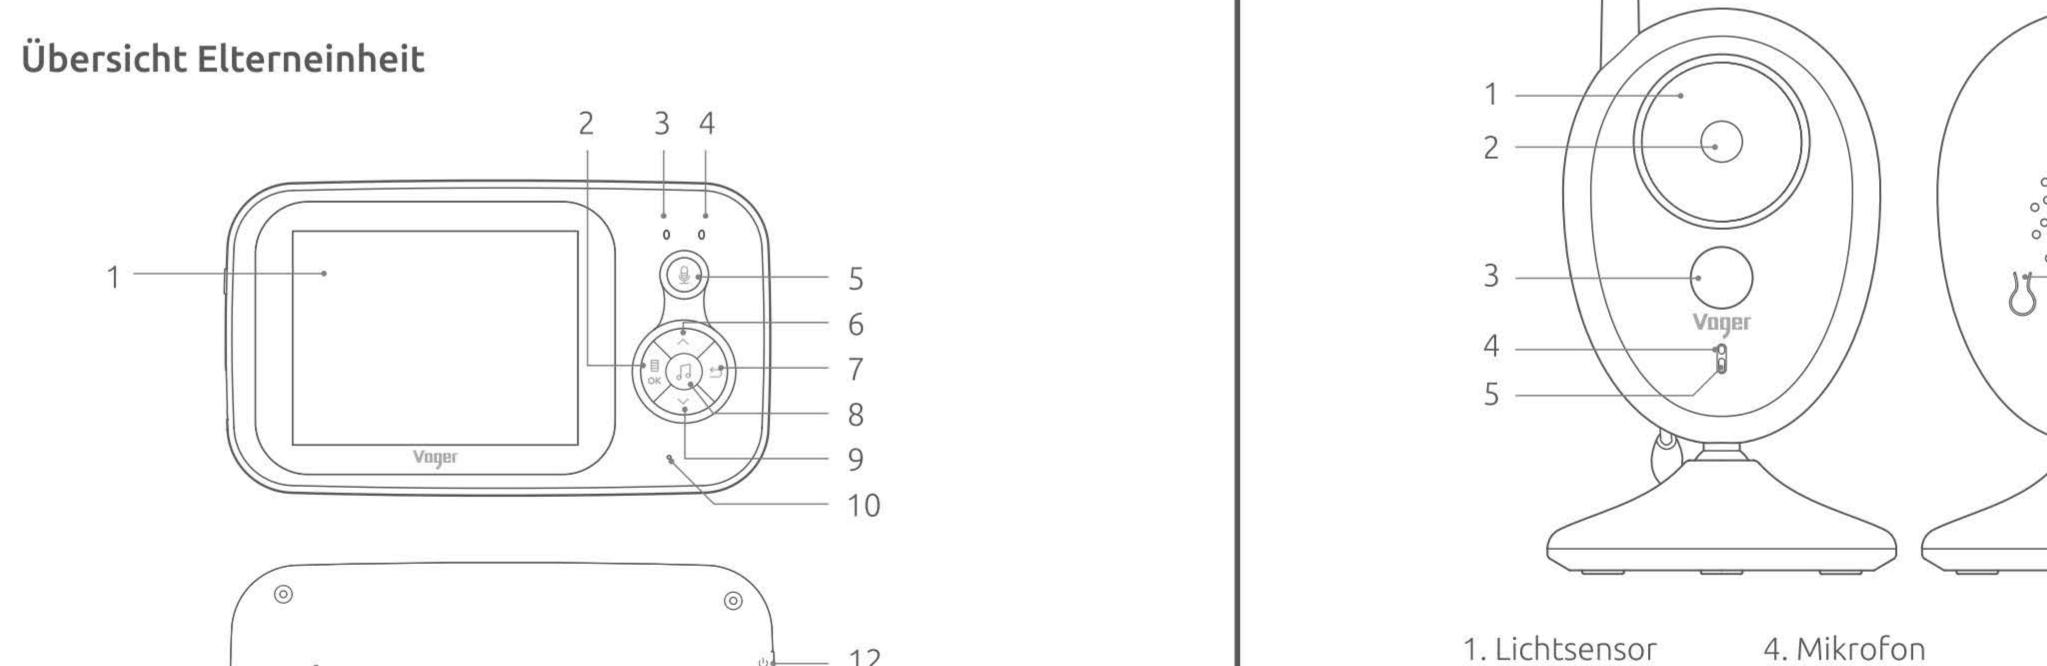

(1) Platzieren Sie die Babyeinheit an einem geeigneten Ort (z. B. auf einem Tisch) und richten Sie das Kamerao Djektiv auf den Bereich, den Sie

Verwenden Sie die nachstehende Schablone, um die Wand an den richtigen Stellen zu markieren und Locher fur Wandmontageschrauben zu bohren. Setzen Sie 4-mm-Kopfschrauben (nicht mitgeliefert) in die Locher ein und ziehen Sie die Schrauben fest. Richten Sie dann Ihre Babyeinheit mit den

Übersicht Babyeinheit

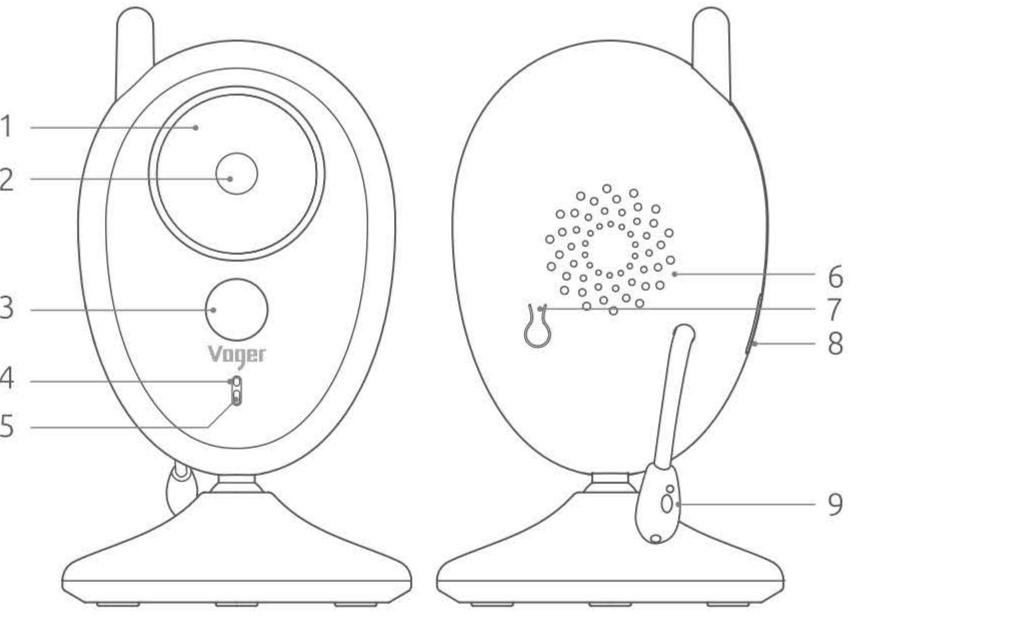

6. Lautsprecher9. Temparatursensor


Installationsbeschreibung

Installation der Babyeinheit

iiberwachen mochten. Passen Sie die Babyeinheit an, bis Sie mit dem Bild in der Elterneinheit zufrieden sind.

(2) So montieren Sie die Babyeinheit an der Wand.

Schrauben aus und drucken Sie sie nach unten.

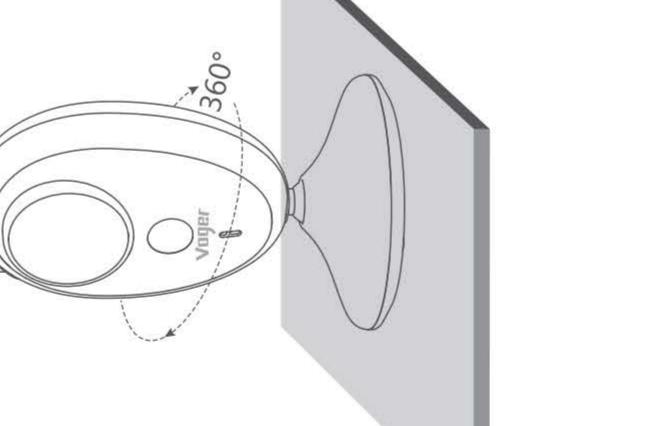

Stellen Sie die Babyeinheit nicht in Reichweite des Babys auf! Stellen Sie bei Bild-oder Tonstorungen sicher, dass sich die Gerate nicht in der Nahe anderer elektronischer Gerate befindet.

Aufladen and Power Ein/Aus

(1) Stromversorgung der Babyeinheit

Verbinden Sie den kleinen Stecker des Netzteils mit der Babveinheit und das andere Ends mit der Steckdose. Das grune LED-Lichtzeigt an, dass die Babyeinheit in Betrieb ist. Netzteil der Elterneinheit

Verbinden Sie den Stecker des Netzteils mit der Elterneinheit und das andere Ende mit der Steckdose.

Bitte laden Sie die Elterneinheit vor dem Gebrauch vollstandig auf, damit sie ohne Anschluss an die Steck🛮 dose weiterarbeiten kann. Der LCD-Bildschirm leuchtetauf und startet nach einigen Sekunden automatisch. (2) Ein-/Ausschalten

Halten Sie den Netzschalter mindestens 3 Sekunden lang gedruckt, um die Elterneinheit einzuschalten. AnschlieBend werden automatisch die zwei Einheiten verbunden.

Funktionsbeschreibung

1. Hauptmenü Drücken Sie die Menütaste auf dem Bildschirm,

Elements. a.Kam era b.Alarm

> c.die Einstellung d.Sprachen Sie konnen die UP/ Down-Taste drucken, um den Cursor zur Auswahl eines Elements zu bewegen, und die Menu-Taste drucken, um das von Ihnen

Menubeschreibung

Hauptmenuzu-ruckzukehren. Kamera koppeln

Die beiliegende Babyeinheit wurde here its registriert. Sie mussen sie erst dann erneut registrieren, wenn die Babyeinheit die Vsrbindung zur Elterneinheit verliert. Andernfalls starten Sie einfach die Elterneinheit neu und drucken die PairTaste auf der Ruckseite der Babyeinhelt dann warden sie si ch wieder verbinden.

ausgewahlte Untermenii aufzurufen. Drucken Sie die Eingabetaste, umzum


Drucken Sie die Musiktaste, um eine Option auszuwahlen, und die AUF/AB-Taste, um die

4. Einstellungen

oder OFF auszuwahlen, und drucken Sie die

b. Temperatureinheit

Schalten Sie die Einheit auf Fahrenheit um.

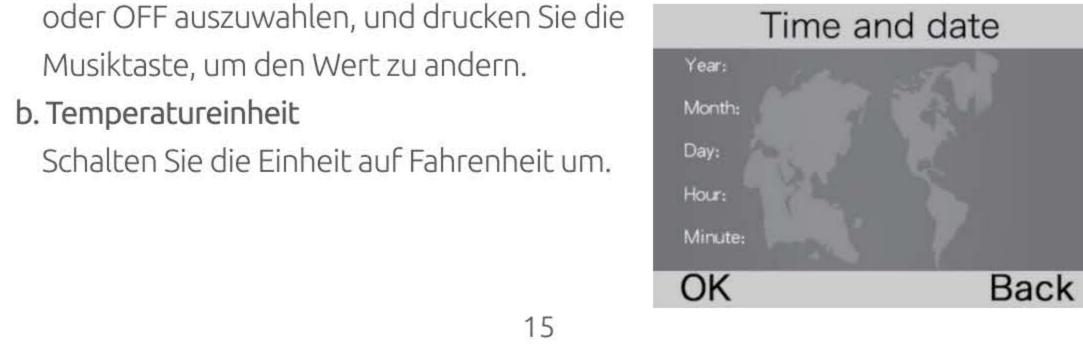

◆ OFF ▶



Aktivitatszeit der LCD-Hintergrund beleuchtu ng im Menu einzu-stellen

Wahlen Sie Ihre Sprache aus den folgenden Moglichkeiten:

Garantie

Furalle Voger-Produkte gilt eine beschrankte Garantie von 12 Monaten ab

haben, konnen Sie sich gerne an uns wenden. Wir werden unser Bestes tun, um Ihnen bei der Losung des Problems zu helfen, bis Sie zufrie- den sind. Mailbox des Voger-Kundendienstes: support@vogerhome.com





Spracheinstellung

Kaufdatum. Und wir haben ein professionelles Kundenservice-Team fur Ihre Unterstutzung, sobaid wir konnen. Wenn Sie Fragen oder Unklarheiten zu unserem Produkt oder unserer Garantie