radioshack™

Foldable Keyboard with Touchpad
Model 2607173
USER MANUAL

Note: Please read the user manual carefully before you start using this product

Thank you for choosing the Radio Shack Foldable Keyboard with Touchpad 2607173! We appreciate your purchase and are excited for you to experience its quality. To maximize the usage of the device, please read the following instructions carefully and keep this guide for future reference to enhance your experience.

1.Product Overview:
The Radio Shack Foldable Keyboard with Touchpad 2607173 offers multi-channel wireless connectivity, making it convenient for both office and home use.

2.Getting Started:
Charging Your Keyboard:
Before first use, fully charge your keyboard by connecting the provided cable to the device and plugging it into a power source. A green indicator will light up during charging and turn off when fully charged.

3.Maintenance and Care:
To maintain optimal performance, avoid exposing the keyboard to extreme temperatures, moisture, or direct sunlight. Clean it with a soft, dry cloth to preserve its appearance.

4.Warranty and Support:
A warranty covers your Radio Shack BT Foldable Keyboard with Touchpad for defects in materials and workmanship. For assistance, please get in touch with our customer support team or visit our website at https://www.radioshack.com/.

We hope you enjoy your Radio Shack BT Foldable Keyboard with Touchpad. Explore its portability, quality, and convenience, and feel free to reach out with any questions or for further assistance.

Package contents:

. BT Foldable Keyboard with Touchpad
. Type-C charging cable
. User manual

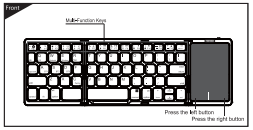

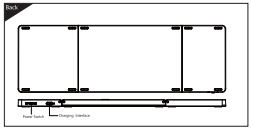

Compatible System

Win /iOS /Android/Mac

• iOS Connection Instructions:



1. Slide the power switch to ON. A red light will illuminate. To select the channel, press the Fn+C connect button, and a blue light will flash.

2. Access the iOS settings and check the Bluetooth connections for the searching and pairing status.

3.Locate the "RS2607173" keyboard and proceed to the next step.

4.The successful connection ensured comfortable keyboard use.

• Win 10 Connection Instructions:



1. Slide the power switch to ON. A red light will illuminate. To select the channel, press the Fn+C connect button, and a blue light will flash.

2. Open settings, enable Bluetooth, and click "Add Bluetooth or other devices."

3.Select "Bluetooth" in the Add Device to search.

4. Find and click on "Radioshack 2607173" to connect it.

5. The successful connection ensured comfortable keyboard use.

• Android Connection Instructions:



1. Slide the power switch to ON. A red light will illuminate. To select the channel, press the Fn+C connect button, and a blue light will flash.

2, Open "Settings" and click "Connect".

3, Enable Bluetooth to search "RS2607173".

4, Click on "RS2607173" when the pair request appears, then click OK.

5. The successful connection ensured comfortable keyboard use

• MasOS connection instructions:



1.Slide the power switch to ON; a red light will illuminate. Press the Fn+C connect button to select the channel, causing a blue light to flash.

2. Open "Sydtem Preferences" and click on Bluetooth.

3. Wait until "RS2607173" is found, then click to pair.

4. The successful connection ensured comfortable keyboard use.

Note: After connecting, press fn+Q (iOS), W (Android), E (Windows), or R (Mac) to switch to the corresponding device.

Product features

iOS/Android/Mac		Windows		Windows	
Fn+	Corresponding function	Fn+Shift+	Corresponding function	Fn+	Corresponding function
~ ` ESC	Return to Desk	~ ` ESC	Home Page	~ ` ESC	Esc
! 1 F1	Search	! 1 F1	Search	! 1 F1	F1
@ 2 F2	Select	@ 2 F2	Select	@ 2 F2	F2
# 3 F3	Copy	# 3 F3	Copy	# 3 F3	F3
$ 4 F4	Stick	$ 4 F4	Stick	$ 4 F4	F4
% 5 F5	Cut	% 5 F5	Cut	% 5 F5	F5
^ 6 F6	Pre-Track	^ 6 F6	Pre-Track	^ 6 F6	F6
& 7 F7	Play/Pause	& 7 F7	Play/Pause	& 7 F7	F7
* 8 F8	Next	* 8 F8	Next	* 8 F8	F8
(9 F9	Mute	(9 F9	Mute	(9 F9	F9
) 0 F10	Volume-	) 0 F10	Volume-	) 0 F10	F10
— = F11	Volume+	— = F11	Volume+	— = F11	F11
+ = F12	lock	+ = F12	lock	+ = F12	F12

Three system input method switch

iOS: control+ Space key
Windows : control+ Shift
Android : control+ Shift

Three system switching languages

iOS : control+Space key
Windows : Alt+Shift
Android : Shift+Space key / control+Space key

Technical Specifications

Keyboard size: 304.31 x 98.12 x 9.86 mm (open)
152 x 98.12 x 19.83 mm (folding)

Key working current: < 1 mA
Weight: 214 g
Touchpad working current: <11 mA
Standby current: < 0.7 mA
Working distance: 10 m
Sleep current: < 16 μA
Lithium battery capacity: 140 mAh
Sleep time: Ten minutes
Working voltage: 3.7 V
Awaken way : Press key
Charger specifications: 5V⎓1A or 2A

Status Display LED

- Connect : Open the power switch, red lights up, press the connect button,blue light twinkles.
- Charging : Indicator light will be on green , after fully charging, the light crush out.
- Low Voltage Indication : When the voltage is below 3.2 V, red light twinkles.

Touchpad function description (Windows10), must be switched to Windows system

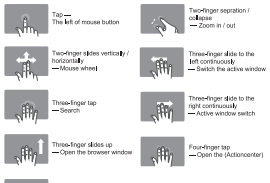

Touch pad function description (Android), must be switched to Android system



Touch pad function description (iOS 13.4.1 and above), must be switched to iOS system

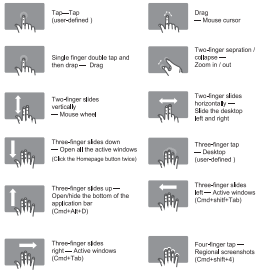

User-defined:

Settings - Auxiliary Functions - Touch - Auxiliary Touches - Device - Click the keyboard's pairing name, and then customize the function of 'single finger, Two-finger,Three-finger'.

Touch pad function description (MacOS 11.6 and above), must be switched to Mac system

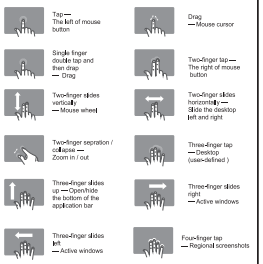

Touch gesture instructions

The touch gestures may change due to factors such as system upgrades and updates, especially the three finger and four finger gestures. Older versions of Mos11 and below may also experience partial failures.

Multi-channel connection

- When connecting the first device, first press Fn+ BT1 and then press Fn+C to start the connection.
- Before connecting the second device, press Fn+ BT2 once, then press Fn+C to start the connection.
- Before connecting the third device, press Fn+ BT3 once, then press Fn+C to start the connection.
- Switch between connected devices using Fn + BT1/BT2/BT3.

Troubleshooting:

1.The tablet or PC can't connect to the BT keyboard?
Ensure the BT keyboard is in pairing mode and check Bluetooth on the tablet.
Verify the keyboard battery is charged; a low battery can interrupt the connection.
2.Why is the keyboard indication light always flashing?
A flashing light indicates a low battery; charge it immediately.
3.Why does the tablet or PC display that the BT keyboard is disconnected?
The keyboard enters sleep mode after inactivity to save power.
Press any key to wake it up and reBtore the Bluetooth connection.

Contact after-sales service for more assistance.

Safety Instructions:

Do not open or repair the device; avoid using it in damp environments. Clean with a dry cloth.

Warranty:

One-year limited hardware warranty from the purchase date.Keyboard Maintenance:

1.Keep the keyboard away from liquids and humid environments, such as saunas or swimming pools.
2.Avoid exposing the keyboard to extreme temperatures.
3.Do not place the keyboard in direct sunlight for extended periods.
4.Keep the keyboard away from flames, like stoves or candles.
5.Prevent sharp objects from scratching the keyboard; recharge it regularly for normal use.

Copyright:

Reproduction of this manual without seller permission is prohibited.

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
Equipment generates,uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However there is no guarantee that interference will not occur in a Particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

128G铜 版纸，单色印刷，尺寸：71*105mm