Q68-Max Quick Start Manual

| Product Overview

Important Reminder:
Before installing the headset, please connect your mobile phone according to the quick manual guide to test the sound effect and volume.
If there is a big difference in sound effectand volume after installing into the helmet, please adjust the position of the speaker inside the helmet.

Power on/off

Double click to switch voice announcement (Disconnect wireless, Intercom)

Press and hold for 3 seconds to switchon/off → On/Off Tone

Accompanying power on/off animation

Wireless connection

Wireless waiting to pair
Wireless icon flashing slowly

→ Wireless Mode Tone

Wireless pairing is successful
Wireless icon lights up

Intercom pairing



Intercom pairing status
Intercom icon flashes slowly

→ Paired cue

Intercom pairing is successful
Show intercom connection success icon

After the machine is switched on, the two devices short press the intercom key to enter the intercom pairing, the display intercom icon flashes slowly, the intercom key green LED flashes quickly. after successfulpairing, there will be a beep prompting successful pairing 'intercom connection', the display intercom icon is connected to the success of this time you can two people intercom call, long press to exit the intercom mode

Telephone function

Double-tap to switch manual/ automatic answer(when not connected to wireless, intercom)

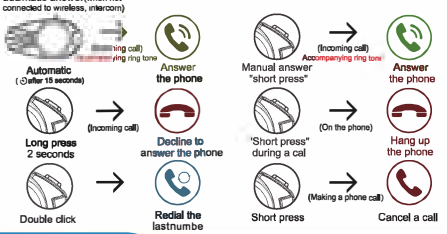

Music function

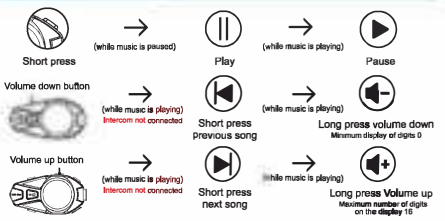

Music radio pairing



Double-click on the 'music broadcast button' to switch to music broadcast mode.

Music broadcast pairing status: transmitter icon flashes fast; receiver icon flashes slow

Music broadcast mode pairing is successful: The receiver displays the Music Radio Connection Success icon

After the two devices are switched on, one mobile phone connects [illegible] the other device double clicks the music broadcast key to [illegible] transmitting end flashes fast; the music broadcast icon on [illegible]

Music Sharing

Music sharing button → Intercom and wireless are paired successfully

Navigator | **Intercom** | Music

Music Sharing Mode: In the state of successful intercomconnection, long press the music sharing button to open the musicsharing, coexist with the intercom, long pressagain to close the music sharing coexistence.
Mixing function: intercom and wireless can work independently without affecting each other, when the intercom and wireless are connected successfully, the sound of the two can be mixed out to the speaker, and you can hear the sound of the two modes at the same time.
Intercom connected to the successful mode, the volume up and down keys operate as follows: ① short press the volume up and down keys to adjust the volume size of the wireless music ② long press the volume up and down keys to adjust the volume size of the intercom ③ double click the volume up and down keys to switch between the wireless music of the next song and the previous song
Music sharing mode, the volume up and down keys operate as follows: Long press the volume up and down keys to adjust the volume of music sharing and wireless music volume at the same time.

Voice assistant



Short press the 'Voice button' to wake up the voice assistant. → (under successful wireless pairing)

Short press again to exit the voice assistant (Exiting the voice assistant depends on the mobile phone)

FM radio function

Short press to switch to the next saved station, long press for volume up (in FM mode)

Double-tap to enter/exit FM mode (display shows FM signal icon)

Short press FM to search stations automatically, short press again to stop searching stations. (Auto save after searching) (in FM mode)

Intercom reset

Press and hold SS at the same time to clear all pairing information.

Introduction to wireless intercom connection operation (Intercom and music sharing are turned off by default every time you switch in the phone)
I. The first time the two machines are connected to talk to each other.After the machine is switched on, the two devices short press the intercom button to enter the intercom mode, the display intercom icon flashes slowly, the intercom button green LED flashes quickly, after successful pairing, there will be a tone prompting successful pairing 'intercom connection', at this time you can two people intercom call.
II:intercom back to connect After switching on the machine. Both short press the intercom button to enter the intercom mode, the two machines will automatically intercom back to the connection.
III. Clear intercom pairing and restore factory settings When you switch in the computer without connecting wireless and intercom, press and hold the volume down and volume up buttons at the same time for 5S, after the indicator light flashes quickly, it will restore the factory settings and clear all the pairing information.
IV: Music broadcast mode After the two devices are switched on, one mobile phone connects to the device to play music wirelessly, the other device double clicks the music broadcast button to enter pairing, the music broadcast icon on the transmitting end flashes fast, and the music broadcast icon on the receiving end flashes slowly; accompanied by a tone 'music broadcast receiving mode' or 'music broadcast transmitting mode 'After successful pairing, the music broadcast icon shows successful connection and accompanied by music broadcast connection successful beep, the music broadcast sharing is successful.
V: Coexistence of music sharing mode and intercom mode.After the two devices are switched on, the two machineswill be connected and talk to each other successfully; one device will be connected to the mobile phone to play music, and then the music sharing mode and talkback mode will coexist

Charging function

Red light is always on when charging → (When the device is switched on and the charger is plugged in, the device will automatically switch off) → Lights go out whenfully charged

Product List

Q68-Max Device*1 | Speakers & Microphone*1 | Clip on Base*1
Velcro Package*1 | Type-C Charging Cable*1 | User Manual *1

Caveat

1. To avoid explosion,please do not put the product into the flame;
2. Please do not disassemble the product to avoid damage to the electronic components of the product;
3. Please keep away from sharp objects to avoid damage to the product.;
4. Please keep in a dry place if not used for long time ,
5. Before using the wireless device, please fully charge it;
6. If the red light does not come on while charging, it may be the voltage is too low ,
7. To extend the life of thebuilt-in lithium polymer battery, please charge the device at least once a month.

Instruction warning

NOTE: This product has been tested, meet the restrictions of Class B digital device, pursuant to part 15 of the FCC Rules.
These limits aredesigned to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance wi th the instructions may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or tel evision reception
which can be determined by turning the equipment off and on.
the user is encouraged to try to correct the interference by one or more of the following measures.

-Reorient or relocate the receiving antenna.
Increase the separation between the device and receiver
-Connect the device into an outlet on a circuit different from that to which the receiver is connected
-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user'sauthority to operate thed evice.
This device complies with Part15 of the FCC Rules. The operation needs to fulfil the following two conditions.
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.

Q68-Max Hızlı Başlangıç Kılavuzu

| Ürüne Genel Bakış

Önemli Hatırlatma:
Kulaklığı takmadan önce, ses efektini ve ses seviyesini test etmek için lütfen cep telefonunuzu hızlı kılavuz kılavuzuna göre bağlayın.
Kaska taktıktan sonra ses efekti ve ses seviyesinde büyük bir fark varsa, lütfen kaskın içindeki hoparlörün konumunu ayarlayın

Güç açma/kapama



3 saniye basılı tutun açmak/kapatmak için → Açma/Kapama Tonu

Açma/kapama animasyonu eşliğinde

Kablosuz bağlantı



Kablosuz eşleşmeyi bekliyor: Kablosuz simgesi yavaşça yanıp sönüyor → Kablosuz Mod Tonu

Kablosuz eşleştirme başarılı
Kablosuz simgesi yanar

İnterkom eşleştirme

İnterkom eşleştirme durumu:
İnterkom simgesi yavaşça yanıp söner → Eşleştirilmiş işaret

İnterkom eşleştirmesi başarılı:
İnterkom bağlantı başarı simgesini göster

Makine açıldıktan sonra, iki cihaz interkom eşleştirmesine girmek için interkom tuşuna kısa basın, ekran interkom simgesi yavaşçayanıp söner, interkom tuşu yeşil LED'i hızlıca yanıp söner. başarılı eşleştirmeden sonra, başarılı eşleştirme 'interkom bağlantısı' isteyen bir bip sesi duyulur, ekran interkom simgesi bağlanır Bu sefer iki kişi interkom göğüsü yapabilir, interkom modundan çıkmak için uzun basın

Telefon fonksiyonu

Manuel/otomatik cevaplamayı **değiştirmek için çift** dokunun (kablosuz, interkom bağlı değilken)

Müzik fonksiyonu

Müzik radyo eşleştirmesi

Müzik' üzerine çift tıklayın yayın düğmesine' geçmek için müzik yayını modu.

Müzik yayını eşleştirme durumu: verici simgesi hızlı yanıp söner; alıcı simgesi yavaş yanıp söner

Müzik yayını modu eşleştirme başarılı: Alıcı, Müzik Radyo Bağlantısı Başarı simgesi

İki cihaz açıldıktan sonra, bir cep telefonu kablosuz olarak müzik çalmak [illegible] cihaz eşleştirmeye girmek için müzik yayını tuşuna çift tıklar, verici [illegible] yayını alma modu ile müzik yayını gönderme modu arasında geçiş yapmak için 'Müzik Yayını Tuşu'na k sıacabasın; müzik yayını modundan çıkmak içintekrar çift tıklayın.

Müzik Paylaşımı



[illegible]

Sesli asistan

'Ses düğmesine' kısa basın sesli asis tanı uyandırmakiçin → [illegible]

Sesli asistandan çıkmak için tekrar kısa basın (Sesli asistandan çıkmak şunlara bağlıdır ceptelefonunda)

FM radyo fonksiyonu

Değiştirmek için kısa basış bir sonraki kayıtlı istasyonu, uzun basın ses açma için (FM modunda)

İstasyonları otomatik olarak aramak için FM düğmesine kısa basın, istasyon aramayı durdurmak için tekrar kısa basın. (Aramadan sonra otomatik kaydetme) (FM modunda)

İnterkom sıfırlama

SS düğmesini basılı tutun hepsini temizlemek için aynı anda Eşleştirme bilgileri.

Kablosuz interkom bağlantı işlemine giriş (Telefonu her açtığınızda interkom ve müzik paylaşımı varsayılan olarak kapatılır)
I. İki makine birbiriyle konuşmak için ilk kez bağlandığında
Makine açıldıktan sonra, iki cihaz interkom moduna girmek için interkom düğmesine kısa bir süre basar, ekran interkom simgesi yavaşça yanıp söner, interkom düğmesi yeşil LED'i hızlı bir şekilde yanıp söner, başarılı eşleştirmeden sonra, başarılı eşleştirme 'interkom bağlantısı' isteyen bir ton olacaktır, şu anda iki kişi interkom görüşmesi yapabilir.
II: interkom geri bağlanmak için
Makineyi açtıktan sonra, her iki de interkom moduna girmek için interkom düğmesine kısa süre basın, iki makine otomatik olarak bağlantıya geri dönecektir.
III. interkom eşleştirmesini silme ve fabrika ayarlarını geri yükleme
Kablosuz ve interkom bağlantısı olmadan bilgisayarı açtığınızda, SS için ses kısma ve ses açma düğmelerini aynı anda basılı tutun, gösterge ışığı hızlı bir şekilde yanıp söndükten sonra fabrika ayarlarını geri yükleyecek ve tüm eşleştirme bilgilerini temizleyecektir.
IV: Müzik yayınımodu
İki cihaz açıldıktan sonra, bir cep telefonu kablosuz olarak müzik çalmak için cihaza bağlanır, diğer cihaz eşleştirmeye girmek için müzik yayını düğmesine çift tıklar, verici uçtaki müzik yayını simgesi hızlı yanıp söner ve alıcı uçtaki müzik yayını simgesi yavaş yanıp söner; bir ton eşliğinde 'müzik yayını alma modu' veya 'müzikyayını iletme modu' Başarılı eşleştirmeden sonra, müzik yayını simgesi başarılı bağlantıyı gösterir ve 'müzik yayını bağlantısı başarılı' bipsesi eşliğinde müzik yayını paylaşımı basarılıdır.
V: Müzik paylaşım modu ve interkom modunun bir arada bulunması
İki cihaz açıldıktan sonra, iki makine birbirine bağlanacak ve birbiriyle başarılı bir şekilde konuşacaktır; bir cihaz müzik çalmak için cep telefonuna bağlanacak ve ardından müzik paylaşım modu ve talkback modu bir arada bulunacaktır.

Şarj fonksiyonu



Şarj olurken kırmızı ışık **her zaman yanar** → (Cihaz açıldığında ve şarj cihazı takılı olduğunda, cihaz otomatik olarak kapanır)

Tam şarj olduğunda ışıklar söner

Ürün Listesi

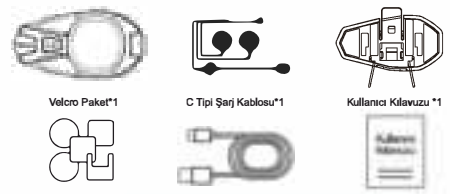

Q68-Max Cihaz*1 | Hoparlörler & Mikrofon*1 | Klipsli Taban*1
Velcro Paket*1 | C Tipi Şarj Kablosu*1 | Kullanıcı Kılavuzu *1

Uyarı

1. Patlamayı önlemek için lütfen ürünü alevin içine koymayın,
2. Ürünün elektronik bileşenlerinin zarar görmesini önlemek için lütfen ürünü sökmeyin
3. Ürünün zarar görmesini önlemek için lütfen keskin nesnelerden uzak tutun
4. Uzun süre kullanılmayacaksa lütfen kuru bir yerde saklayın
5. Kablosuz cihazı kullanmadan önce lütfen tamamen şarj edin;
6. Şarj olurken kırmızı ışık yanmazsa, voltaj çok düşük olabilir
7. Dahili lityum polimerpilin ömrünü uzatmak için lütfen cihazı ayda en az bir kez şarj edin.