PRINT ARTWORK ON DIRECTLY ON PAPER.
DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 9.8"W x 5.5" H

FOLD LINE

CUT LINE

Front

iJOY

BLUETOOTH WIRELESS EARBUDS

LIGHTNING

FCC ID: 2AJQ7LIGHTNING
MODEL: IJ10158-AMZN

USER MANUAL

for use with Bluetooth® enabled devices

iJOY

QUEST USA CORP.
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of QUEST USA CORP.
All other trademarks and trade names are property of their respective owners.
Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA CORP.

Made in China.

SIRI IS A TRADEMARK OF APPLE INC.
ANDROID IS A TRADEMARK OF GOOGLE LLC.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc, and any use of such marks by QUEST USA CORP, is under license. Other trademarks and trade names are those of their respective owners.

•POWER OFF

•Press and hold the Left or Right MF button for 5 seconds (it will automatically turn off if in the charging case).
Note: It will auto turn off if disconnect for 5min

•PAIRING THE EARBUDS WITH YOUR SMARTPHONE

•The earbuds will turn on once they are taken out from the charging case, or press and hold the MF button for 3 seconds of both earbuds to turn on them.
•Once the power is on, a RED and BLUE LED will start blinking on both of the earbuds. Both of the earbuds will then automatically pair with each other within 5 secs.
•Once they are paired with each other, one of the earbuds would show a RED and BLUE LED blinking alternatively, which means they are ready to pair with your smartphone.
•Now switch on Bluetooth in your smartphone to search for nearby devices and pair with the name "IJOY LIGHTNING" after the pairing is successful, the earbuds LED light will turn off.
(The earbuds will re-connect with smartphone automatically after pairing if they have connected before)
Note: The Left or Right earbud can be used alone to pair with your smartphone.

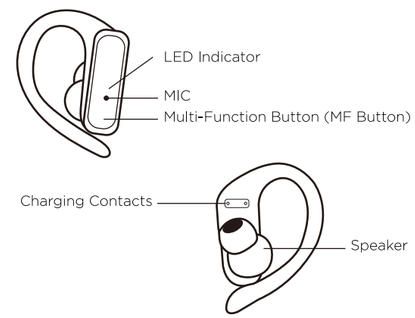

•BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

Back

•YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY LIGHTNING" BLUETOOTH WIRELESS EARBUDS listening experience while staying active. Before using this product, carefully read this manual to in order to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

IJOY LIGHTNING BLUETOOTH WIRELESS EARBUDS x 1
USB Charging Cable x 1
Charging Case x 1
Large and Small pair of earbud tips x 2
User Manual x 1

•PRODUCT SPECIFICATIONS

•MODEL NAME: IJ10158-AMZN
•BLUETOOTH VERSION: V5.3
•STANDBY TIME: Approx. 100 Hours
•PLAY TIME: Up to 20 Hours
•BATTERY CAPACITY: 3.7V 60 mAh
•CHARGING CASE BATTERY CAPACITY: 3.7V 400 mAh

•PRODUCT FEATURES

•Up to 20 hours Playtime
•Hands-Free Calls
•LED Indication
•Bluetooth
•Touch Controls
•LED Light Indicator
•Charging case holds 2.5x charges

•FCC ID STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

•MUSIC PLAYBACK

PAUSE/PLAY
•Tap left or right MF button once

VOLUME CONTROL
•Tap Right MF button twice consecutively to increase volume
•Tap Left MF button twice consecutibely to decrease volume

NEXT SONG
•Tap Right MF button three times consecutively for next song
•Tap Left MF button three times consecutively for last song

•DURING CALLS

•Tap the Left or Right MF button once to attend the incoming call
•Tap the Left or Right MF button twice consecutively to end the call
•Press and hold the Left or Right MF button for 2 seconds to reject the incoming call

•SIRI

•Press and hold the Left or Right MF button for 2 seconds.

•CHARGING EARBUDS IN THE CHARGING CASE

•Place the earbuds into the charging case, and the earbuds will start charging automatically showing a Red light
•The LED light will turn Blue for 15 seconds and then turn off after the charge is full. The charging screen will then show 100 after fully charged.

•OTHER IMPORTANT SAFETY INFORMATION

Disposal of old electronic & electronic equipment (Applicable in the European Union and other European Counties with separate collection systems) The trash can symbol (seen on the bottom) on the production indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

IMPORTANT REMINDERS

This device can ONLY be charged by 5V adapters/ USB ports only. Quick charging devices over 5V may cause heat and fire.