User Manual

Compact Sound Bar 2.1B

Thank you for purchasing our product. Please read this manual carefully before connection and operation. Please keep it for future reference.

WHAT'S IN THE BOX

CONTENTS

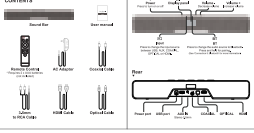

PARTS AND CONTROLS

Sound Bar

Front

Remote Control

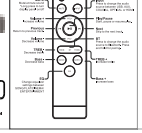

CONNECTIONS

Connection 1: Optical

1. Remove the protective cap from both ends of the optical cable.

CAUTION: Make sure you have removed the protective cap from both ends of the optical cable, inserting the plug with the cap on or in the wrong orientation can damage the plug and/or the ports.

2. Plug one end of the plug into your TV's **Optical OUT** port and insert the plug cap back.
3. Plug the plug at the end of the cable into the **OPTICAL** port on the Sound Bar.
4. Plug the plug with the Sound Bar's **OPTICAL** port and insert the plug cap back.

NOTE: The port has a hinged door that swings inward when inserting the plug.

5. Firmly push the plug into the port until you hear or feel a click.
6. Press **INPUT** on the Sound Bar or remote control repeatedly to select the Optical input.

Connection 2: Optical

1. Insert one end of the Optical cable into your TV's **OPTICAL** port.
2. Insert the other end of the cable into the **OUT** port on the Sound Bar.
3. Press **INPUT** on the Sound Bar or remote control repeatedly to select the Optical input.

Connection 3: HDMI ARC

1. Insert one end of the **HDMI** cable into your TV's **HDMI ARC** port.

NOTE: If you don't connect to your TV's HDMI ARC or Audio Return Channel port, you won't hear audio from the Sound Bar. If your TV doesn't have an HDMI ARC port, connect the Sound Bar using the provided Optical, Coaxial or RCA cable.

2. Insert the other end of the cable into the **HDMI** port on the Sound Bar.

If HDMI connection is detected, the sound bar will automatically switch to HDMI input.

3. Press **INPUT** on the Sound Bar or remote control repeatedly to select the HDMI input.

NOTE: Using your TV's HDMI ARC or Audio Return Channel port allows you to use your TV remote to control the power, volume, and mute functions of the Sound Bar.

Connection 4: RCA

1. Insert one end of RCA cable into your TV's **RCA** (Audio Out) port.
2. Insert the other end of the cable into the **AUX IN** port on the Sound Bar.
3. Press **INPUT** on the Sound Bar or remote control repeatedly to select the AUX IN input.

Connection 5: Bluetooth

You can listen to music stored on a Bluetooth device such as a smartphone or tablet wirelessly by connecting the Sound Bar and the Bluetooth device with the BLUETOOTH function.

Pairing a Bluetooth device for the first time

1. Press **BT** on the Sound Bar or remote control to switch the input source to Bluetooth.

Automatically switches to pairing mode the first time it is used.

The display panel blinks when this unit is in pairing mode.

2. Activate the Bluetooth settings on your Bluetooth device.
3. Select "KOOSOD" from the list of devices displayed on the screen of the Bluetooth device.

The display panel stops blinking and the device and the Bluetooth device are paired.

Pairing with other Bluetooth devices

1. Press **BT** on the Sound Bar or remote control to switch the input source to Bluetooth.
2. Activate the Bluetooth settings on your Bluetooth device.
3. Press and hold **BT** on the Sound Bar or remote control until the display panel blinks.
4. Select "KOOSOD" from the list of devices displayed on the screen of the Bluetooth device.

Connection 6: AUX IN

1. Insert one end of the 3.5mm audio cable into the audio output/headphone output on your TV, MP3 player or other audio source.
2. Insert the other end of the cable into the **AUX IN** port on the Sound Bar.
3. Press **INPUT** on the Sound Bar or remote control repeatedly to select the AUX IN input.

Connection 7: USB

1. Insert your USB Qd device to the USB port on the Sound Bar.
2. If USB is detected, music start playing automatically.
3. Press **II** button on remote control to play music. Has been USB connected to the Sound Bar.

TIP: The Sound Bar support FAT/FAT32 file system and MP3/WAV/WMA/FLAC/APE format only.

Troubleshooting

If you experience problems with the Sound Bar:

- Make sure the speaker is connected to a live AC (mains) outlet.
- Secure all cables and make sure all connections are correct.
- Check the input source.
- If you can't remember your status, see the guide below to identify symptoms and solutions to common problems.

SYMPTOM	SOLUTION
No power	• Ensure that the AC power cord is firmly connected to the wall outlet and the unit. • Disconnect the AC power cord for a few seconds and then reconnect it to the unit and the wall outlet.
No sound	• Check volume settings on both the unit and your TV. • Ensure the correct input source is selected. • Check if the unit is muted (press the mute button on the remote control to unmute). • Check the connection to the TV or other audio source. Disconnect and reconnect if needed.
Remote doesn't control the Sound Bar	• Check that the batteries in the remote are installed correctly. • Replace the batteries if your remote seems weak or unresponsive. • Ensure the IR sensor is clear and not blocked by any obstacles.
Sound Bar doesn't respond to commands from the remote	• Ensure you are pointing the remote at the front panel of the Sound Bar. • Check if the remote is within the recommended range (typically 10 feet/3 meters). • Clean the IR sensor on the Sound Bar if it appears dirty or obstructed.
Remote keeps losing function	• Replace the batteries with new ones. • Check if the battery contacts are clean and properly aligned. • Ensure there is no interference from other devices.
Distorted sound or audio cutting out	• Lower the volume to prevent distortion. • Check for loose connections and tighten if needed. • Ensure the cables are not damaged or frayed.

Warranty

What is covered by this warranty

KOOSODIO warrants your product against defects in materials and workmanship when used normally in accordance with KOOSODIO's user guides and manuals for a period of ONE YEAR (1) from the date of original retail purchase by the end-user purchaser.

What is not covered by this warranty

This warranty does not cover defects or damage arising from improper installation, improper use, abuse, accidents, modification of our product or other causes not related to defects. Unauthorized repairs/modifications or customization of your product voids this warranty.

How to obtain warranty service

Before obtaining warranty service, you may visit **koosodio.com/support** for additional help, contact troubleshooting, to obtain warranty service, contact KOOSODIO Customer Support by going to **a.koosodio.com** and selecting **Contact Us**.

Specifications

Product Model	KOOSODIO-S100Pro
Output Power	50 (10+40) W
Frequency Response	120Hz-20KHz
Input	Input
Bluetooth	5.4
Dimension (WxHxD)	34.7x4.1x7.8 (8.8)"
Net Weight	4.7lb

SAFETY INFORMATION

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation opening. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tipping.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm.You radiator your device This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

KOOSODIO

koosodio.com

Email: support@koosodio.com

Register The Warranty

Your Amazon return will be expired in **30 days!** But don't worry, we have a registered warranty benefit for you!

Register your product within **14 days** of purchase to upgrade **1 YEAR FREE REPLACEMENT**.

Scan the QR code Now!