Product Operation Manual

3+ AGES

Thank you for choosing our product! Please read this instruction manual carefully before using, as it contains all the informations you need to know about how to use this product correctly with fun.

Colors And Contents May Vary From Illustration.

27MHz FREQUENCY

Battery Installation

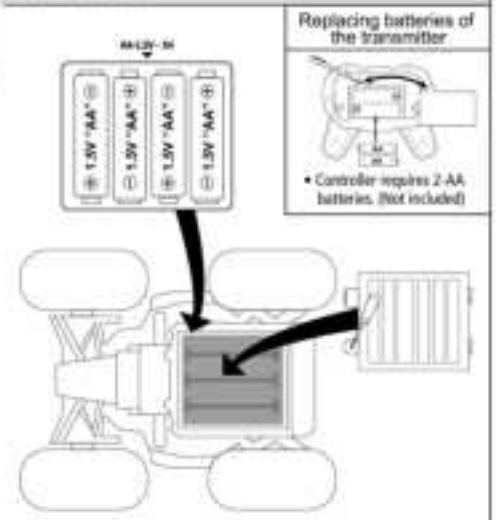

Replacing batteries of the transmitter

• Controller requires 2 AA batteries. (Not included)

Power Requirement (Not Included)

Remote Control Operation

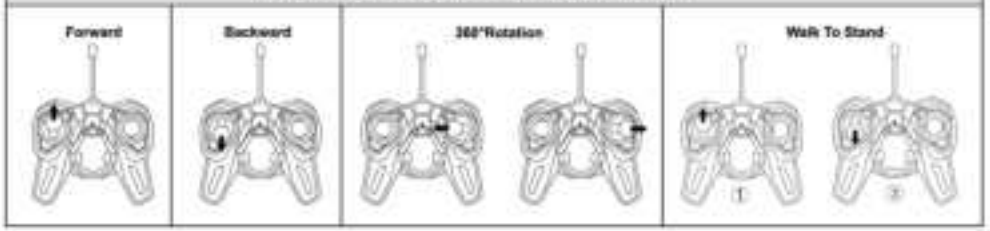

MADE IN CHINA

The Basic Operation of The Products

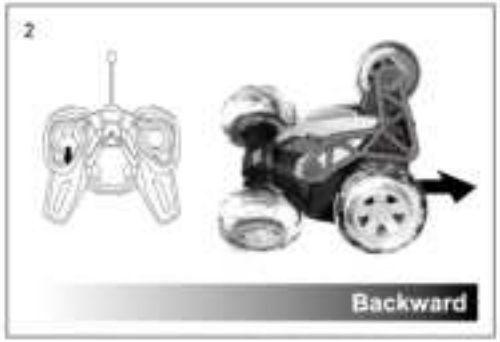

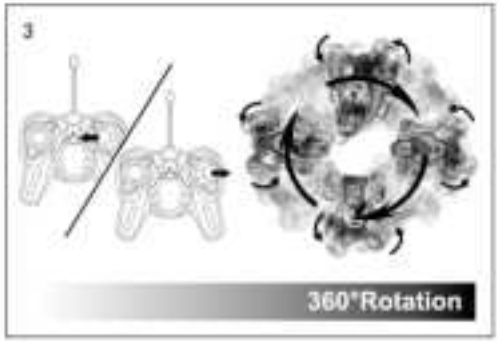

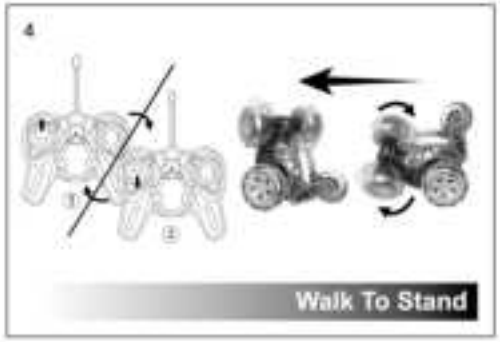

CAUTIONS

When the car is in motion, do not touch the wheels by hand to avoid damages to the car.

Do not bend the antenna or point it at other people or articles to avoid hurts.

Do not play in a place with puddle, mud or sand.

Do not play on the roads or in any other dangerous places to avoid accidents.

BATTERY SAFETY

(1) The placement or replacement of batteries is to be performed by an adult.
(2) Remove the rechargeable battery from the chassis before charging.
(3) Always remove exhausted batteries from the car and the transmitter.
(4) Make sure the main switch is set to OFF before installing the battery pack into the car body.
(5) Batteries must be inserted with the correct polarity.
(6) Non-chargeable batteries shall not be recharged.
(7) Do not short-circuit the batteries.
(8) Always remove the batteries from the car and the transmitter after playing.
(9) Never throw the batteries into fire to avoid explosion or leakage.
(10) Do not mix batteries from different producers or new and old batteries.
(11) You should only use batteries of the same or equivalent types as recommended.
(12) Check the batteries on a regular basis to avoid leakage.
(13) Keep this manual well for future reference as it contains important information about this product.

⚠ WARNING:

CHOKING HAZARD - small parts.
Not for children under 3 years.

0-3