EN

GUESS
EST.1981

WIRELESS EARPHONES

STUDIO QUALITY SOUND

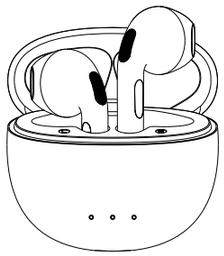

User Manual

*Please read this manual carefully before use
* Different models, different graphics, pictures for reference only

Specifications:

EN

BT Version	V5.4
Battery Earbuds	25 mAh * 2 earbuds
Battery Charging Case	250 mAh
Play Time	4 Hours
Charging Time	1.5 Hour
Sensitivity	-84dB ± 3dB
Effective Distance	10m
Frequency Range	20HZ - 20KHZ
Impedance	32 Ω
Input	DC 5V / 250mA
Speakers	13mm Driver
Charging Connector	USB-C

Specifications:



Product operating instructions:

EN

1. Power on
Method 1: Open the case, the headphones will turn on automatically.
Method 2: Long touch the MF button of the headphones for 3-5s to turn on the headphones.

2. Power off
Method 1 : Put the headphones into the charging case directly and close the case to turn off.
Method 2 : When the left and right earphones are powered on, hold own the touch button for 4-6s to power off the earphones.
(not connected Connect to Bluetooth device)

3. Pairing to the BT device
Step 1: open the upper cover of the charging case, and the main and auxiliary headphones will automatically connected.
Step 2: open the BT list of smart devices, search"GUESS TWS" and Connect.



Restore factory settings:

When a single headset is turned on and not paired with a mobile phone, and click the MF button 5 times to clear the pairing record, then turn off the Headphone.

Control:

EN

■ Touch control button operating

Music playing mode

■■ Left/Right headphone operating

- Last song : triple-click the MF button of left headphone.
- Next song : triple-click the MF button of right headphone.
- Volume + : click the MF button of right headphone.
- Volume - : click the MF button of left headphone.
- Pause/Play : double click the left/right headset function button

Hands free function

■■ Left/ Right headphone operating (incoming call)

- Answer incoming call : double click the left/right headset function button
- Reject: press and hold the 2S headset function button
- Hang up: double click the left/right headset function button

Voice Assistant/Music mode/Game mode

■■ Left/ Right headphone operating

- Activation: Press and hold the left headset function button for 2S to hear the "Tone" tone loosen
- The default startup mode is music
Hold down the right earphone touch button for 2 seconds to switch to game mode, then hold down the right earphone touch button for 2 seconds to switch to music mode

Precautions:

EN

1. Please be gentle when using this headphone. The maximum tolerance of the button is 250g. Excessive force will damage buttons.
2. Please align the USB port when plugging or pulling the USB cable in order to avoid damage to the USB cable and fail to charge the headset.
3. If you do not use the headset for long periods, please turn off the headset and be sure to store it in a dry place, free from extreme temperature conditions and dust.
4. Please do not vibrate or shock the headset violently, and do not let it fall down from high place.

Safety warnings

Do not place any naked flame sources, such as lighted candles.
Dispose of batteries responsibly and be aware of the environmental effects of battery disposal.
Do not expose the batteries (batteries installed) to excessive heat, such as fire or the like.

Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods.
For your own safety, please be aware of your surroundings when using these headphones.

The symbole indicates DC Voltage

Recycling

FCC Warning

EN

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Designed in France. Made in China.

FCC ID: 2A7J2-TWSOGE L302

WARNING : This product can expose you to chemicals including Lead and Bisphenol A(BPA), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

RECTO

ES

GUESS
EST.1981

AURICULARES INALAMBRICOS

STUDIO QUALITY SOUND

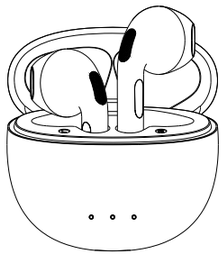

Manual de usuario

*Lea atentamente este manual antes de usarlo.
* Diferentes modelos, diferentes gráficos, imágenes solo como referencia.

Especificaciones:

ES

Versión Bluetooth	V5.4
Auriculares con batería	25 mAh * 2 auriculares
Estuche de carga de batería	250 mAh
Tiempo de juego	4 Horas
Tiempo de carga	1.5 Hora
Sensibilidad	-84dB ± 3dB
Distancia efectiva	10m
Rango de frecuencia	20HZ - 20KHZ
Impedancia	32 Ω
Aporte	DC 5V / 500mA
Oradoras	13mm Conductora
Conector de carga	USB-C

Especificaciones:



Instrucciones de funcionamiento del producto:

ES

1. Encendido
Método 1: abra el estuche, los auriculares se encenderán automáticamente.
Método 2: Toque prolongadamente el botón MF de los auriculares durante 3 a 5 segundos para encender los auriculares.

2. Apagar
Método 1: Coloque los auriculares directamente en el estuche de carga y ciérrelo para apagarlo.
Método 2: Cuando los auriculares izquierdo y derecho estén encendidos, mantenga presionado el botón táctil durante 4 a 6 segundos para apagar los auriculares.
(no conectado Conectar al dispositivo Bluetooth)

3. Emparejamiento con el dispositivo BT
Paso 1: abra la tapa superior del estuche de carga y los cables principal y los auriculares auxiliares se conectarán automáticamente.
Paso 2: abre la lista BT de dispositivos inteligentes, busca "GUESS TWS" y conecta.



Restaurar la configuración de fábrica:

Cuando un solo auricular está encendido y no está emparejado con un teléfono móvil, haga clic en el botón MF 5 veces para borrar el registro de emparejamiento y luego apague los auriculares.

Control:

ES

■ Funcionamiento del botón de control táctil

Modo de reproducción de música

■■ Funcionamiento de auriculares izquierdo/derecho

- Última canción: haga triple clic en el botón MF del auricular izquierdo.
- Siguiente canción: haga triple clic en el botón MF del auricular derecho.
- Volumen +: haga clic en el botón MF del auricular derecho.
- Volumen -: haga clic en el botón MF del auricular izquierdo.
- Pausa/Reproducir: haga doble clic en el botón de función del auricular izquierdo/derecho.

Función manos libres

■■ Funcionamiento de auriculares izquierdo/derecho (llamada entrante)

- Responder una llamada entrante: haga doble clic en el botón de función del auricular izquierdo/derecho.
- Rechazar: mantenga presionado el botón de función del auricular 2S.
- Colgar: haga doble clic en el botón de función del auricular izquierdo/derecho.

Asistente de voz/modo música/modo juego

■■ Funcionamiento de los auriculares izquierdo/derecho

- Activación: Mantenga presionado el botón de función del auricular izquierdo durante 2S para escuchar el tono "Tone" aflojarse.
- El modo de inicio predeterminado es música.
Mantenga presionado el botón táctil del auricular derecho durante 2 segundos para cambiar al modo de juego, luego mantenga presionado el botón táctil del auricular derecho durante 2 segundos para cambiar al modo de música.

Precauciones:

ES

1. Tenga cuidado al utilizar estos auriculares. La tolerancia máxima del botón es de 250 g. Una fuerza excesiva dañará los botones.
2. Alinee el puerto USB al enchufar o tirar del cable USB para evitar dañar el cable USB y no cargar los auriculares.
3. Si no utiliza los auriculares durante períodos prolongados, apáguelos y asegúrese de guardarlos en un lugar seco, libre de condiciones de temperatura extrema y polvo.
4. No vibre ni golpee violentamente los auriculares y no los deje caer desde un lugar alto.

Advertencias de seguridad

No coloque fuentes de llamas desnudas, como velas encendidas.
Deseche las baterías de manera responsable y tenga en cuenta los efectos ambientales de su eliminación.
No exponga las baterías (baterías instaladas) a un calor excesivo, como fuego o similares.

Advertencia

Para evitar posibles daños auditivos, no escuche a niveles de volumen altos durante períodos prolongados.
Por su propia seguridad, tenga en cuenta su entorno cuando utilice estos auriculares.

El símbolo indica voltaje CC.

Reciclaje

Advertencia de la FCC

ES

Este dispositivo cumple con la parte 15 de las normas de la FCC. La operación es
sujeto a las dos condiciones siguientes:(1) Es posible que este dispositivo no causar interferencias dañinas y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluida la interferencia que pueda causar funcionamiento no deseado.
Cualquier cambio o modificación no aprobado expresamente por el parte responsable del cumplimiento podría anular la autoridad del usuario para operar el equipo.
Este equipo ha sido probado y se ha determinado que cumple con las límites para un dispositivo digital de Clase B, de conformidad con la parte 15 de la FCC
Normas. Estos límites están diseñados para proporcionar una protección razonable.
contra interferencias dañinas en una instalación residencial.
Este equipo genera usos y puede irradiar radiofrecuencia.
energía y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias dañinas a la radio comunicaciones. Sin embargo, no hay garantía de que
No se producirán interferencias en una instalación en particular.
Si este equipo causa interferencias dañinas a la radio o recepción de televisión, que se puede determinar girando el equipo apagado y encendido, se anima al usuario a intentar corregir la interferencia por una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumente la separación entre el equipo y el receptor.
- Conecte el equipo a una toma de corriente de un circuito diferente desde aquel al que está conectado el receptor.
- Consulte al distribuidor o a un técnico experimentado en radio/TV. por ayuda.

El dispositivo ha sido evaluado para cumplir con la exposición general a RF. requisito. El dispositivo se puede utilizar en exposición portátil. condición sin restricciones.

Designed in France. Made in China.

FCC ID: 2A7J2-TWSOGE L302

WARNING : This product can expose you to chemicals including Lead and Bisphenol A(BPA), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

VERSO