Date: 14 SEP 2023 Product: ET-0800 /M			ZEEVA

Size: 13.71W) x 8.66H(in
350(W) x 220H(mm

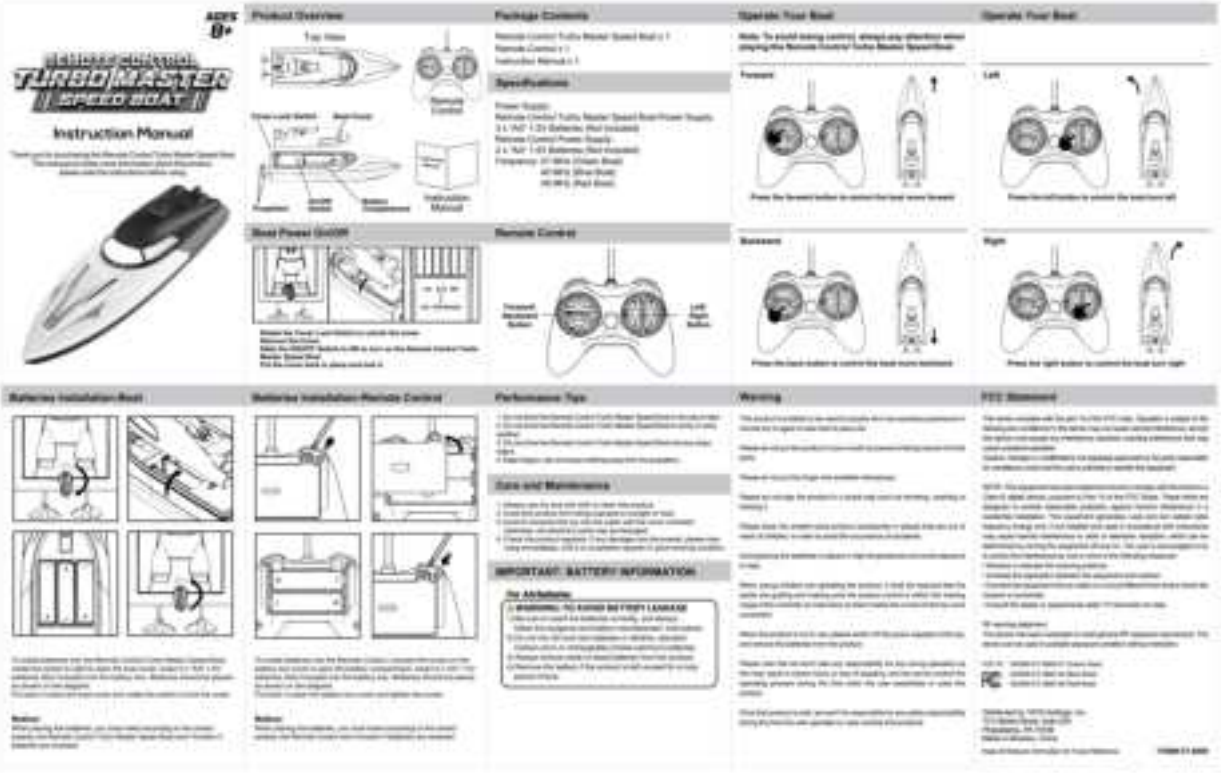

AGES 8+

REMOTE CONTROL
TURBO MASTER
SPEED BOAT

Instruction Manual

Product Overview

Top View

Remote Control

Power Lock Button Boat Hook

Propeller Anti-Slip Sticker Battery Compartment Instruction Manual

Package Contents

Remote Control Turbo Master Speed Boat x 1
Remote Control x 1
Instruction Manual x 1

Specifications

Power Supply:
Remote Control Turbo Master Speed Boat Power Supply:
2 x 1.5V 1.2V Batteries (Not Included)
Remote Control Power Supply:
2 x 1.5V 1.2V Batteries (Not Included)
Frequency: 27 MHz (Green Boat)
40 MHz (Blue Boat)
40 MHz (Red Boat)

Boat Power On/Off

Remove the Power Lock Button to switch the power.
Remove the Cover.
Slide the ON/OFF Button to ON to turn on the Remote Control Turbo Master Speed Boat.
Put the cover back in place and lock it.

Remote Control

Forward Movement Button

Left Right Turn Button

Operate Your Boat

Note: To avoid losing control, always pay attention when playing the Remote Control Turbo Master Speed Boat.

Forward

Press the forward button to control the boat move forward.

Left

Press the left button to control the boat turn left.

Backward

Press the back button to control the boat move backward.

Right

Press the right button to control the boat turn right.

Batteries Installation-Boat

To install batteries into the Remote Control Turbo Master Speed Boat, remove cover in order to open the battery compartment, insert 2 x 1.5V 1.2V batteries, then re-install the battery lid. Batteries should be placed in the battery compartment as shown diagram.
Put back in cover and lock the cover in place.

Notice:
When using the batteries, you must make sure polarity is the correct direction. Remove Remote Control Turbo Master Speed Boat from water if batteries are exposed.

Batteries Installation-Remote Control

To install batteries into the Remote Control, remove the cover on the battery and insert in place the batteries, insert 2 x 1.5V 1.2V batteries, then re-install the battery lid. Batteries should be placed in the battery compartment as shown diagram.
Put back in cover and lock the cover in place.

Notice:
When using the batteries, you must make sure polarity is the correct direction. Remove Remote Control Turbo Master Speed Boat from water if batteries are exposed.

Performance Tips

1. Do not leave the Remote Control Turbo Master Speed Boat in the sun or near heat.
2. Do not leave the Remote Control Turbo Master Speed Boat in wet or very cold air.
3. Do not leave the Remote Control Turbo Master Speed Boat and any other toys.
4. Do not dropping the Remote Control Turbo Master Speed Boat and any other toys.
5. Keep children away from the toy and other.

Care and Maintenance

1. Always use dry and soft cloth to clean the product.
2. Avoid the product from being damaged in sunlight or heat.
3. Avoid the product from any acid and alkali and other corrosive substances, and avoid it in water near and immersed.
4. Check the product regularly. If any damage has the product, please stop using immediately. Only it is available repaired or good working condition.

IMPORTANT: BATTERY INFORMATION

For AA Batteries

⚠ **WARNING: TO AVOID BATTERY LEAKAGE**

1. Never mix old and new batteries or batteries of different types (alkaline, carbon zinc, or rechargeable). Follow carefully the polarity (+ and -) when inserting batteries.
2. Do not use the Ni-Cad (ni-cadmium) or NiMH (ni-metal hydride) batteries.
3. Remove exhausted batteries from the product.
4. Remove the batteries if the product will not be used for an long period of time.

Warning

This product is suitable for use in a private use in an environment and not for industrial or legal use. Use it at your risk.

Please do not put the product in an unsafe or unhealthy environment and place.

Please do not put the toys and available accessories.

Please do not use the product in a dark and cold or hot environment, anything or swimming.

Please keep the product away and from accidentally or unused. Keep out of reach of children, in order to avoid the occurrence of accidents.

Do not place the batteries in fire or high temperature and avoid exposure to rain.

When using children can operating the product, it shall be required that the adults are guiding and making sure the product control is within their reaching range of the controller or instructions or does not make the product fall to the ground accidentally.

When the product is not in use please switch off the power supplied of the toy and remove the batteries from the product.

Please note that we won't take any responsibility for any loss or damage caused by the toys, such as injuries, losses or loss of equipment, and we are not responsible for operating problems during the toys under the use conditions or under the control.

Once the product is sold, we won't be responsible for any other responsibility during any time the user operates or uses during the product.

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio / TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AXBB-ET-0800-M-Green Boat
2AXBB-ET-0800-M-Blue Boat
2AXBB-ET-0800-M-Red Boat

Distributed by: ZEEVA Holdings, Inc.
7111 Beaver Dams, Suite 105
Philadelphia, PA 19149
Made in Mainland, China

Page 2 Please Retain Instruction for Future Reference.

ET0800-E1-0000