radioshack
MODEL: 4001958
MP3 PLAYER
LED MODE
USB
MODE
CAUTION
You can choose power from AC input, DC input, or use battery.
AUX IN
AUX OUT
CAUTION: BEFORE USE SPEAKER BOX, PLEASE CHARGE BATTERY FULLY,IT IS BETTER FOR BATTERY LIFE.
DON'T PLAY SPEAKER BOX AND CHARGE BATTERY AT THE SAME TIME, OTHERWISE IT WILL AFFECT BATTERY LIFE.
CAUTION: TO PREVENT ELECTRIC SHOCK,DO NOT REMOVE COVER(OR BACK).
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
RED:CHARGE
GREEN:FULL
AC100-240V
50/60Hz
12V BATTERY IN
ON
OFF
POWER
Made in China
VOLUME
MIN
MAX
TREBLE
BASS
MIC.VOL
MIC.TRE
MIC. BASS
ECHO
MIC 1
MIC 2
CLIP
POWER
MIC PRI
ON
OFF

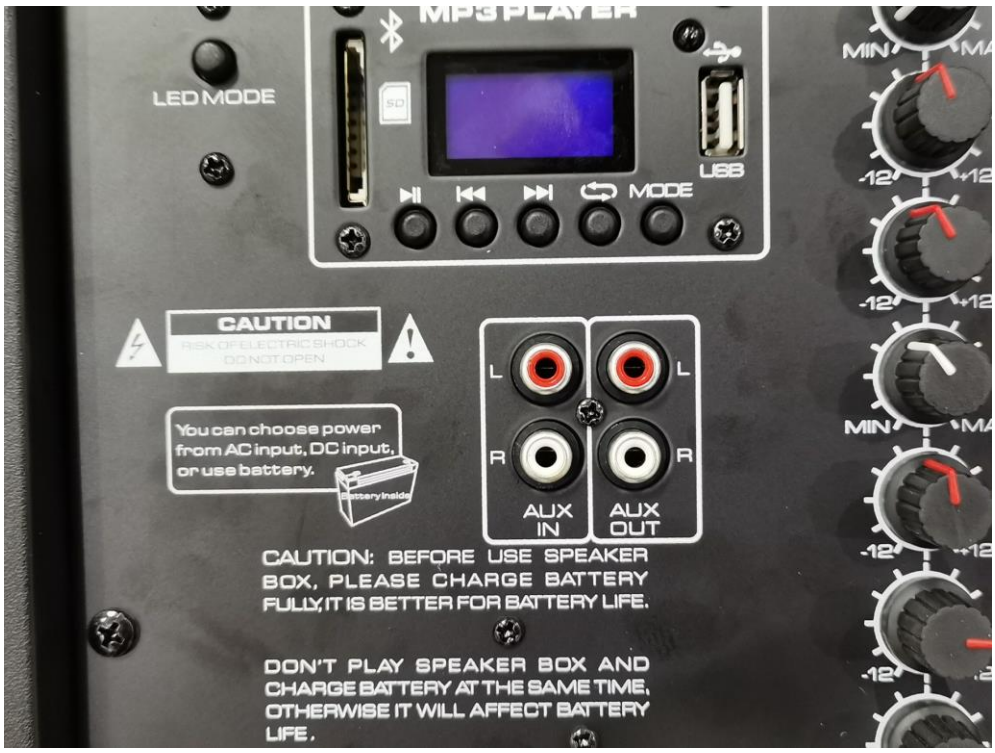
MP3 PLAYER
LED MODE
SD
USB
MODE
MIN
-12
+12
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
You can choose power
from AC input, DC input,
or use battery.
Battery inside
L
R
AUX
IN
AUX
OUT
CAUTION: BEFORE USE SPEAKER
BOX, PLEASE CHARGE BATTERY
FULLY, IT IS BETTER FOR BATTERY LIFE.
DON'T PLAY SPEAKER BOX AND
CHARGE BATTERY AT THE SAME TIME,
OTHERWISE IT WILL AFFECT BATTERY
LIFE.

radioshack
MODEL: 4001958
MP3 PLAYER
LED MODE
SD
USB
MODE
MIN
-12
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
L
You can choose power
from AC input, DC input,

WARNING: TO REDUCE THE RISK OF
FIRE OR ELECTRIC SHOCK. DO NOT
EXPOSE THIS EQUIPMENT TO RAIN OR
MOISTURE.
RED: CHARGE
GREEN: FULL
+
−
ON
12V BATTERY IN
OFF
POWER
AC100-240V
50/60Hz

MIC.
BASS
-12
+12
ECHO
MIN
MAX
MIC 1
MIC 2
+
−
ON
CLIP
POWER
MIC PRI
ON
OFF
12V BATTERY IN