Smart Bracelet

User Guide
ID130S



Thanks for choosing our device, please read
the user guide carefully before using.

English Version --------------01
日本语バージョン -------------16

Setting

Use VeryFitPro on iOS or Android smart phone to set the wristband as follows:

Note: hardware and system of devices should meet the requirements:

iOS 8.0 & Above

Android4.4 & Above

Support Bluetooth4.2

1、Download VeryFitPro

Search and download

Search and download “VeryFitPro” from the Apple Store or Android App store .

Scan the QR code and download

It probably has a problem to open the link with WeChat or other scan tools, please copy the link and open it through browser.

2、Product activation and installation

The product must be activated by charging before initial use, and then charge the product to ensure normal power supply. The hand ring will automatically power on.

Take out: Pull open the strap and take out the bracelet body



Charge the battery: Insert the chip-mounted end of the bracelet body into the USB interface to activate the product by charging (be cautious not to reverse the polarity, and comply with the required voltage and current: 5V / 500mA)



Installation: Mount the bracelet body into the slot of the wrist strap.



Wear on: Adjust the length of the wrist strap until it is appropriate to wear on the wirst.

スマート心拍ブレスレット

取扱説明書
ID130S



本製品をご利用いただき、誠にありがとうござい
ます、ご使用前に本取扱説明書をよくご覧下さいませ。

一、ブレスレットの設定

iOSまたはAndroid設備のVeryFitProアプリケーションにてブレスレットをご設定ください、手順は以下の通りとなります:

備考：設備システムハードウェアプラットフォームは以下の条件を満足する必要

iOS 8.0またはiOS 8.0以上バージョン

Android4.4またはAndroid4.4以上バージョン

ブルートゥース 4.2をサポート

1、VeryFitProをダウンロードする

方法1：キーワードを検索してダウンロードする

Apple Storeまたはアンドロイドアプリにて“VeryFitPro”を検索してダウンロードします；

方法2：二次元コードをスキャンしてダウンロードします。

ウィーチャット及びそのたのスキャンツールにてインタフェース内のダウンロードリンクを開けない場合があるため、これらをコピーしてブラウザにて開いてください。

---

2. 製品のアクティベーションと取付け

初めてご使用の場合は充電にて製品をアクティベーションし、それから充電し、消費電力を確保し、ブレスレットは自動的にパワーオンします。

取出し：バンドを引離して、ブレスレット本体を取り出します。



チップ側をUSBボートに差し込み、充電します
（逆差しをご注意ください、電圧電流要求：5V/500mA）



取付け：ブレスレット本体を腕バンドカード槽に取付けます



装着：バンドの適当な長さを調整し装着します。

3、Touch key



Single click the touch key:
Interface switch
Press and hold the touch key:
Enter

4、Make sure the Bluetooth of smart phone is ON, open app“VeryFitPro”

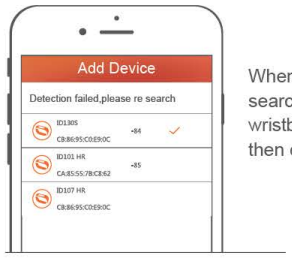

When selecting the right band from the search list, please slide the screen of wristband to wake up the device and then complete connecting.

Know your Device

1、Wearing Method

Wear the device on your wrist horizontally, about 2cm to carpal,the same method as wearing watches.

2、Heart Rate Monitoring

To monitor Heart Rate more accurately, please wear the device on the upper position of your wrist and a bit tighter than usual when you are taking exercise.

3、Heart Rate Monitoring

Automatic heart rate Monitoring is ON as default, monitor Heart Rate all the day automatically.

4、Interface

Click the touch key to display successively



Time　Data Mode　Heart Rate Mode　Alarm Clock Mode　Sports Mode

Function Introduction

1.1 Time Mode



Instructions
Time dial can be switched as follows:
APP Devices Mode>More
[Click the touch key] to enter the next mode:
Data Mode
(you can customize the shortcut through the app)

1.2 Data Mode



[Click the touch key] to enter the next mode:
Heart Rate Mode
[Press and hold the touch key for 2s]
to enter the sub-mode of “Data Reading”

1.2.1 Data Reading Sub-Mode



[Click the touch key] to enter the next sub-mode

Note：To go back to the Data Reading Mode by clicking the touch key on the final interface of Data Reading Sub-Mode

1.3 Heart Rate Mode



Before Data Is Displayed　After Data Is Displayed　Change in 0.5s

Note: Upon staying at the Heart Rate interface for 1s, start to monitor the heart rate, and a fig. like —^v— is displayed before the correct data is monitored, and upon the correct data being monitored, data is displayed.
[Click the touch key] to enter the next mode: Alarm Clock Mode

1.4 Alarm Clock Mode



Note: Alarm clock function should be turned on in App for the alarm clock to be displayed.



[Click the touch key] to enter the next mode:
Sports Mode
[Press and hold the touch key for 2s]
to start/close alarm clock

1.5 Sports Mode



[Press and hold the touch key for 2s] to enter the Sports Mode

[Click the touch key] to enter the next sports mode; and in case there are no other sports modes, it will go back to the time mode.

Note: Types of Sports mode can be selected in App (App can handle 3 types of track recording sports and 11 types of other activities)

1.5.1 Sports Start Mode



After the countdown interface of 3-2-1-GO is the sports underway mode.

1.5.2 Sports Underway Mode



Heart Rate　Steps　Calories　Distance

3、タッチボタン



タッチボタンをクリックすると：
インターフェースを切り替えます。

タッチボタンを長押しすると：
入ります

4、VeryFitProアプリを開いて、マッチングを完成させます。

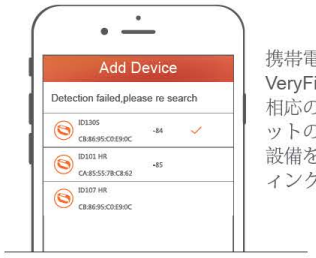

携帯電話のブルートゥースを開いて、VeryFitProアプリを開き、捜索欄にて相応のブレスレットを選び、ブレスレットのタッチパネルをスライドし、設備をウエイクアップし、バインディングを完成させます。

ブレスレットを知る

1、 装着方式

ブレスレットを腕にお付けください、腕骨の2cmのところに平置きし、腕時計の付け方とほぼ同じです。

2、 心拍数モニタリング

心拍数モニタリング結果がもっと正確になるために、運動時にブレスレットを上の上側の位置にお付けし、普段よりややきつめにお付けください。

3、心拍数測定

ブレスレットはデフォルトに自動心拍数測定機能をオンし、一日中に自動的に心拍数を測定します。

4、 インターフェース説明

タッチボタンをクリックして順番通りに表示します



時間　データーモード　心拍数モード　アラームモード　運動モード

機能紹介

1.1時間モード



説明：
時間文字盤はapp設備モジュールの中にあり>もっとの中に切換えます
[タッチボタンをクリック]次のモードに入ります：データーモード

1.2 データーモード



[タッチボタンをクリック]次のモードに入ります：心拍数モード。
[2sほどタッチボタンを長押し]データーチェック子モードに入ります。

1.2.1 データーチェック子モード



[タッチボタンをクリック]次の子モードに入ります
注意：データ調べのサブモードにある最後のインターフェースに、タッチボタンをクリックしてデータ調べモードに戻す。

1.3 心拍数モード



データーが出る前　データーが出る後　0.5s毎に鼓動

説明：　心拍数インターフェースに1sほど止まった後に、心拍数測定を開始し、—^v— 正確なデーターを測定できるまではを表示、正確なデーターを測定した後にデーターを表示します。
[タッチボタンをクリック]次のモードに入ります：
アラームモード（Alarm Mode ）

1.4 アラームモード



説明：appにアラーム機能を設置してから、表示されます。



[タッチボタンをクリック]次のモードに入ります：運動モード。
[2sほどタッチボタンを長押し]
目覚まし時計の知らせをON/OFFにする

1.5 運動モード

サイクリング長押ししてスタートする



[2sほどタッチボタンを長押し] 運動開始モードに入ります

[タッチボタンをクリック] 次の運動モードに入ります。もし次の運動モードがなければ、時間インターフェースモードに戻します。

説明：運動モードの種類はAPPで選択できます（APPが軌跡記録をサポートできる運動が3種類あり、その他の活動が11種類有ります。）

1.5.1 運動開始モード



運動開始インターフェースに入ります。3-2-1-GOの後に、運動進行中のインターフェースに入ります。

1.5.2運動中モード



心拍数　歩　カロリー　距離



Pace/Speed



Average pace



Time

[Click the touch key] to enter the next sub-mode of "Sports Underway"[Press and hold the touch key for 2s] to enter any interface of Data Reading, press and hold 2s to exit the sports mode.

Note: The speed and distance of riding can be displayed, but App need to be connected and the riding and App needs to start at the same time.

1.5.3 Sports Stop Mode



1) If the sports last less than 1 minute, the user will be reminded of not saving the data.

[Click the touch key] to enter the main interface of sports mode (the data reading interface of sports data display mode is not displayed)



2) If the sports last more than 1 minute, the Sports End Reminder will be displayed

[Click the touch key] to enter the sports data display mode

3) Sports data display mode



Step, Distance



Duration, Calories



Pace, Heart Rate

[Click the touch key] to enter the next sports data display mode, and the single click of the final interface will go back to the first interface of sports mode.

1.5.4 Event Reminder in Sports Mode



1) Reminder of exiting from sports mode upon a period of no activity

[Click the touch key] to remove the reminder of automatic quitting from sports mode.

Note
1.If there is no any activity in a period (15 minutes), reminder will be displayed 15s before it stop.
2.New activities will remove the reminder of automatic quitting from sports mode.
3.If there are no any new operations before the end of the countdown of automatic quitting from the sports mode, it will exit from the sports mode.



2) Reminder of full-ram force quit
[Click the touch key] to confirm the full-ram Force Quit

Note: When the memory of wrist strap is full of sports data, the user will be reminded of exiting from the Sports Mode

3) Reminder of force quit for low-battery
[Click the touch key] to accept the force quit from the sports mode

Note: During the sports activities, when the power is too low, the sport mode will pause, and remind the user of force quit from the sports mode.

4) Reminder of inaccessible sport mode for low-battery

[Click the touch key] to accept the inaccessible sports mode for low-battery

Note: The reminder will occur when a user tried to start the sports mode with the battery of device is in low.

1.5.5 Abnormal operations during activity

The reminder will be available soon

[Click the touch key] to quit from the reminder waiting mode

1. Camera mode control



Entry mode: Start the camera entry by App, and the device will get in the camera mode successfully.

Photo taking methods: shake/wrist lifting/click the touch key

Modes of exit:
1. Press and hold the touch key to exit from the camera mode
2. Exit through App will make the wrist strap quit from the camera mode.

2. More modes of reminders

1) Call Reminder



Click the touch key to remove the call reminder
Press and hold the touch key to hang up the call

Note: The call reminder in the App needs to be set open.

2) Message Reminder



In case of pages of messages, Click the touch key to read the remained ones.

Note: The relevant settings need to done in the App.



歩調/速度



平均速度



時間

[タッチボタンをクリック] 次の運動中子モードに入ります。
[2sほどタッチボタンを長押し] データ調べの任意のインタ ーフェースで、2S長押すれば、運動モードから退出します。

説明：APPに接続した上に、且つAPPと同じ時間で開始したサイクリング運動であれば、ペース、距離を表示します。
それ以外なら、表示しません

1.5.3 運動終了モード



1）運動時間が一分間以下であれば、ユーザーにデータを保存しないと知らせます。

「タッチボタンをクリックする」運動メインインターフェースモードに入ります。（運動終了データ調べのインターフェースを表示しません)



2）運動時間が一分間以上であれば、運動終了の知らせを表示します。
運動終了データ表示モードに入ります。

3）運動終了データ表示モード:



ステップ、距離



時間、キロカロリー



ペース、心拍数

「タッチボタンをクリックする」切替して、次の運動終了データ表示モードに入ります。最後の運動データインターフェースをクリックすれば、運動モードのホームページに戻します。

1.5.4 運動時の事件注意



1）動かないと、運動モードから退出するという知らせ。

「タッチボタンをクリックする」自動的に運動モードから退出するという知らせをキャンセルします。

1.しばらく（15分間）動かなければ、終了する前の15ｓに知らせます。
2.再び動きますと、自動的に運動モードから退出するという知らせをキャンセルします。
3.運動モードから自動的に退出するというカウントダウン知らせが終了するまでに、操作がなければ、運動モードから自動的に退出します。



2）ストレージが不足して強制的に運動モードから退出すると知らせます。

「タッチボタンをクリックする」ストレージが 不足して、運動モードから強制的に退出するという知らせを確認します。

説明：運動データは、ブレスレット側のメモリが不足する時に、ユーザーに運動モードから退出すると知らせます。

3）バッテリーの電力が消耗されて、運動モードから強制的に退出すると知らせます。

「タッチボタンをクリックする」電力が消耗されるて、運動モードから強制的に退出するというを確認します。
説明：運動過程中、電力が低い場合、運動を一時停止して、電力が低くて運動モードから強制的に退出すると知らせます。

4）電力が低くて運動モードに入れないという知らせ。

「タッチボタンをクリックする」電力が低くて運動モードに入れないと確認します。

説明：設備が低い電力モードの状態にある時に、ユーザーが運動をスタートする時に、しらせます。

1.5.5 運動時の操作異常の状況(1.2.6)

知らせを待っています。

「タッチボタンをクリックする」待っているという知らせから退出します。

1. 撮影制御モード



入る方法：APPで入り、設備が成功的に撮影モードに入りました。
撮影方法：振る/腕上げ/タッチボタンをクリックします

終了メソッド：
1.タッチボタンを長押しして、撮影モードから退出します。
2.APPが撮影モードから退出して、ブレスレットが撮影モードから退出します。

2. より多くの注意モード

1）着信のお知らせ



タッチボタンをクリックして、知らせをキャンセルします。
タッチボタンを長押しして、電話を切ります。

説明：APPで着信知らせを開いて設置する事が必要です。

2）メッセージのお知らせ



複数ページのメッセージがある時に、タッチボタンをクリックして残ったメッセージを見ます。
説明：APPで設置することが必要です。

3) Alarm Clock



Alarm Clock: The relevant settings need to done in the App.

Alarm Clock Types:

Wake up
Medicine taking
Sleeping
Party
Appointment
Exercise
Meeting

4)Long Sitting Reminder



Alarm Clock Reminder: The relevant settings need to done in the App..
Click the touch key: It will remove the reminder.

5) Target completion reminder



When some goals are achieved, shake the wrist strap to get the interface of target completion reminder displayed Click the
touch key to quit from the reminder

---

6) Low battery reminder

or

Low-Battery! Please recharge timely!

7) Device Error Notification



Note: When the device is detected with an abnormality, the interface herein will be displayed each time the device is opened.

Status Code:
-01 means the abnormality of acceleration sensor
-02 means the abnormality of heart rate sensor
-03 means the abnormality of touch key IC
-04 means the abnormality of flash

Basic Specifications

Model No.: ID130S
Battery Capacity: 95mAh
Working Voltage: 3.7V
Host weight: about 23.5g
Sync: Bluetooth 4.2
Working temperature: -20℃- 45℃
Waterproof: IP67
Working Time: 7days
Product frequency band: 2402-2480MHz
Maximum transmit power: 0dBm

Declaration of toxic and hazardous substances in electronic information products

The device meets the EU ROHS criterion. Please refer to IEC 62321, EU ROHS Directive 2011/65/EU and revised directive.

Wearing and Maintenance



Our products are designed for you to wear throughout the day. So please follow a few brief instructions when you are wearing and maintaining your smart devices. To keep your wristband clean and your skin comfortable, we put forward the following tips:

- Regularly clean your wrist and the smart wristband, especially after sweating in the exercise or being exposed to substances such as soap or detergent which may attach on the internal side of the wristband.

- Do not wash the wristband with household cleanser.Please use soapless detergent, rinse thoroughly and wipe with a piece of soft towel or napkin.

- For spots or stains that are not easy to remove, scrub with alcohol and then follow the above steps.

FAQ

◆ Failed to find the device when pairing

① Make sure the Bluetooth of smart phone is ON, and smart phone OS Android 4.4 & Above, iOS 8.0 & Above.

② Make sure the distance between phone and device is within 0.5meter, device is among the normal Bluetooth communication distance range(within 10meter) after pairing finished.

③ Make sure the device is not under low battery. If there is still a problem after fully charged, please contact us.

◆ Failed to connect with Bluetooth occasionally

① Caused by the abnormality of Bluetooth service when it restarted on the phone.

② Reboot mobile phone or re-start the Bluetooth service, then it works normal.

◆ How to restore factory defaults

Make sure the device is connected with smart phone, go in the App, enter “device-- System setting”, and choose “reboot device”.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.

3）アラームお知らせ



アラームお知らせ：APPにて設定必要です

アラームタイプ：

起きる
薬を飲む
寝る
パーティー
デート
運動
打合せ

4) 長時間座りのお知らせ



目覚まし時計の知らせ：APPで設置することが必要です。
タッチボタンをクリックする：知らせをキャンセルします。

5）目標完成のお知らせ



目標完成の時に、ブレスレットが振動して、このインターフェースが表示されます。
タッチボタンをクリックする：知らせから退出します。

6）低電力のお知らせ

或は

電力が低くて、タイムリーに充電してください。

7）設備異常のお知らせ



説明：設備の異常が発見された時に、設備を起動する度に、このインターフェースが表示されます。

状態コード：
-01加速度センサー異常を意味します。
-02心拍数センサー異常を意味します。
-03タッチic異常を意味します。
-04flash異常を意味します。

製品パラメータ

製品型名:ID130S
電池容量: 95mAh
動作電圧：3.7V
本体重量: 約23.5g
シンクロ方式: ブルートゥース 4.2
動作温度: -20℃- 45℃
防水レベル: IP67
使用時間: 7日間ぐらい
製品周波数：2402-2480MHz
最大発射電力値：0dBm

電子情報製品有毒有害物質の声明

本製品は欧州連合ROHS標準に適応し、IEC 62321 と欧州連合RoHS指令 2011/65/EU及びその修正指令を参考したものであることを声明致します。

着用と保守



当社の製品は、1日中着用するように設計されていますので、スマートデバイスを着用し、保守する際に、いくつかの簡単な説明に従ってください。

- 手首および着用のスマートブレスレットを定期的に洗浄してください。特に運動発汗、又は皮膚に石けんや洗浄液などが接触すると、これらの物質はブレスレットの中に入る可能性があります。

- 家庭用洗剤ではなく、石けんのない洗浄剤でブレスレットを洗浄し、きれいに洗い流し、柔らかいタオル又はティシューで乾拭きしてください。

- 除去しにくい斑点又は汚れがある場合は、アルコールで拭き取り、そして上記の手順にしたがって処理してください。

よくある質問 FAQ

◆マッチング時にブレスレットを探せない?

① あなたの携帯電話がブルートゥースを繋げたかどうか、携帯電話が“サポート範囲内”であることをご確認ください。

② マッチング時に、ブレスレットと携帯電話を0.5M範囲内にあることをご確保ください、マッチングが完了後にブルートゥースの通信範囲は7ｍ以内であります。

③ ブレスレットが消費電力を持っているかをご確認ください、充電後にまだ探せなければ、我々までご連絡ください。

◆ たまにブルートゥース が繋がれない現象が発生?

① 一部の携帯電話のブルートゥース サービス再起動時にはたまに異常が発生し、当該現象に発生させます。

② 普通の場合は携帯電話ブルートゥースまたは携帯電話を再起動すれば、正常に繋がれなます。

◆ どうやって出荷時の設定へリセットしますか。

ブレスレットと携帯電話は既に繋がり、アプリにて“私の-システム設定--”に入り、“設備を再起動”を選んでください。

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.