Q30 Pro Quick Start Manual

Product Overview

Important Reminder:
Before installing the headset, please connect your mobile phone according to the quick manual guide to test the sound effect and volume.
If there is a big difference in sound effect and volume after installing into the helmet,please adjust the position of the speaker inside the helmet.

Power on/off

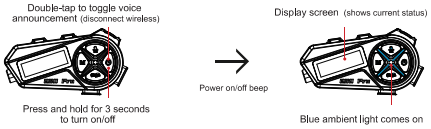

Wireless connection



Full-duplex intercom pairing/music sharing and intercom mode co-existing



After the two machines are switched on, both short press the 'intercom button' to switch to full-duplex mode of speech, the prompt 'intercom pairing', for automatic pairing, when there is a prompt 'intercom connection' both can be Intercom call, short press again to exit the full-duplex intercom mode

Two machines in full-duplex speech mode pairing success, double-click the 'intercom button' can open the music sharing (mixing mode), the tone 'music sharing open', this time you can share their wireless music to each other to listen to, at the same time you can intercom call! This time, you can share your wireless music to each other and talk to each other at the same time; double-click the 'talkback button' again to exit the music sharing at this time.

Telephone function

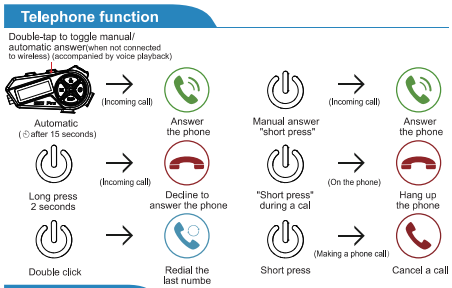

Music function

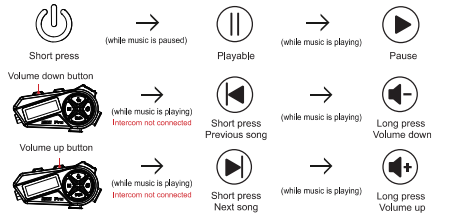

Music radio/voice assistant

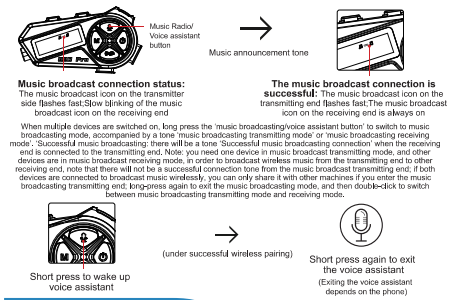

FM radio/light function

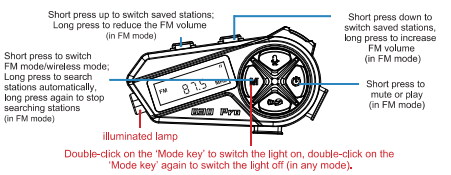

Double-click on the 'Mode key' to switch the light on, double-click on the 'Mode key' again to switch the light off (in any mode).

Dating mode pairing (connecting third parties)



Mixing function



Intercom and wireless can work independently without affecting each other, when the intercom and wireless are connected, the two sounds can be mixed out to the speaker end, you can hear the sound of the two modes at the same time.
When the intercom is successfully connected, the volume up and down keys operate as follows:①Short press the 'volume up and down keys' to adjust the volume size of the wireless music;②Long press the 'volume up and down keys' to adjust the volume size of the intercom;③Double-click the 'volume up and down keys' to switch the next and previous songs of the wireless music.
The volume up and down keys operate as follows in the music broadcast mode:Press and hold 'Volume Up/Down' to adjust the volume of music sharing and wireless music at the same time.

Intercom reset



Introduction to wireless intercom connection operation (every time you switch on the intercom and music sharing default off)
I: Intercom back to connect
The machine has been connected, after switching on the machine, all short press the intercom button to enter the intercom mode, regardless of the primary and secondary machines automatically connected to the pairing
II: Telephone Priority
After switching on the machine, the machine is connected to the wireless, regardless of which mode the machine is in, when the machine calls or goes to the phone, it will automatically enter the telephone mode with priority, and hang up to restore the corresponding mode.
III: Clear intercom pairing and restore factory settings.
Clear the wireless pairing information: switch on the wireless mode, long press the 'volume up and volume down keys' for 5 seconds at the same time, clear the wireless pairing information, the indicator blue light and the display wireless icon, speaker icon, intercom icon, music broadcasting icon are flashing 3 times slowly.
IV: Ambient light goes out after one minute of inactivity and wakes up again if there is a key operation.

Charging function



Product List

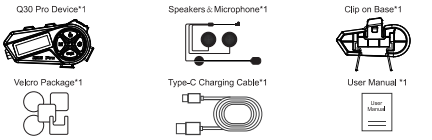

Caveat

1. To avoid explosion,please do not put the product into the flame;
2. Please do not disassemble the product to avoid damage to the electronic components of the product;
3. Please keep away from sharp objects to avoid damage to the product;
4. Please keep in a dry place if not used for long time;
5. Before using the wireless device, please fully charge it;
6. If the red light does not come on while charging, it may be the voltage is too low;
7. To extend the life of the built-in lithium polymer battery, please charge the device at least once a month.

Instruction warning

NOTE: This product has been tested, meet the restrictions of Class B digital device, pursuant to part 15 of the FCC Rules.
These limits aredesigned to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

-Reorient or relocate the receiving antenna,
-Increase the separation between the device and receiver,
-Connect the device into an outlet on a circuit different from that to which the receiver is connected,
-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance couldvoid the user's authority to operate the device.
This device complies with Part15 of the FCC Rules. The operation needs to fulfil the following two conditions.
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device can be used in portable exposure condition without restriction.