coolpad

Quick Start Guide

Hello from Coolpad

Thank you for purchasing your Coolpad 3503L mobile phone! Please follow these simple but important instructions for optimal use of your new phone.

Application features and functions may vary among countries, regions or hardware specifications, and any third-party application malfunctions are the responsibility of those manufacturers.

We offer self-service for our smart terminal device users. Please visit the Coolpad Americas official website (at www.coolpad.us) for more information on supported product models. Information on the website takes precedence.

Device Layout

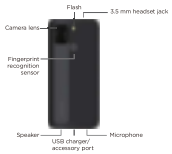

Charge the Battery

1. Plug the USB connector into the charger/accessory port on the bottom of your phone.
2. Plug the other end of the USB cable into the AC adapter.
3. Plug the AC adapter into an electrical outlet.
4. After charging, unplug the AC adapter from the outlet, and remove the USB cable from the phone and the AC adapter.

Turn Your Phone On and Off

Press and hold the **Power/Lock key** until the phone powers on. the Home screen will be displayed. If screen lock is set up, enter the code to access the Home screen.

Press and hold the **Power/Lock key** to display the device options menu. Tap **Power off** to turn the phone off.

Your screen remains blank while your phone is off (unless the battery is charging).

SIM Card



1. Insert the SIM ejection pin into the hole to open the SIM card tray.
2. Gently pull out the SIM card tray. Place the Nano SIM card in card slot 1. If you have a microSD card (sold separately) place it in card slot 2.

Note: Please always use the SIM ejection pin to eject the SIM card to ensure the device is not damaged.

Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, and more.

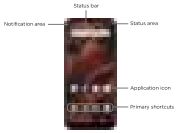

Customize the Home Screen

Learn how to change Home settings and add, move, or remove shortcuts and folders from the home screen.

- **Change Home Settings:** From home, tap and hold an empty space, and then tap **Home settings.** Select an item to change the settings.
- **Add Shortcuts to the Home Screen:** From home, swipe up to open the apps list. Tap and hold and move an app icon, and then drag the icon to an empty location on one of the home screens.
- **Add Folders to the Home Screen:** From home, tap and hold a shortcut you want to place in a folder, and then drag it on top of another shortcut you want to place in the same folder. To add more app shortcuts to the folder tap and hold a shortcut and drag it on top of the new folder.
- **Moving Icons:** From home, tap and hold an item and then drag it to the desired location.
- **Deleting Icons:** From home, tap and hold an item and then drag it to **Remove.**

Phone

Place a Call

1. From home, tap **Phone** to display the phone screen and then tap **Keypad** to display the dialer screen.
2. Tap the number keys on the keypad to enter the phone number.
3. Tap to call the number.
4. To end the call, tap .

Answer a Call

When you receive a phone call from a contact, the incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in the Contacts, only the default caller ID icon and phone number appear on the incoming call screen.

- **Answer an Incoming Call:** When a call arrives, slide up to answer it.
- **Reject an Incoming Call:** When a call arrives, slide down to reject it.
- **Reject a Call and Send a Text Message:** When a call arrives, slide up from the bottom left of the screen. Tap one of the messages to send it to the caller.

Messages

With text messages, you can send and receive instant text messages between your wireless phone and another messages-ready phone.

Send a Text Message

1. From home, tap **Messages**.
2. On the Messages screen, tap **Start chat.**
3. Fill in the recipient.
4. Tap the "Text message" box and then start composing your message.
5. When done, tap to send the text message.

When you need to add a little more to a text message, you can send a multimedia message (MMS) with photos, contact cards, or files.

Save and Resume a Draft Message

While composing a text or multimedia message, tap **Back** to automatically save your message as a draft.

To resume composing the message:

1. From home, tap **Messages**.
2. On the Messages screen, tap the message to resume editing it.
3. When you finish editing the message, tap **Send**.

Camera

You can use the camera or video camera to take and share photos and videos.

Take a Photo

1. From home, tap **Camera**.
2. Aim the camera at your subject.
3. Tap to take the photo.

Record a Video

1. From home, swipe up and tap **Camera**.
2. Tap **Video** to switch to video mode and tap .
3. Tap to stop recording.

Photos

You can view photos and watch videos that you've taken with your phone's camera, downloaded, or copied onto your storage card or phone memory. You can also take a look at your photos and your friends' photos that are on your social networks.

For photos that are on your storage card or phone memory, you can do basic editing such as rotating and cropping. You can also easily assign a photo as your contact photo or wallpaper and share photos with your friends.

View Photos and Videos

1. From home, swipe up and tap **Photos**.
2. Tap an album (such as Camera).
3. Tap an image to view the photo or video. When viewing photos and videos, you can tap and hold an image to open a selection menu and choose what to do with the photo or video.

Edit Photos

1. From home, swipe up and tap **Photos**.
2. Tap an album (such as Camera).
3. Tap the photo you want to edit.
4. Tap Edit and choose to add filter, rotate or crop it.

Wi-Fi

Wi-Fi provides wireless internet access over distances of up to 300 feet. To use your phone's Wi-Fi, you need access to a wireless access point. The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

Turn Wi-Fi On and Connect to a Wireless Network

Use the network & internet setting menu to enable your phone's Wi-Fi and connect to an available Wi-Fi network.

1. From home, swipe up and tap **Settings**.
2. Tap **Network & internet** > **Wi-Fi**.
3. Tap the Wi-Fi slider to turn Wi-Fi on.
4. Tap a Wi-Fi network to connect, enter the password (if it's not an open network), and then tap **Connect.**

Note: The next time your phone connects to a previously accessed secured wireless network, you will not be prompted to enter the password again, unless you reset your phone to its factory default settings or you instruct the phone to forget the network.

Get Updates

Get updates, user guides and more information for your Coolpad mobile phone at www.coolpad.us. Discover what's going on right now in cell phone news, trends, techniques & other cool stuff by connecting with us by:

@CoolpadAmericas

Trademarks and Copyrights

©2020 Coolpad Technologies Inc. Coolpad® is the registered trademark of Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd. All Rights Reserved. Google and Android are trademarks of Google Inc. Other trademarks and trade names are the property of their respective owner. Screenshots and product images are simulated; they may differ from the actual product and are subject to change. Reproduction, transfer, distribution of the contents herein in any manner without the prior written permission of Coolpad Technologies, Inc. is prohibited. Coolpad Technologies, Inc. reserves the right to add, modify or delete, any of the contents herein or withdraw this documents at any time without prior notice and without assigning any reasons thereof.