© 2024 Kid Galaxy Limited
Confidential for internal use only.

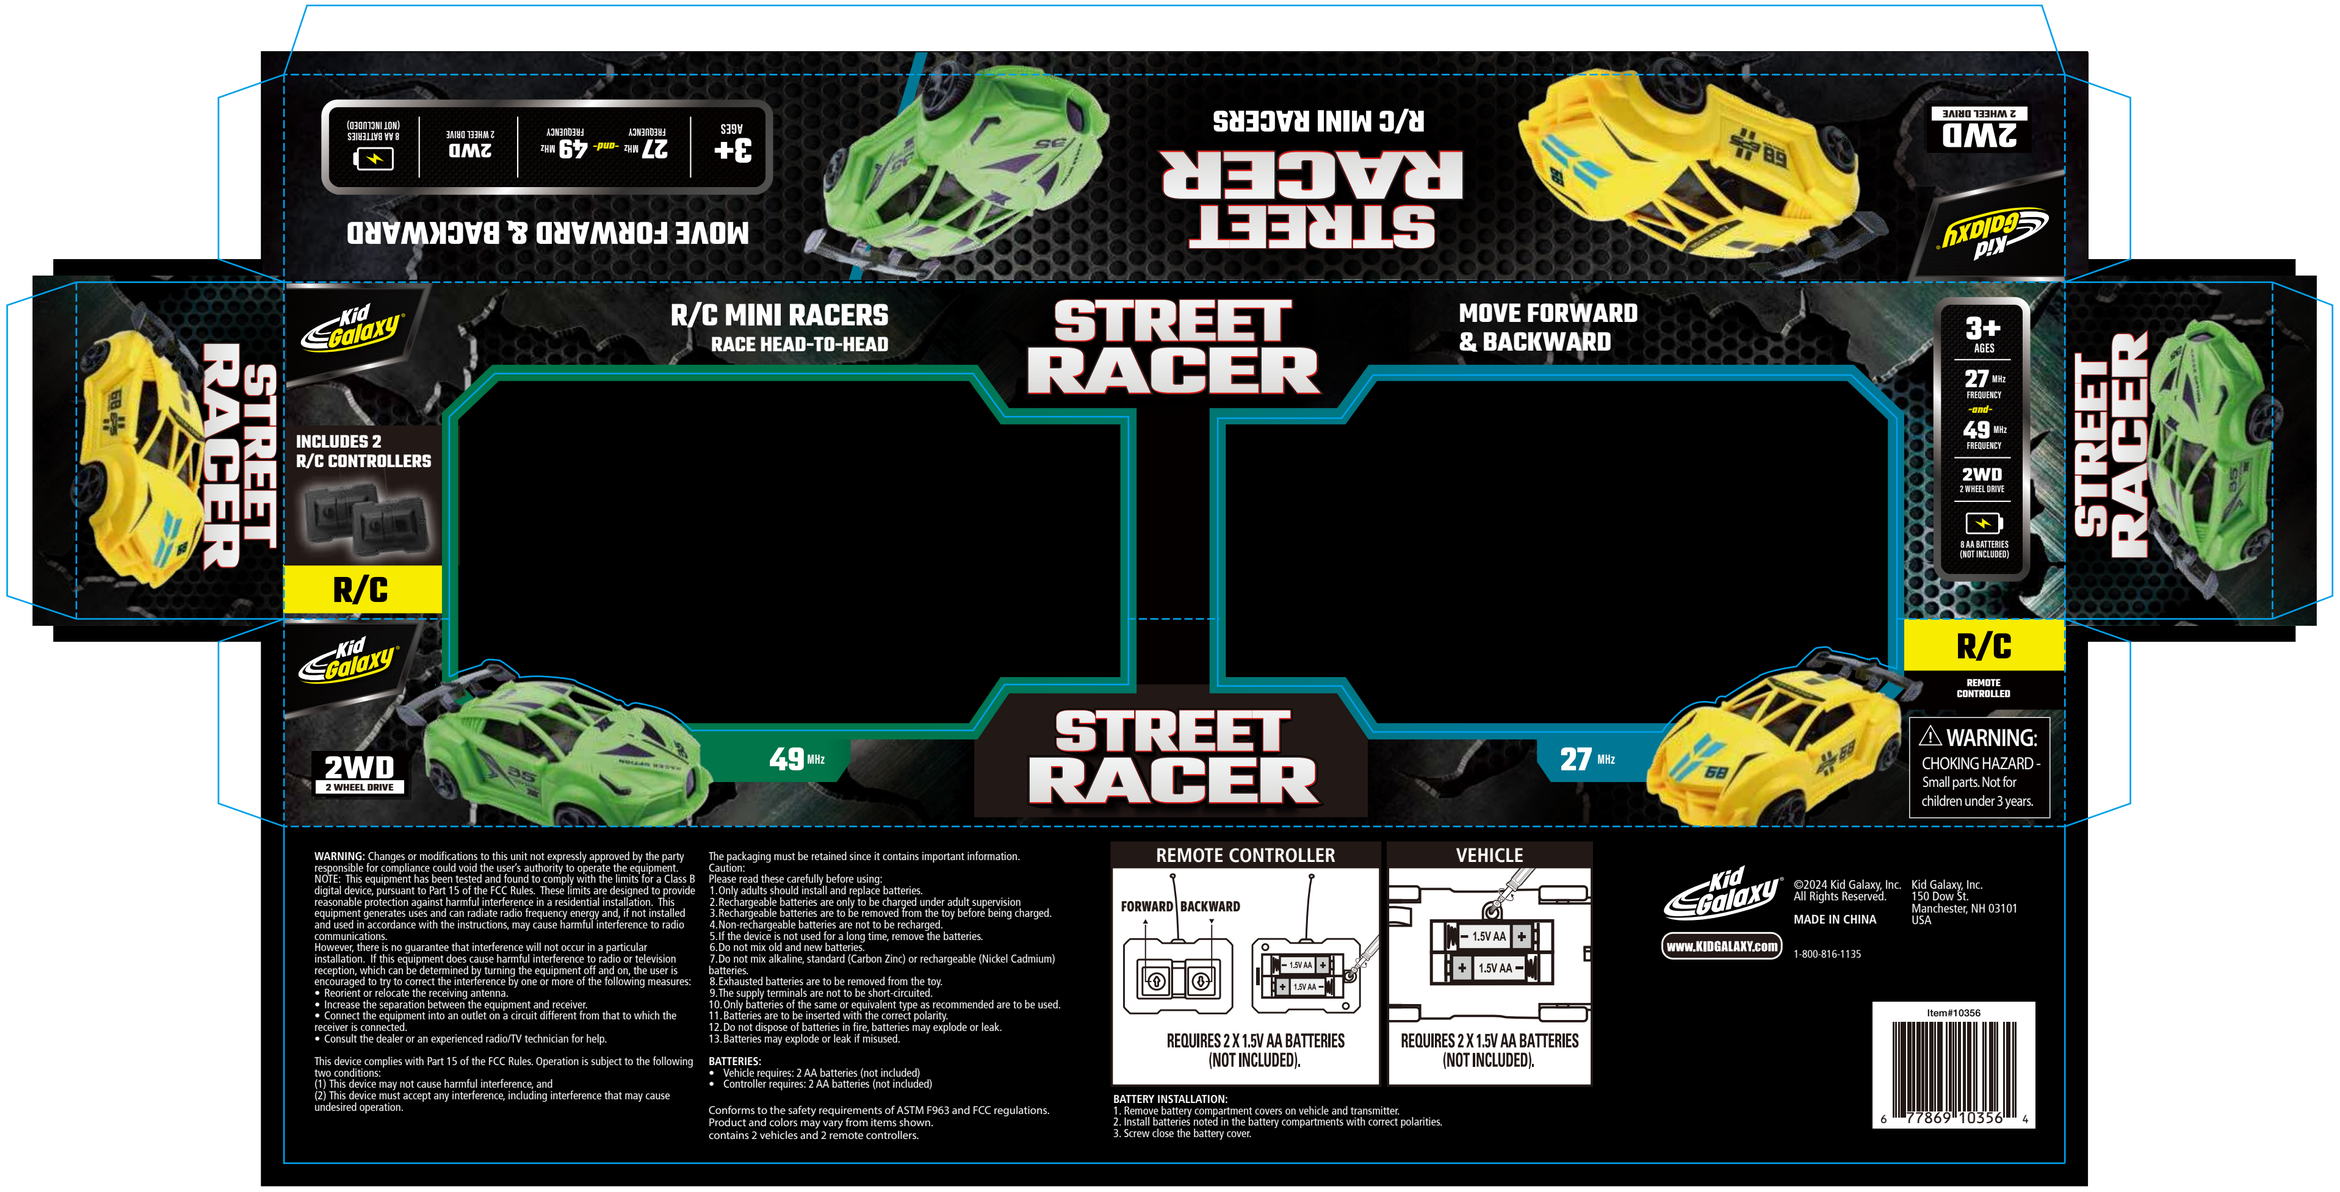

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference, including interference that may cause undesired operation.

The packaging must be retained since it contains important information.
Caution:
Please read these carefully before using:
1. Only adults should install and replace batteries.
2. Rechargeable batteries are only to be charged under adult supervision
3. Rechargeable batteries are to be removed from the toy before being charged.
4. Non-rechargeable batteries are not to be recharged.
5. If the device is not used for a long time, remove the batteries.
6. Do not mix old and new batteries.
7. Do not mix alkaline, standard (Carbon Zinc) or rechargeable (Nickel Cadmium) batteries.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Only batteries of the same or equivalent type as recommended are to be used.
11. Batteries are to be inserted with the correct polarity.
12. Do not dispose of batteries in fire, batteries may explode or leak.
13. Batteries may explode or leak if misused.

BATTERIES:
- Vehicle requires: 2 AA batteries (not included)
- Controller requires: 2 AA batteries (not included)

Conforms to the safety requirements of ASTM F963 and FCC regulations.
Product and colors may vary from items shown.
contains 2 vehicles and 2 remote controllers.

REMOTE CONTROLLER

REQUIRES 2 X 1.5V AA BATTERIES (NOT INCLUDED).

VEHICLE

REQUIRES 2 X 1.5V AA BATTERIES (NOT INCLUDED).

BATTERY INSTALLATION:
1. Remove battery compartment covers on vehicle and transmitter.
2. Install batteries noted in the battery compartments with correct polarities.
3. Screw close the battery cover.

©2024 Kid Galaxy, Inc.
All Rights Reserved.

MADE IN CHINA

Kid Galaxy, Inc.
150 Dow St.
Manchester, NH 03101
USA

www.KIDGALAXY.com

1-800-816-1135

Item#10356
6 77869 10356 4