


UMC-I210C Module Installation Guide

Rev. 0.1

2015/06/12

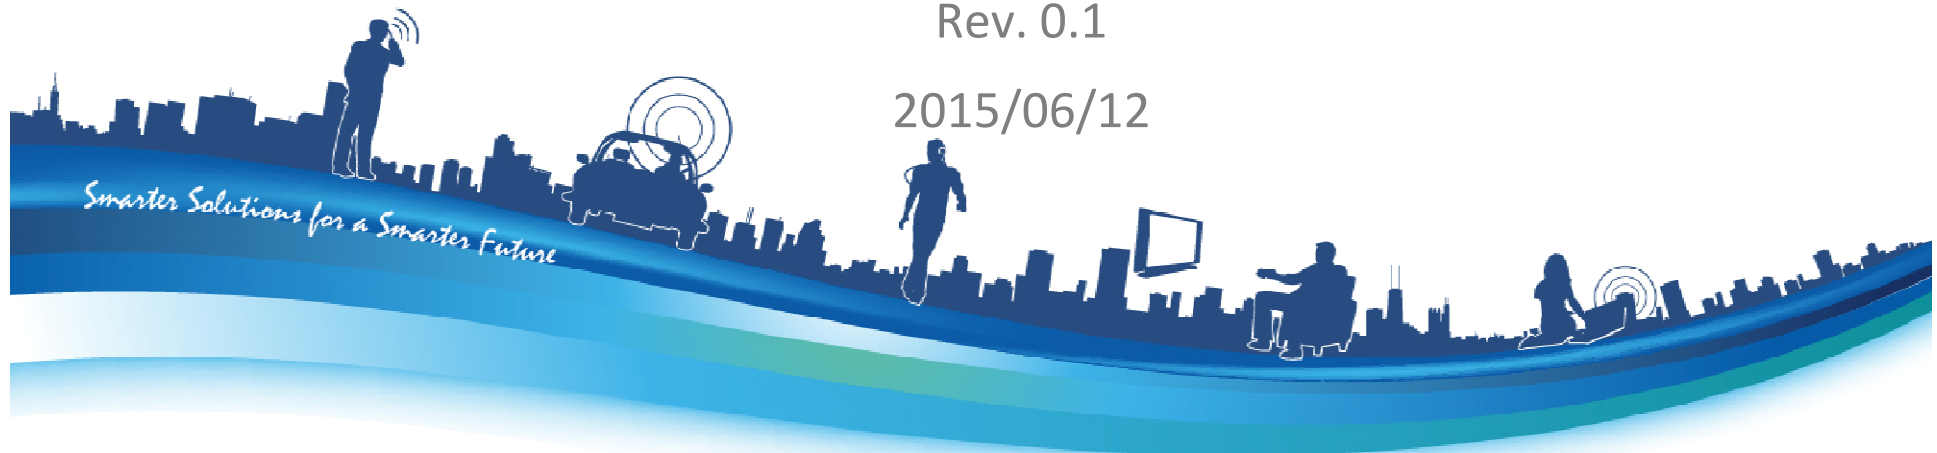

Parts' Overview

Transparent Mask

From Meter



When the UMC-I210C is installed in GE I-210+c meter (i.e. host device), the FCC label is placed on the outside of the GE I-210+c meter transparent mask which must cover the info, something like "contains the FCC ID: NKR- CB1GI210C"

Cover

From Meter





UMC-I210C

From WNC



Base

From Meter

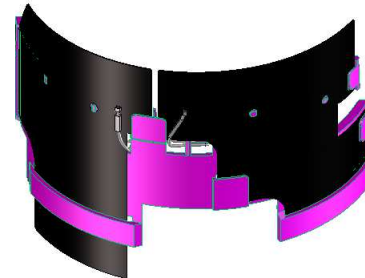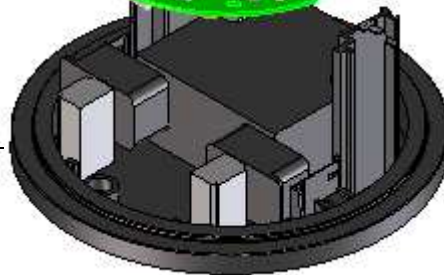


Antenna unit

From WNC


>>>>> LTE Antenna unit and UMC-I210C are from WNC.

>>>>> Transparent mask, cover and base are from GE I-210+c meter.




Overview of Installation Steps

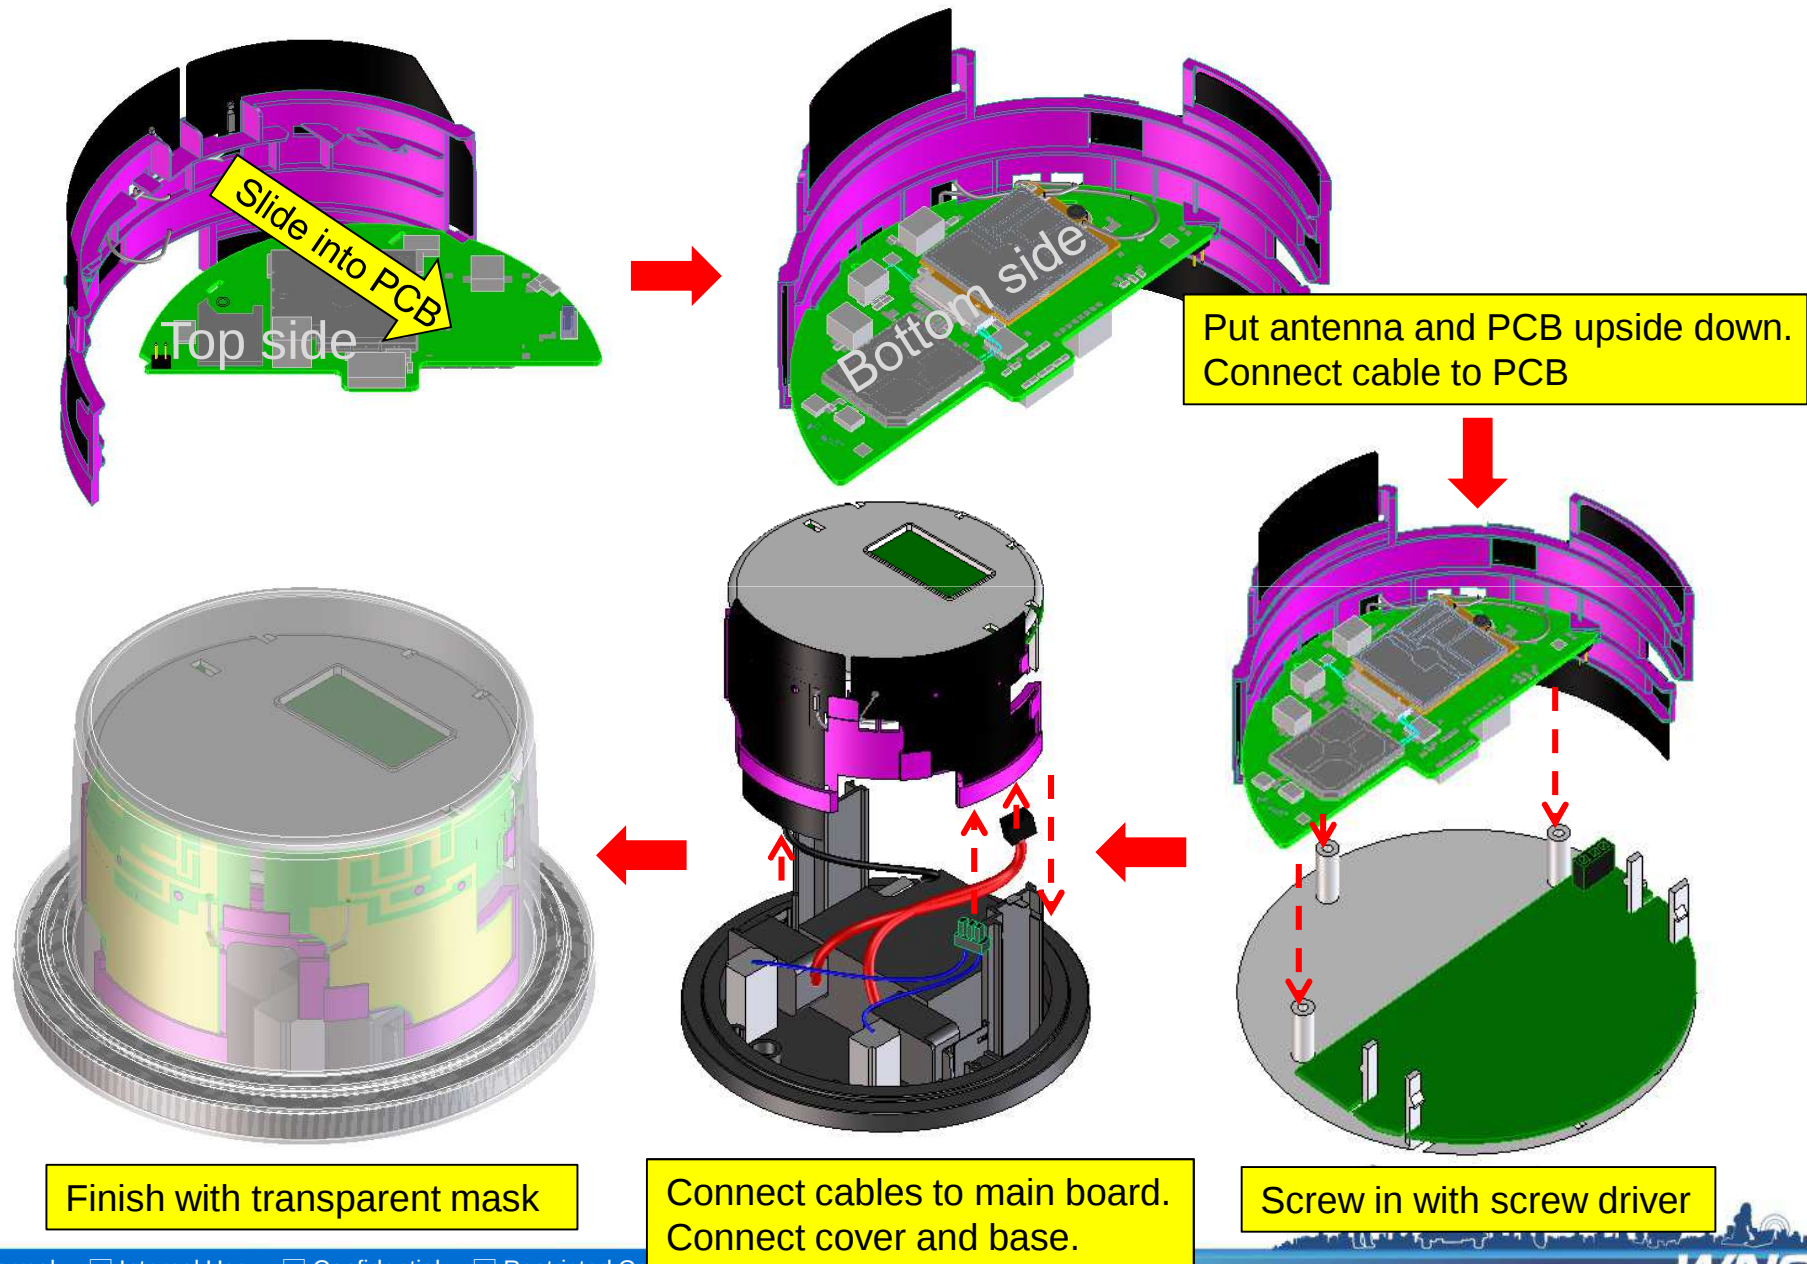

Installation LTE Antenna Unit into UMC-I210C


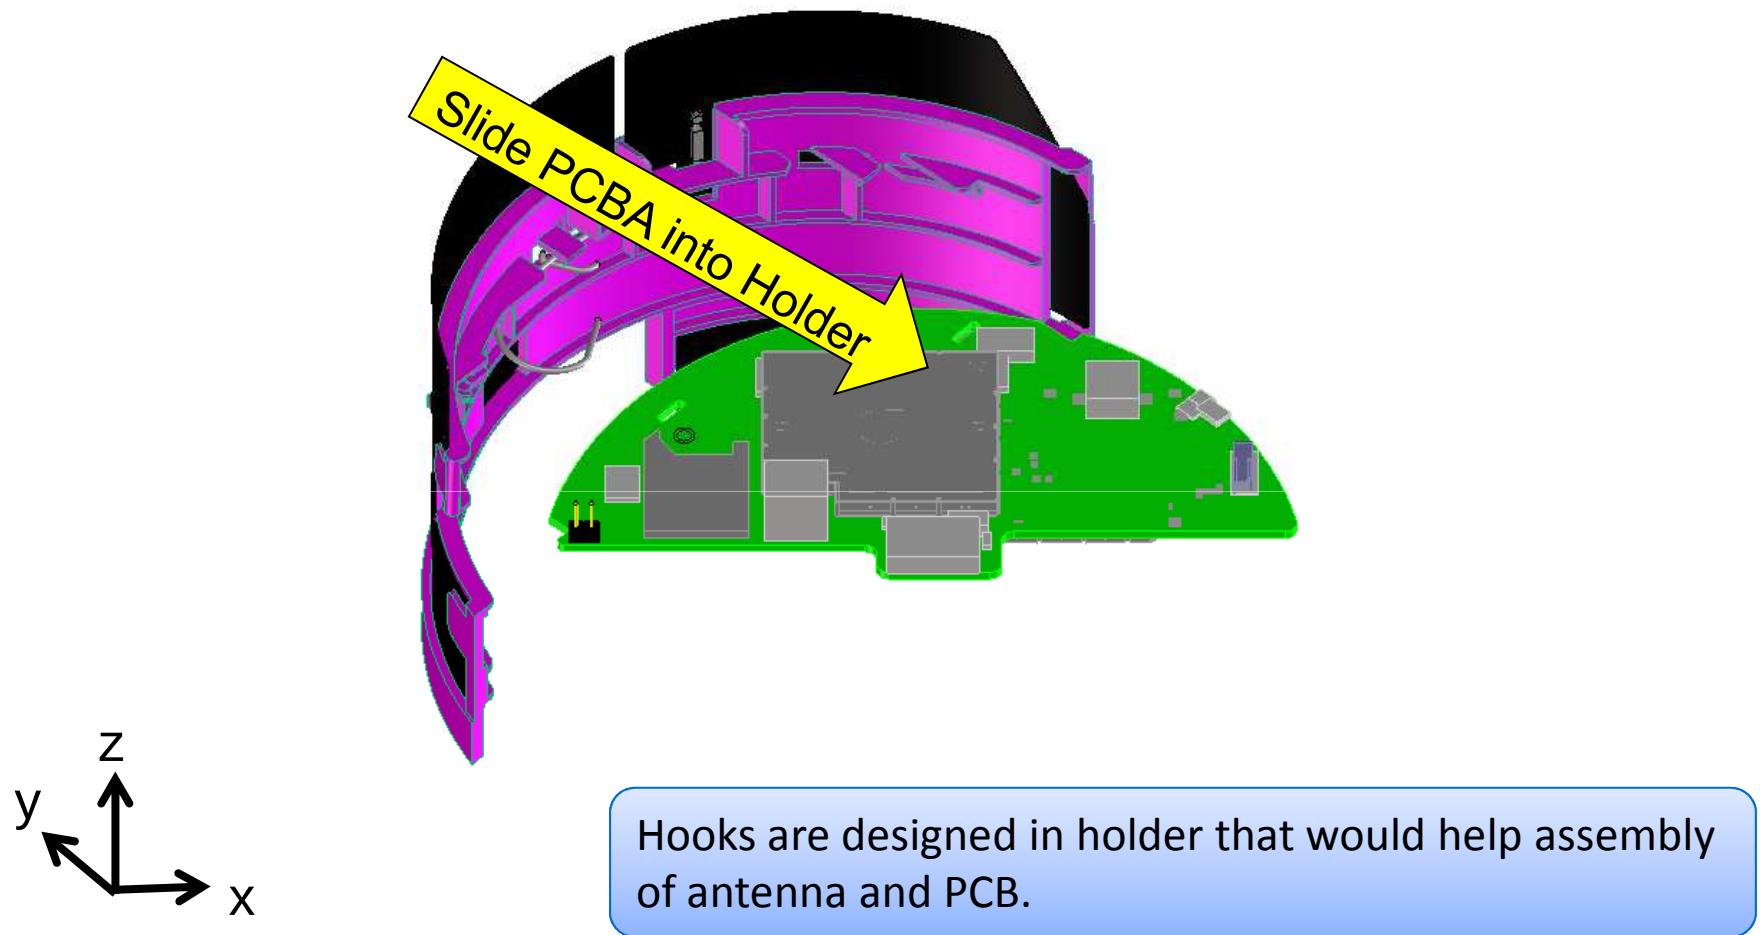


Connecting LTE Antenna Cables into IMG03

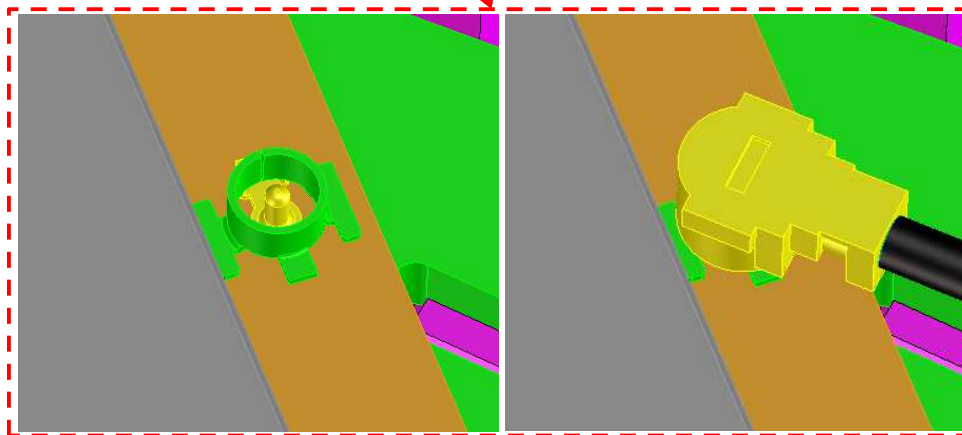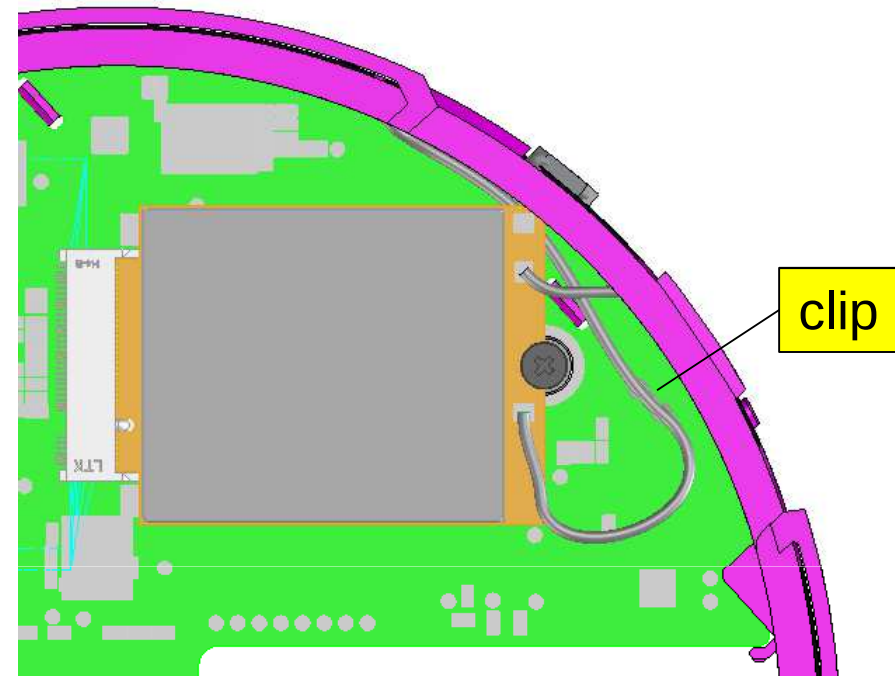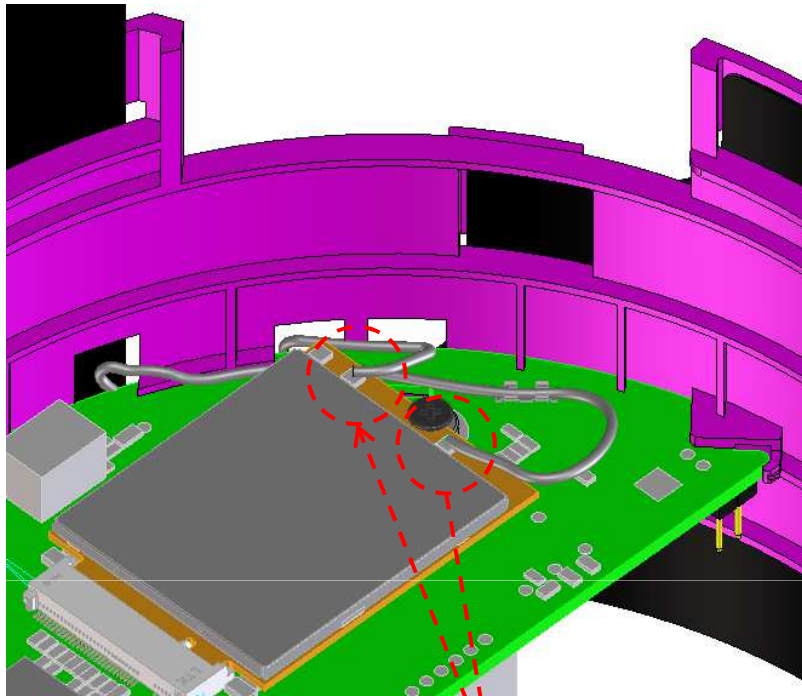

Connect antenna cable to PCB.
Cables are fixed with IPEX on the
module.

Installation UMC-I210C with Antenna Unit into Meter

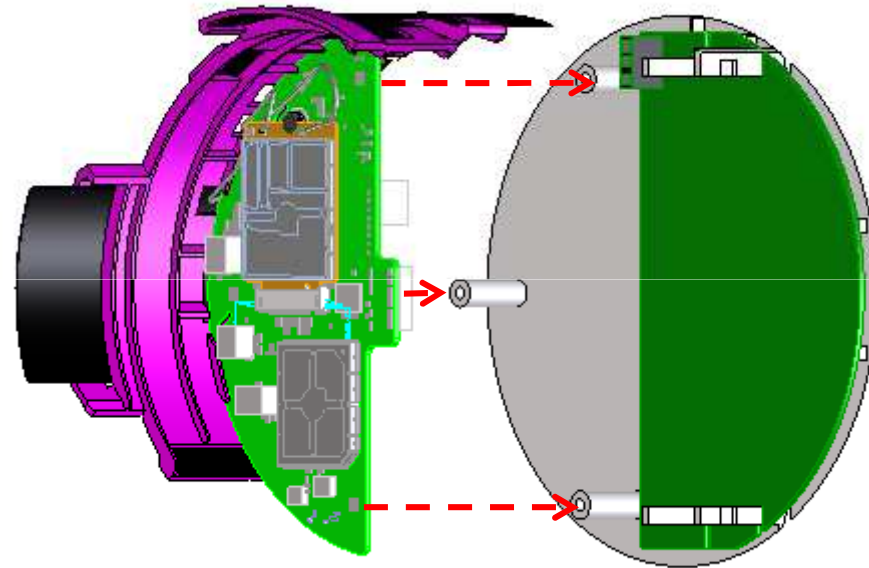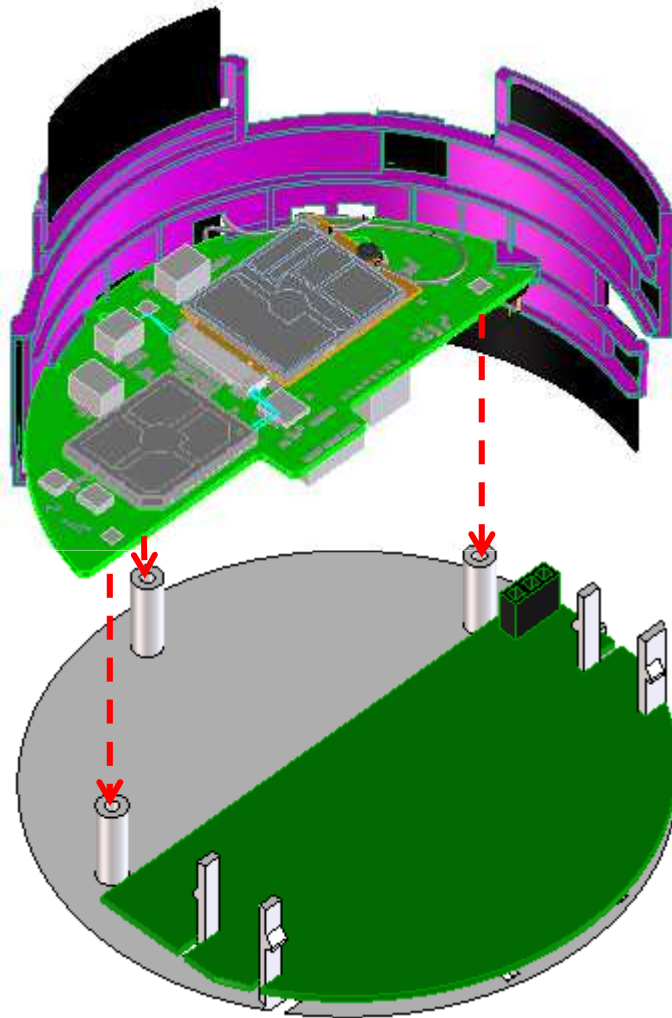



Smarter Solutions for a Smarter Future

Wistron Neweb Corporation Proprietary & Confidential

