





Photos of Test Setup

For GSM&WCDMA<E


1. Radiated Spurious Emissions

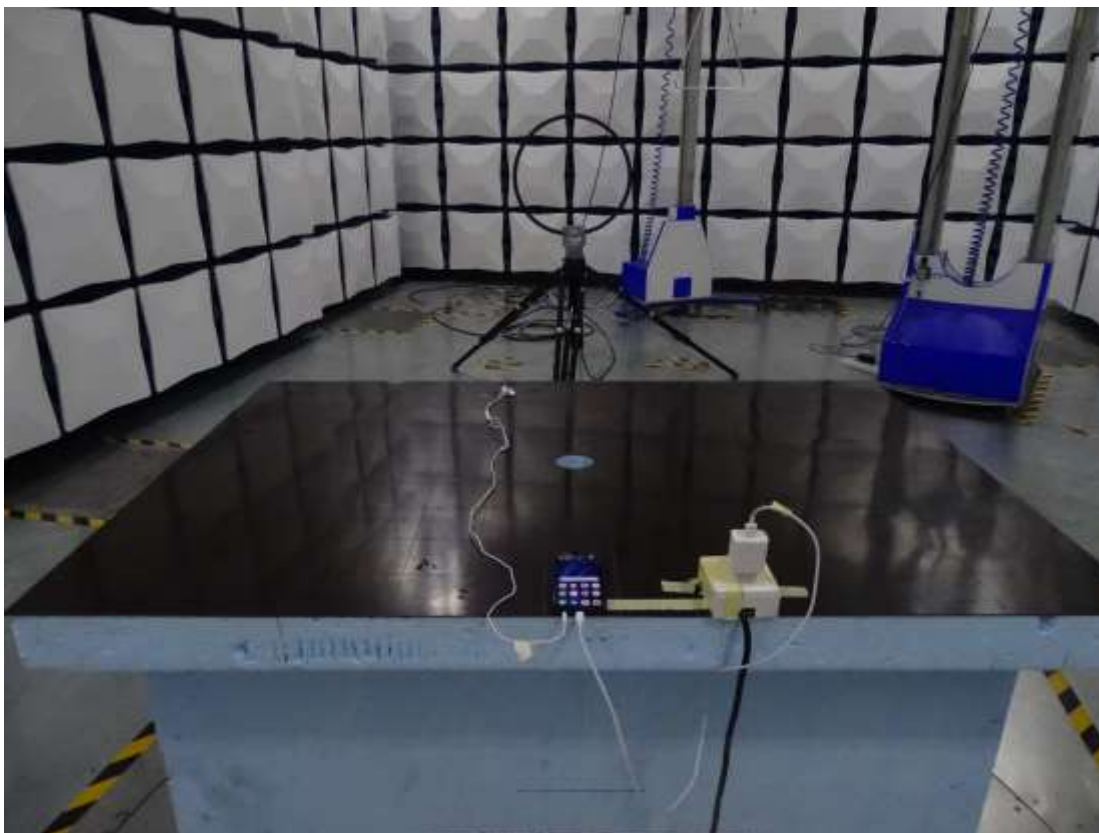

Radiated Spurious Emission (9K-30MHz)

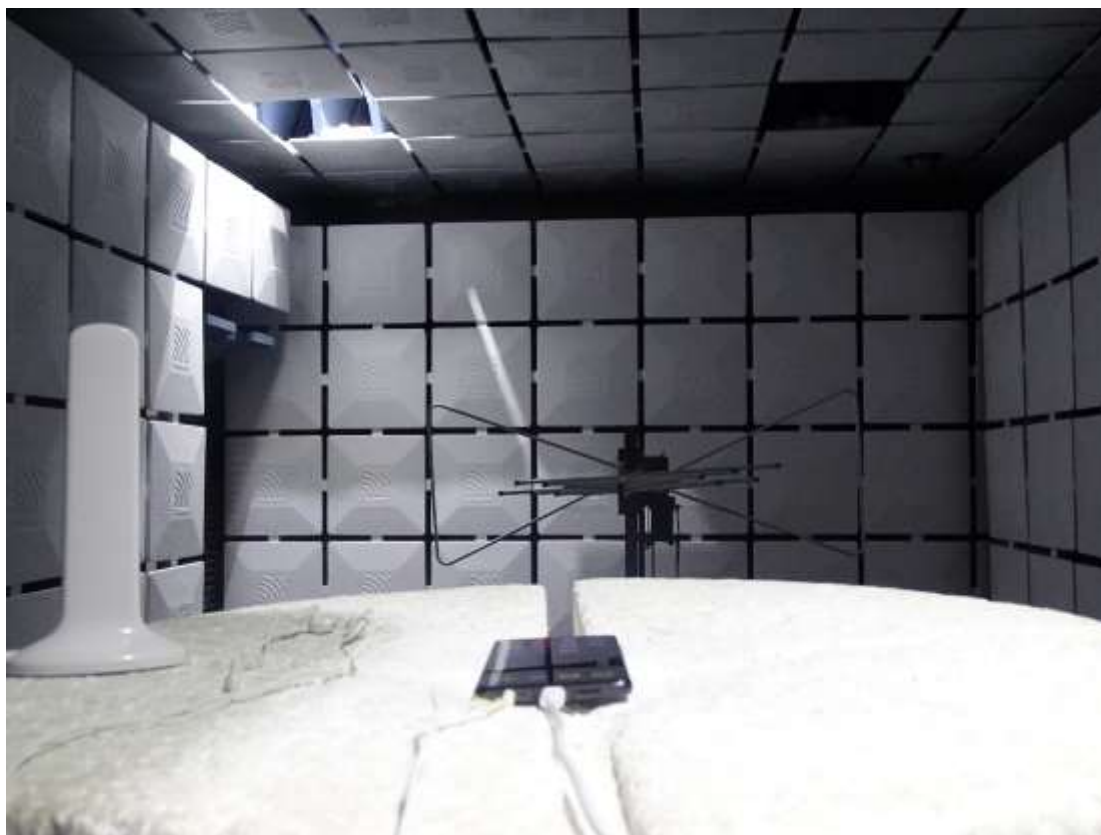

Radiated Spurious Emission (30MHz to 3GHz)

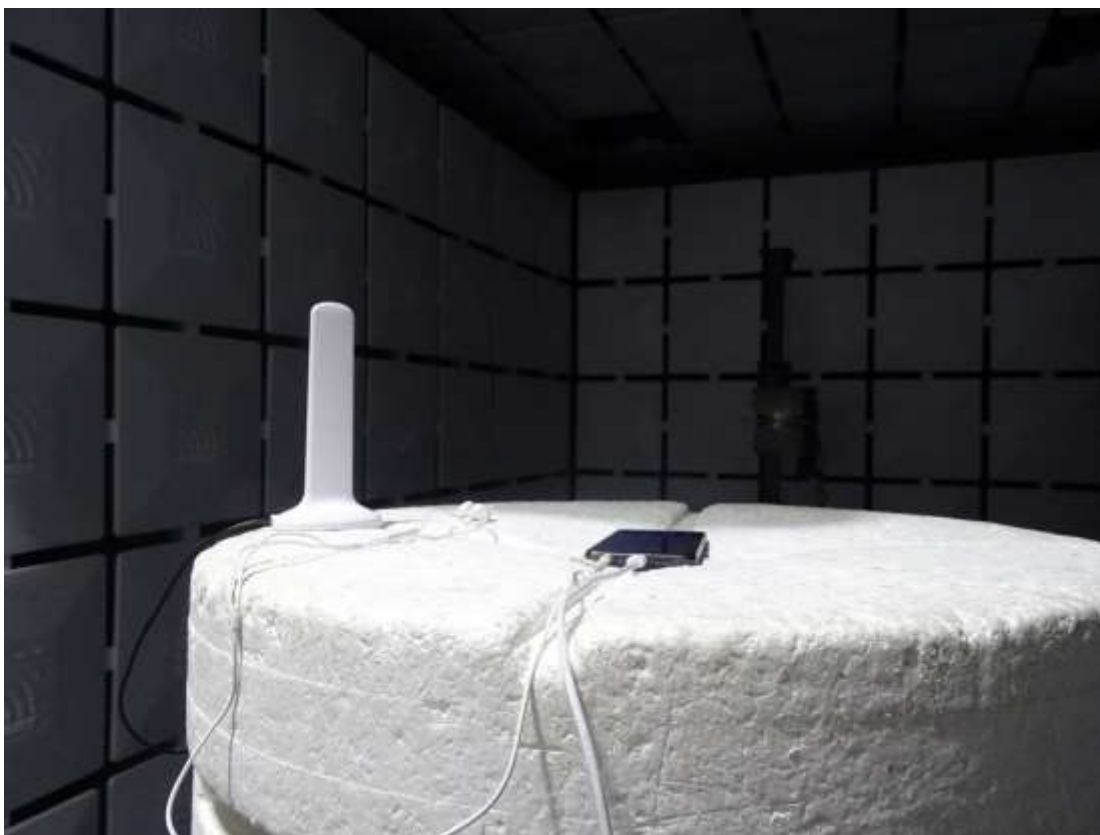


Radiated Spurious Emission (3GHz to18GHz)




Radiated Spurious Emission (18GHz to26.5GHz)

For Wlan/BT


2. Radiated Spurious Emissions

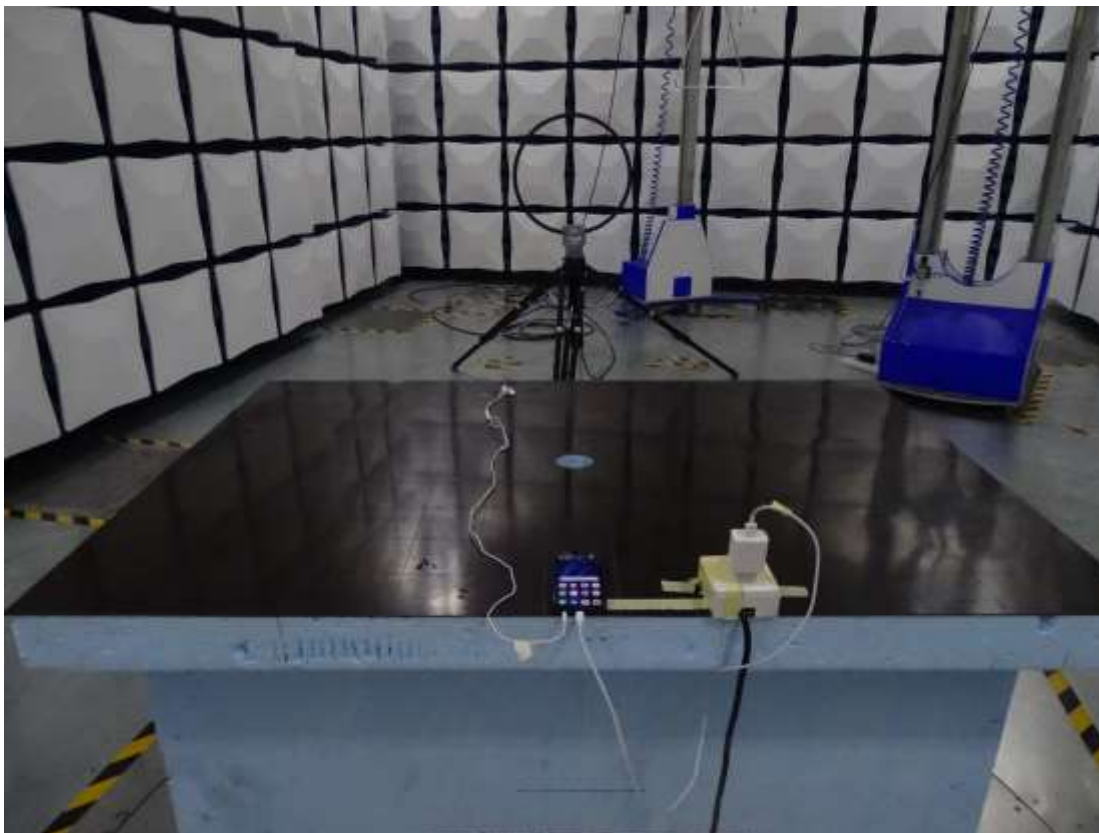

Radiated Spurious Emission (9K-30MHz)

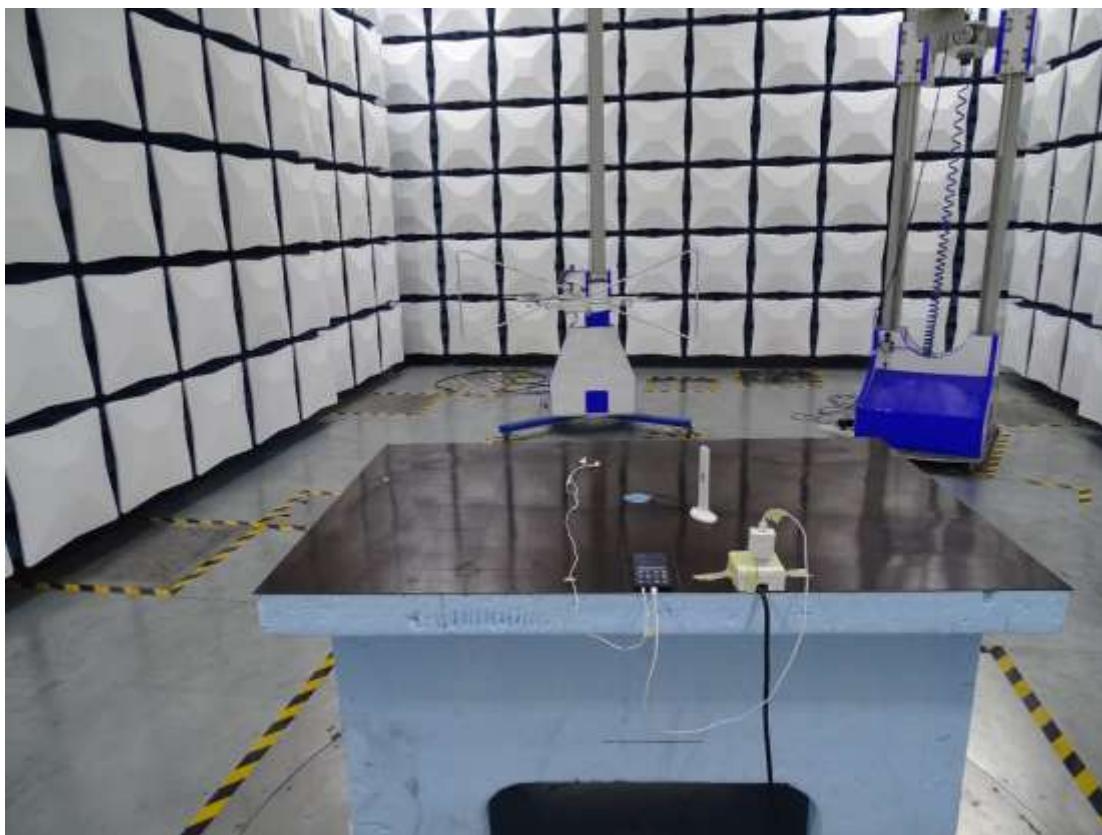


Radiated Spurious Emission (30MHz to 1GHz)

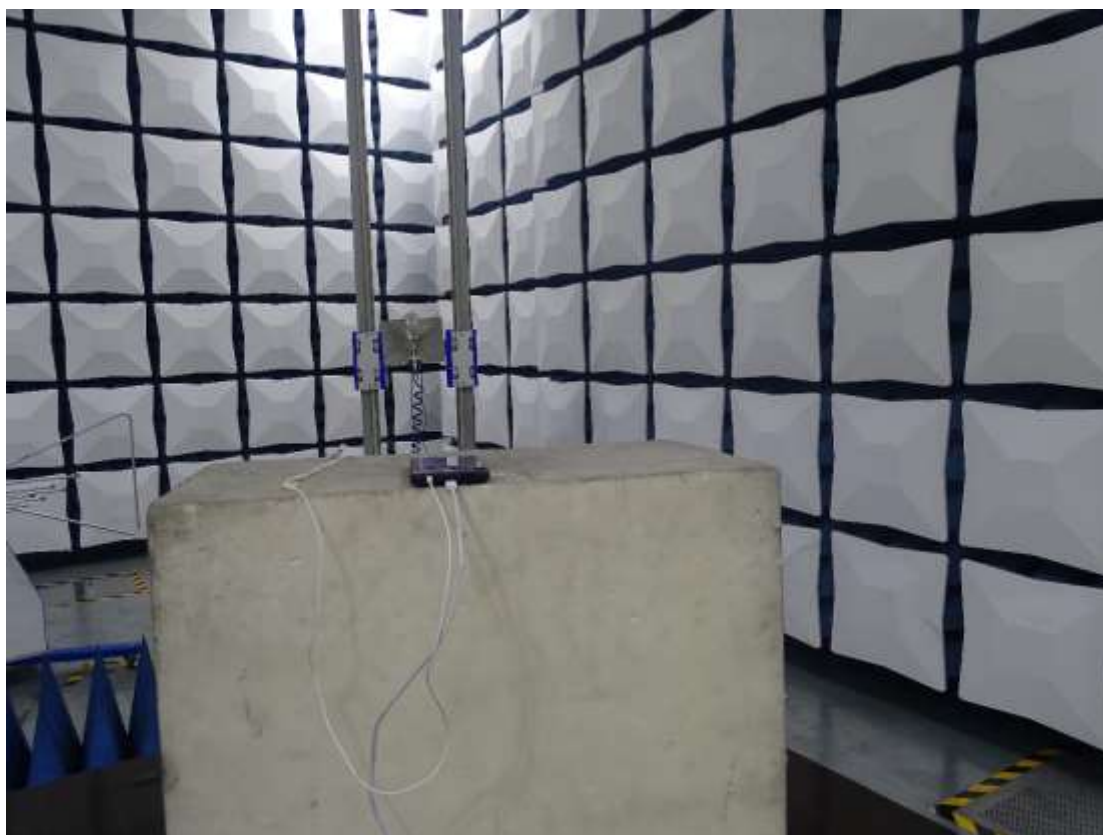

diated Spurious Emission (1GHz to18GHz)


Ra

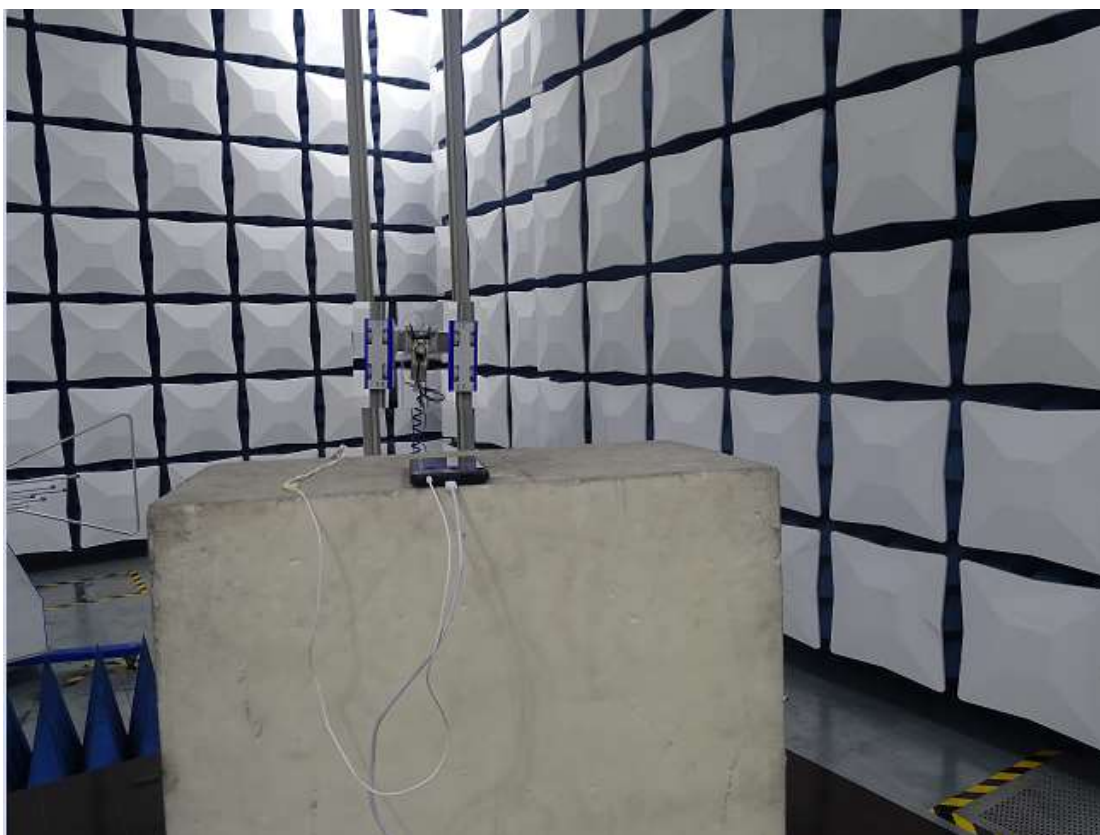


Radiated Spurious Emission (above 18GHz)

For NFC

3. Radiated Spurious Emissions

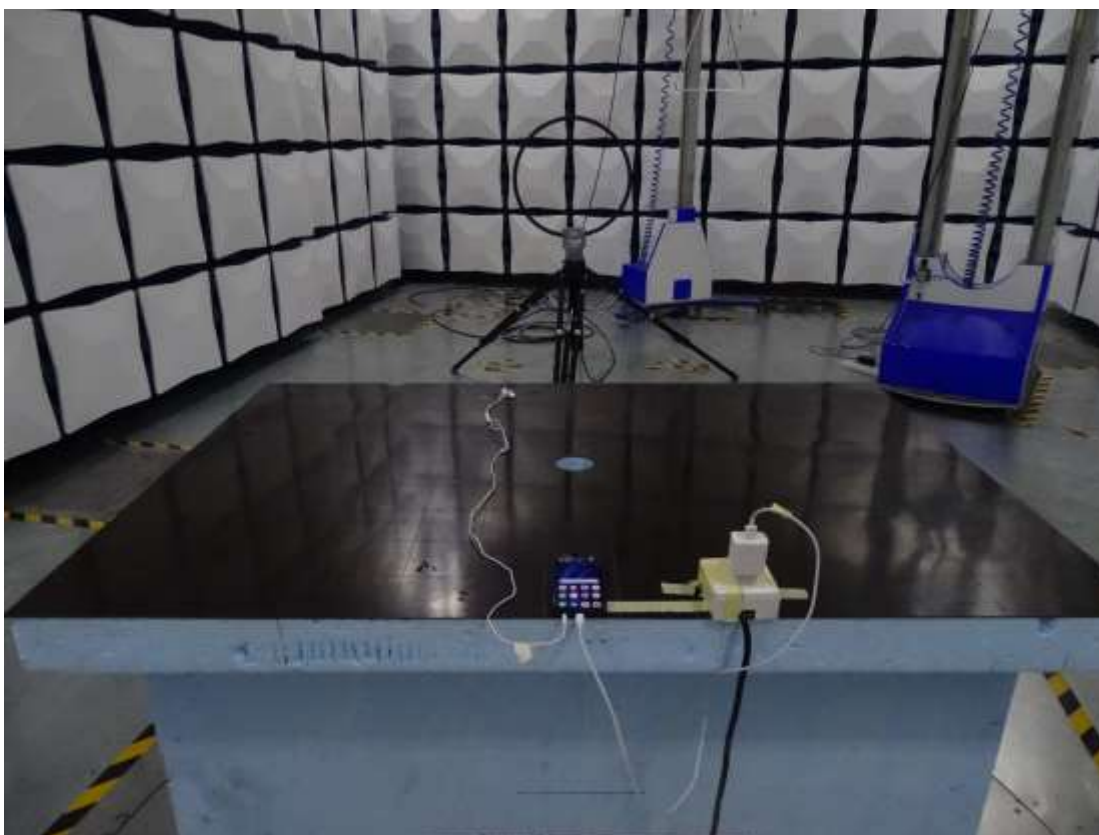

Radiated Spurious Emission (9K-30MHz)

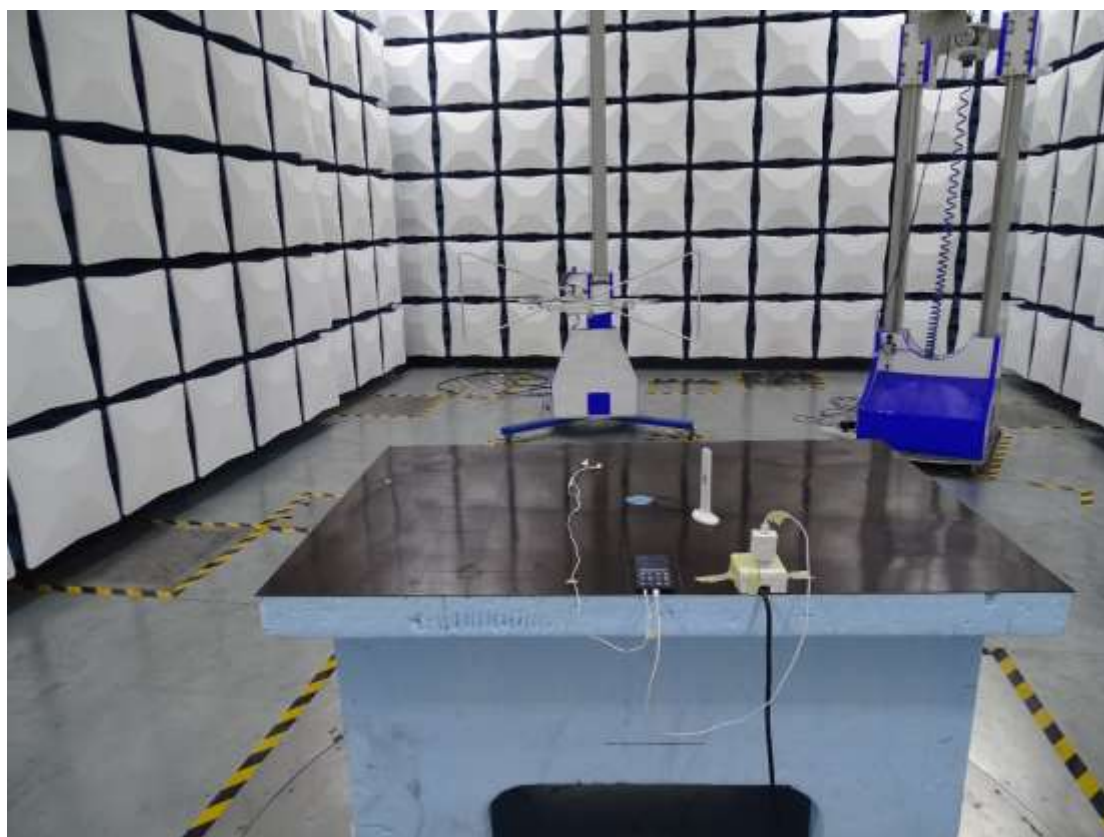

Radiated Spurious Emission (30MHz to 1GHz)

Conducted Emissions





-----The END-----