

IQ MINI DW S-LINE QUICK INSTALL GUIDE

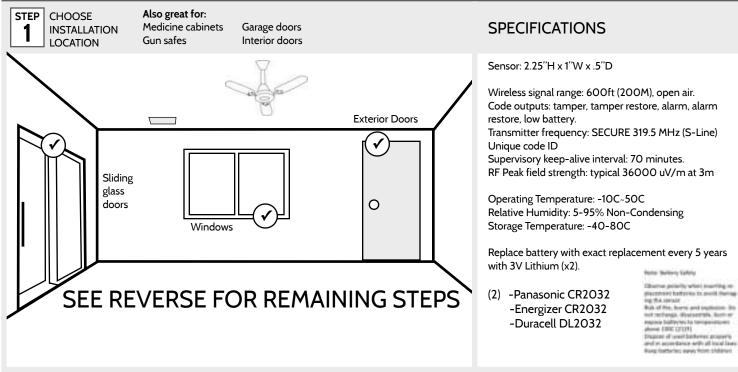

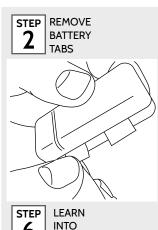

This is a quick guide for experienced installers only. Refer to http://dealers.qolsys.com (login required)













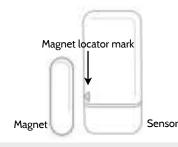



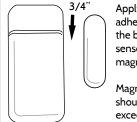

Apply provided adhesive strips to the back of sensor and magnet. Magnet gap

should not exceed 3/4"







Open and close the case

to "tamper" the device



Customize name and settings as desired and and touch "ADD"



Document#: IQS-MDW-SQG-05-23

Place your panel in

"autolearn" mode

Revision#: 5/11/23 Qolsys Product #: QS1135-840 (white) QS1136-840 (brown)

Qolsys Inc. proprietary. Reproduction without permission is not permitted. FCC ID: 2AAIXQS-IQDWM IC: 11205A-QSIQDWM

GOT QUESTIONS? CONTACT TECH SUPPORT intrusion-support@jci.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.