



Bottom Side of PCB

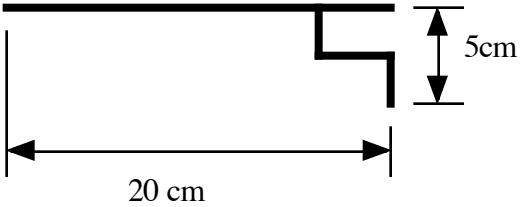


Main Antenna

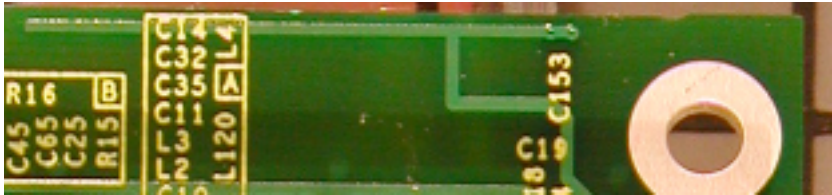

Q61; Top Antenna; Azimuth

180 Deg = Front

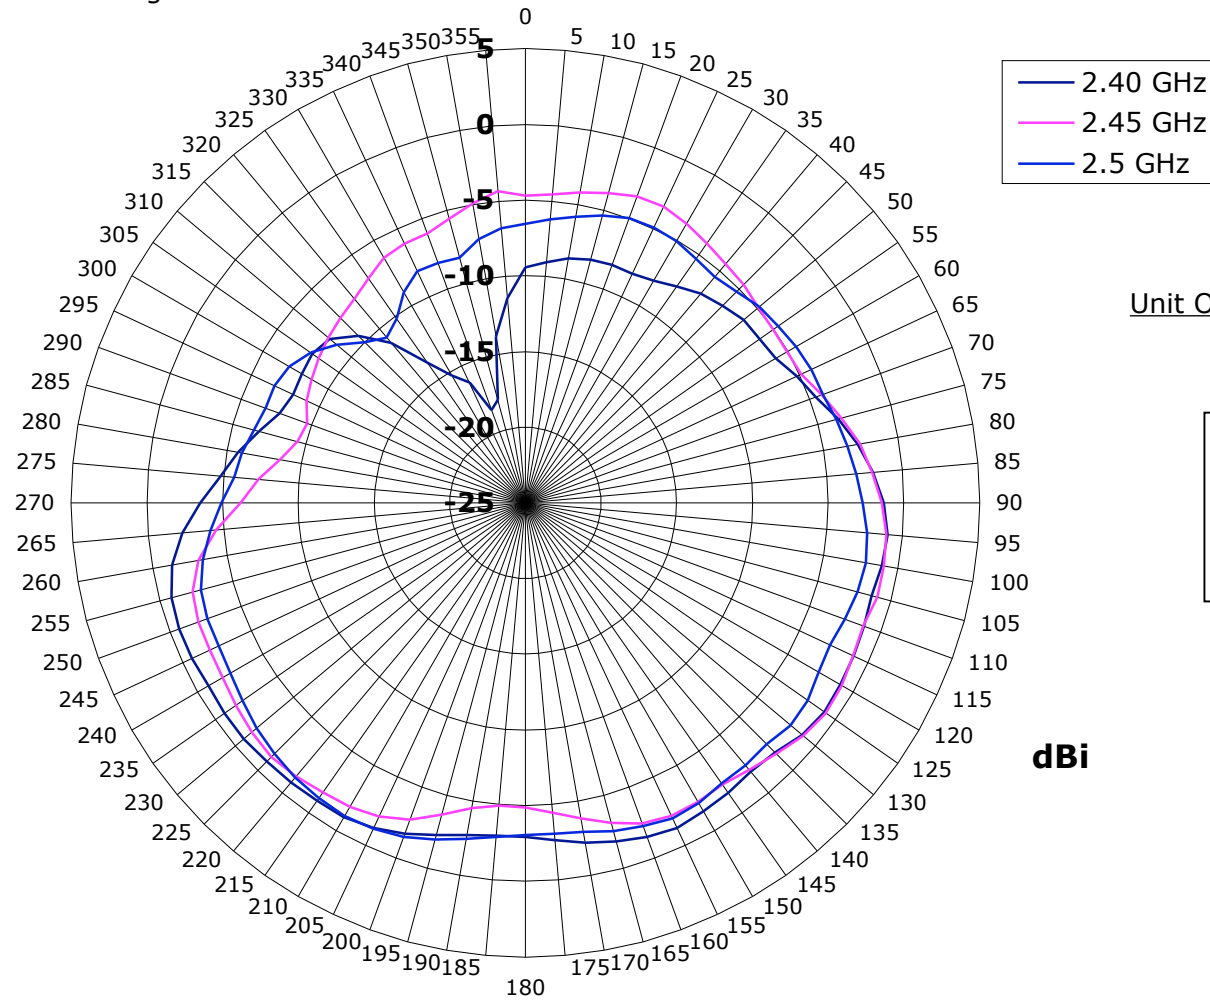


Unit Orientation



AC Plug


dBi

Q61; Top Antenna; Elevation 1

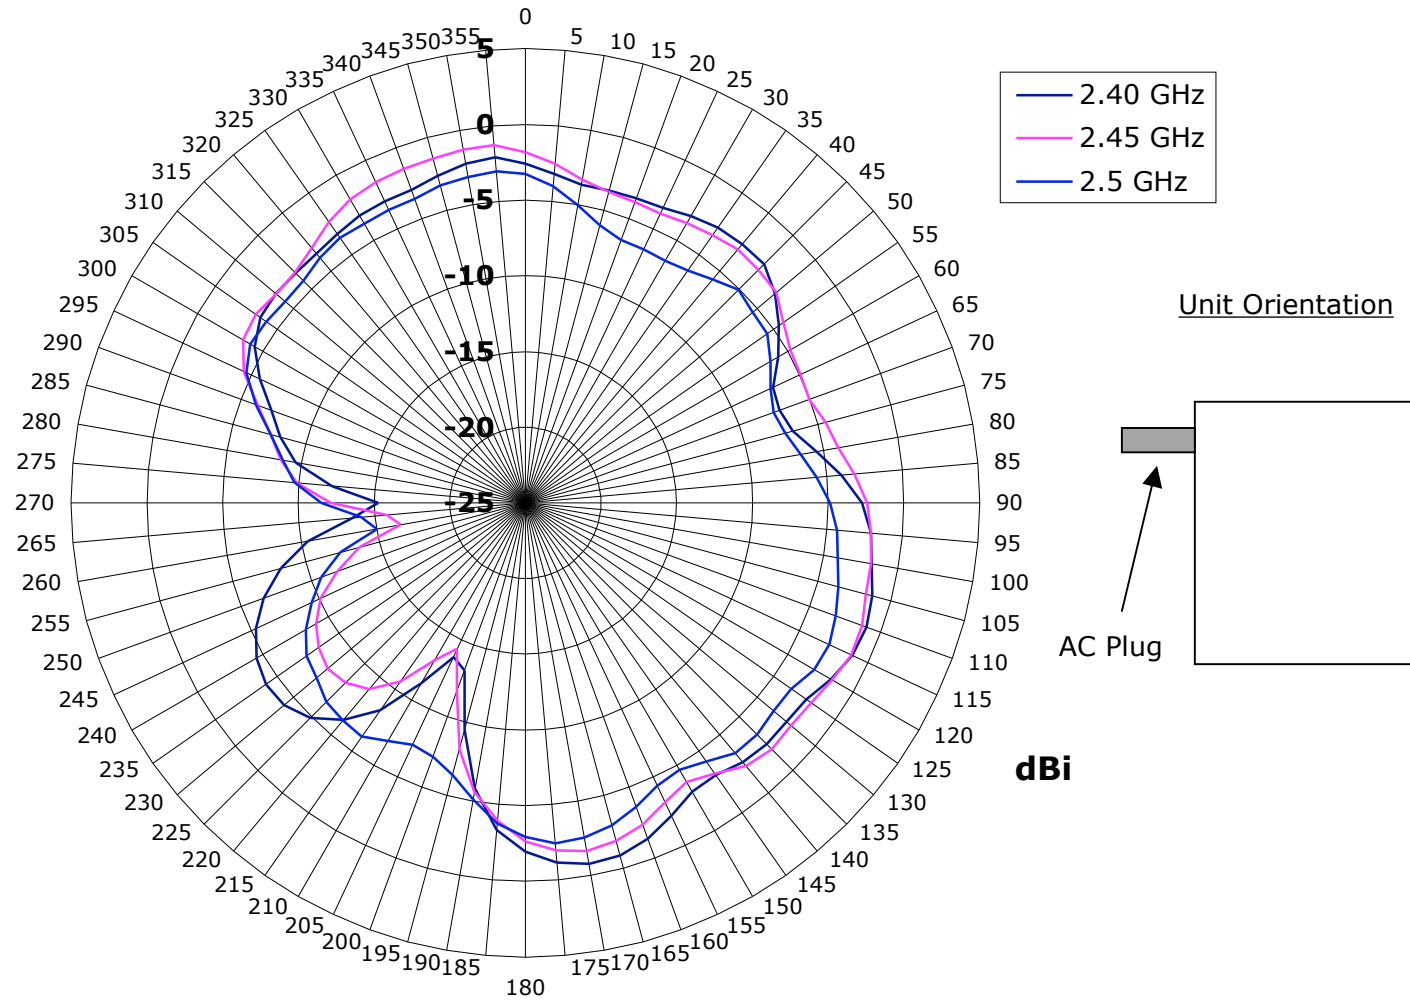


Q61; Top Antenna; Elevation 2

Zero Deg = Overhead

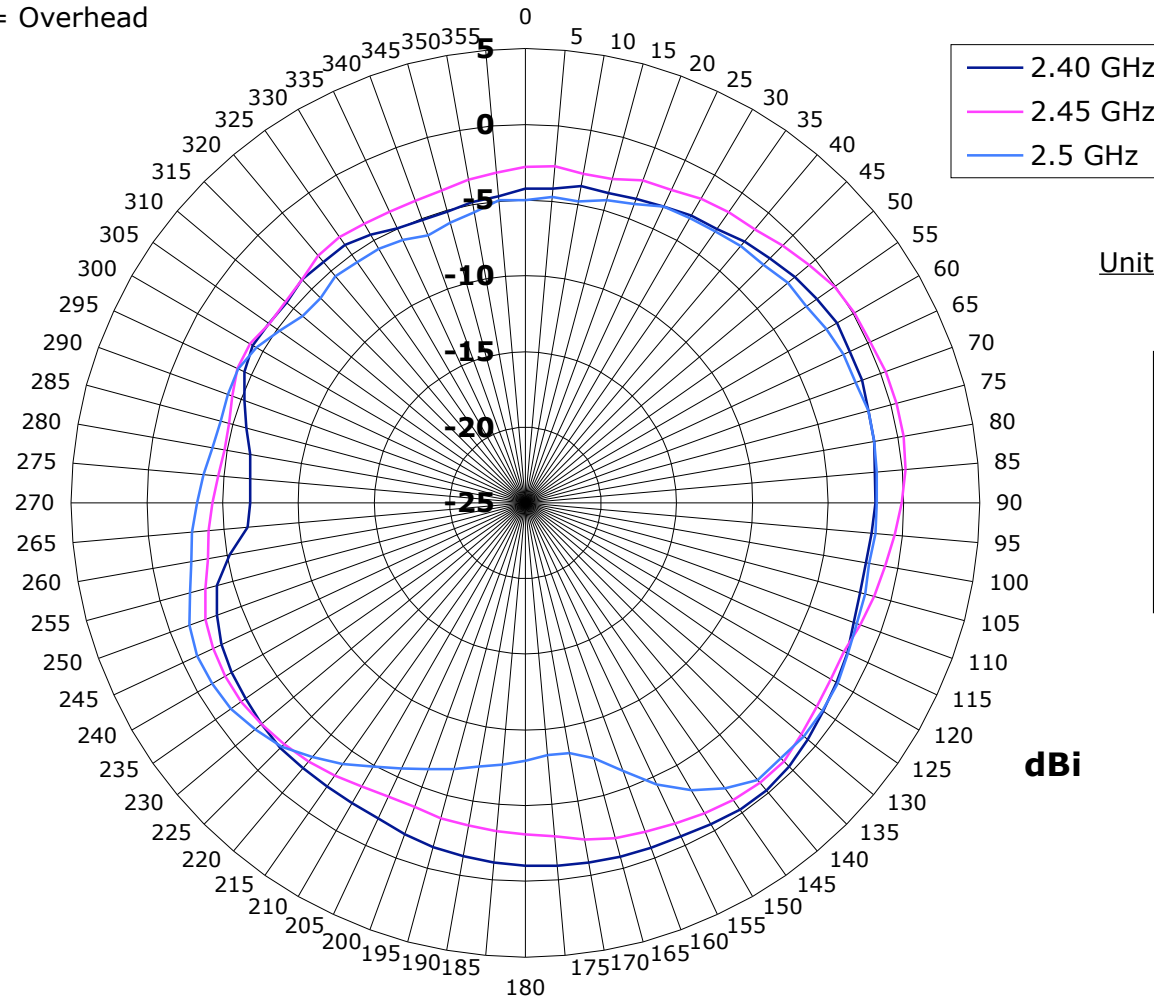



Unit Orientation




AC Plug (on Back Side)

dBi

Top Side of PCB

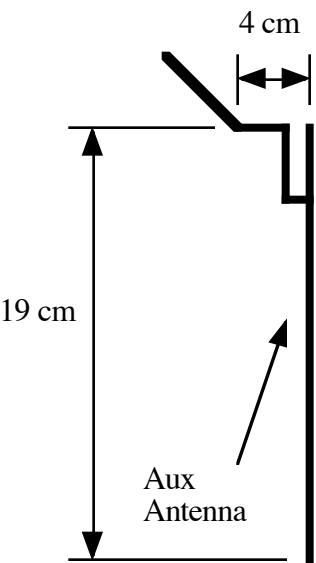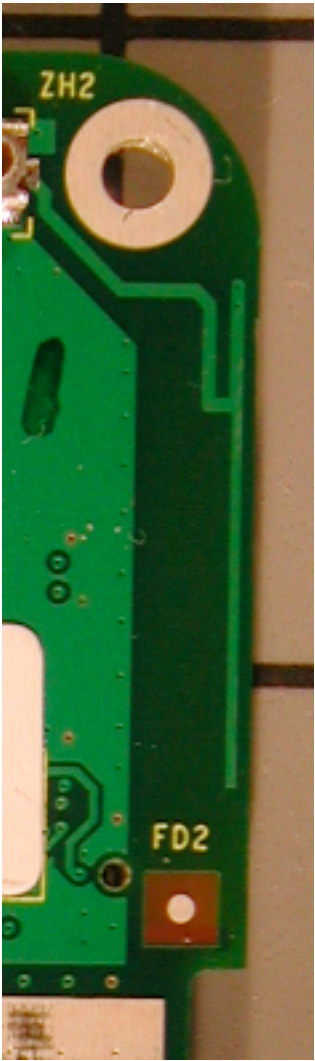


Q61; Front Antenna; Azimuth

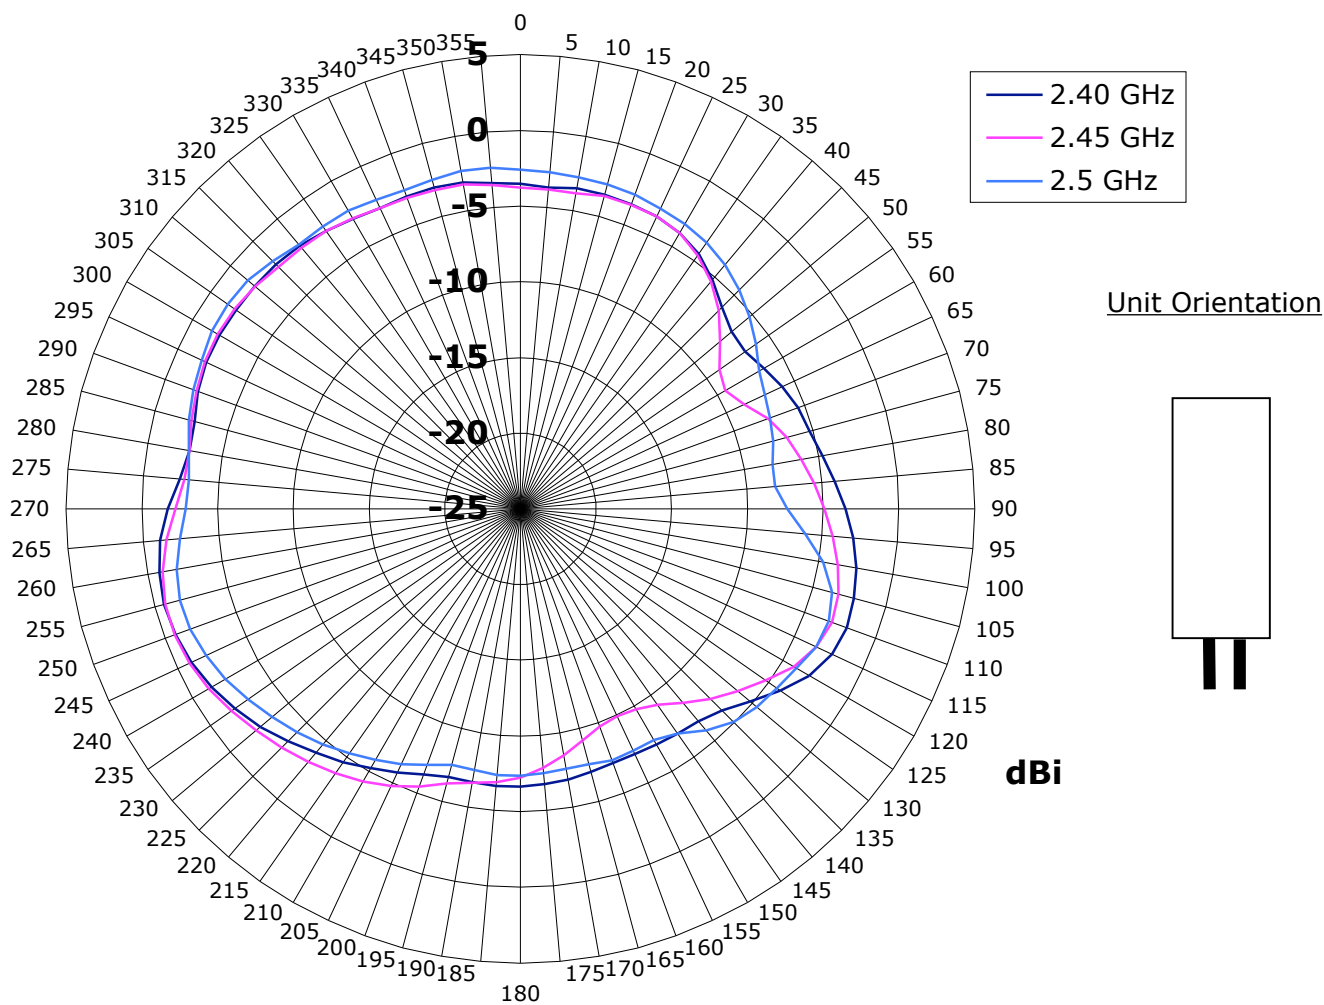

Elevation Pattern; Front Antenna

Zero Deg = Overhead

270 Deg = Front

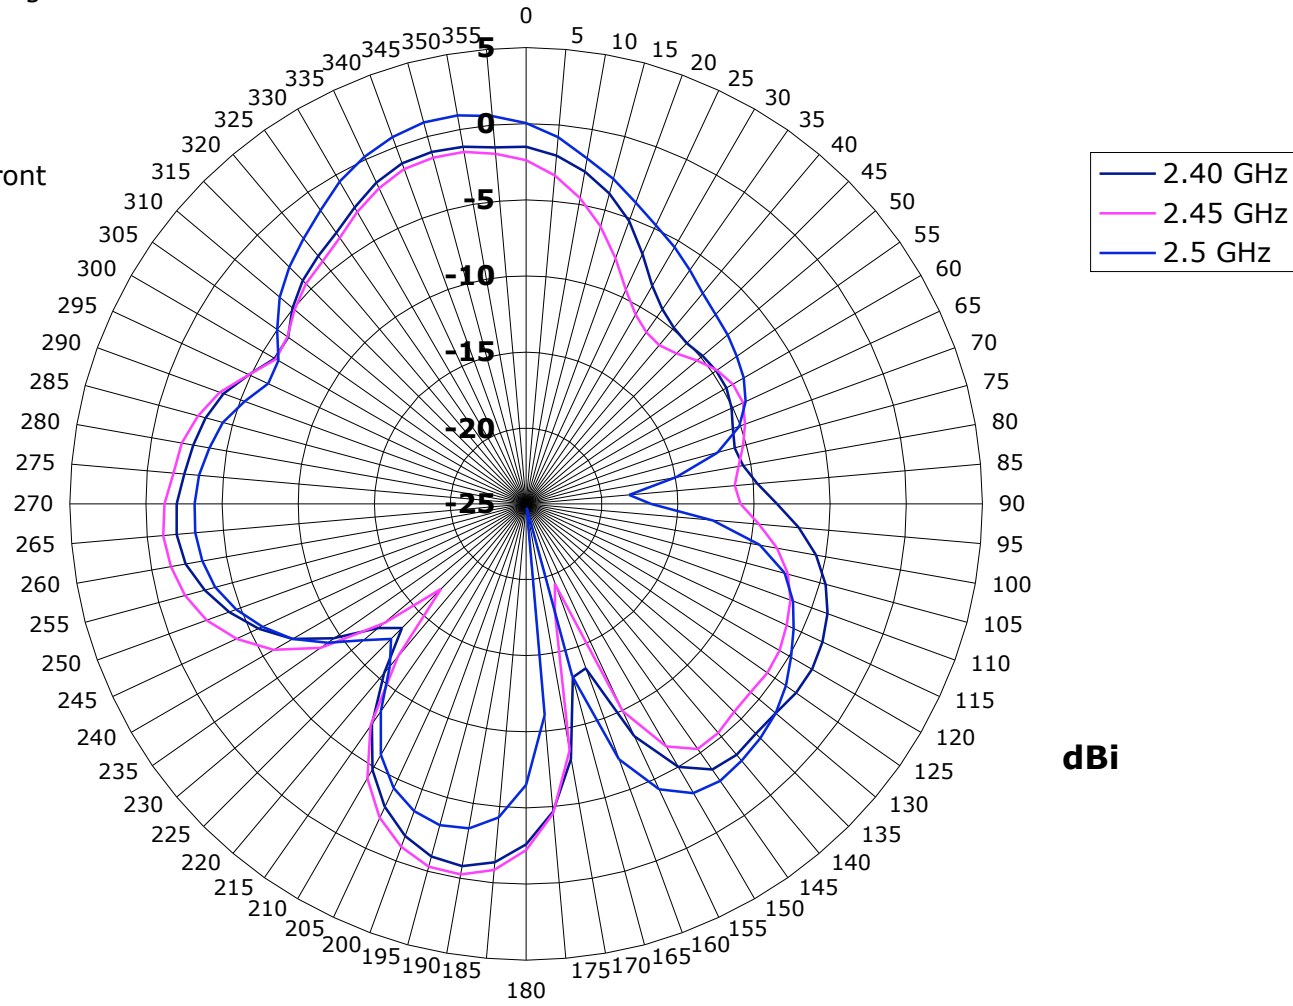


dBi

Front Antenna; Elevation Pattern

Zero Deg = Overhead

90/270 Deg = Right/Left Side

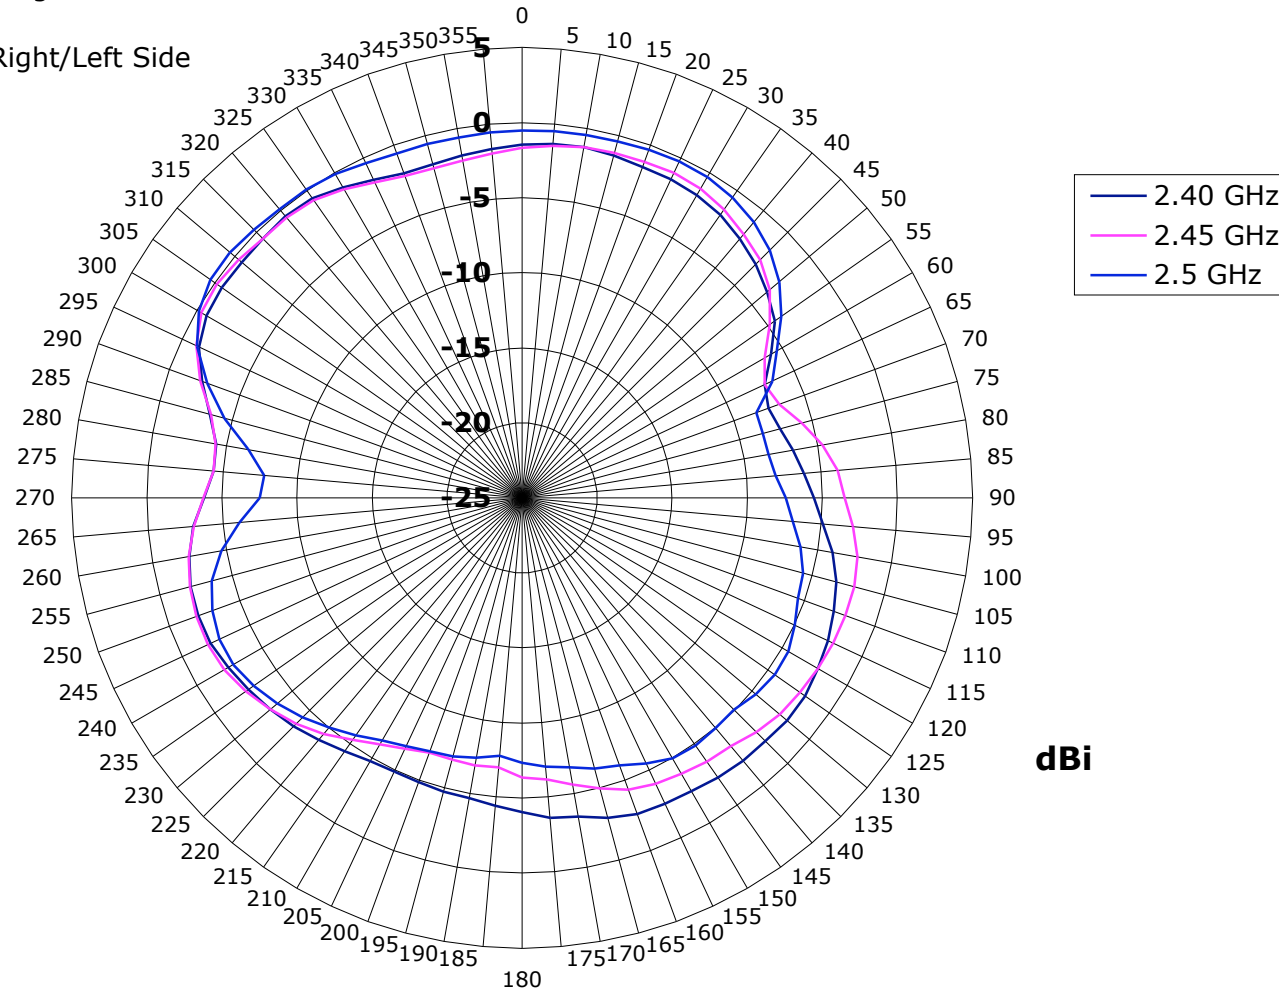

dBi