
## 13. Check the labels.

CAUTION: Legal Requirement – ALL of these labels MUST be on the shade before it is shipped.

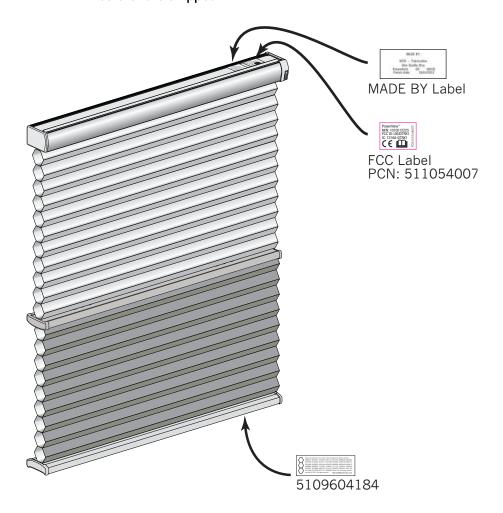

- MADE BY label is on the top of the headrail.
- PowerView<sup>™</sup> FCC
  Label is on top of the headrail.

 The appropriate patent label is applied to the bottom rail.
 Usually this is on the RIGHT side.