


6. Photographs of the Test Set-Up

Photograph 1: Set-up for Spurious Emissions for below 30MHz

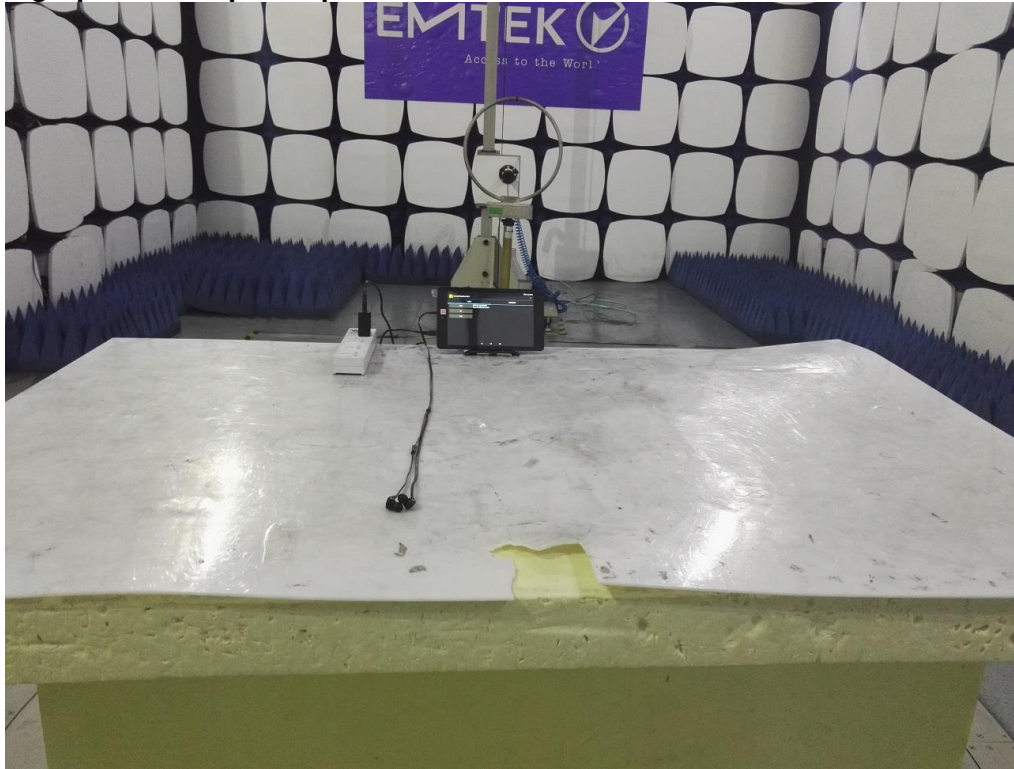

Photograph 2: Set-up for Spurious Emissions for 30 - 1000MHz




Photograph 3: Set-up for Spurious Emissions for 1 - 18GHz



Photograph 4: Set-up for Spurious Emissions for 18 – 26.5GHz




Photograph 5: Set-up for Conducted Emission

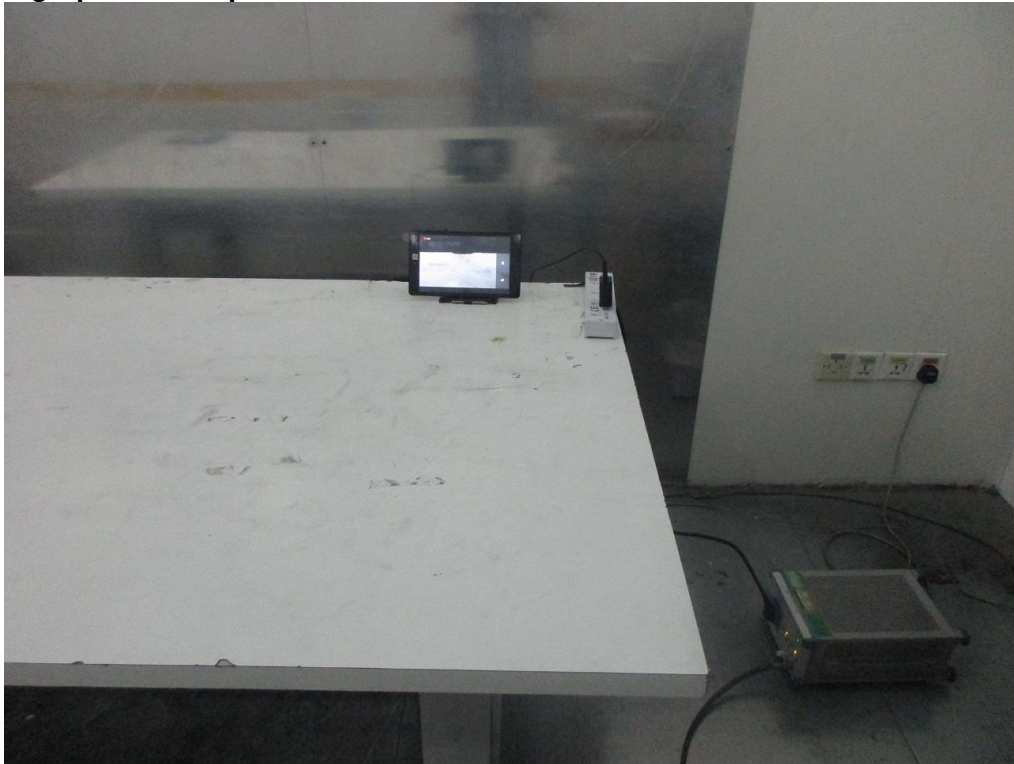

7. Photographs of the Test Set-Up

Photograph 1: Set-up for Bottom Face of NS-P10A7100

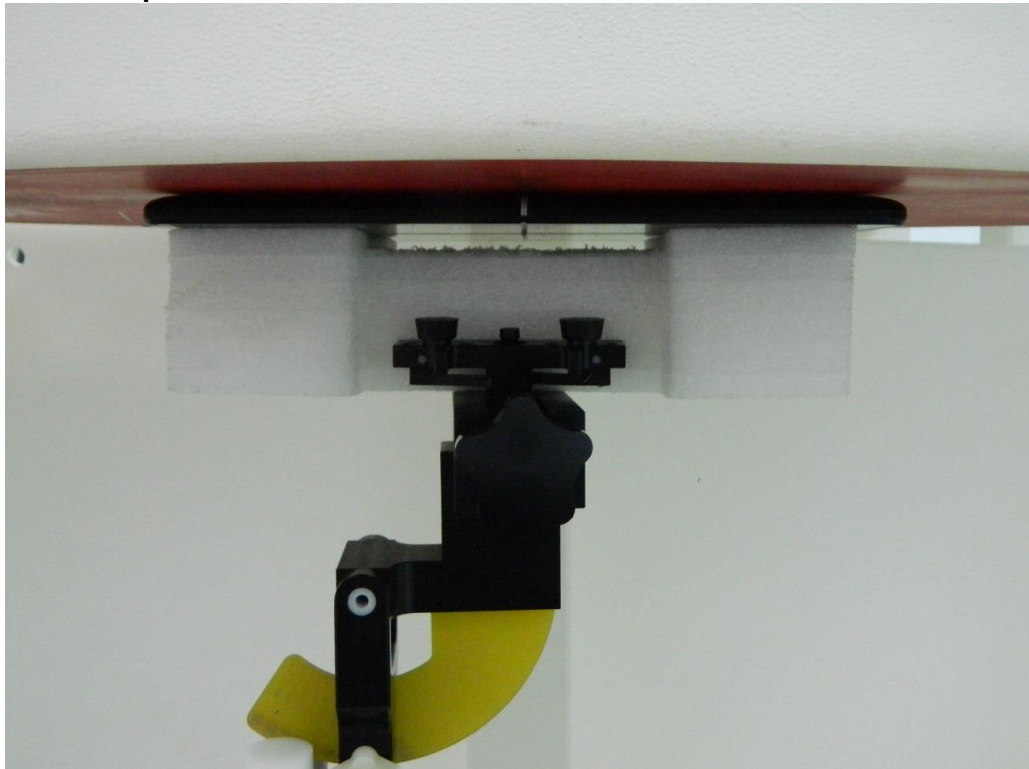


Photograph 2: Set-up for Edge 2 of NS-P10A7100



Photograph 3: Set-up for Edge 3 of NS-P10A7100



Photograph 4: Set-up for Bottom Face of NS-P08A7100

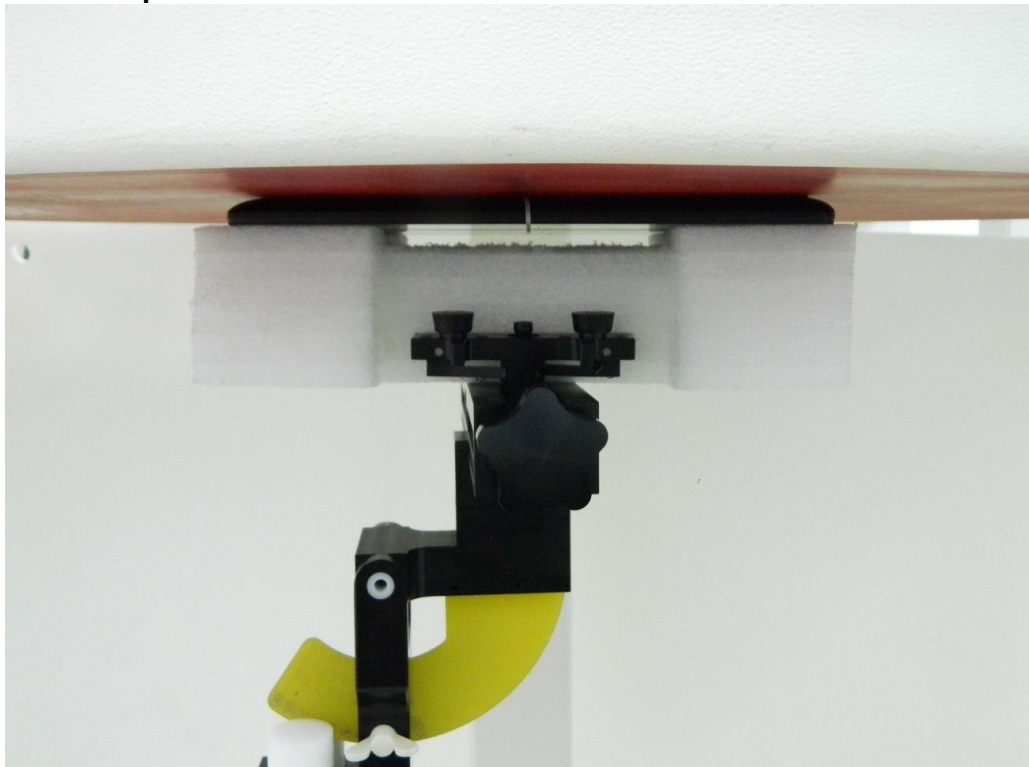

Photograph 5: Set-up for Edge 1 of NS-P08A7100



Photograph 6: Set-up for Edge 2 of NS-P08A7100

