




Photos of Test Setup

For GSM&WCDMA<E


1. Radiated Spurious Emissions

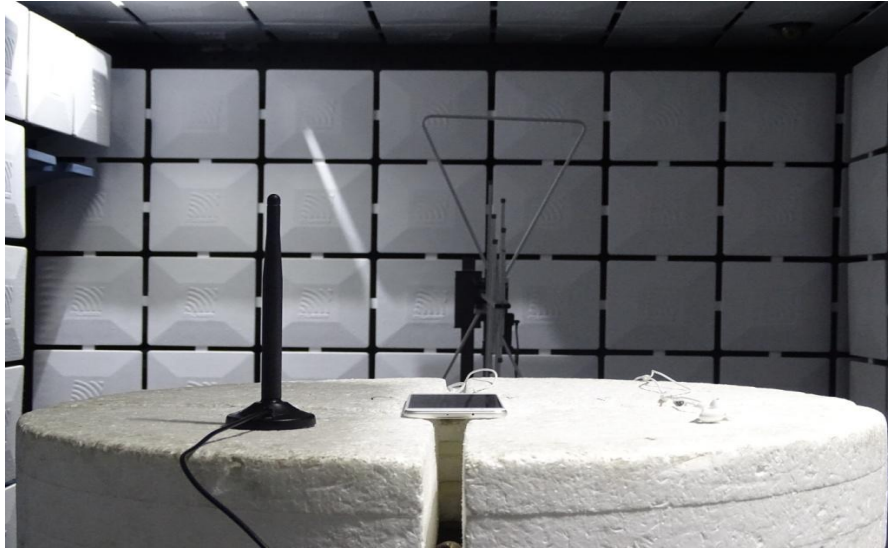

Radiated Spurious Emission (below 3GHz)




Radiated Spurious Emission (3GHz to18GHz)

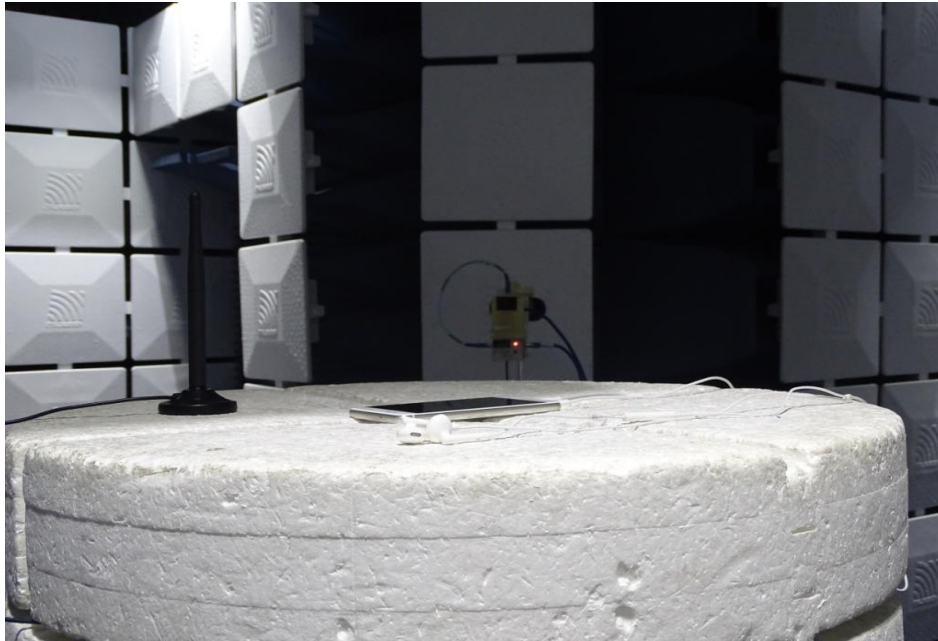


Radiated Spurious Emission (18GHz to26.5GHz)

For Wlan/BT


1. Radiated Spurious Emissions

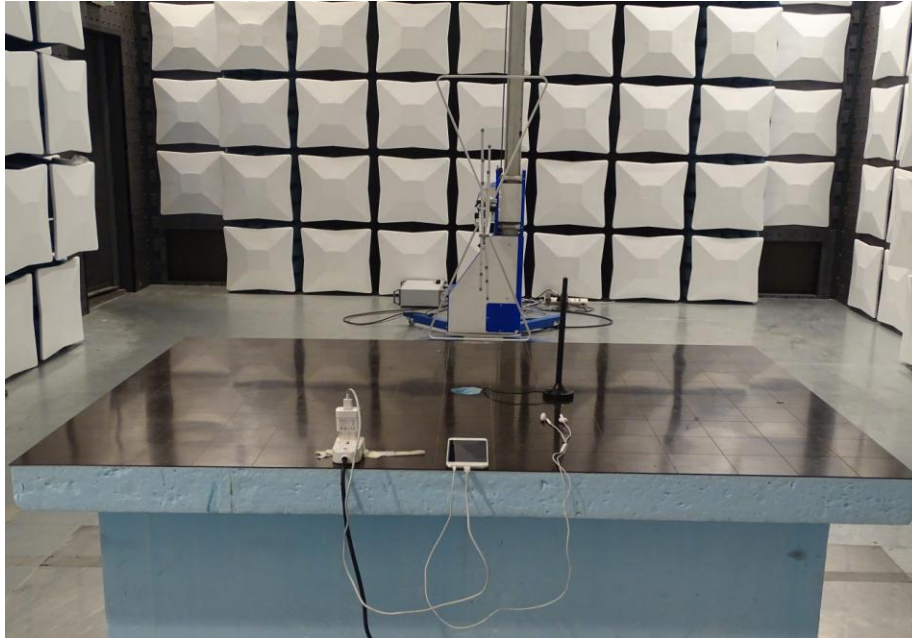

Radiated Spurious Emission (below 1GHz)

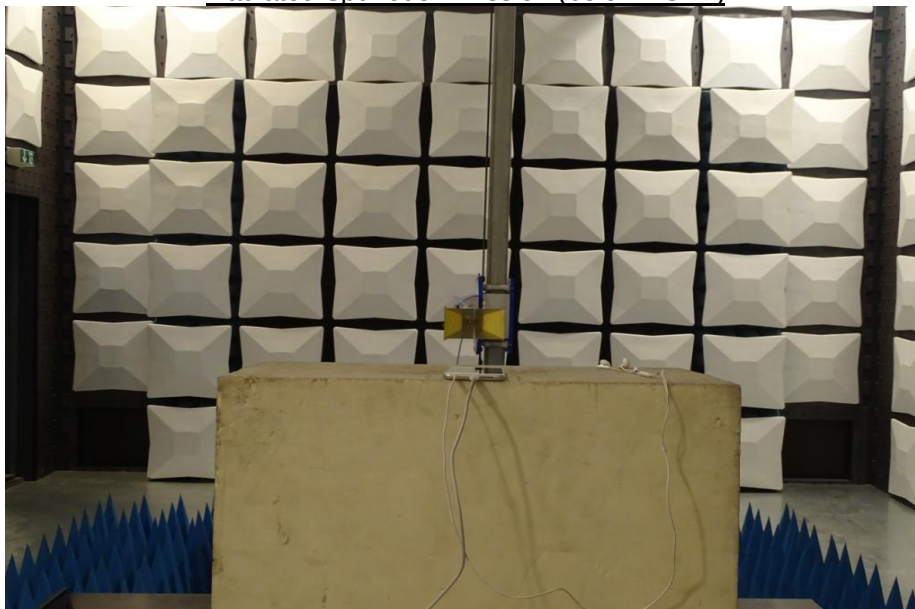


Radiated Spurious Emission (1GHz to18GHz)

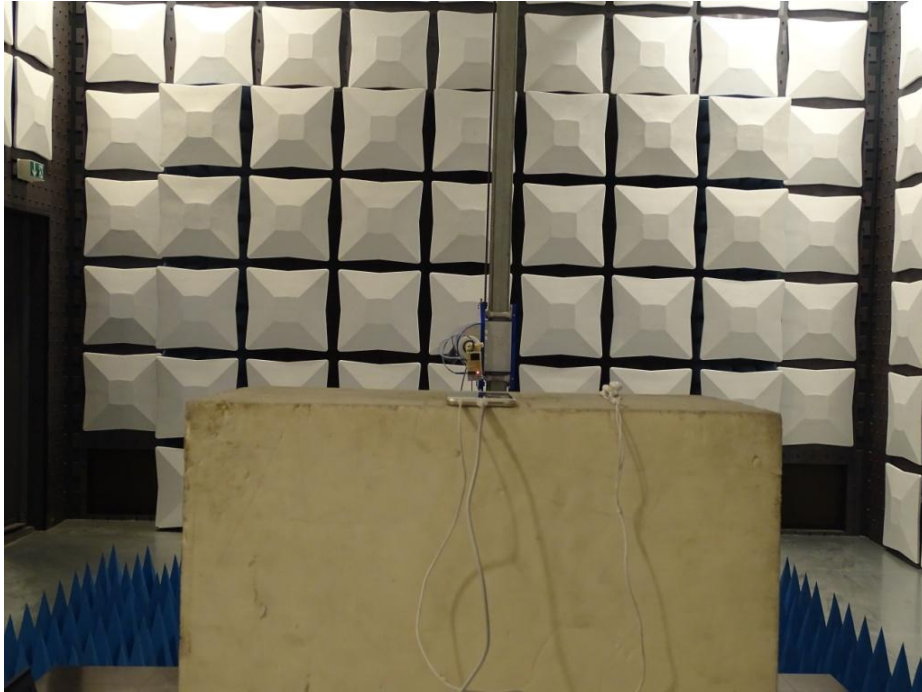


Radiated Spurious Emission (above 18GHz)

2. Conducted Emissions

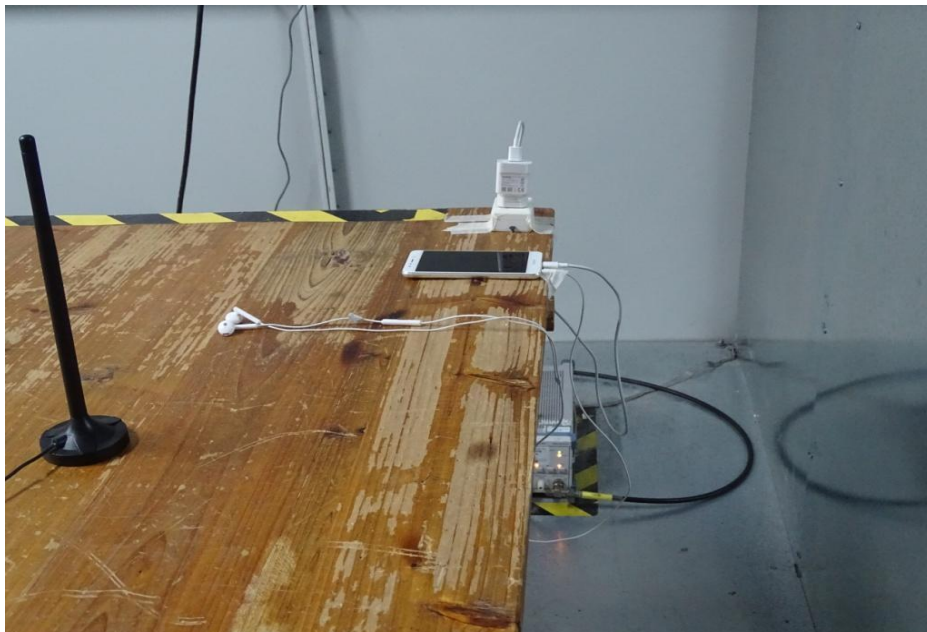

For NFC

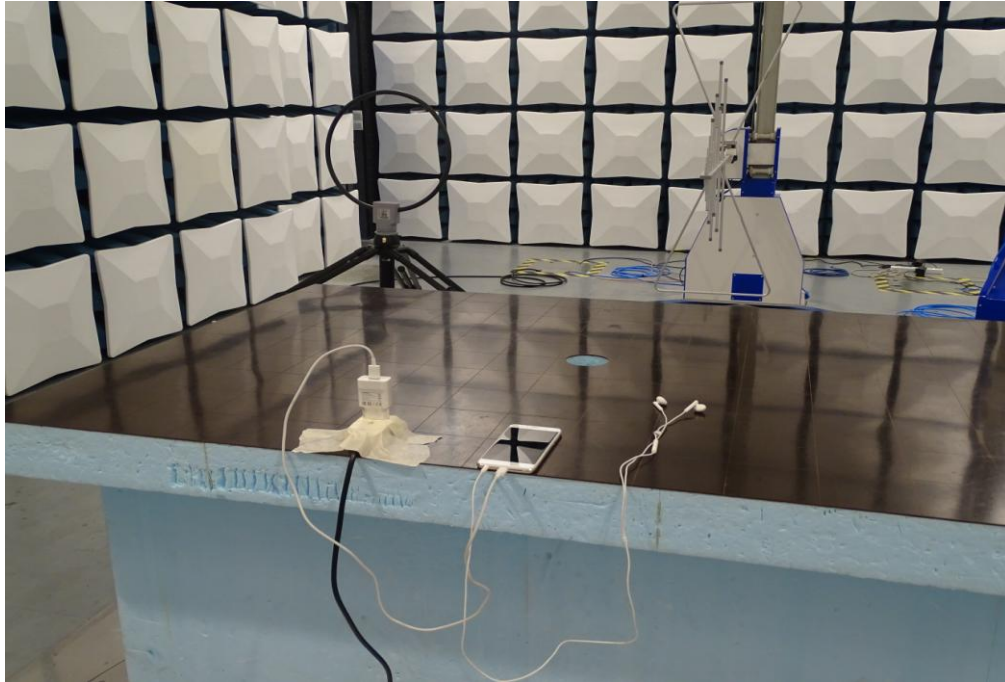

- -----The END-----