





Picture 1: Setup for conducted emissions measurement on AC mains

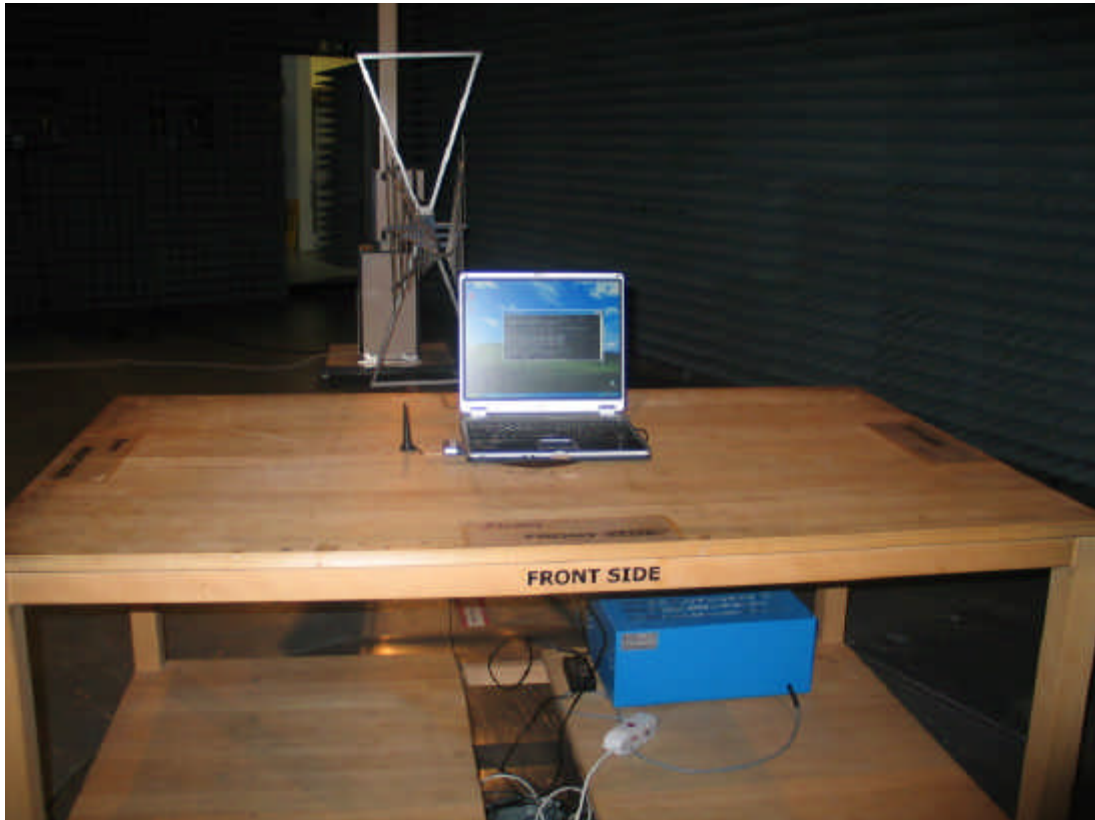

Picture 2: Setup for radiated measurements below 1 GHz

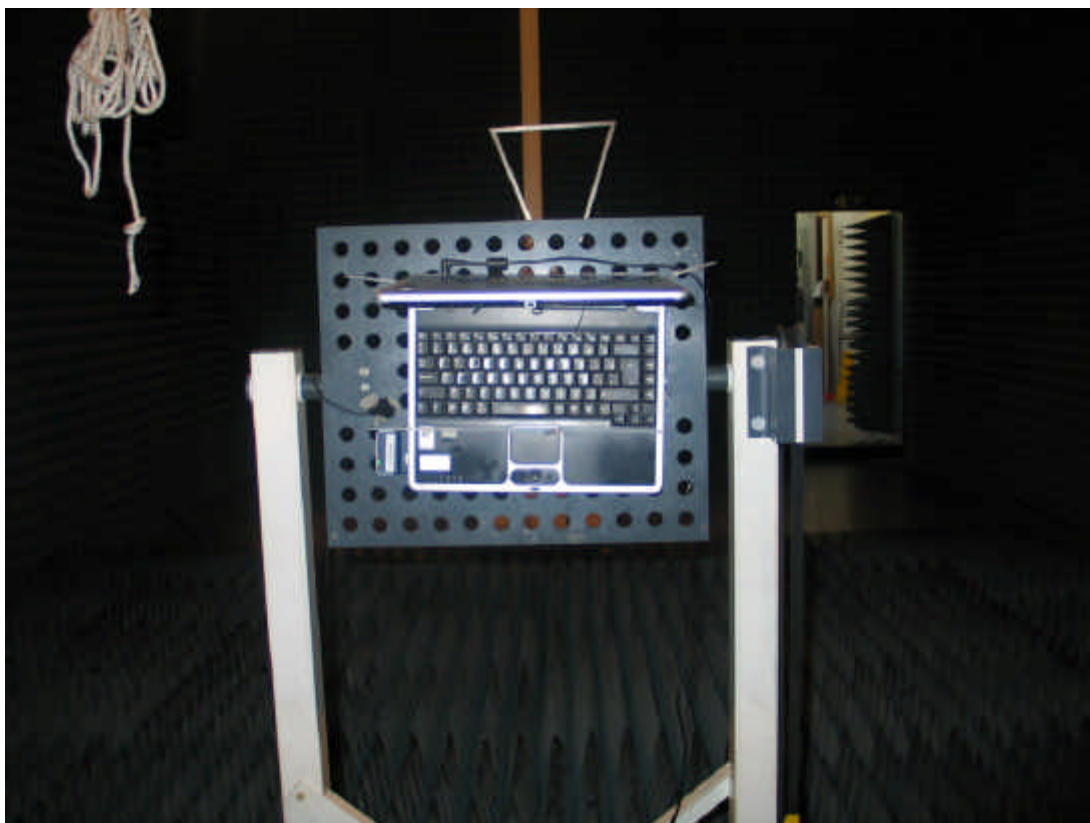

Picture 3: Setup for radiated measurements above 1 GHz