

Conducted Emission
PCB Antenna

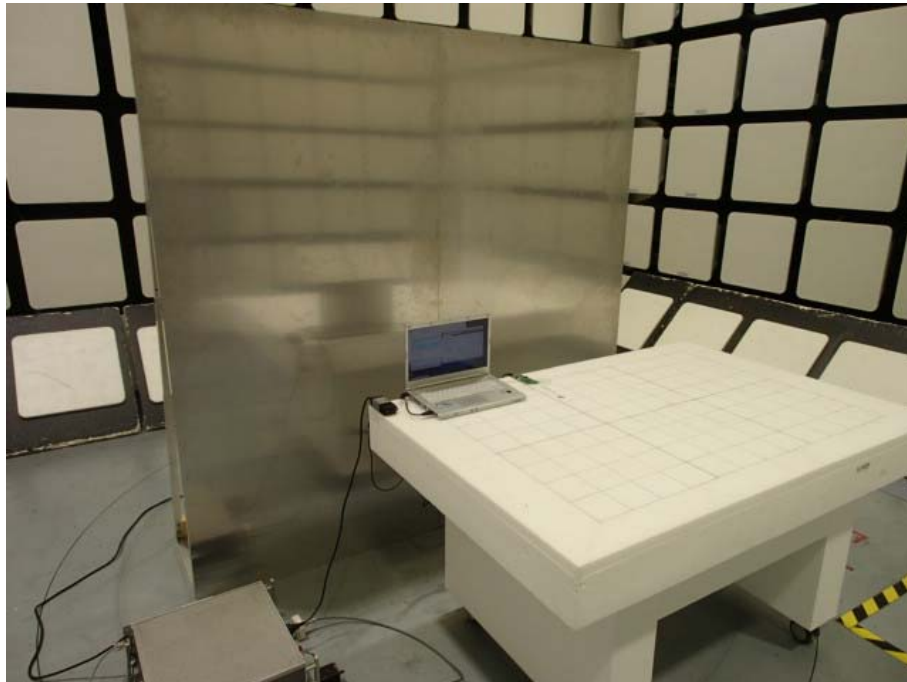


Photo 1

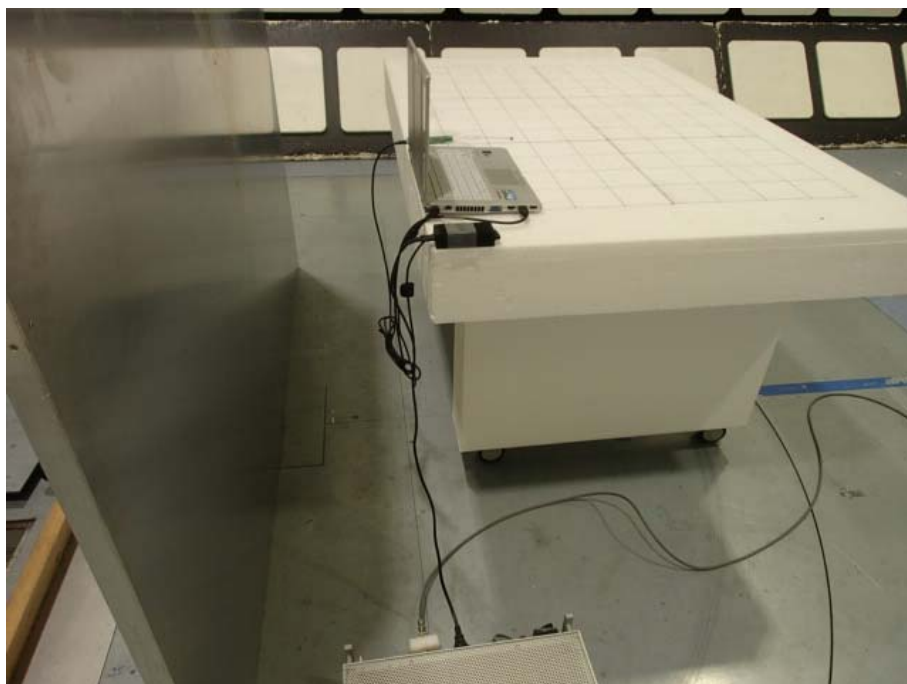


Photo 2

Radiated Spurious Emission
Chip Antenna



Photo 1

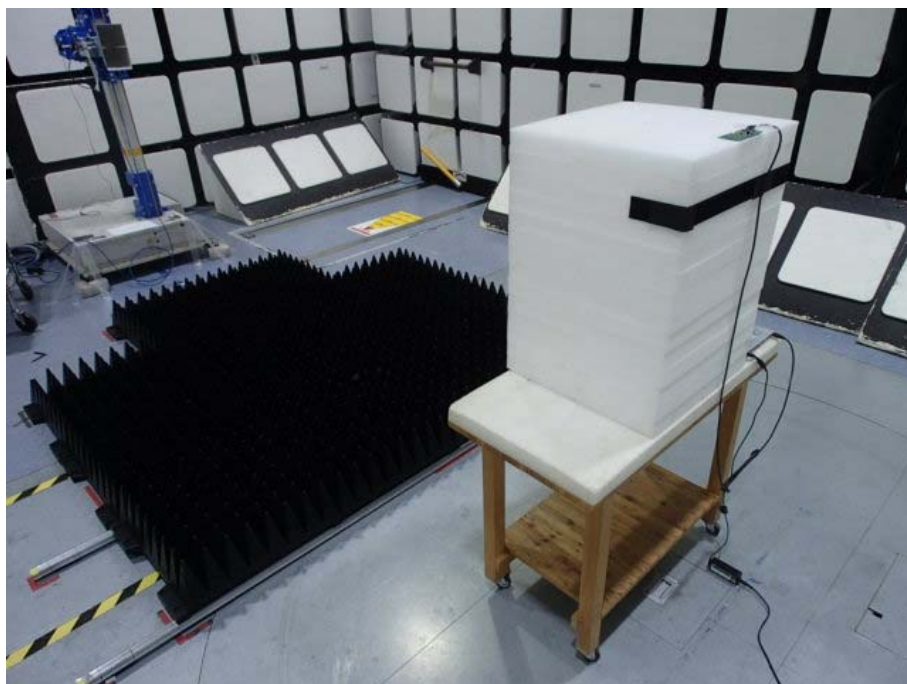


Photo 2

Radiated Spurious Emission
PCB Antenna

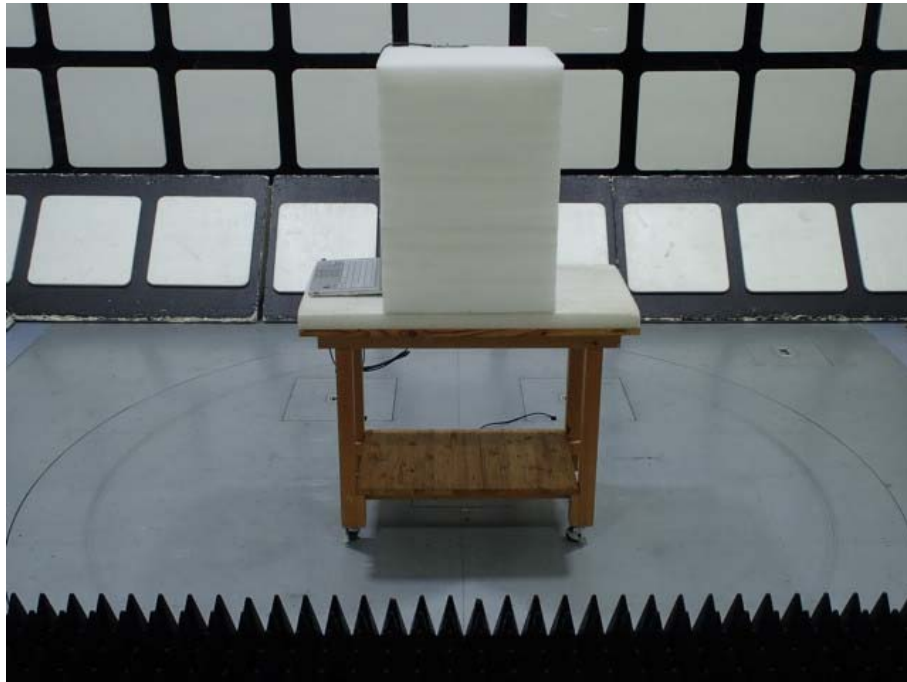


Photo 1

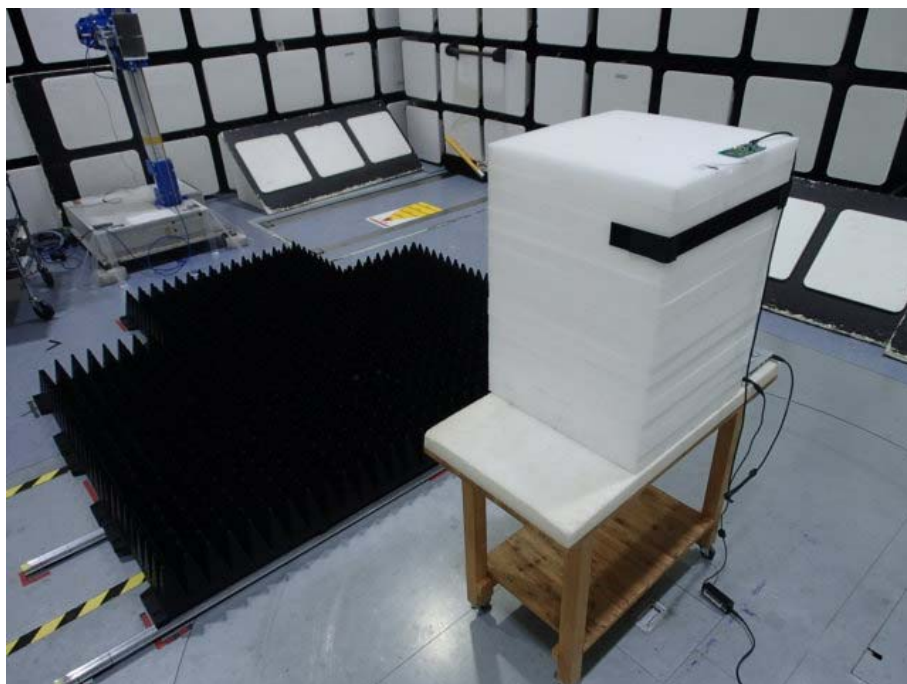


Photo 2

Worst Case Position
Chip Antenna

Below 1 GHz: (Horizontal: X-axis/ Vertical:X-axis)
Above 1 GHz: (Horizontal: X-axis/ Vertical:X-axis)

X-axis



Y-axis



Z-axis



Worst Case Position
PCB Antenna

Module

Below 1 GHz: (Horizontal: X-axis/ Vertical:X-axis)

Above 1 GHz: (Horizontal: X-axis/ Vertical:Y-axis)

Antenna

Below 1 GHz: (Horizontal: X-axis/ Vertical:X-axis)

Above 1 GHz: (Horizontal: X-axis/ Vertical:Y-axis)


Module
X-axis




Y-axis




Z-axis

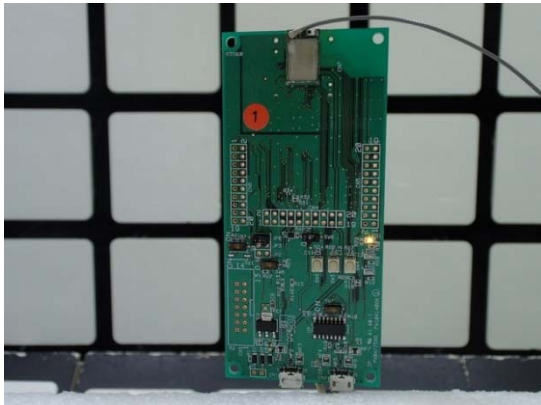


Antenna
X-axis

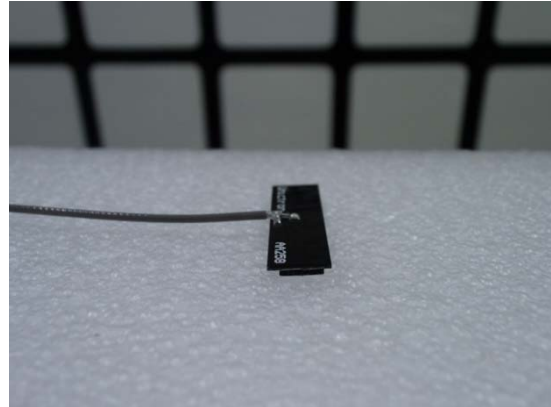

Y-axis

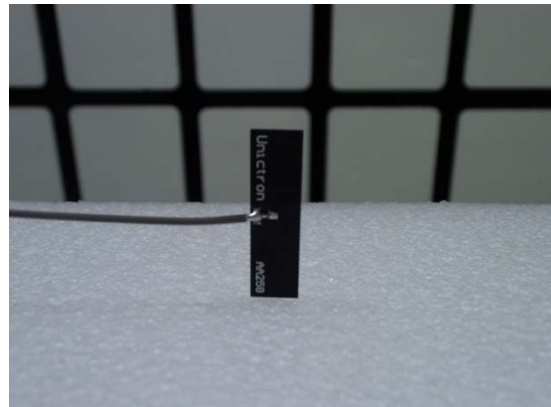

Z-axis

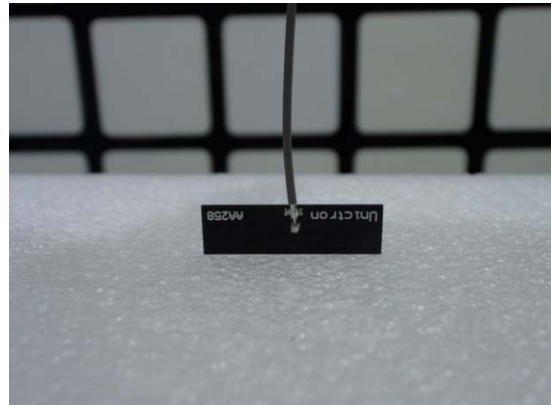

End of Report