




# Photos of Test Setup

## For GSM&WCDMA&LTE


### 1. Radiated Spurious Emissions

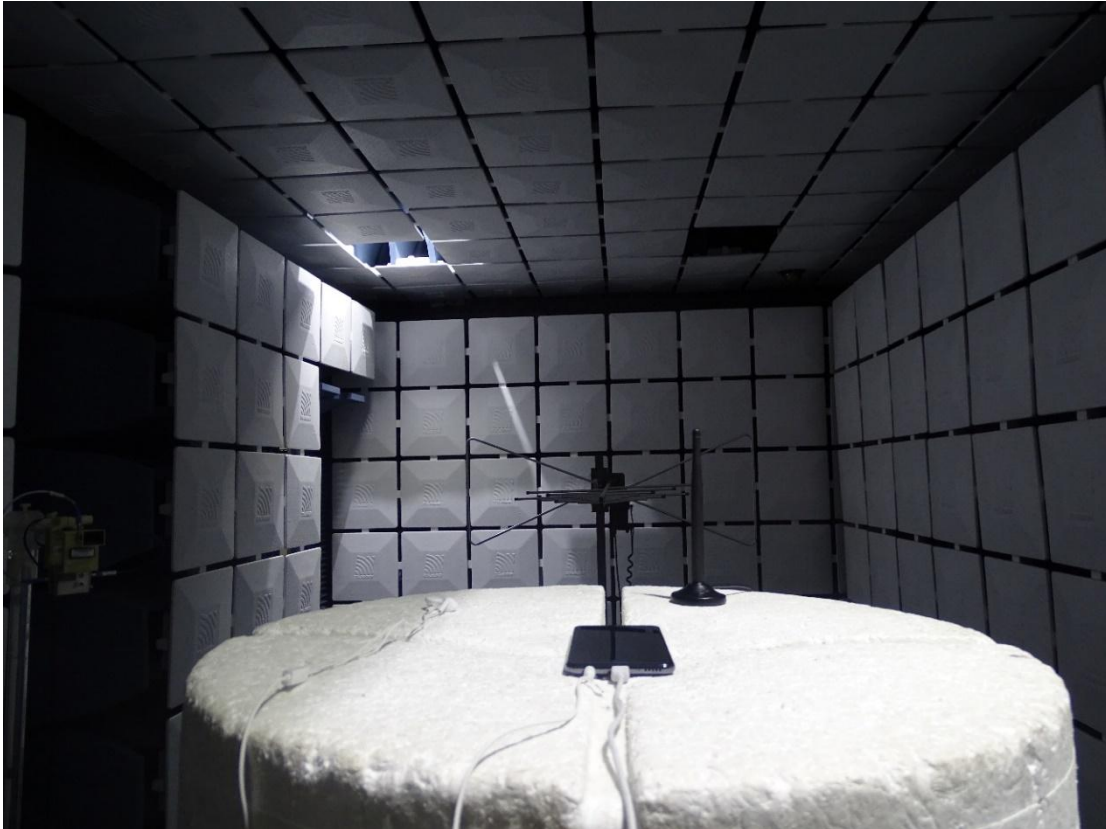

Radiated Spurious Emission (below 3GHz)




Radiated Spurious Emission (3GHz to18GHz)

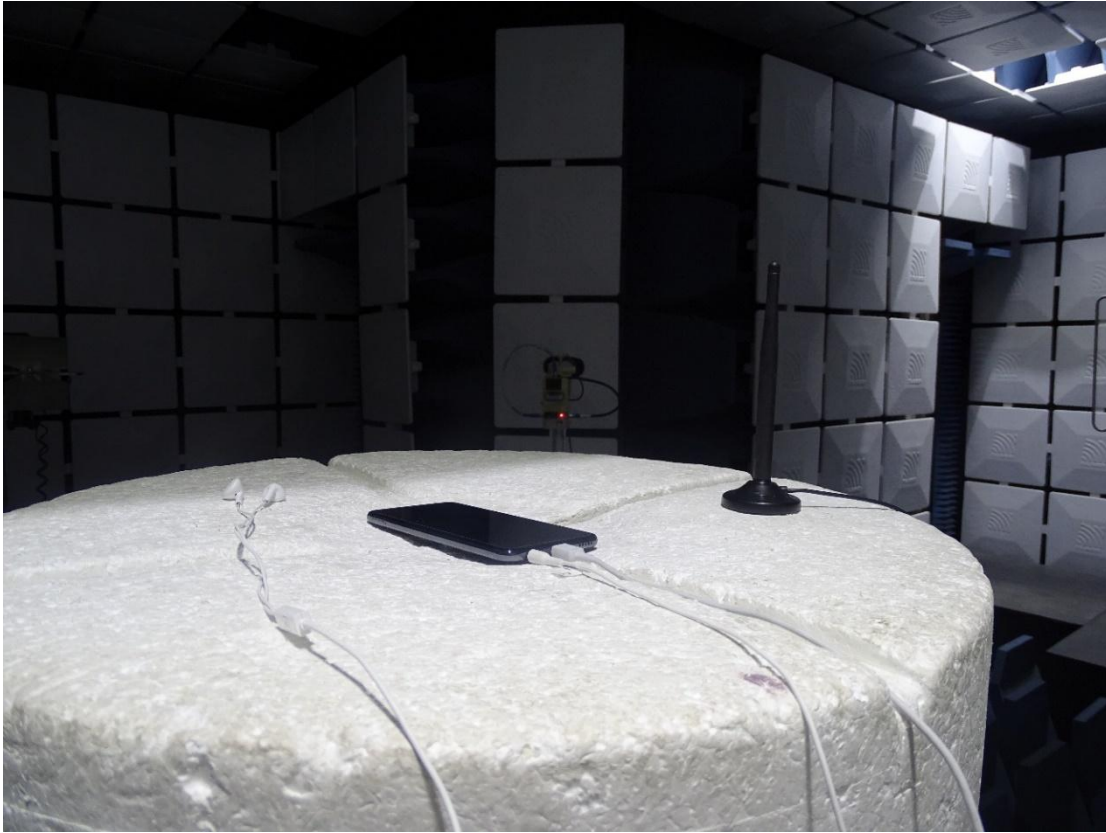

Radiated Spurious Emission (18GHz to26.5GHz)


## For Wlan/BT

### 2. Radiated Spurious Emissions

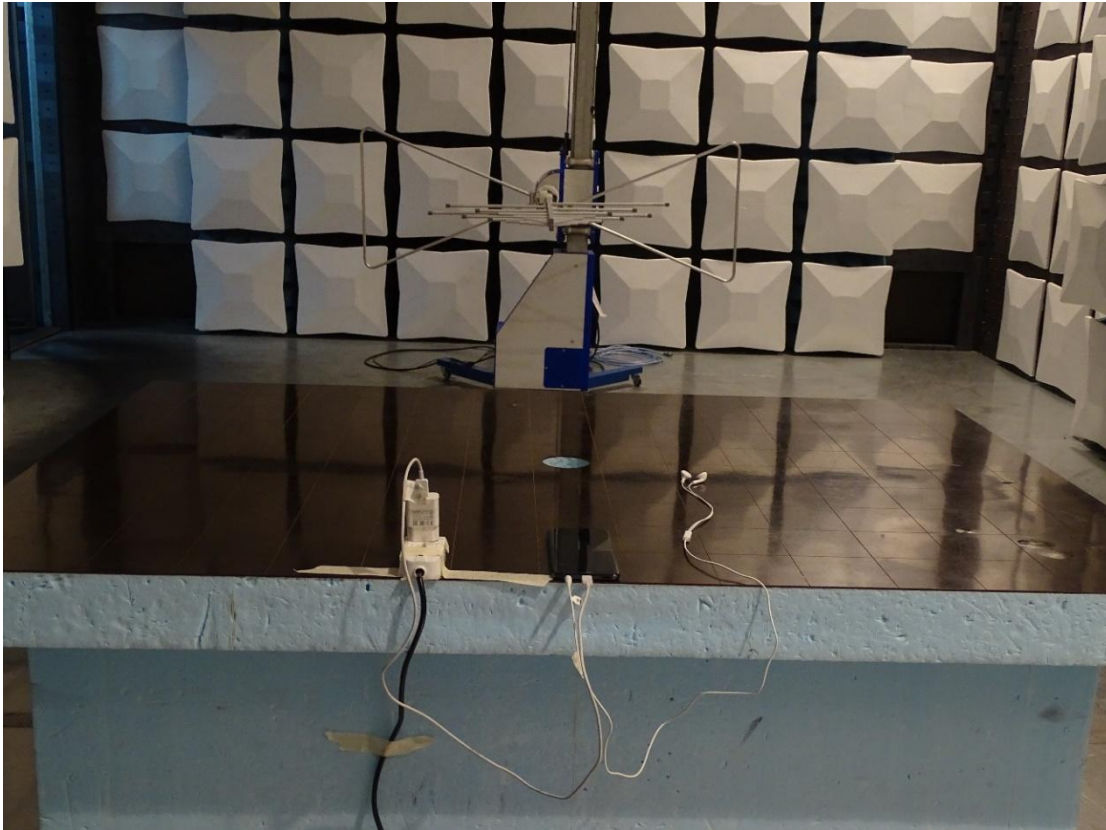


Radiated Spurious Emission (below 1GHz)



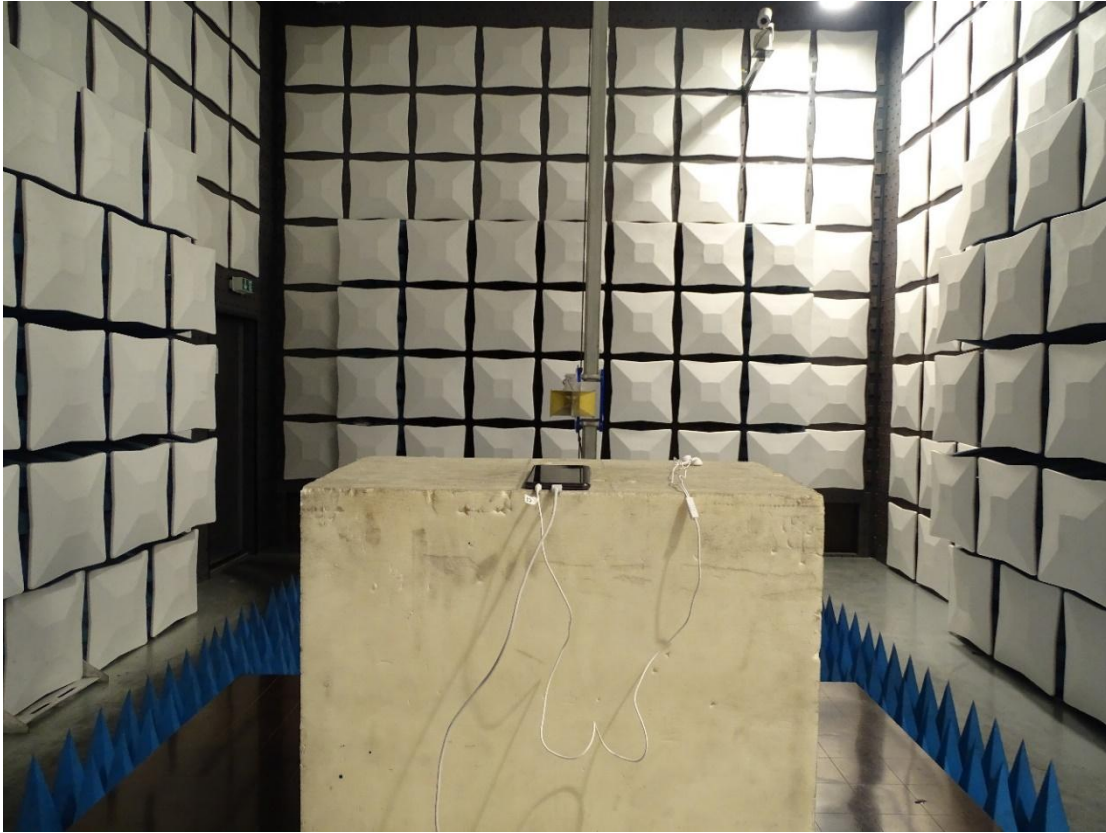


Radiated Spurious Emission (1GHz to18GHz)

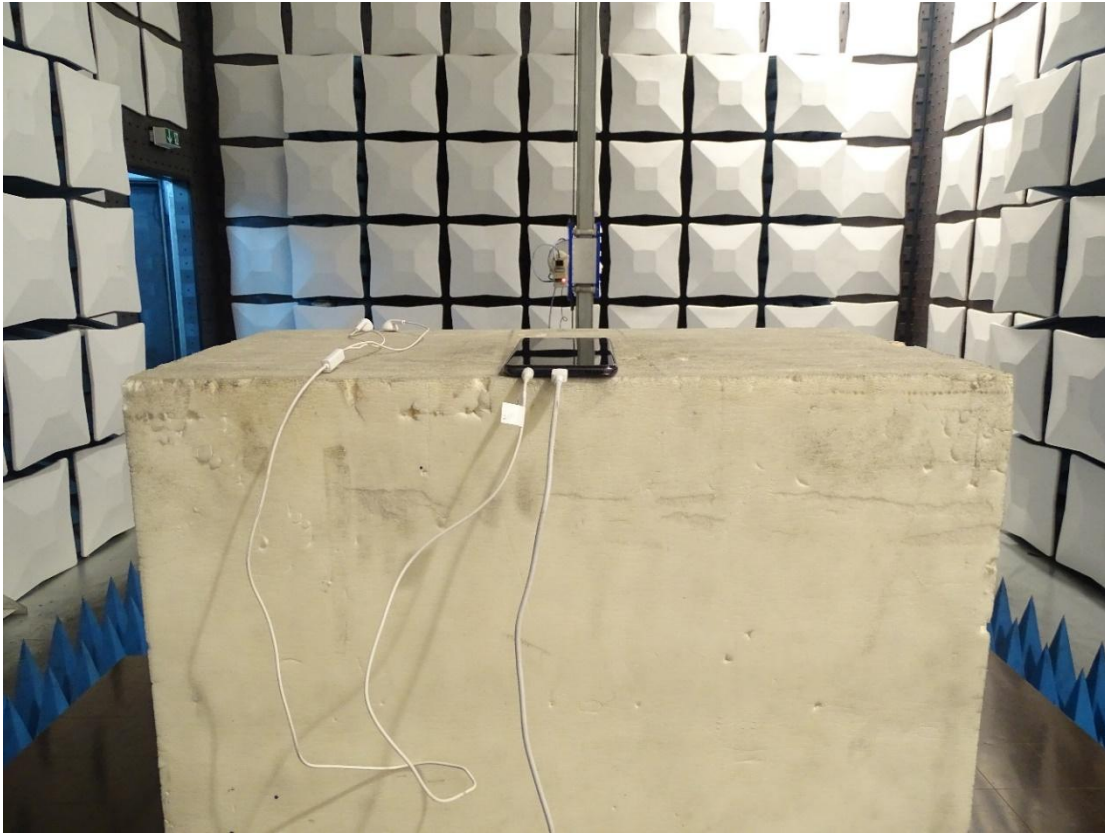

Radiated Spurious Emission (above 18GHz)


## For NFC

### 3. Radiated Spurious Emissions

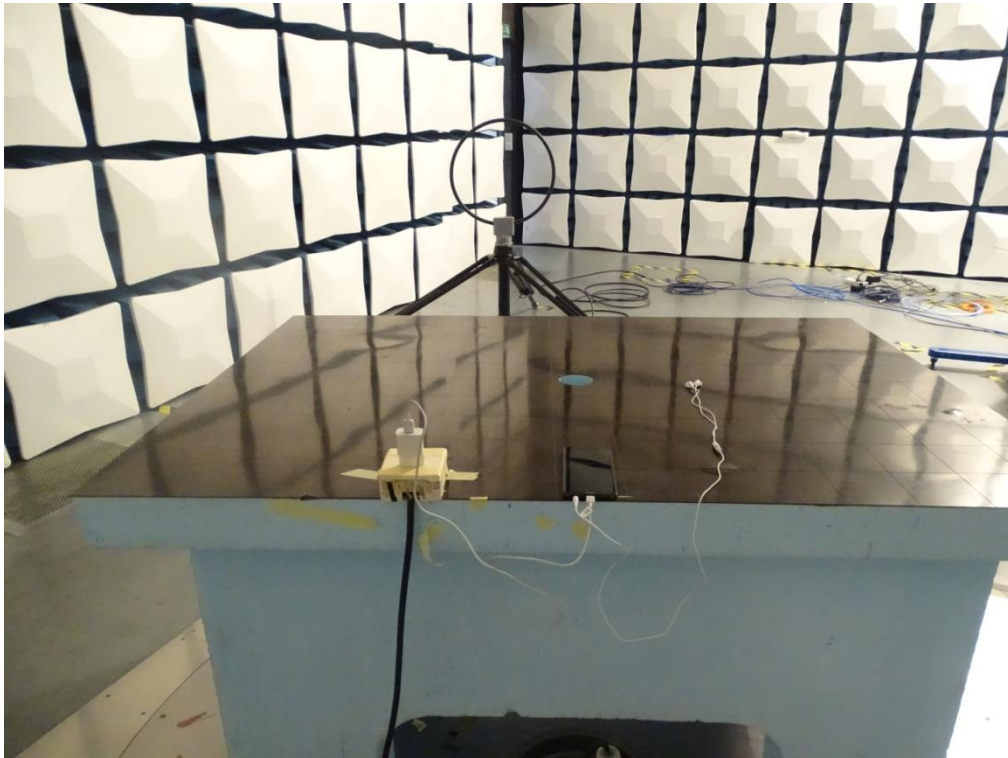


Radiated Spurious Emission (9K-30MHz)



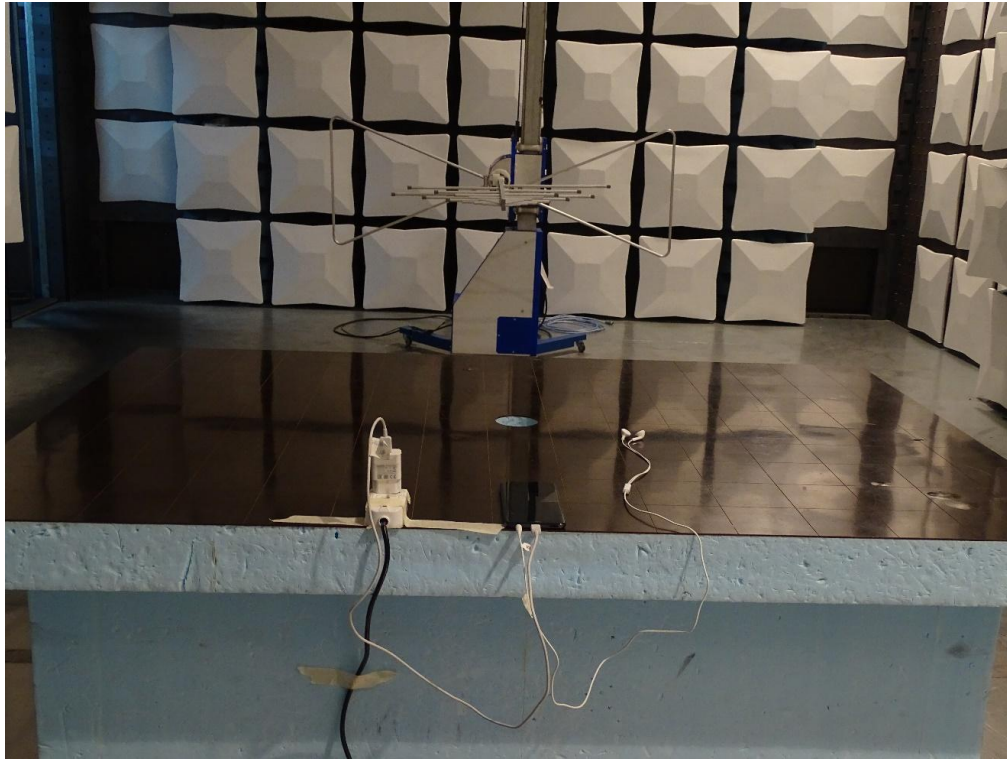

Radiated Spurious Emission (30MHz-1GHz)

## Conducted Emissions

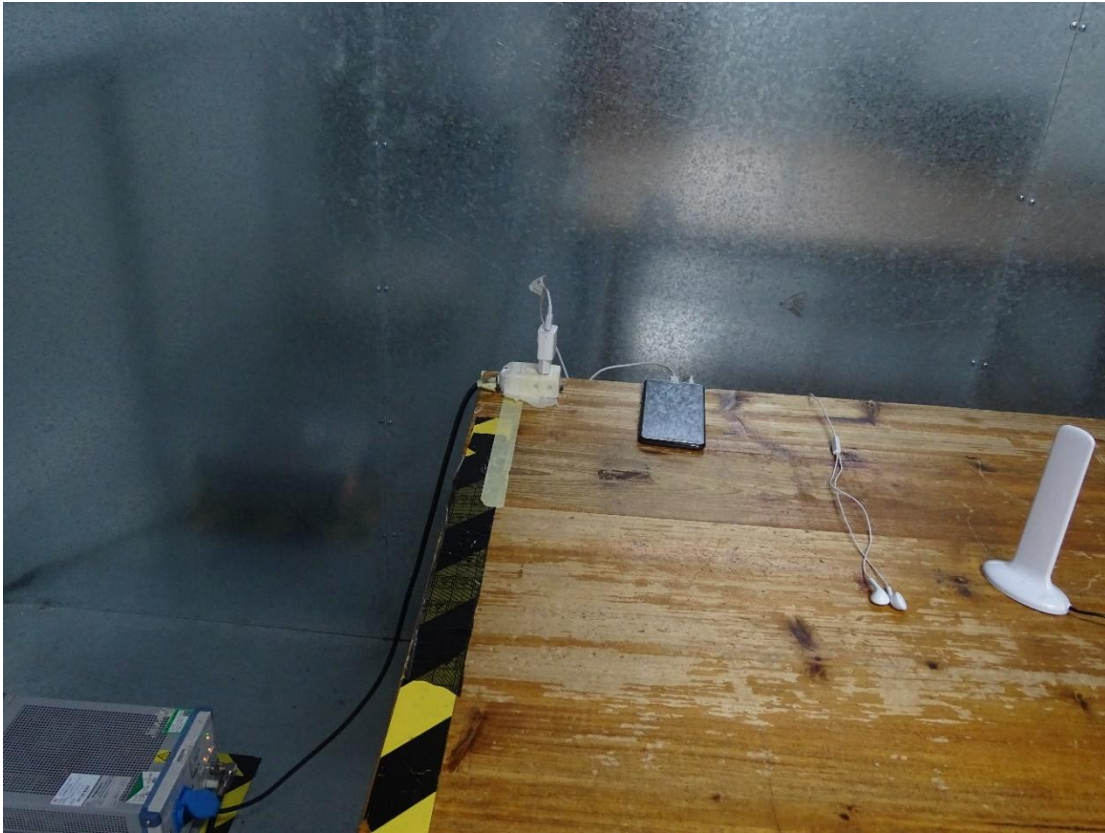



-----The END-----