




Photos of Test Setup

For GSM&WCDMA<E


1. Radiated Spurious Emissions

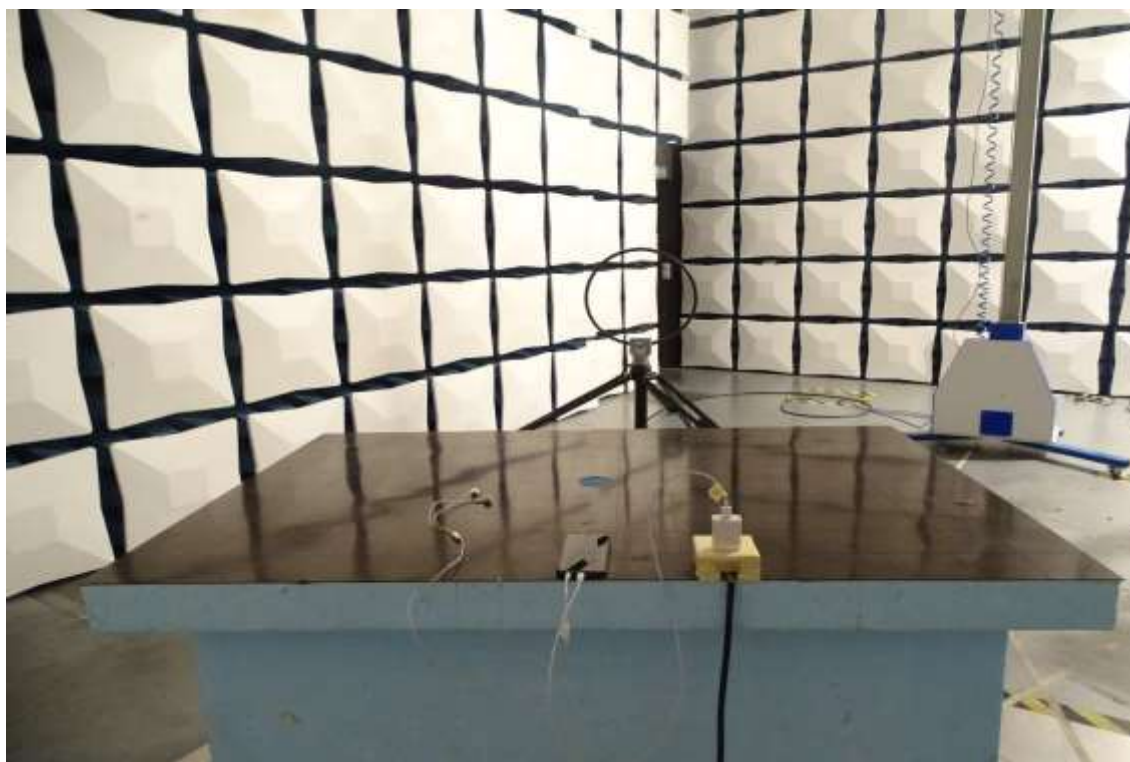


Radiated Spurious Emission (9K-30MHz)



Radiated Spurious Emission (30MHz to 3GHz)

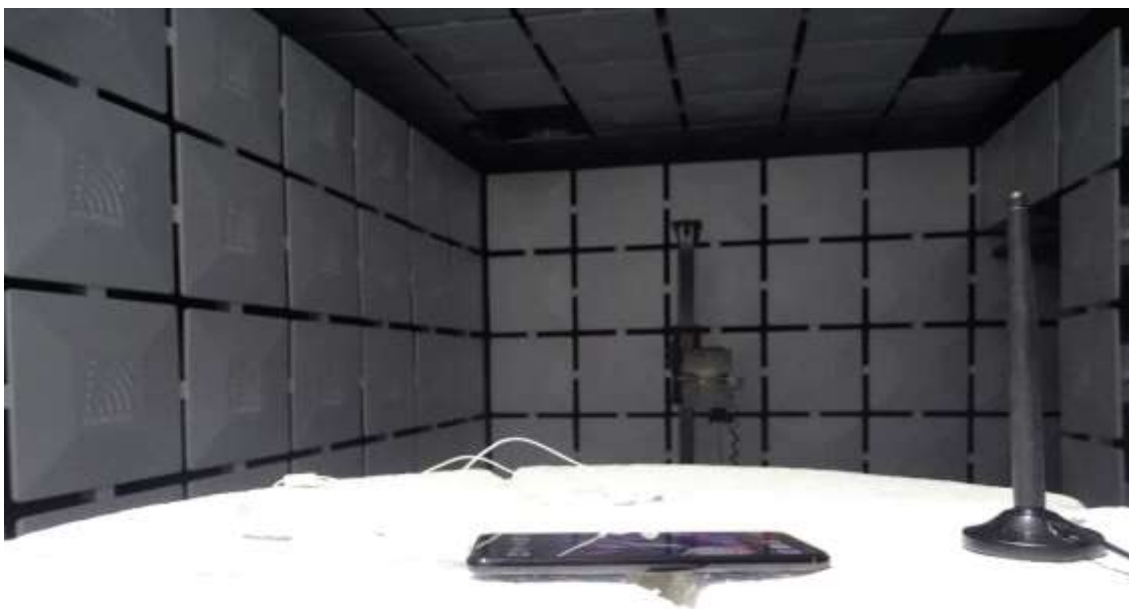


Radiated Spurious Emission (3GHz to18GHz)

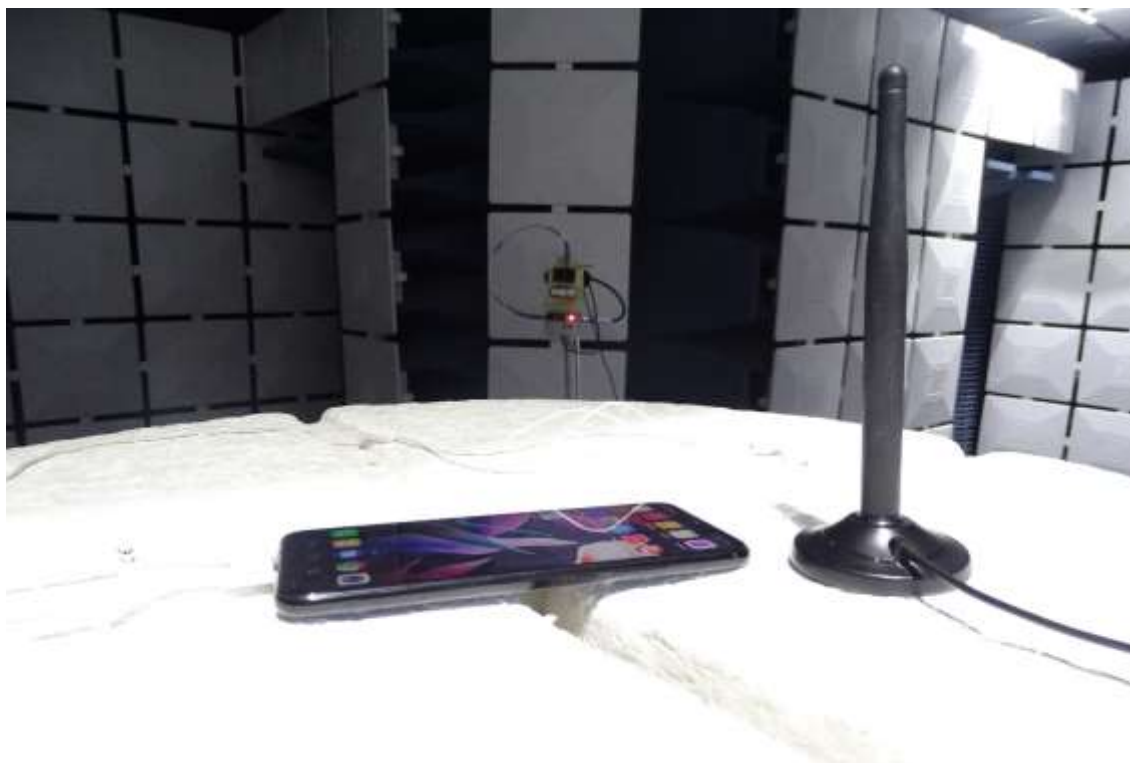

Radiated Spurious Emission (18GHz to26.5GHz)


For Wlan/BT

2. Radiated Spurious Emissions

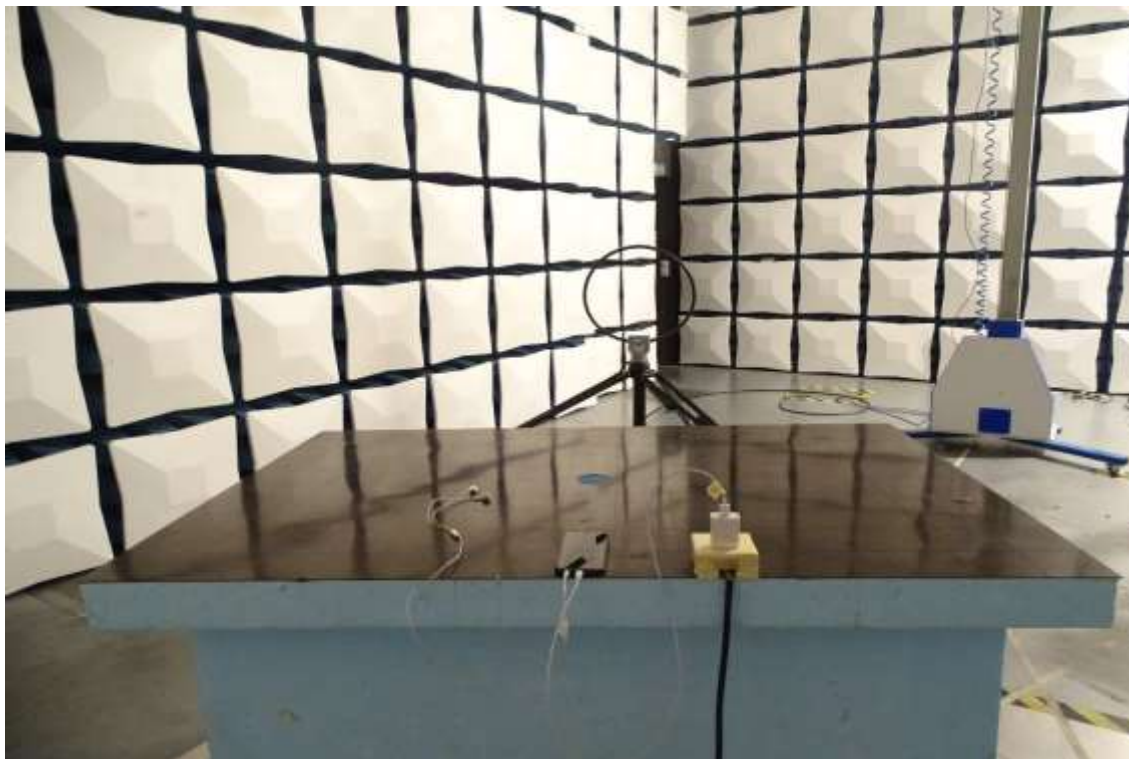


3.

4. Radiated Spurious Emission (9K-30MHz)

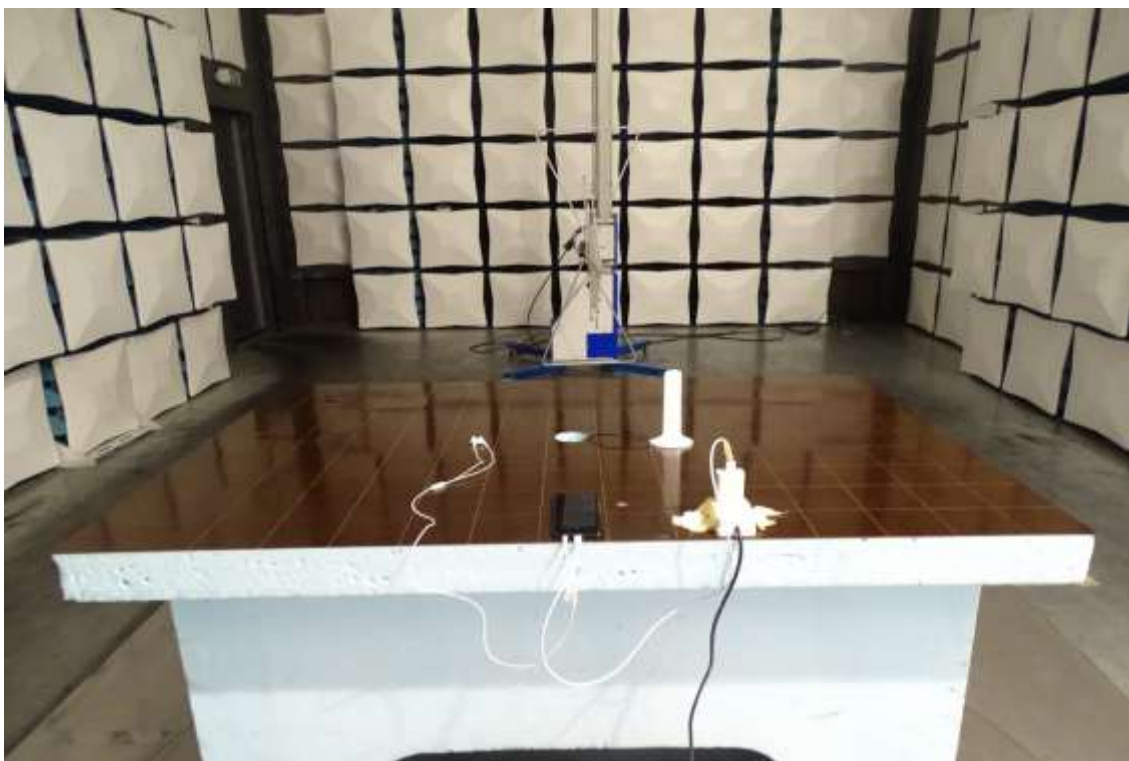

Radiated Spurious Emission (30MHz to 1GHz)

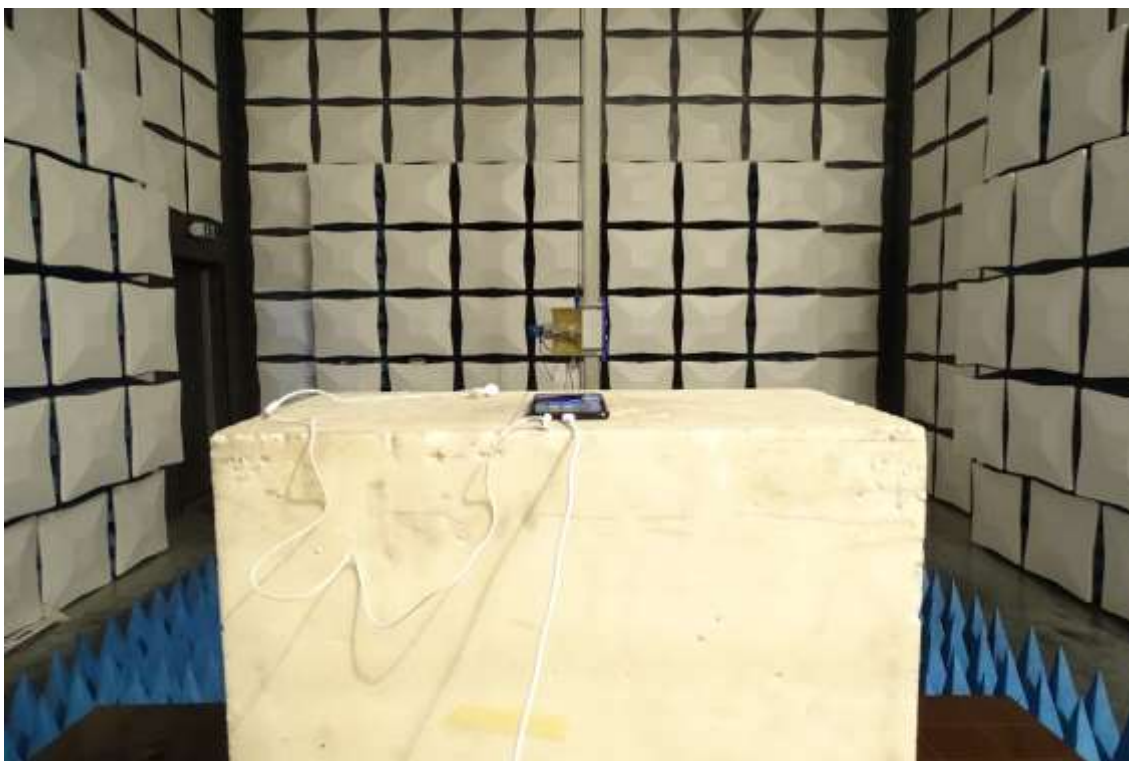


Radiated Spurious Emission (1GHz to18GHz)




Radiated Spurious Emission (above 18GHz)

For NFC

3. Radiated Spurious Emissions

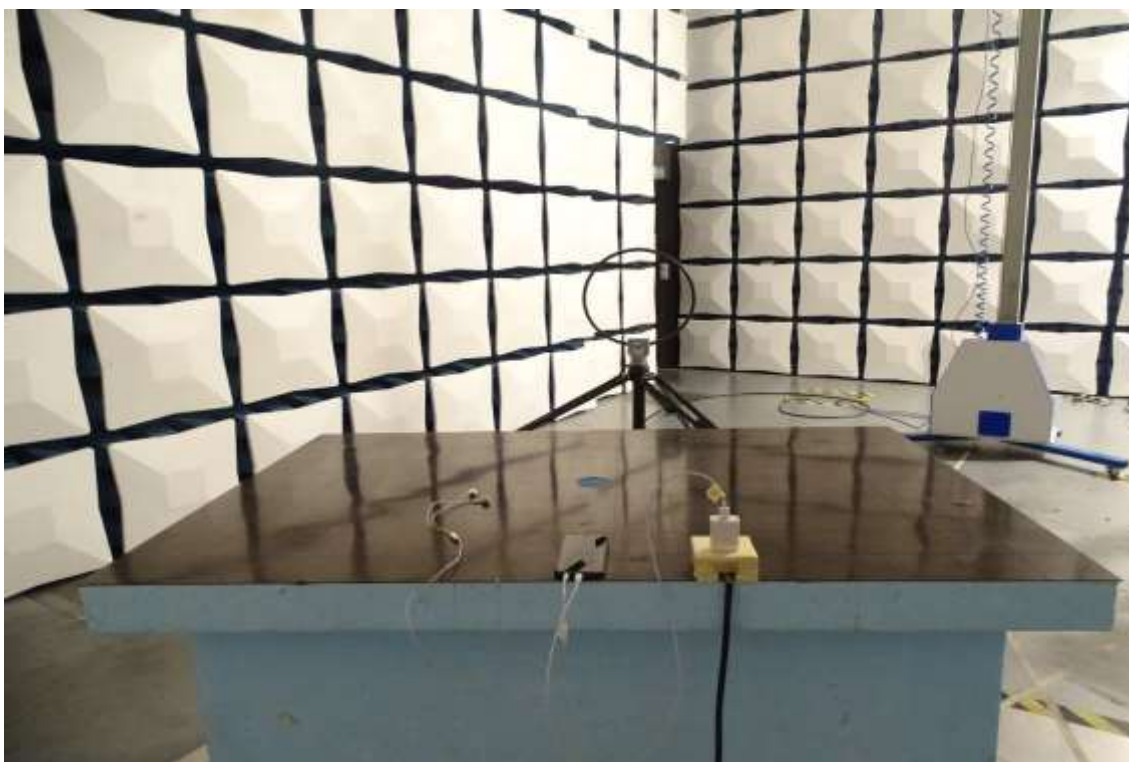


Radiated Spurious Emission (9K-30MHz)

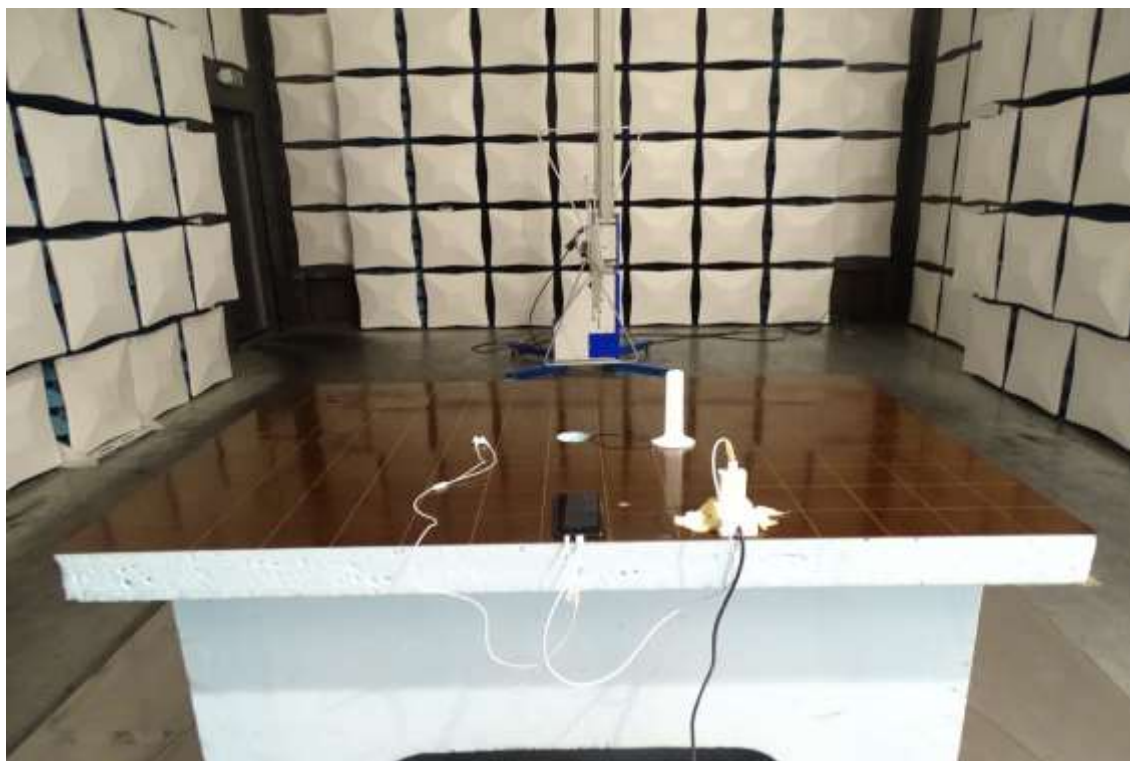

Radiated Spurious Emission (30MHz-1GHz)

Conducted Emissions

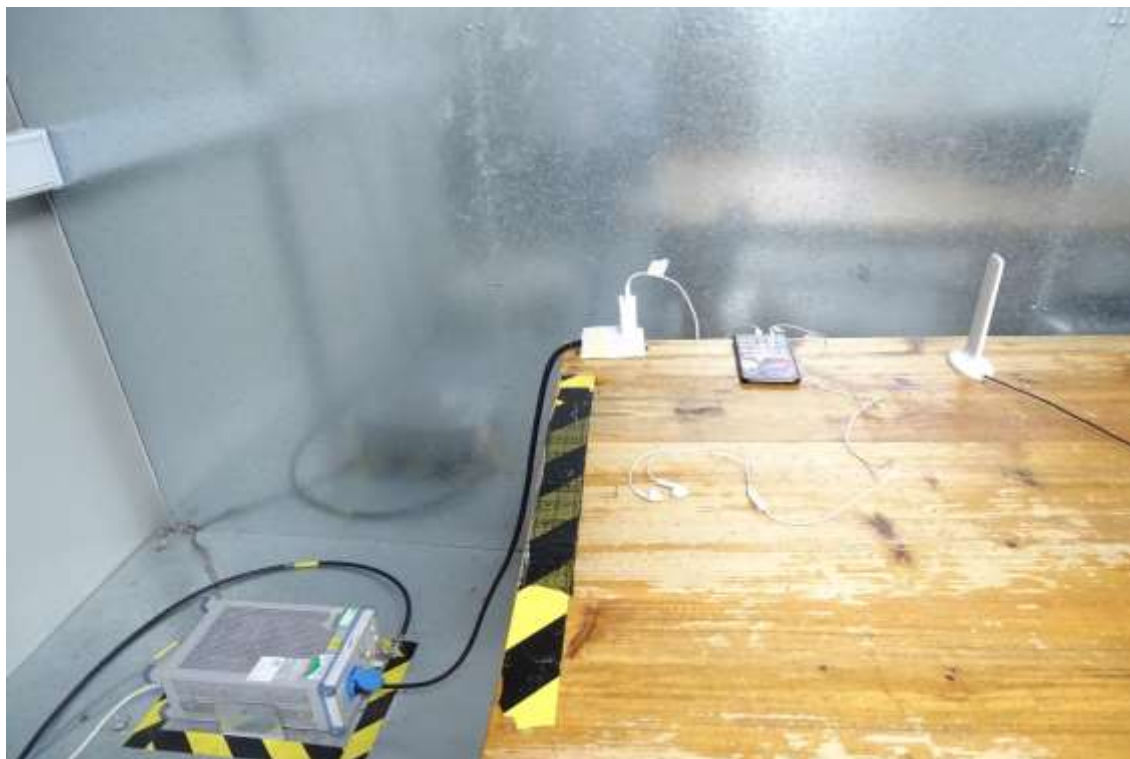



-----The END-----