

TEST SETUP PHOTOS

for RF

Occupied Bandwidth, Modulation Characteristic, Conducted Power Measurement, Spurious Emission At Antenna Terminals (+/- 1MHz),
Conducted Spurious Emission Measurement Setup




Frequency Stability Under Temperature & Voltage Variations Setup





ERP Test, Receiver Spurious Emission for RSS 132/133, Radiated Spurious Measurement(Below 1GHz) Setup

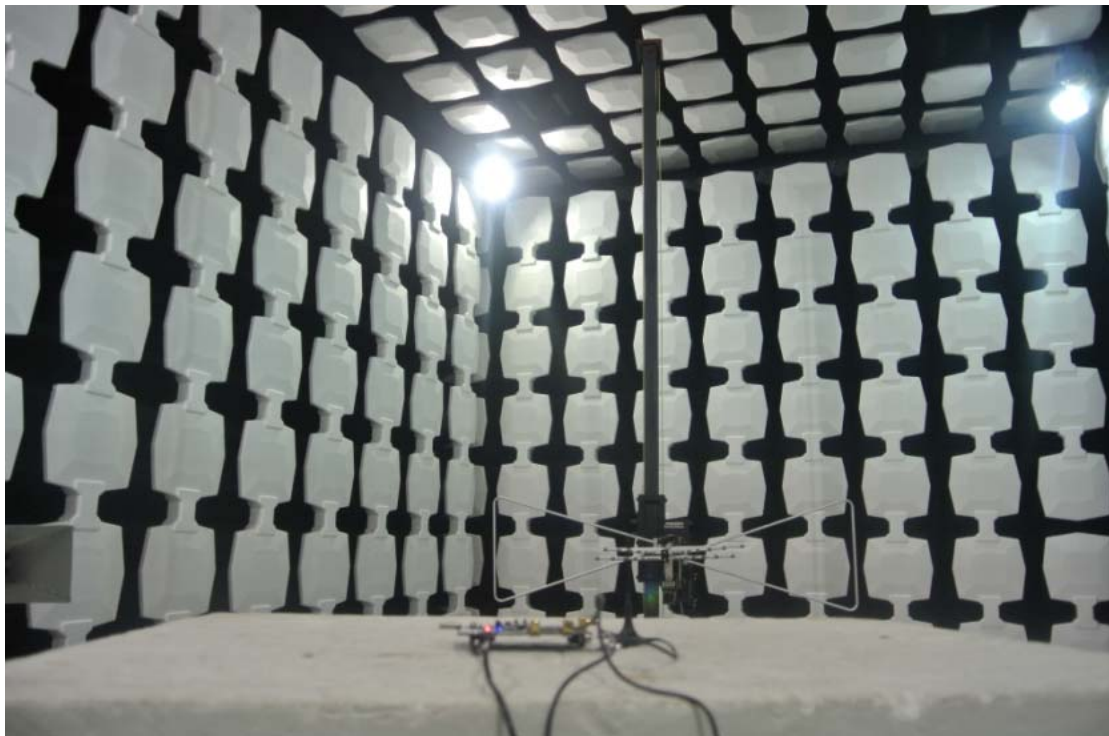

Radiated Spurious Measurement (Above 1GHz), EIRP Test, Receiver Spurious Emission for RSS 132/133 Setup

