



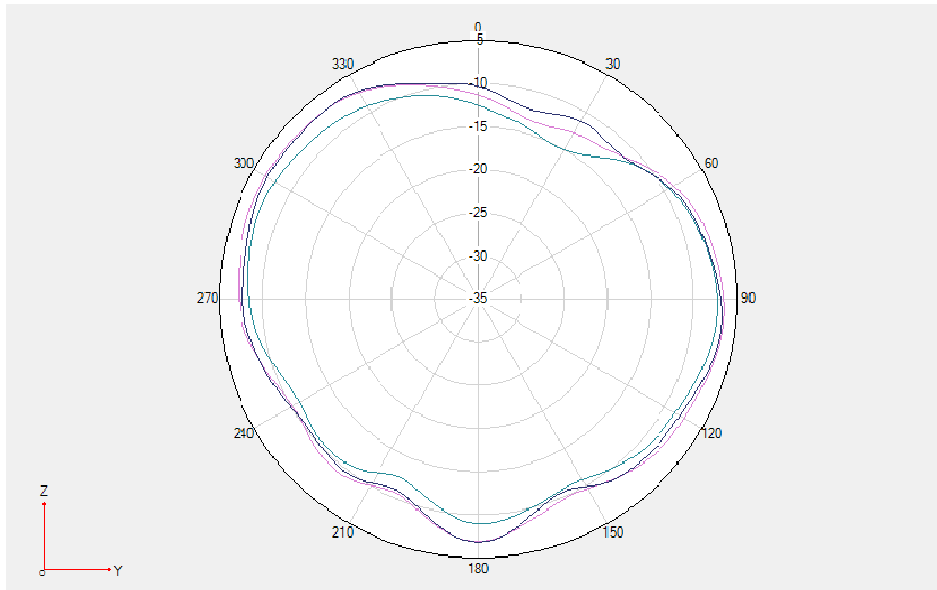


GSM900/WCDMA B8/LTE B8/N8 $\Phi=90\text{deg}$

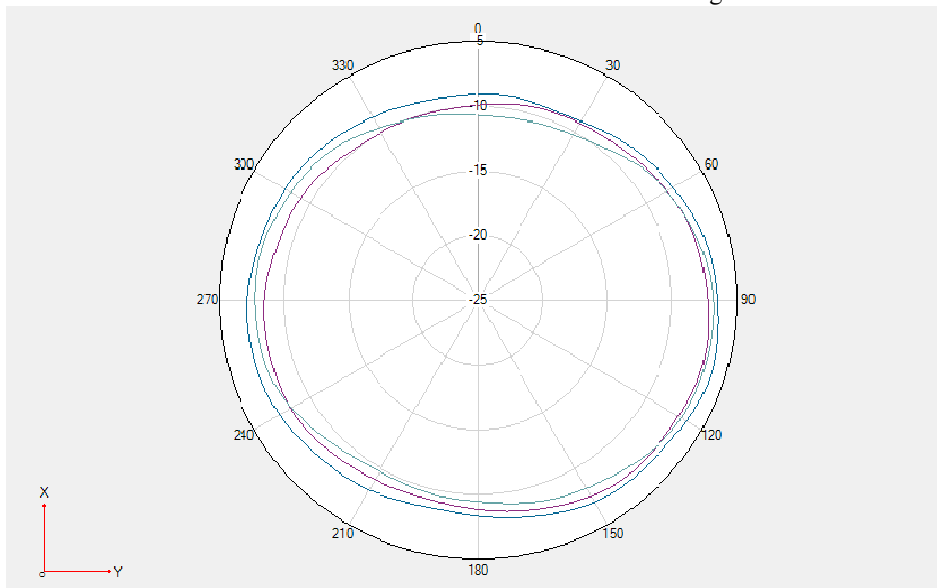


GSM900/WCDMA B8/LTE B8/N8 $\Theta=90\text{deg}$

※ Antenna Gain


ANT2

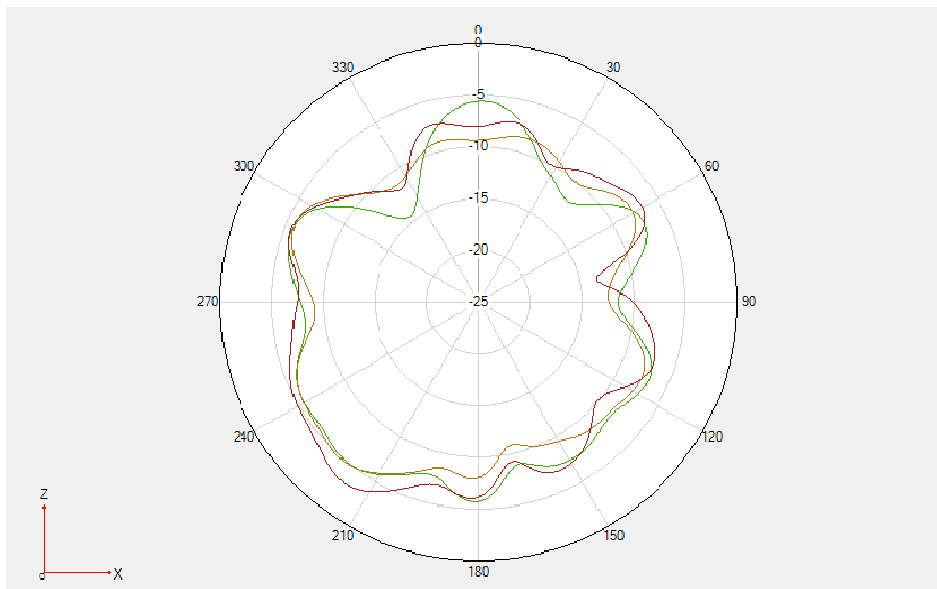


WCDMA B1/LTE B1/N1 $\Phi=0^\circ$

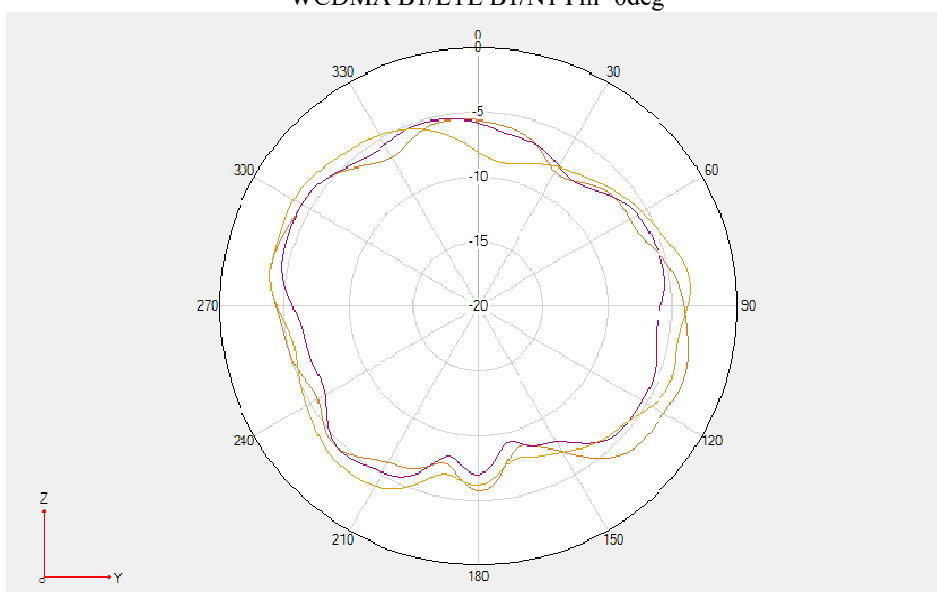


WCDMA B1/LTE B1/N1 $\Phi=90^\circ$

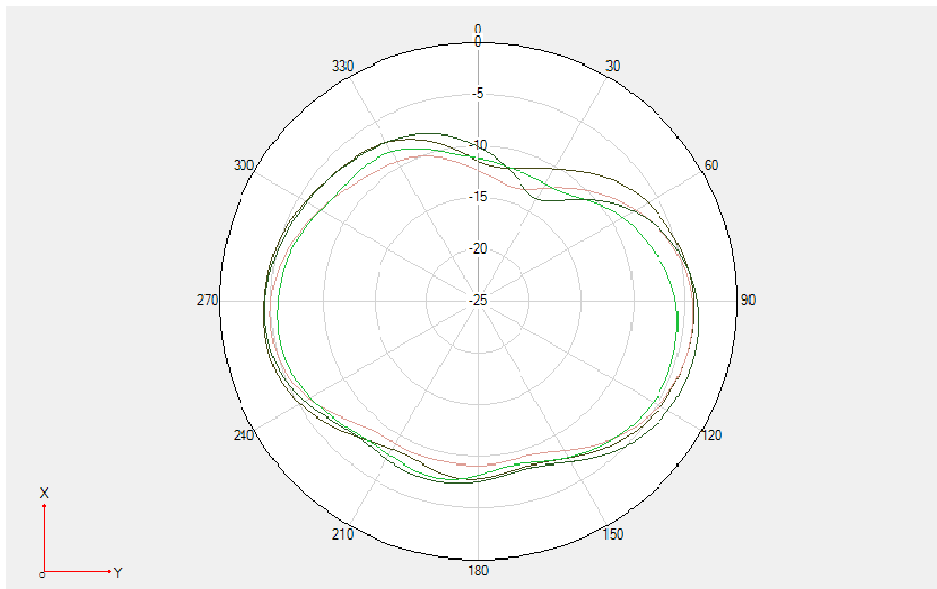


WCDMA B1/LTE B1/N1 $\Theta=90^\circ$

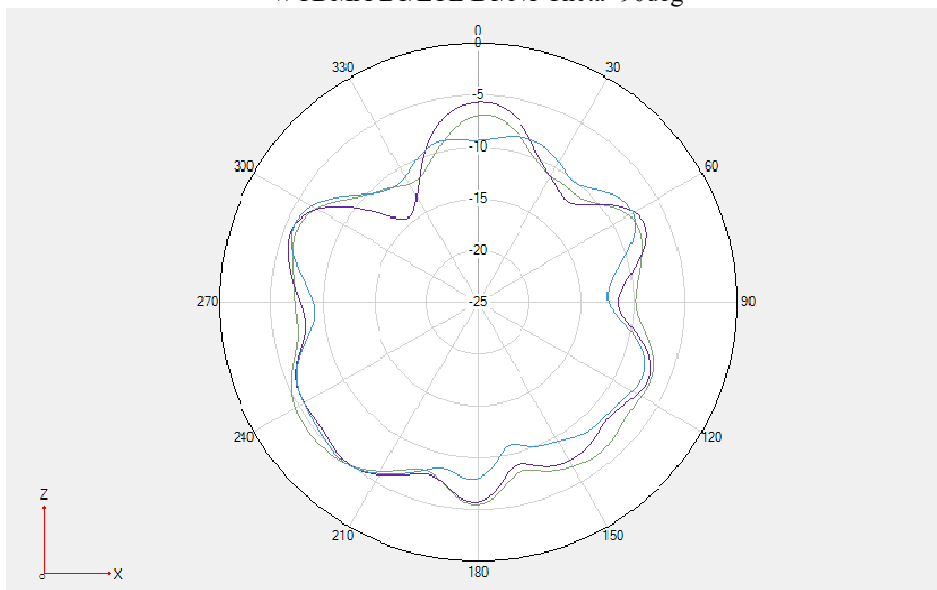


PCS/WCDMA B2/LTE B2 $\Phi=0^\circ$

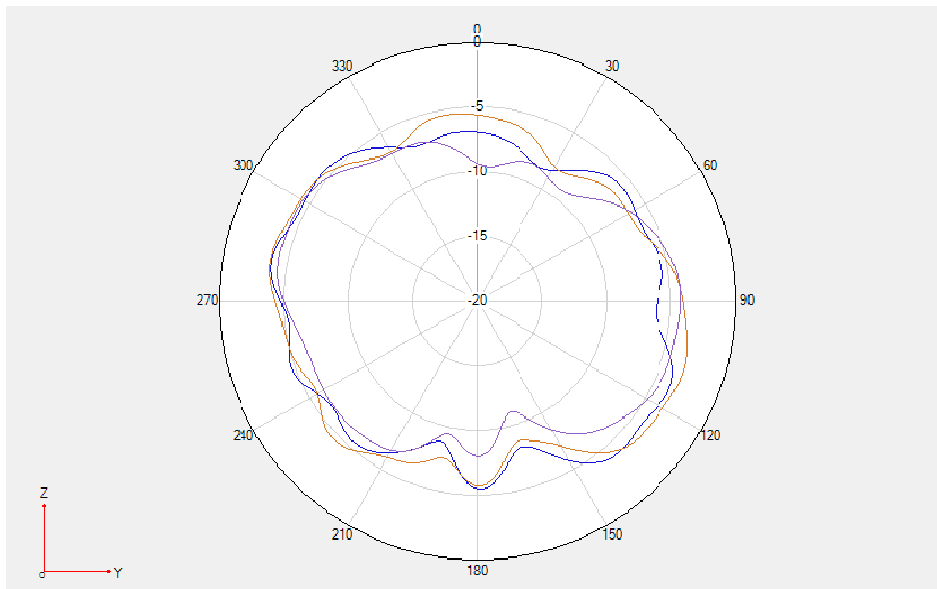


PCS/WCDMA B2/LTE B2 $\Phi=90^\circ$

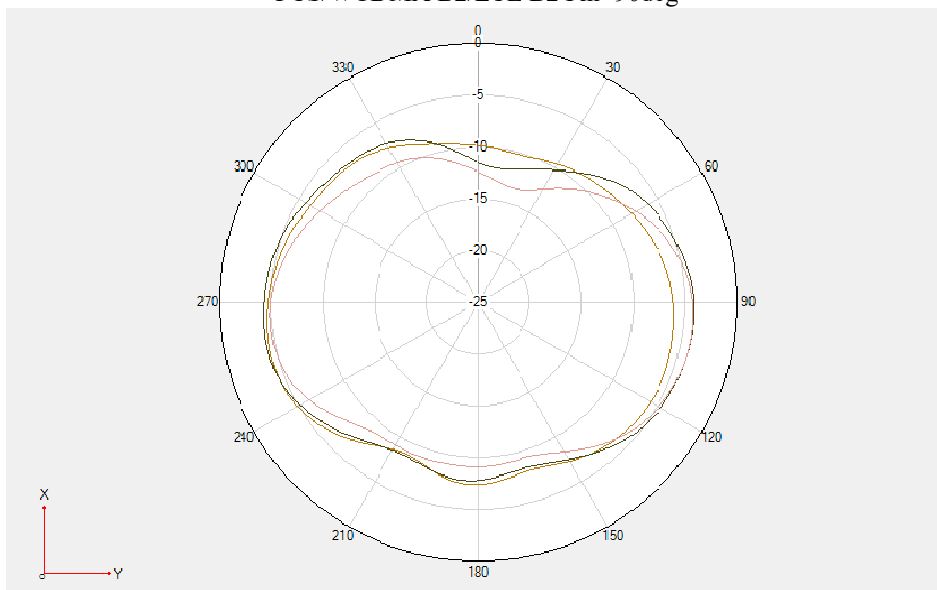


PCS/WCDMA B2/LTE B2 $\Theta=90^\circ$

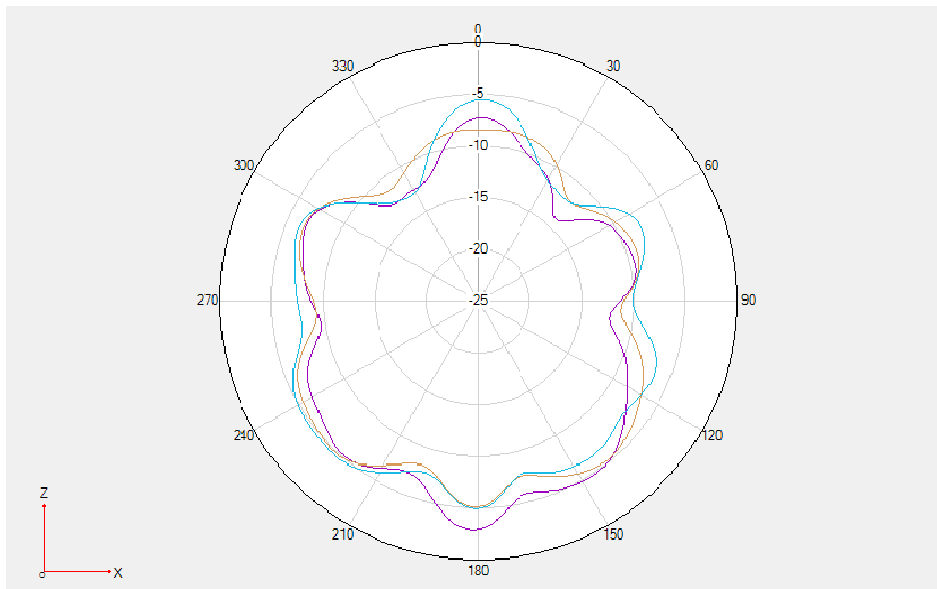


DCS /LTE B3/ N3 $\Phi=0^\circ$

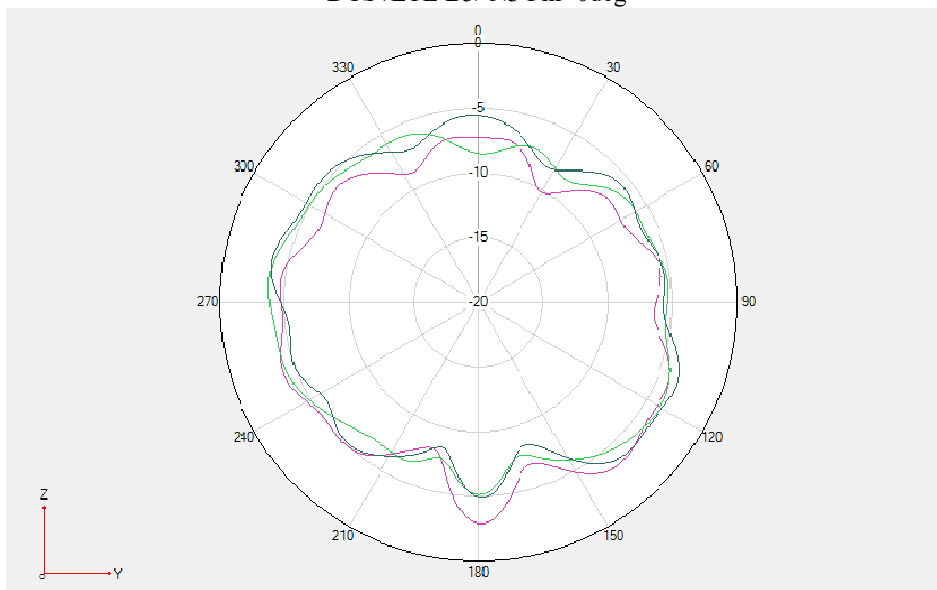


DCS /LTE B3/ N3 $\Phi=90^\circ$

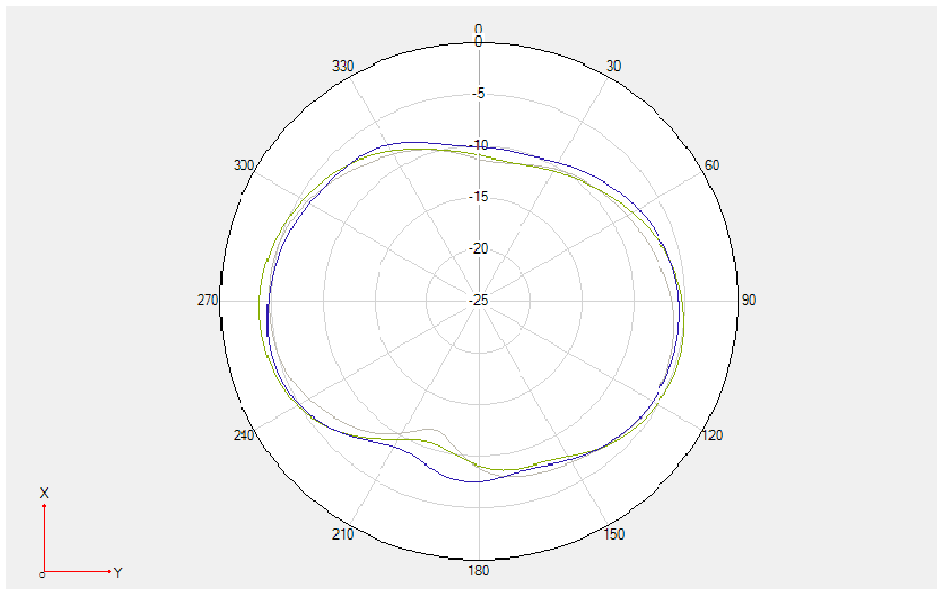


DCS /LTE B3/ N3 Theta=90deg

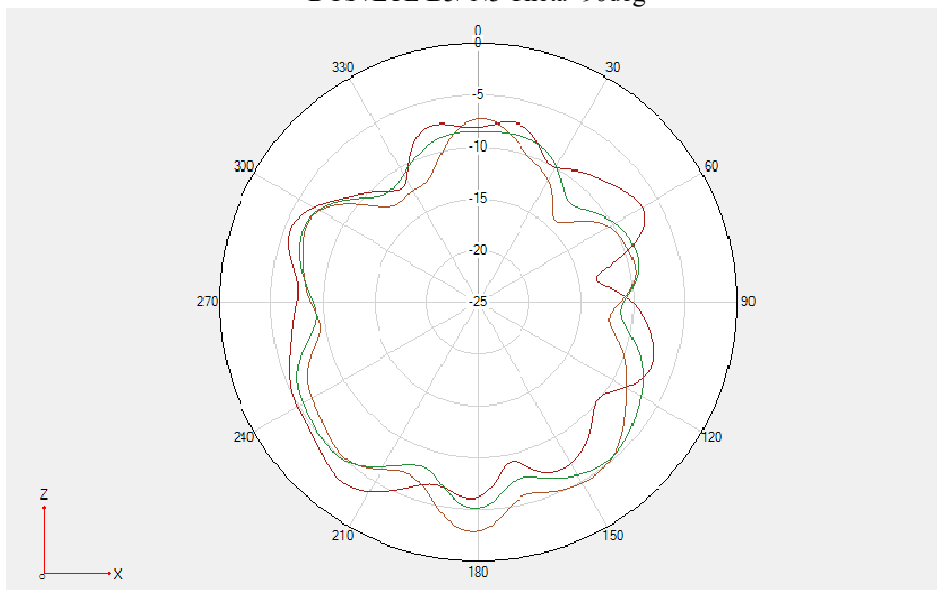


WCDMA B4/LTE B4/B66/N66 Phi=0deg

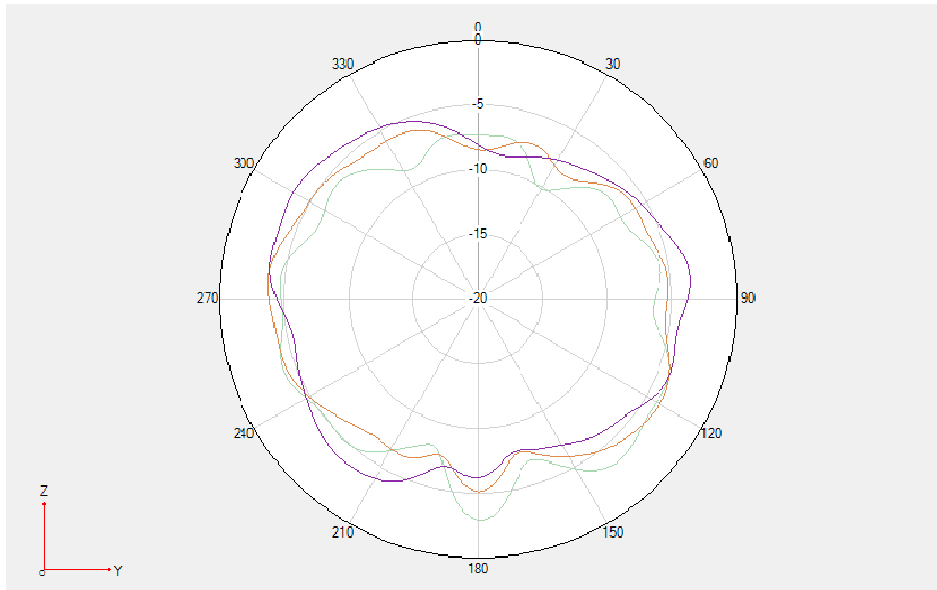


WCDMA B4/LTE B4/B66/N66 $\Phi = 90^\circ$

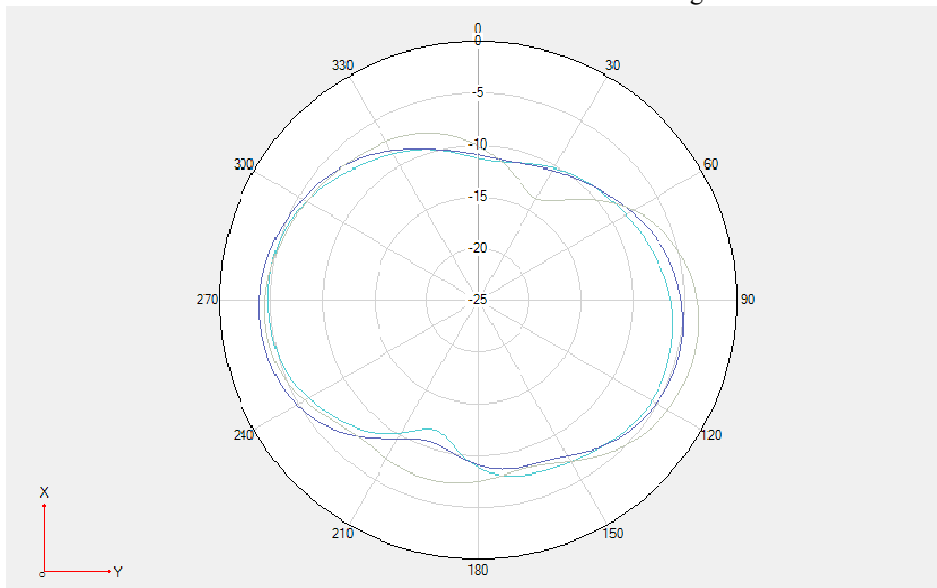


WCDMA B4/LTE B4/B66/N66 $\Theta = 90^\circ$

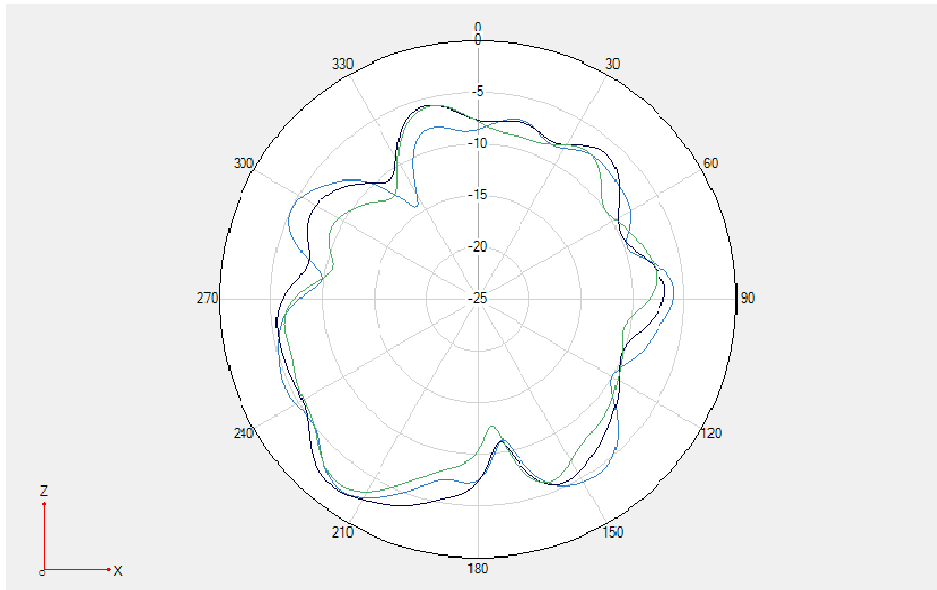


LTE B7/B41/N7/N41 $\Phi=0^\circ$

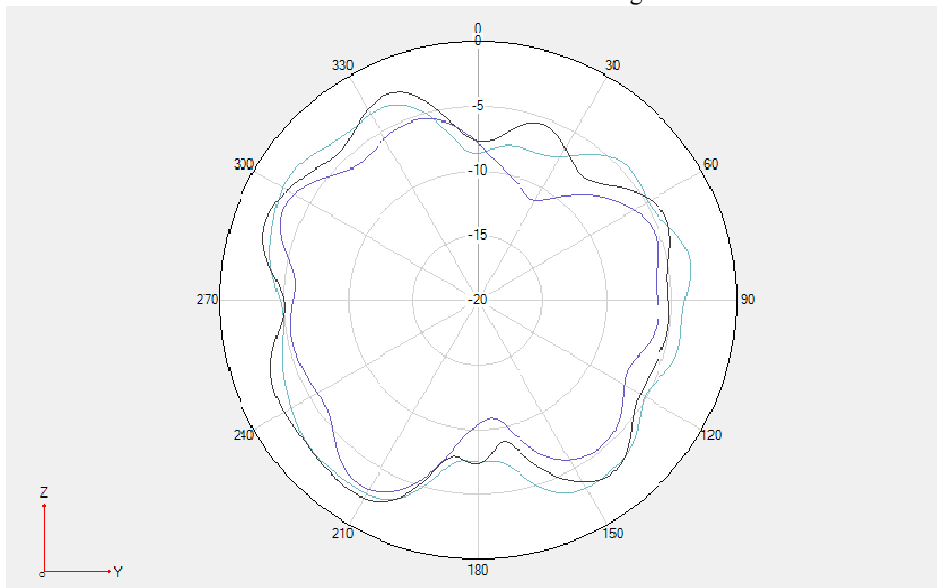


LTE B7/B41/N7/N41 $\Phi=90^\circ$

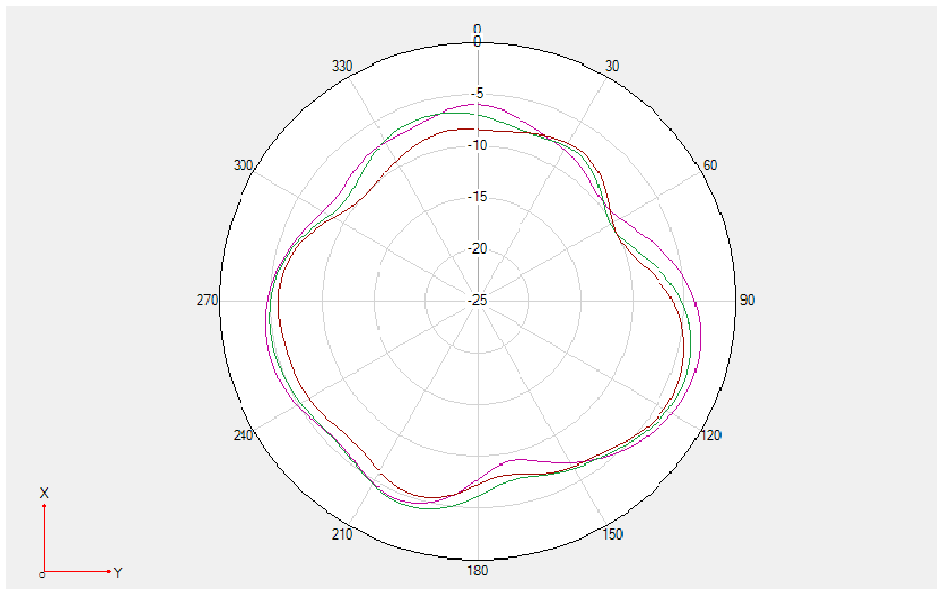


LTE B7/B41/N7/N41 Theta=90deg

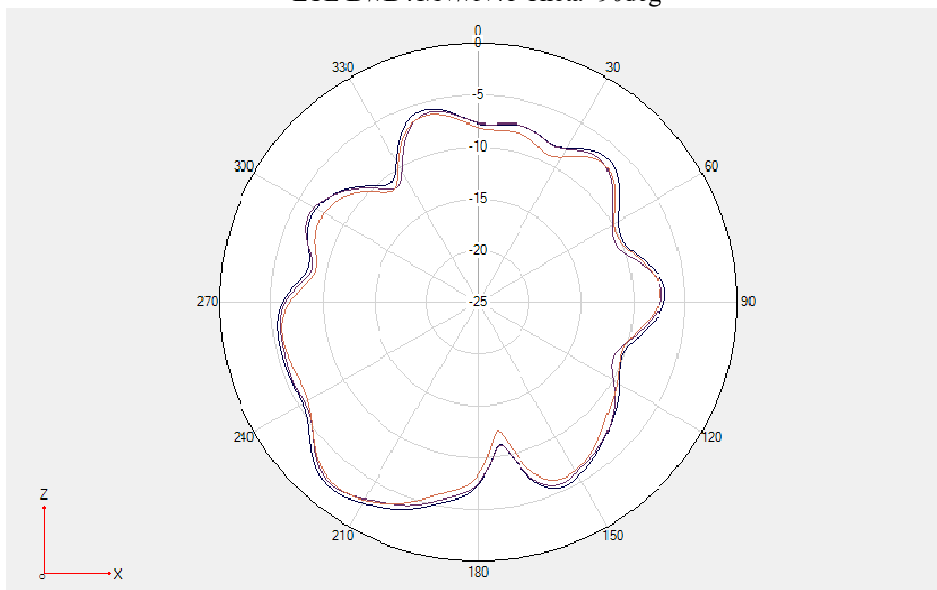


LTE B38/N38 Phi=0deg

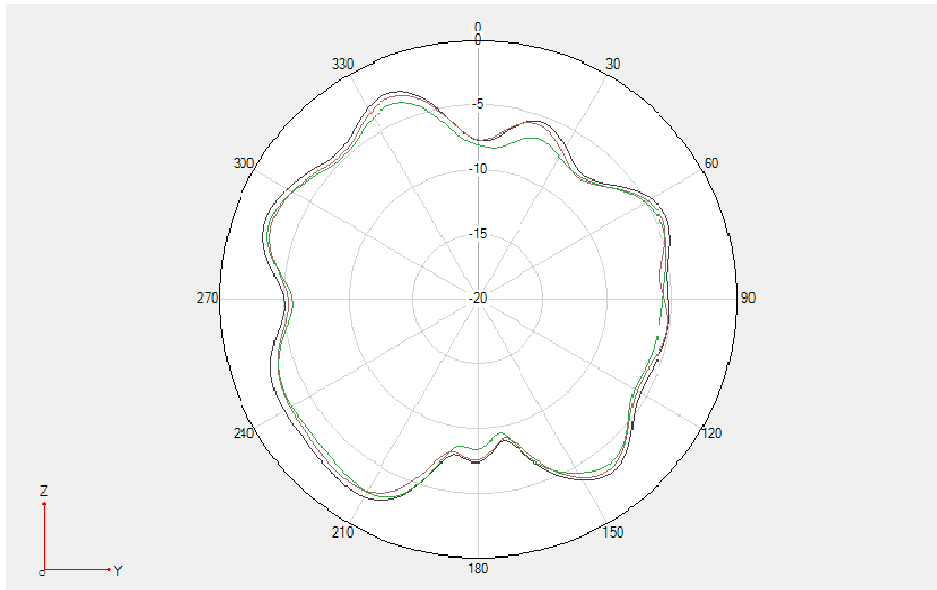


LTE B38/N38 $\Phi=90^\circ$

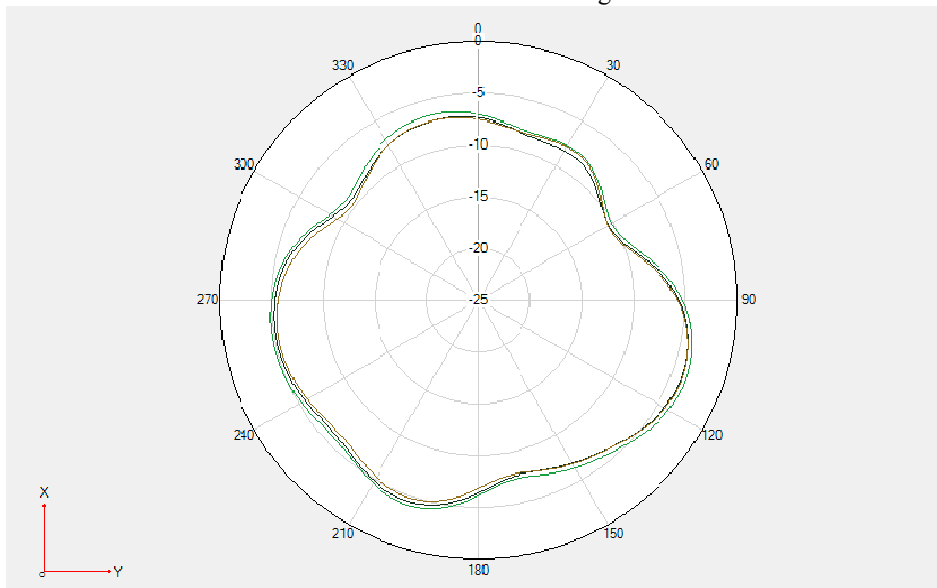

LTE B38/N38 $\Theta=90^\circ$

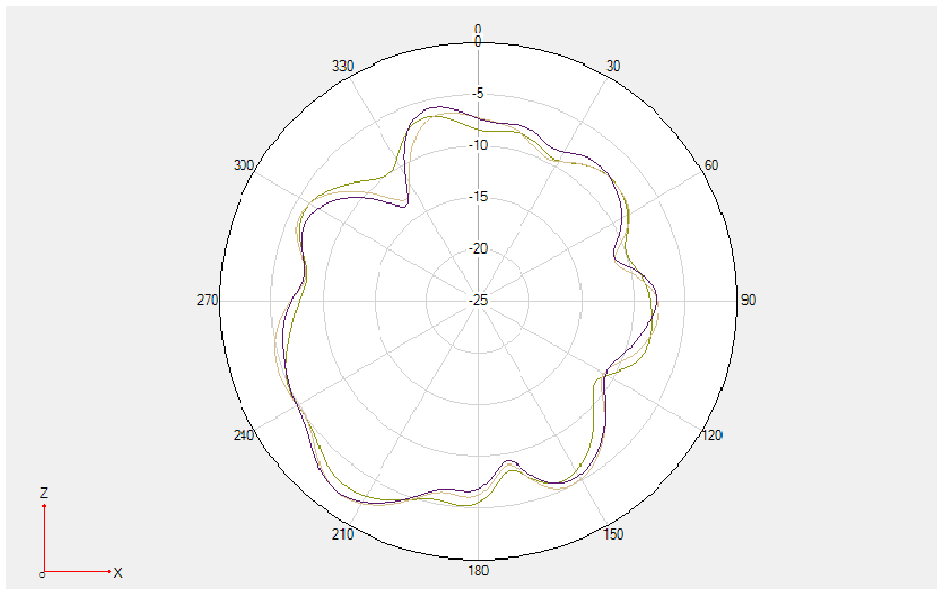

LTE B40/N40 $\Phi=0^\circ$

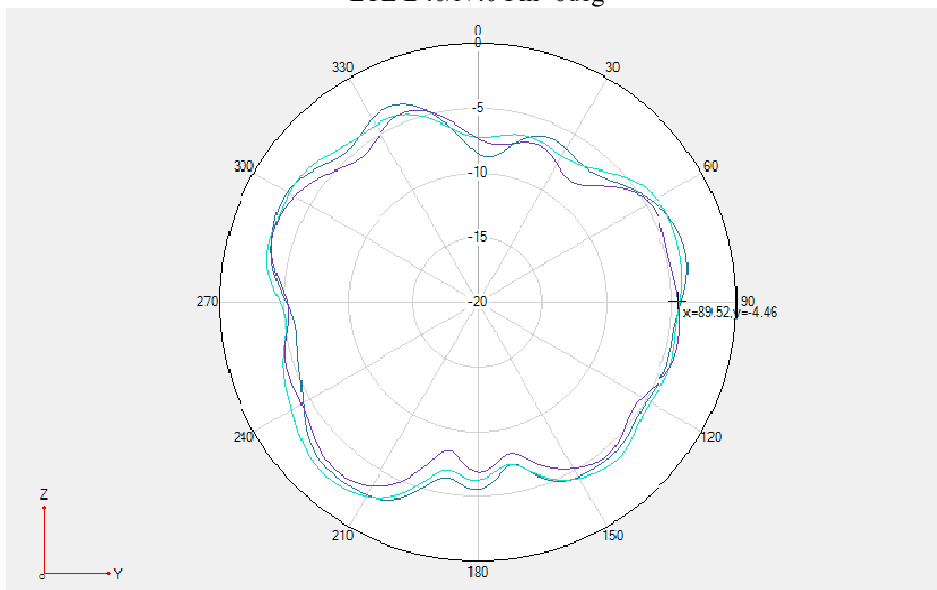

LTE B40/N40 $\Phi=90^\circ$