

Quick Installation Guide

NEED TECH HELP?

-  www.cudy.com/qv_vg_wr
-  www.cudy.com
-  support@cudy.com
-  www.cudy.com/download



810600257

1 Turn off the modem, and remove the battery if it has one.

2 Connect Cudy's **WAN** port to your ISP modem.



3 Turn on the modem and then wait about 2 minutes for it to restart.

4 Connect the power adapter to the router and wait for the "System" LED indicator light to turn solid on.

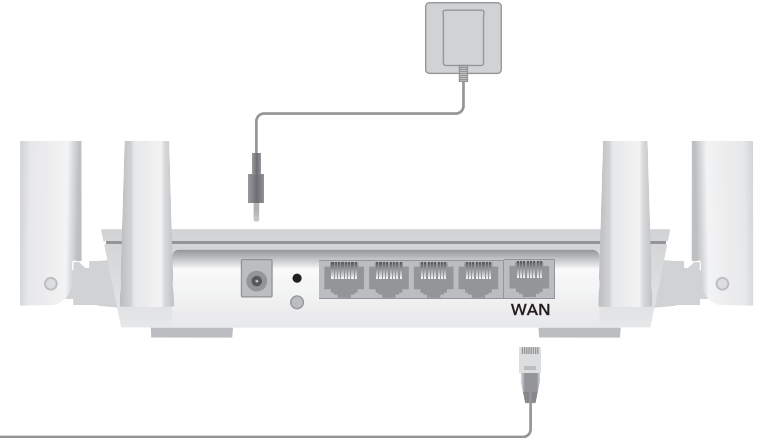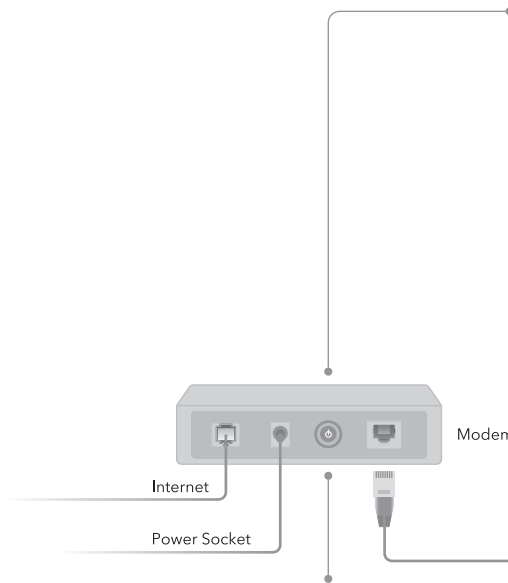

5 Connect the router via **A** or **B** method.

A Wi-Fi: Connect your device to the router's Wi-Fi using the SSID (network name) and Password printed on the bottom of the router.

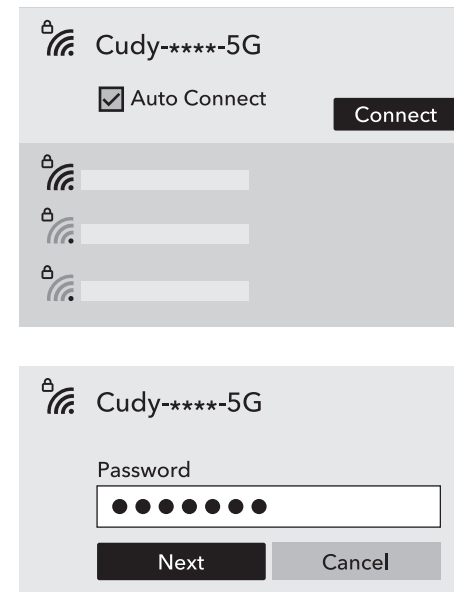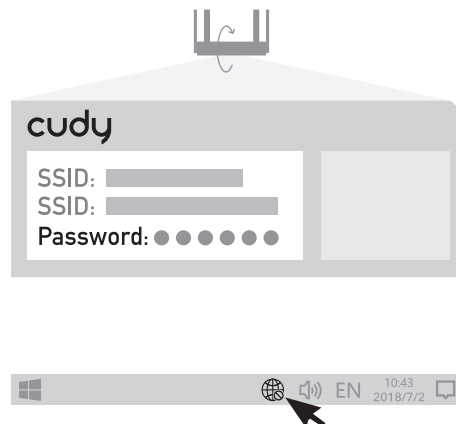

Go to step 6 and continue.

B Wired: Turn off the Wi-Fi on your computer and connect it to the router's **LAN** port via an Ethernet cable.

