



Photograph 1: Set-up for Conducted Emission on AC Mains


Photograph 2: Set-up for Radiated Emission, below 1GHz

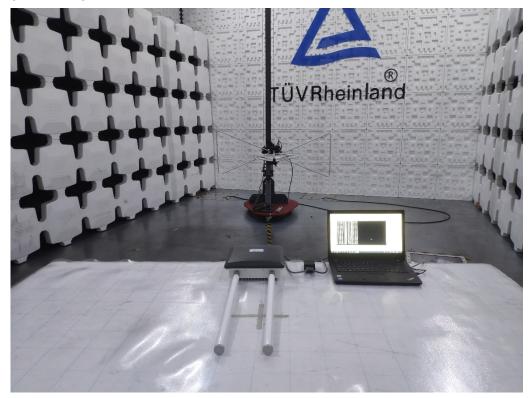




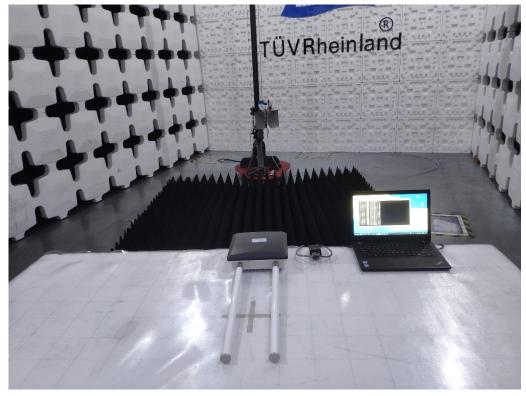

Photograph 4: Set-up for Radiated Spurious Emission, below 1GHz

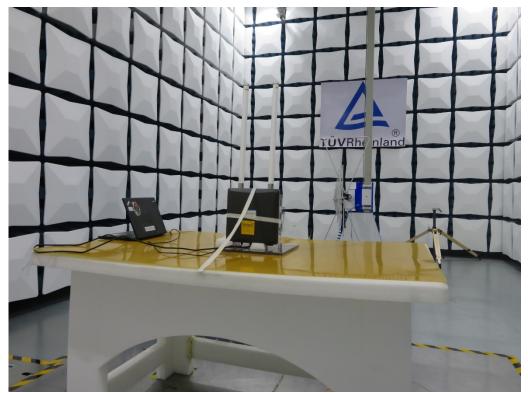

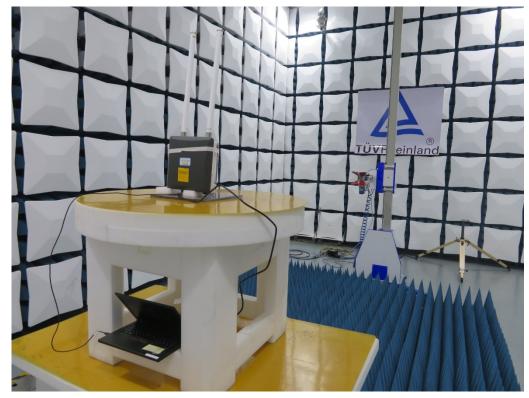

Photograph 5: Set-up for Radiated Spurious Emission, above 1GHz