

TEST SETUP PHOTOS

for Part 24

Occupied Bandwidth, Conducted Power Measurement, Spurious Emission At Antenna Terminals (+/- 1MHz), Conducted Spurious Emission Measurement Setup








Frequency Stability Under Temperature & Voltage Variations Setup





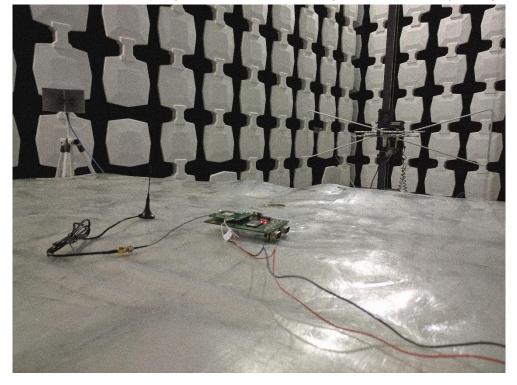


ERP Test, Radiated Spurious Measurement(30MHz to 1GHz) Setup

Radiated Spurious Measurement (Above 1GHz), EIRP Test Setup





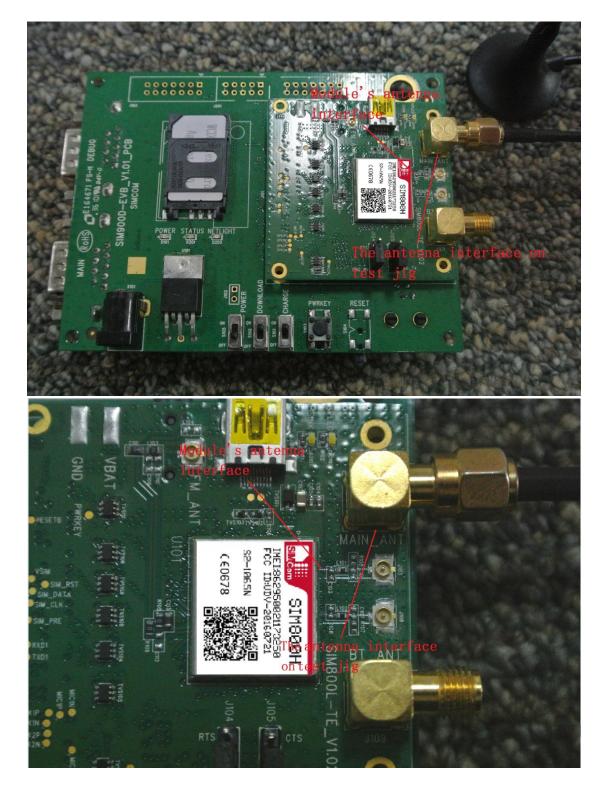

Zoom in test setup photo