

## 1.1 Set-up for Conducted Emissions



## 1.2 Set-up for Conducted RF test at Antenna Port



### 1.3 Set-up for Spurious Emissions below 1GHz




Below 1 GHz

### 1.4 Set-up for Spurious Emissions above 1GHz



Above 1 GHz

**1.5 Set-up for Spurious Emissions below 30MHz**

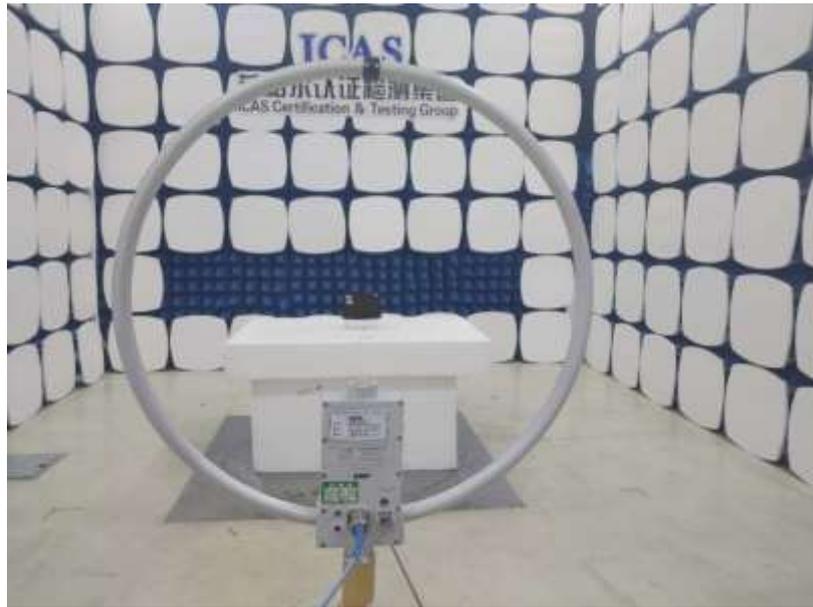

**1.6 Set-up for Spurious Emissions above 30MHz**

