


TEST SETUP PHOTOS

for Part 22&24

Occupied Bandwidth, Conducted Power Measurement, Spurious Emission At Antenna Terminals (+/- 1MHz), Conducted Spurious Emission Measurement Setup

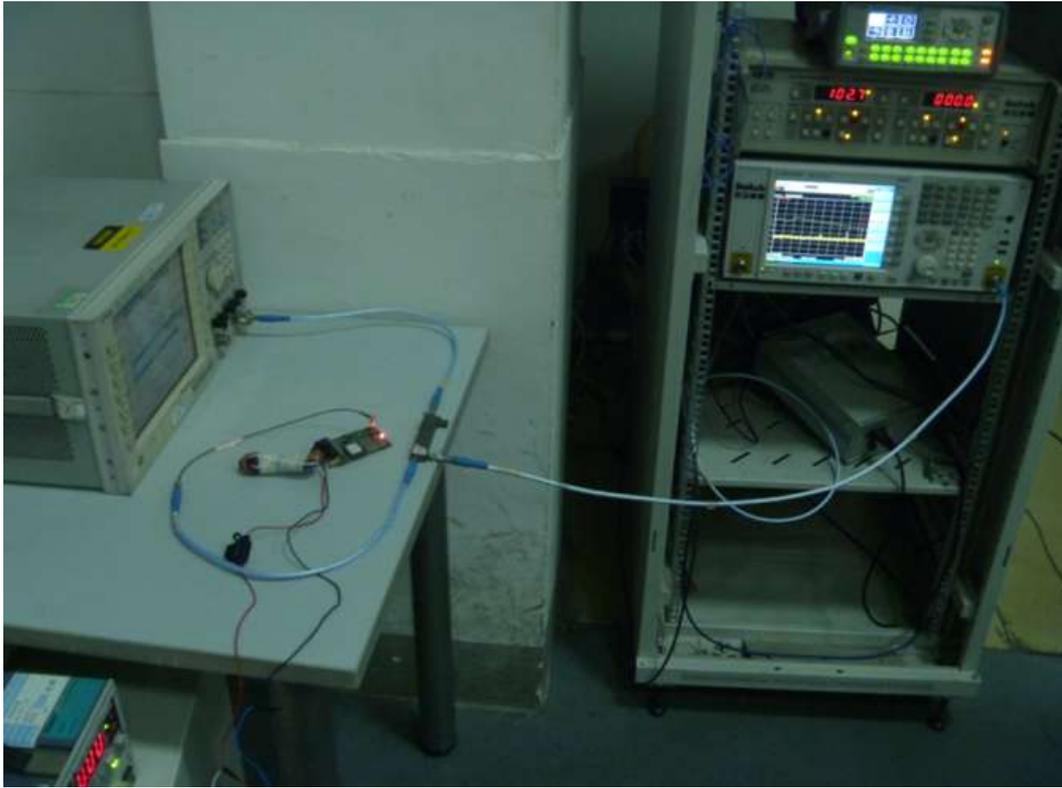



Frequency Stability Under Temperature & Voltage Variations Setup



ERP Test, Radiated Spurious Measurement(Blow 30MHz) Setup



ERP Test, Radiated Spurious Measurement(30MHz to 1GHz) Setup



EIRP Test, Radiated Spurious Measurement (Above 1GHz) Setup

