

062333f




RBW 3 MHz
*VBW 3 MHz
SWT 100 ms

Ref -20 dBm

Att 10 dB

1 PK *
CLRWR

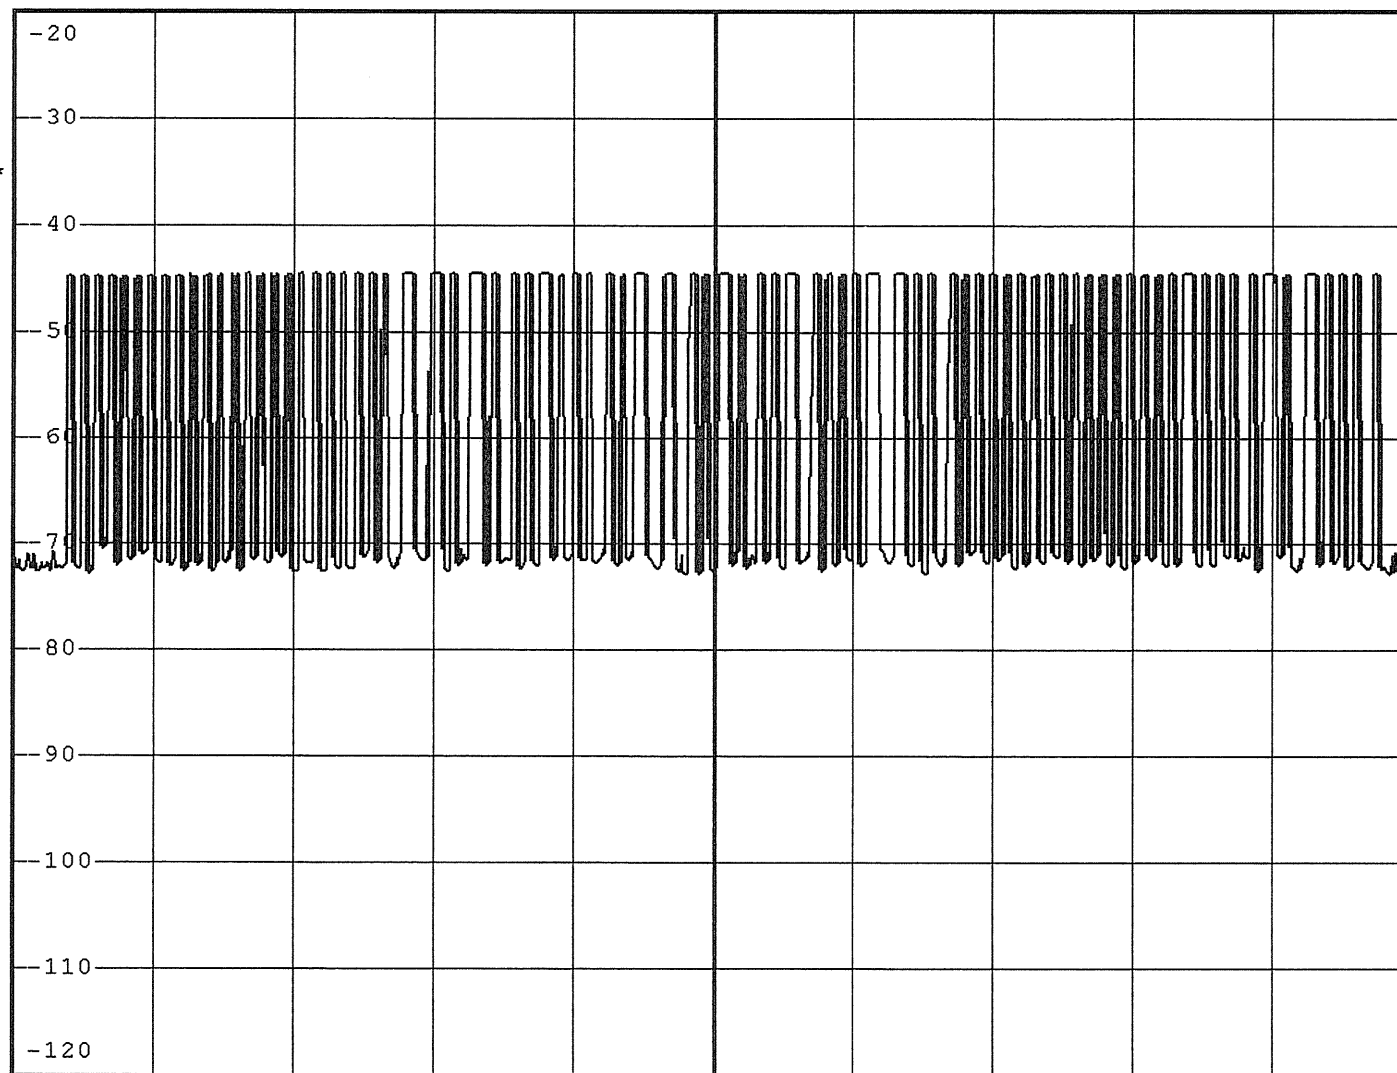

Center 433.8957666 MHz

10 ms/

 Duty Cycle

SGL = 0.5

Average Factor

$= 20 \log 0.5$

$= -6.0 \text{ dB}$

0623338




RBW 3 MHz
*VBW 3 MHz
SWT 20 ms

Ref -20 dBm

Att 10 dB

1 PK*
CLRWR

SGL

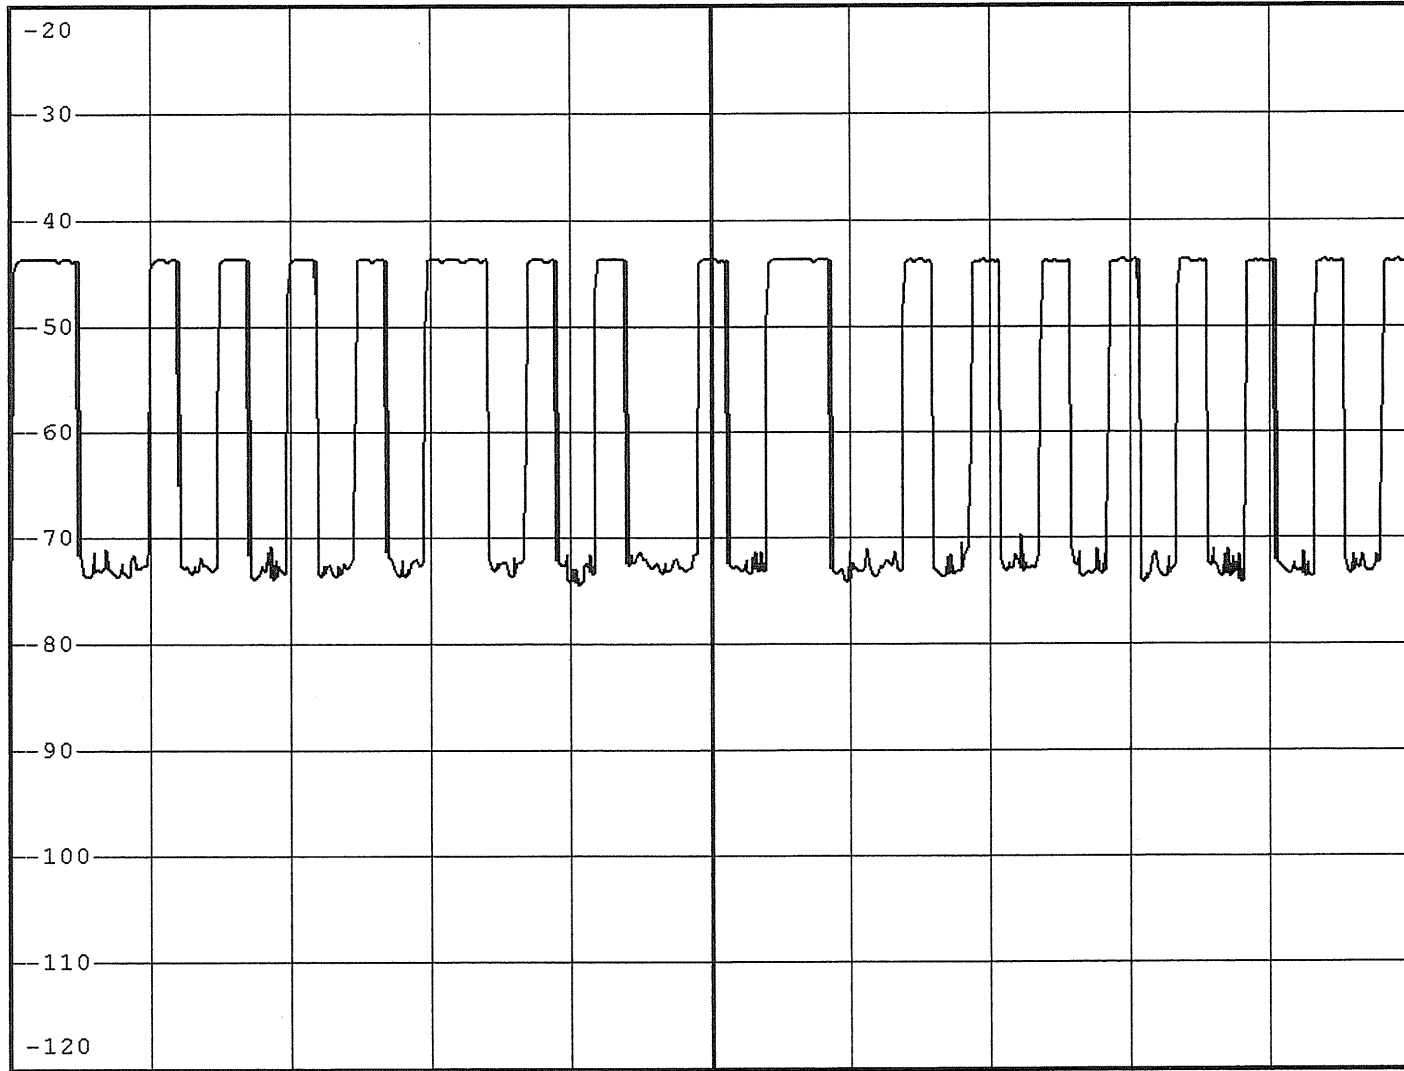

Center 433.8957666 MHz

2 ms/

0623338



RBW 3 MHz

*VBW 3 MHz


Ref -20 dBm

Att 10 dB

SWT 10 ms

1 PK *
CLRWR

SGI

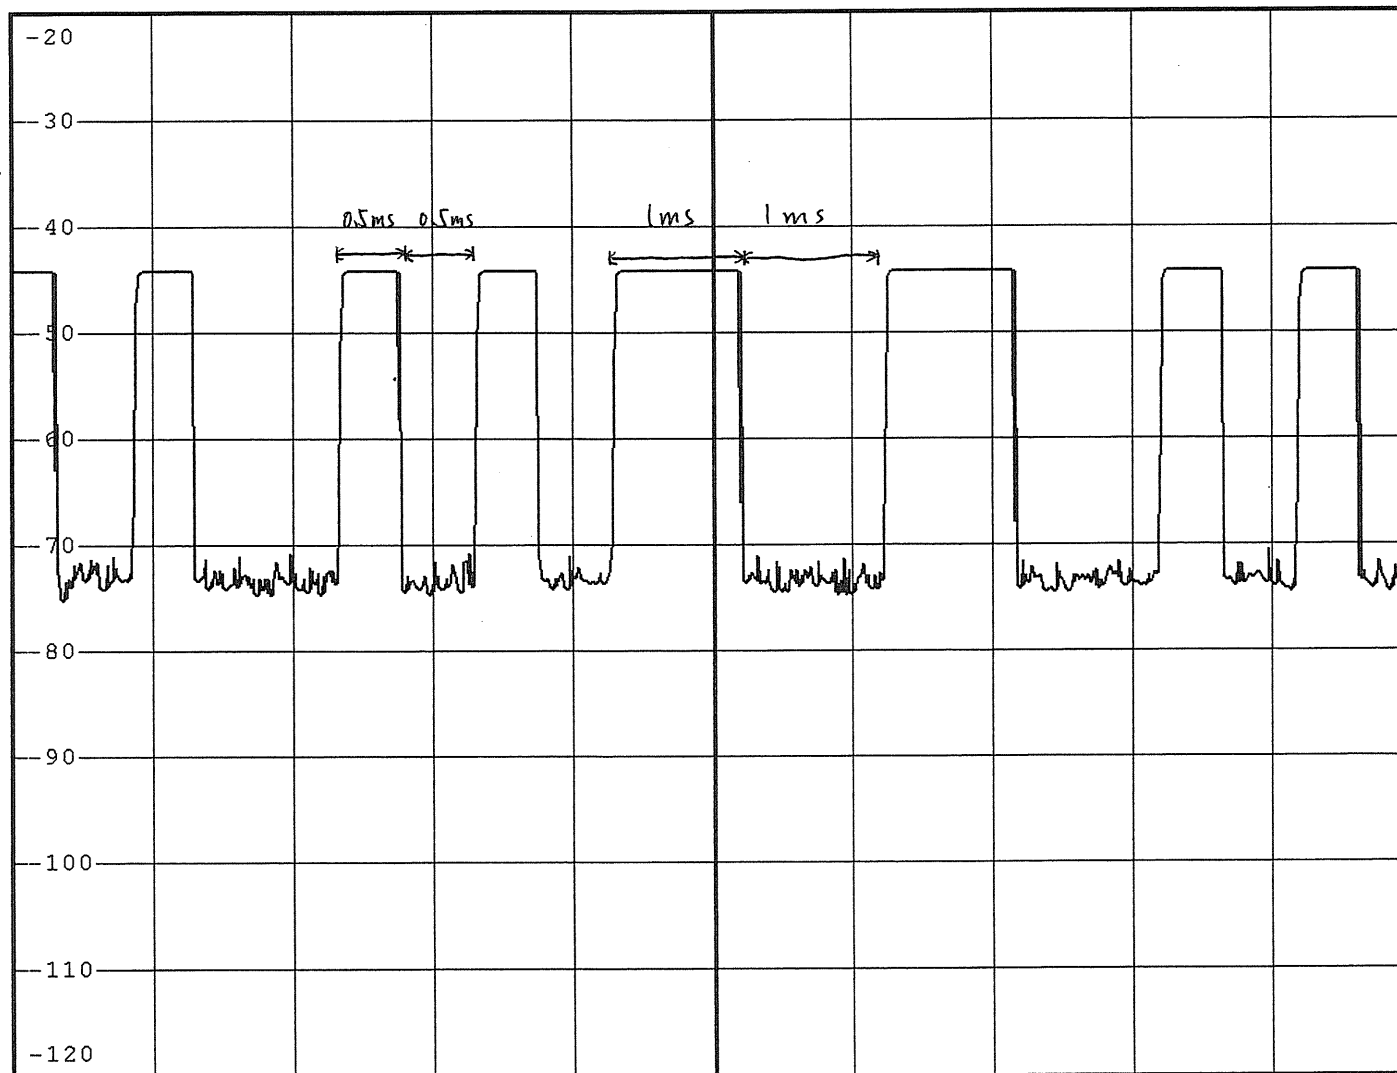

Center 433.8957666 MHz

1 ms/

062338




RBW 3 MHz Marker 1 [T1]
*VBW 3 MHz -43.77 dBm
SWT 200 ms 93.200000 ms

Ref -20 dBm

Att 10 dB

1 PK *
CLRWR

SGL

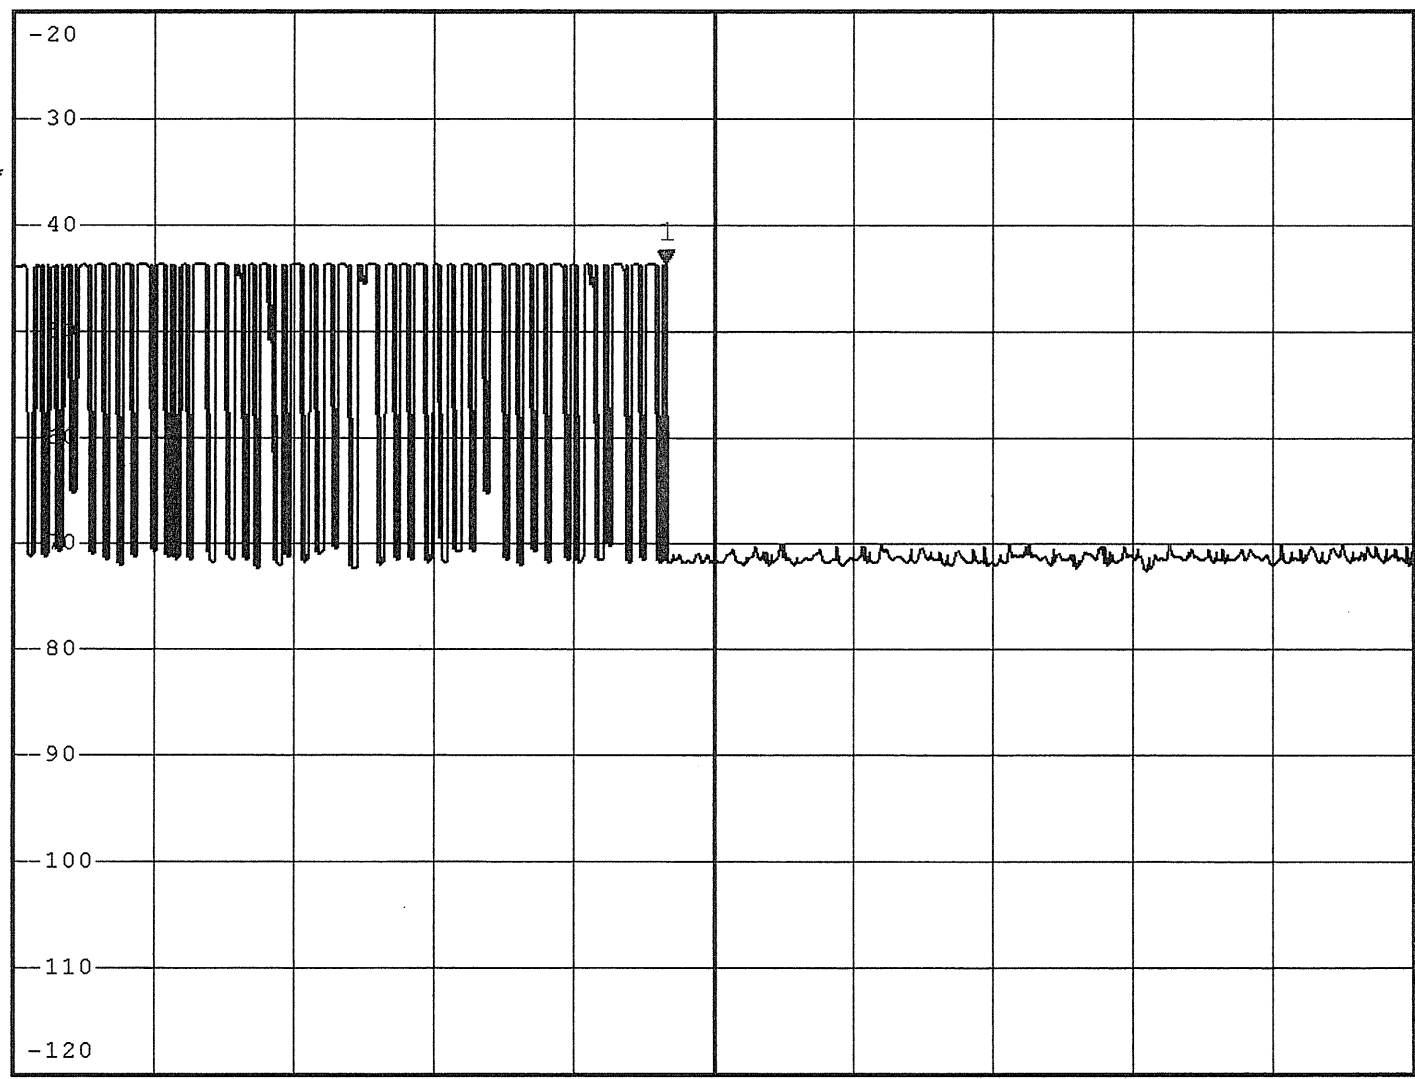

Center 433.8957666 MHz

20 ms/

0623338

