


Wireless 11abg MiniPCI Adapter SX - 10WAG Label Location

Module

EMI Label

should be shieled on a board, not to ☐ cover holes and not to stick out.

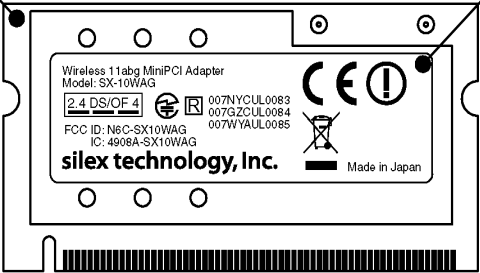

Labe Location