





11N40MIMO-Ant0-5755-PASS

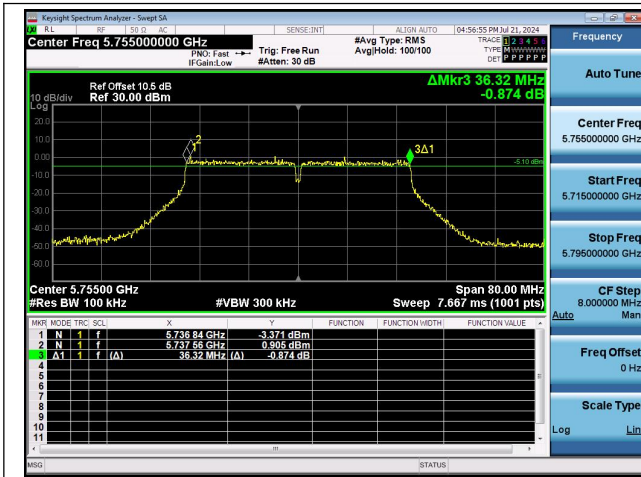


11N40MIMO-Ant1-5755-PASS

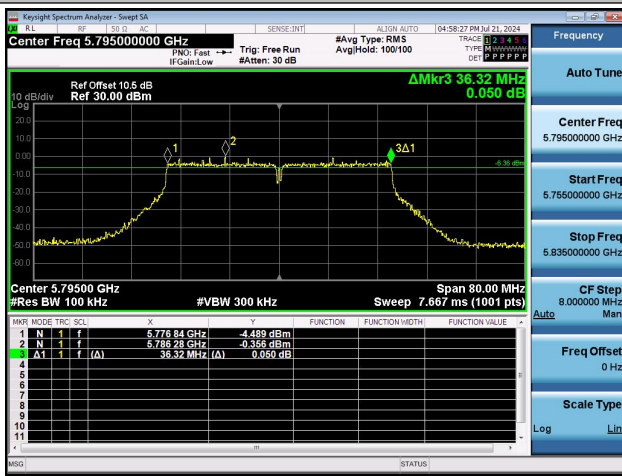


11N40MIMO-Ant0-5795-PASS



11N40MIMO-Ant1-5795-PASS

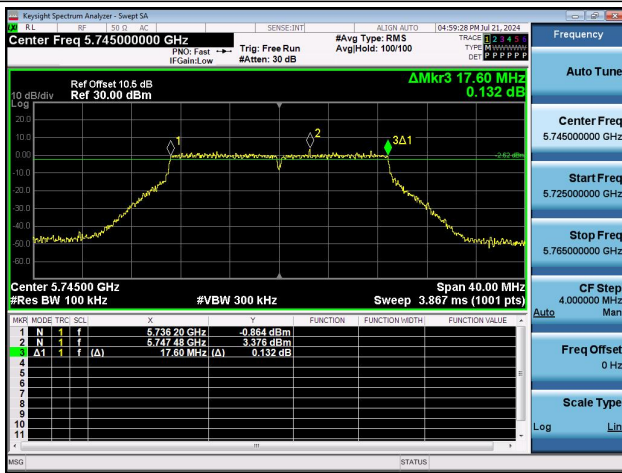


11A20MIMO-Ant0-5745-PASS

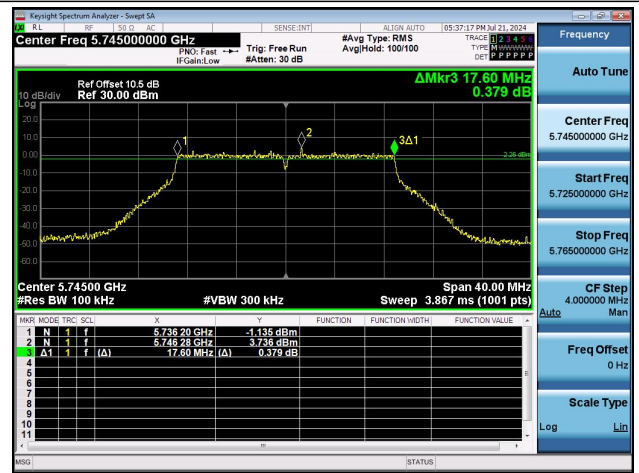


11A20MIMO-Ant1-5745-PASS




11AC20MIMO-Ant0-5785-PASS

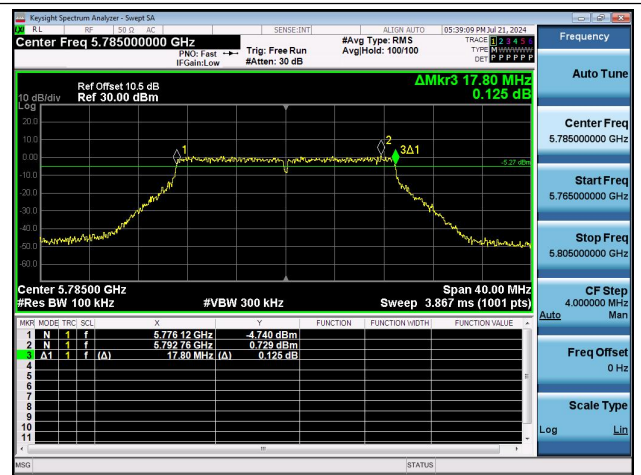


11AC20MIMO-Ant1-5785-PASS

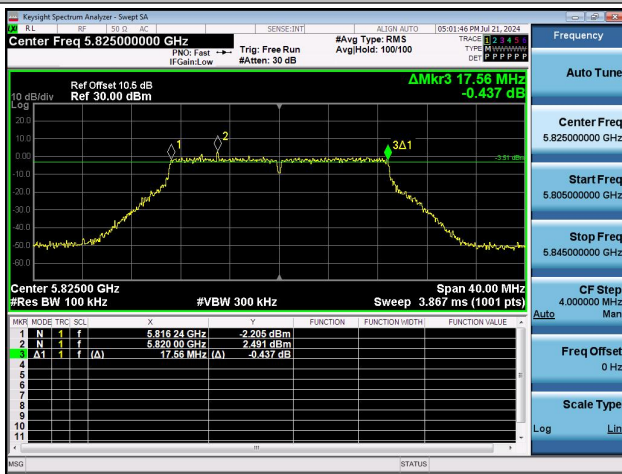

11AC20MIMO-Ant0-5825-PASS

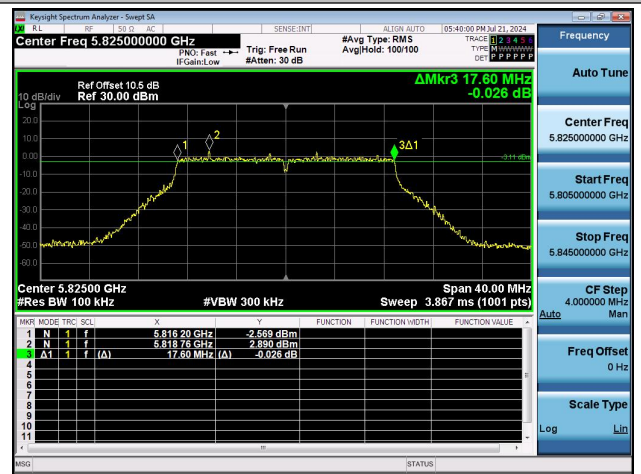

11AC20MIMO-Ant1-5825-PASS

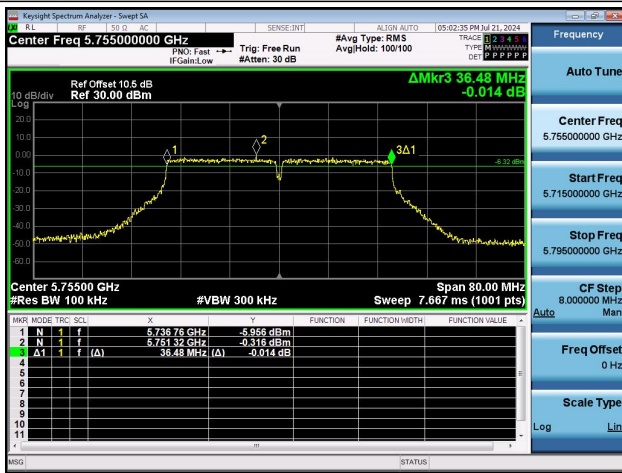

11AC40MIMO-Ant0-5755-PASS



11AC40MIMO-Ant1-5755-PASS




11AC40MIMO-Ant0-5795-PASS




11AC40MIMO-Ant1-5795-PASS




11AC80MIMO-Ant0-5775-PASS

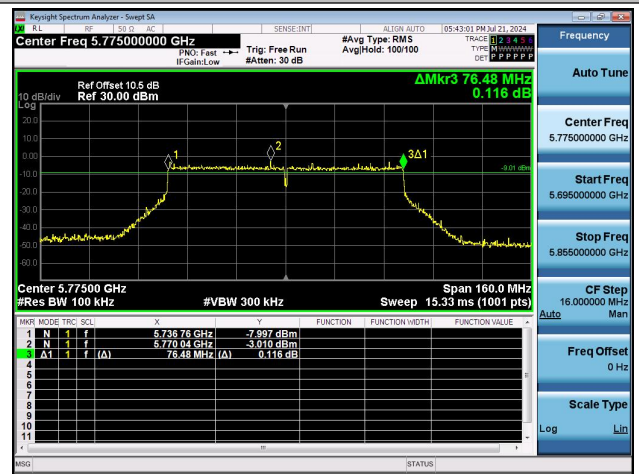

11AC80MIMO-Ant1-5775-PASS

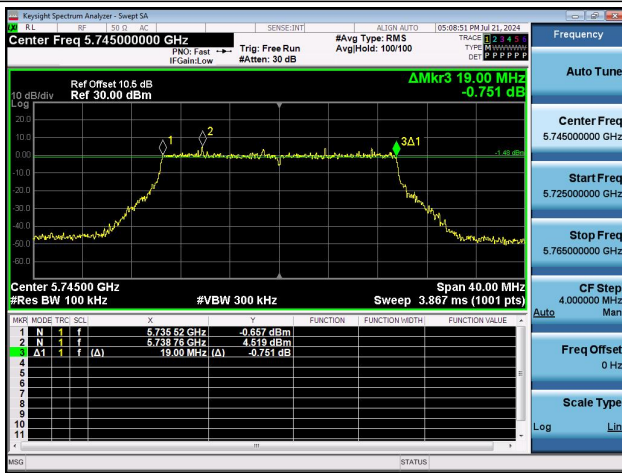


11AX20MIMO-Ant0-5745-PASS

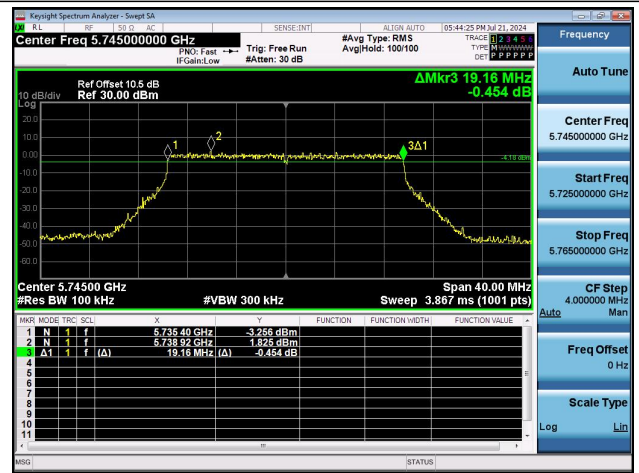


11AX20MIMO-Ant1-5745-PASS




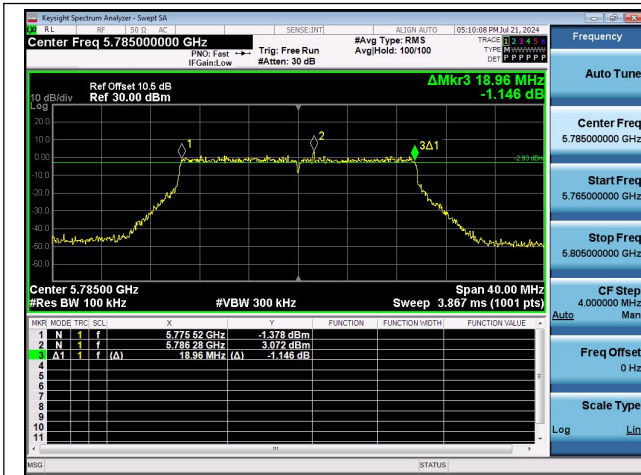


11AX20MIMO-Ant0-5785-PASS

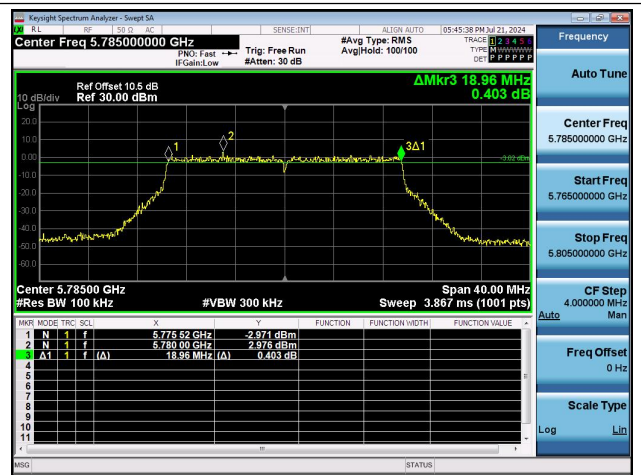


11AX20MIMO-Ant1-5785-PASS

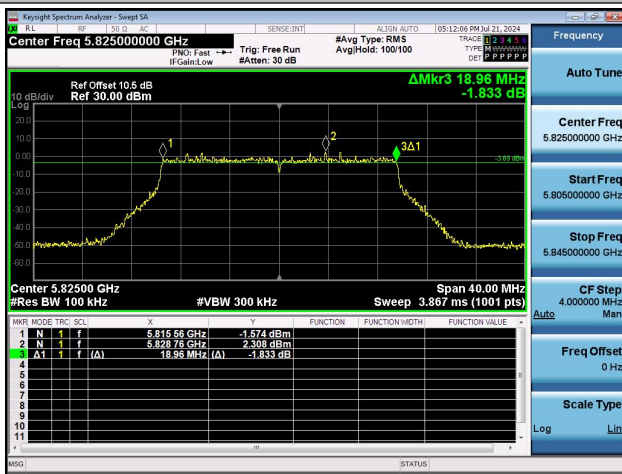


11AX20MIMO-Ant0-5825-PASS

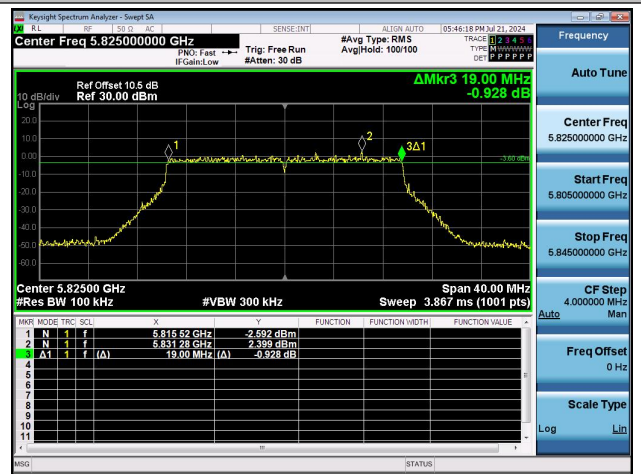


11AX20MIMO-Ant1-5825-PASS

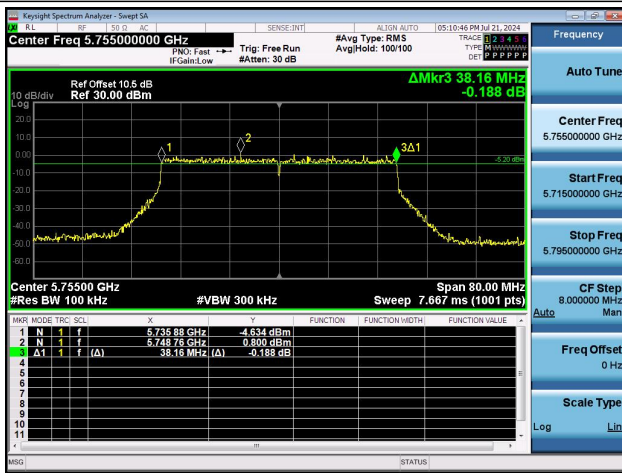


11AX40MIMO-Ant0-5755-PASS

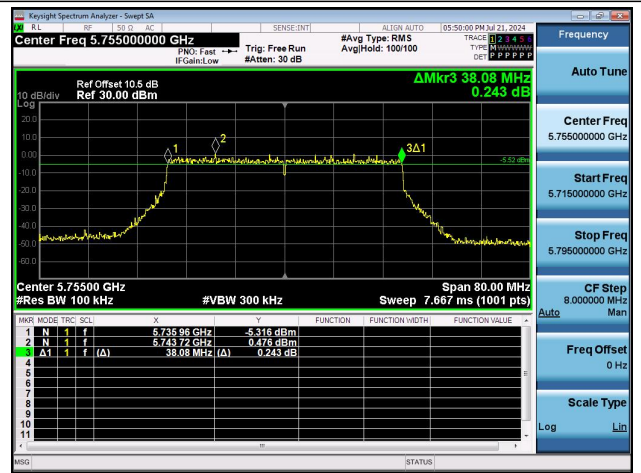


11AX40MIMO-Ant1-5755-PASS

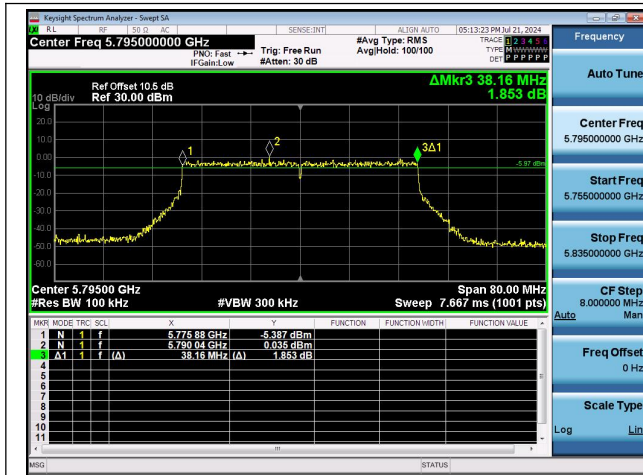


11AX40MIMO-Ant0-5795-PASS

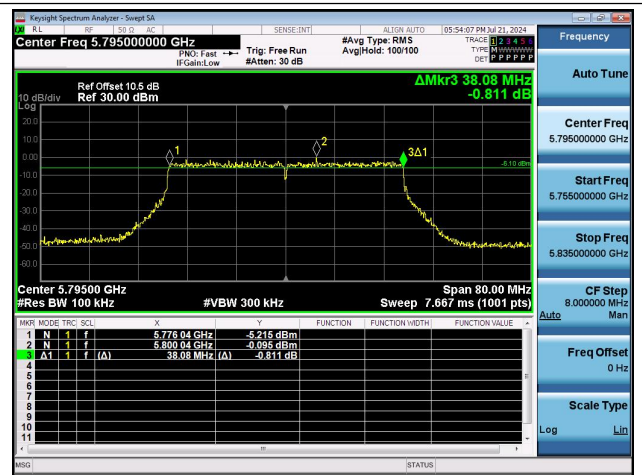

11AX40MIMO-Ant1-5795-PASS

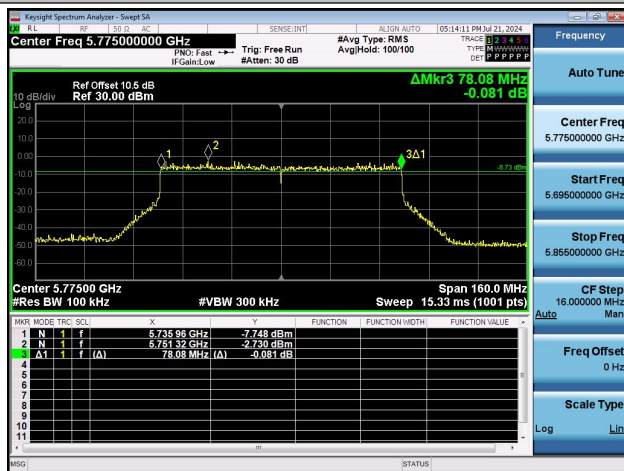

11AX80MIMO-Ant0-5775-PASS

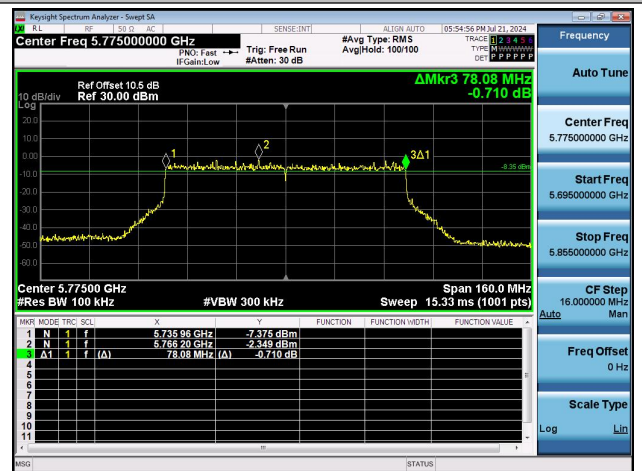

11AX80MIMO-Ant1-5775-PASS



## Frequency Stability Test Result and Data

| TestMode | Antenna | Frequency[MHz] | Voltage[Vdc] | Temperature(°C) | Deviation(Hz) | Deviation(ppm) | Limit(ppm) | Verdict |
|----------|---------|----------------|--------------|-----------------|---------------|----------------|------------|---------|
| 11A      | Ant0    | 5180           | NV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5180           | LV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5180           | HV           | NT              | 20000.00      | 3.861004       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | LV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | HV           | NT              | 0.00          | 0.000000       | 20         | PASS    |

| TestMode | Antenna | Frequency[MHz] | Voltage[Vdc] | Temperature(°C) | Deviation(Hz) | Deviation(ppm) | Limit(ppm) | Verdict |
|----------|---------|----------------|--------------|-----------------|---------------|----------------|------------|---------|
| 11A      | Ant0    | 5180           | NV           | -30             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5180           | NV           | -20             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5180           | NV           | -10             | 20000.00      | 3.861004       | 20         | PASS    |
| 11A      | Ant0    | 5180           | NV           | 0               | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5180           | NV           | 10              | -20000.00     | -3.861004      | 20         | PASS    |
| 11A      | Ant0    | 5180           | NV           | 20              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5180           | NV           | 30              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5180           | NV           | 40              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5180           | NV           | 50              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | -30             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | -20             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | -10             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | 0               | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | 10              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | 20              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | 30              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | 40              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5180           | NV           | 50              | 0.00          | 0.000000       | 20         | PASS    |

Note 1: All of the EUT Configure Mode were tested, the worst case is recorded in this report.



| TestMode | Antenna | Frequency[MHz] | Voltage[Vdc] | Temperature(°C) | Deviation(Hz) | Deviation(ppm) | Limit(ppm) | Verdict |
|----------|---------|----------------|--------------|-----------------|---------------|----------------|------------|---------|
| 11A      | Ant0    | 5260           | NV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5260           | LV           | NT              | 20000.00      | 3.802281       | 20         | PASS    |
| 11A      | Ant0    | 5260           | HV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | LV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | HV           | NT              | 0.00          | 0.000000       | 20         | PASS    |

| TestMode | Antenna | Frequency[MHz] | Voltage[Vdc] | Temperature(°C) | Deviation(Hz) | Deviation(ppm) | Limit(ppm) | Verdict |
|----------|---------|----------------|--------------|-----------------|---------------|----------------|------------|---------|
| 11A      | Ant0    | 5260           | NV           | -30             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5260           | NV           | -20             | 20000.00      | 3.802281       | 20         | PASS    |
| 11A      | Ant0    | 5260           | NV           | -10             | 20000.00      | 3.802281       | 20         | PASS    |
| 11A      | Ant0    | 5260           | NV           | 0               | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5260           | NV           | 10              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5260           | NV           | 20              | -20000.00     | -3.802281      | 20         | PASS    |
| 11A      | Ant0    | 5260           | NV           | 30              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5260           | NV           | 40              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5260           | NV           | 50              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | -30             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | -20             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | -10             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | 0               | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | 10              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | 20              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | 30              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | 40              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5260           | NV           | 50              | 0.00          | 0.000000       | 20         | PASS    |

Note 1: All of the EUT Configure Mode were tested, the worst case is recorded in this report.



| TestMode | Antenna | Frequency[MHz] | Voltage[Vdc] | Temperature(°C) | Deviation(Hz) | Deviation(ppm) | Limit(ppm) | Verdict |
|----------|---------|----------------|--------------|-----------------|---------------|----------------|------------|---------|
| 11A      | Ant0    | 5500           | NV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5500           | LV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5500           | HV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5500           | LV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5500           | HV           | NT              | 0.00          | 0.000000       | 20         | PASS    |

| TestMode | Antenna | Frequency[MHz] | Voltage[Vdc] | Temperature(°C) | Deviation(Hz) | Deviation(ppm) | Limit(ppm) | Verdict |
|----------|---------|----------------|--------------|-----------------|---------------|----------------|------------|---------|
| 11A      | Ant0    | 5500           | NV           | -30             | 20000.00      | 3.636364       | 20         | PASS    |
| 11A      | Ant0    | 5500           | NV           | -20             | 20000.00      | 3.636364       | 20         | PASS    |
| 11A      | Ant0    | 5500           | NV           | -10             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5500           | NV           | 0               | 20000.00      | 3.636364       | 20         | PASS    |
| 11A      | Ant0    | 5500           | NV           | 10              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5500           | NV           | 20              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5500           | NV           | 30              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5500           | NV           | 40              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5500           | NV           | 50              | -20000.00     | -3.636364      | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | -30             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | -20             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | -10             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | 0               | 20000.00      | 3.636364       | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | 10              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | 20              | 20000.00      | 3.636364       | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | 30              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | 40              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5500           | NV           | 50              | 20000.00      | 3.636364       | 20         | PASS    |

Note 1: All of the EUT Configure Mode were tested, the worst case is recorded in this report.






| TestMode | Antenna | Frequency[MHz] | Voltage[Vdc] | Temperature(°C) | Deviation(Hz) | Deviation(ppm) | Limit(ppm) | Verdict |
|----------|---------|----------------|--------------|-----------------|---------------|----------------|------------|---------|
| 11A      | Ant0    | 5745           | NV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5745           | LV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5745           | HV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | LV           | NT              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | HV           | NT              | 0.00          | 0.000000       | 20         | PASS    |

| TestMode | Antenna | Frequency[MHz] | Voltage[Vdc] | Temperature(°C) | Deviation(Hz) | Deviation(ppm) | Limit(ppm) | Verdict |
|----------|---------|----------------|--------------|-----------------|---------------|----------------|------------|---------|
| 11A      | Ant0    | 5745           | NV           | -30             | 20000.00      | 3.481288       | 20         | PASS    |
| 11A      | Ant0    | 5745           | NV           | -20             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5745           | NV           | -10             | -20000.00     | -3.481288      | 20         | PASS    |
| 11A      | Ant0    | 5745           | NV           | 0               | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5745           | NV           | 10              | -20000.00     | -3.481288      | 20         | PASS    |
| 11A      | Ant0    | 5745           | NV           | 20              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5745           | NV           | 30              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5745           | NV           | 40              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant0    | 5745           | NV           | 50              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | -30             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | -20             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | -10             | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | 0               | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | 10              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | 20              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | 30              | -20000.00     | -3.481288      | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | 40              | 0.00          | 0.000000       | 20         | PASS    |
| 11A      | Ant1    | 5745           | NV           | 50              | 0.00          | 0.000000       | 20         | PASS    |


Note 1: All of the EUT Configure Mode were tested, the worst case is recorded in this report.

# Conducted Band Edges

## Test Result and Data

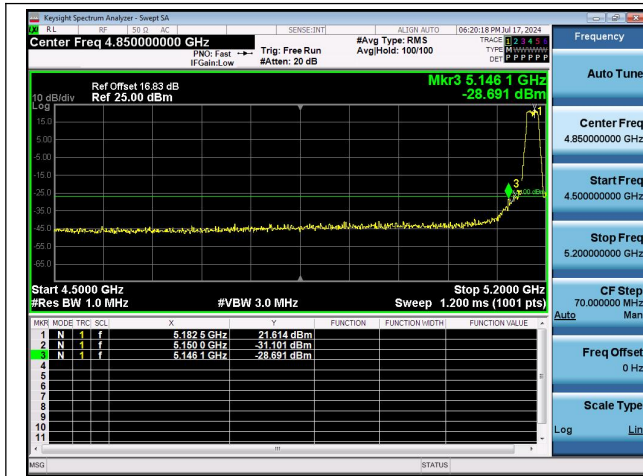


11A-Ant0-5180-PASS

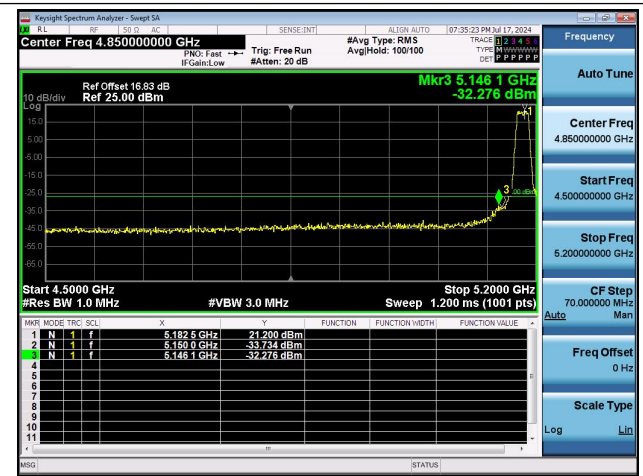


11A-Ant1-5180-PASS




11A-Ant0-5240-PASS

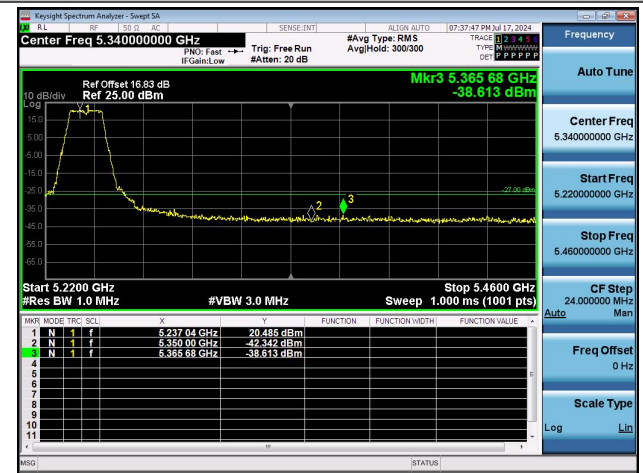

11A-Ant1-5240-PASS

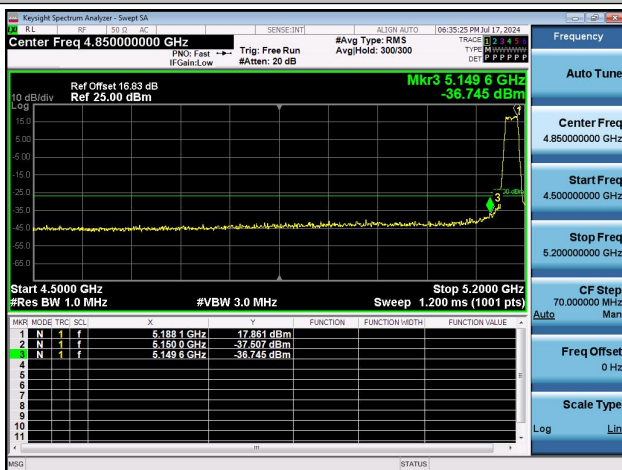

11N20MIMO-Ant0-5180-PASS

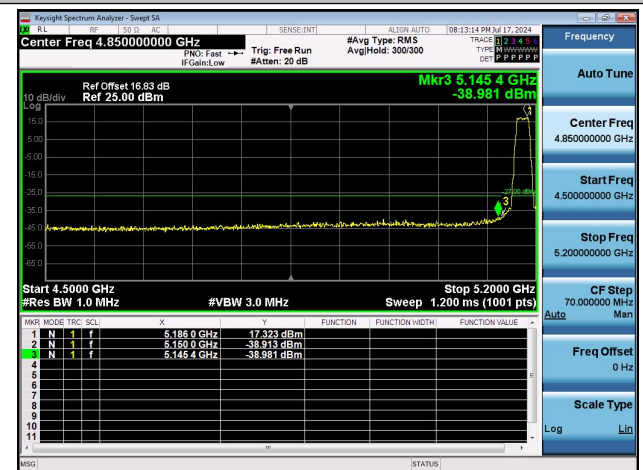

11N20MIMO-Ant1-5180-PASS