


Installation Guide

Bluetooth USB Printer Adapter

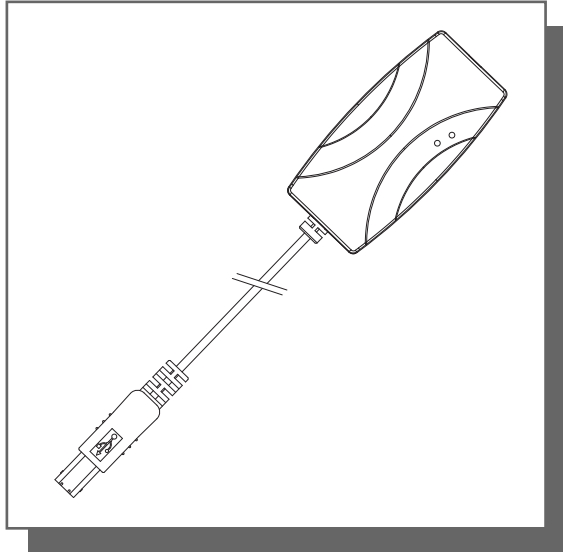

About This Product


The Bluetooth USB Printer Adapter provides a cable replacement solution for USB printers. The Class 2/3 printer adapter when connected to a USB printer through a USB port turns it into a Bluetooth-enabled printer. The plug-n-play solution via embedded BT HCRP (Hardcopy Cable Replacement Profile) or SPP (Serial Port Profile) on the adapter requires only that the PC side is Bluetooth enabled and supports the same profiles. This document contains instructions on how to print to a Bluetooth-enabled USB printer via Bluetooth wireless technology from a laptop or desktop with an installed Bluetooth device and software.

1 Getting Started

The Bluetooth USB Printer Adapter package contains the following items:

- Bluetooth USB Printer Adapter
- Power Adapter
- Printed Installation Guide

2 Bluetooth USB Printer Adapter Hardware Diagram

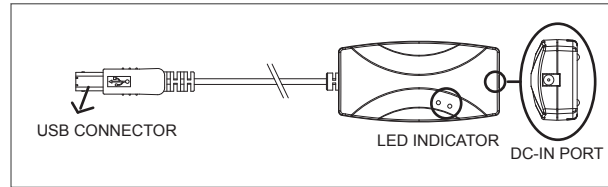


3 USB Printer Driver Installation


You have to install the printer driver first and then install the Bluetooth Printer adapter later. Due to different printer manufacturers, the printer installation procedure may vary. You may refer to User's manual your USB printer manufacturer provides for information on installing and operating your printer. Some printers may support both USB and Parallel Ports, please select USB port and follow on-screen description step by step to finish the whole installation.

4 Bluetooth USB Printer Adapter Installation

- After you have finished the printer driver installation, you can un-plug the printer USB cable from the USB printer.

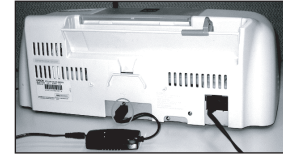

- Plug in the USB connector of the Bluetooth USB Printer Adapter to the USB port of your printer.

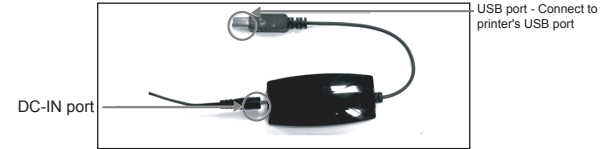

5 Start To Use The Bluetooth USB Printer Adapter

Note:

To print from a laptop or desktop over the Bluetooth wireless connection, a Bluetooth dongle/adapter or wireless Bluetooth PC card is required. To install these wireless Bluetooth devices, refer to the documentation that came with these devices.

In the example, we use the Widcomm Bluetooth software to build the connection between your Bluetooth-enabled computer and the Bluetooth-enabled printer. (Assuming that you have installed the Bluetooth software and Bluetooth devices completely on your computer.)

- Double-click the My Bluetooth Places  on your Windows desktop to launch the Bluetooth software.
- Click Bluetooth menu and select Search For Devices.

