

Go to www.vtechphones.com to register your product for enhanced warranty support and the latest Vtech product news.

VM350 VM350-2 Full Color Video Monitor

For more support information



VM350 VM350-2



Copyright © 2010 Vtech Communications, Inc. All rights reserved.
The background noise sound and the was created by Vtech, and is used under the Creative Commons license.
The Chirps and Mew sounds were created by Vtech, and is used under the Creative Commons license.
The Chirps and Mew sounds were created by Vtech, and is used under the Creative Commons license.


Power requirements	Parent unit power adapter: Output: 5V DC @ 400mA Baby unit power adapter: Output: 5V DC @ 400mA
Maximum power	Parent unit battery: 3.8V 2200mAh Li-ion battery
Maximum effective range	Parent unit power adapter: Output: 5V DC @ 400mA
Frequency	Parent unit: 2405 - 2475 MHz Baby unit: 2405 - 2475 MHz
Channels	57 Channels (VHF/LCD 480x272 pixels)
Frequency control	Crystal controlled PLL synthesizer

TECHNICAL SPECIFICATIONS

IMPORTANT SAFETY INSTRUCTIONS

- The applied warnings are located at the bottom of the baby unit's base.
- When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
1. Follow all warnings and instructions marked on the product.
 2. Adult use only.
 3. **CAUTION:** Do not install the baby unit at a height above 2 meters.
 4. This product is not a substitute for adult supervision of the infant. Supervising the infant is the parent's or caregiver's responsibility. This product could cause operating, and therefore you should not assume it will continue working properly for any given period of time. Further, this is not a medical device and should not be used in such. This product is intended to assist you in supervising your baby.
 5. Do not use this product near water. For example, do not use it near a bathtub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
 6. **CAUTION:** Use only the batteries provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The batteries cannot be subjected to high or low extreme temperatures and low air pressure at high altitude during use, storage or transportation. Disposal of batteries into fire or a hot oven, or mechanically crushing or cutting the batteries can result in an explosion. Leaving the batteries in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Batteries subjected to external fire or air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the information in the RBCB seal.
 7. Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
 8. Use only adapters and batteries listed below.
 9. **Warning:** Squeezing, Squeezing, Hazard—Children have STRANDED in cords. Keep the cord out of the reach of children (more than 3 ft (0.9 m) away). Do not remove this tag.
 10. Never place the baby unit inside the baby's crib or playpen. Never cover the baby unit or parent unit with anything such as a towel or a blanket.
 11. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.
 12. **Precautions for users of implanted cardiac pacemakers:** Cordless pacemakers (implies only to digital cordless devices) Wireless Technology Research, LLC (WTR), an independent research entity, and a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration. WTR recommends to physicians that:
 - Should keep wireless devices at least six inches from the pacemaker.
 - Should NOT place wireless devices directly over the pacemaker (such as in a breast pocket) when it is turned ON. WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.
 13. **Electromagnetic fields (EMF):** This Vtech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the product is safe to be used based on scientific evidence available today.
 14. Do not place this product on an unstable table, shelf, stand or other unstable surface.
 15. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of the product are provided for ventilation. To protect them from overheating, these openings must not be blocked.

WHAT'S IN THE BOX

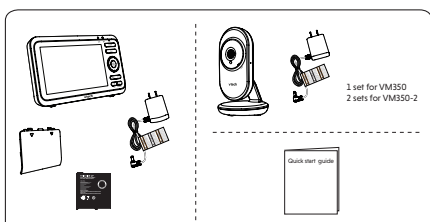

1 CONNECT THE BABY MONITOR

Install the battery
The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time only.

- NOTES**
- Use only the battery supplied with this product.
 - If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage
- 1** Press down on the battery compartment cover to pull it out.
- 2** Make sure the label **THIS SIDE UP** is facing up while inserting the battery.

Replace the battery
To replace the battery, press down on the battery compartment cover and pull it out, then follow the steps above to install the battery.

Connect the baby monitor

- NOTES**
- Use only the power adapters supplied with this product.
 - Make sure the baby monitor is not connected to the switch controlled electric outlet.
 - Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.
 - Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.

Charge the parent unit battery

- When you have connected and turned on the parent unit, the battery will be charged automatically.
- NOTES**
- Before using the baby monitor for the first time, charge the parent unit battery for 12 hours. When the parent unit battery is fully charged, the battery icon becomes solid.
 - It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
 - The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

2 POWER ON OR OFF THE BABY MONITOR

- 1** Slide the **ON/OFF** switch to power on or off your baby unit.
- 2** Press and hold **POWER** to power on or off your parent unit.
- Power on**
- Power off**

3 POSITIONING THE BABY MONITOR

- CAUTION**
- Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's crib or playpen.
- 1** **CAUTION**
- The default volume of your parent unit is level 4, and the maximum volume is level 7. If you experience high-pitched screaming noise from your baby monitor while positioning:
 - Make sure your baby unit and parent unit are more than 3 feet (1 meter) apart.
 - Lower the volume of your parent unit.
- 2**
- NOTE**
- To avoid interference from other electronic devices, place your baby monitor at least 3 feet (1 meter) away from devices such as wireless routers, microwaves, cell phones and computers.

4 STATUS CHECK

Once you power on both your baby unit and parent unit, your parent unit displays image from the baby unit, and the **LINK** LED light turns on.

The **POWER** LED light of baby unit turns on.

BASIC OPERATION - PARENT UNIT

- Adjust speaker volume**
Press **VOL+ / VOL-** to adjust your parent unit speaker volume.
- Zoom**
Press **@** to zoom in or out.
- Talk to your baby unit**
Press and hold **TALK** and speak to your parent unit. Your voice is transmitted to the baby unit. Release **TALK** when finish talking and hear your baby again.
- Turn off the screen**
Press and hold **LCD ON/OFF** to switch off the screen. You can still hear sound from the baby unit.
- Keep pressing while talking**
- Long press**
- TIP**
• Press any keys on the parent unit to turn on the screen again.

OVERVIEW - PARENT UNIT

- 1** LCD display
- 2** Antenna
- 3** LED lights
- 4** Microphone
- 5** POWER
- 6** TALK
- 7** Arrow keys
- 8** MENU/SELECT
- 9** Power jack
- 10** VOL+ / VOL-
- 11** VIEW / LCD ON/OFF
- 12** @ / EXIT
- 13** Speaker
- 14** Battery compartment cover
- 15** Stand

OVERVIEW - BABY UNIT

- 1** Pair hole
- 2** POWER LED light
- 3** Microphone
- 4** Camera
- 5** Infrared LEDs
- 6** Light sensor
- 7** ON/OFF switch
- 8** Speaker
- 9** Power jack
- 10** Wall mount holes

NEED HELP?

For operations and guides to help you using your video monitor, and for latest information and supports, go and check the online help topics and online FAQs.

Use your smartphone or mobile device to access our online help.

- Go to <http://help.vtechphones.com/vm350> or <http://help.vtechphones.com/vm350-2> OR
- Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.
- If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

You can also call our Customer Support at 1 (800) 595-9511 (in US) or 1 (800) 267-7377 (in Canada) for help.

PARENT UNIT ICONS

- Main menu icons**
- | Main menu | Sub-menu | Main menu | Sub-menu |
|---|---|--|--|
| Brightness | Adjust the baby unit's LCD brightness. | Alert tones | Set the parent unit to beep when the battery is low. |
| Camera settings | Adjust the baby unit's speaker volume. | ON/OFF | Turn on/off sound activation |
| Monitoring mode (For VM350-2 only) | Set the parent unit to beep when the link between the parent unit and the baby unit is lost. | VOX (Voice Activated Alert) Sensitivity | Set sound activation on or off. |
| Lullaby | Set the confirmation tone on or off when selecting an option in the menus. | ON/OFF | Turn on/off sound activation |
| Play/Stop lullaby | Set the parent unit to beep when the baby unit detects sounds while in Split mode (For VM350-2 only). | ON/OFF | Turn on/off sound activation |
| Temperature | Set the minimum temperature. | ON/OFF | Turn on/off sound activation |
| ON/OFF | Set the maximum temperature. | ON/OFF | Turn on/off sound activation |
| ON/OFF | Set temperature display in Fahrenheit (°F) or Celsius (°C). | ON/OFF | Turn on/off sound activation |

