


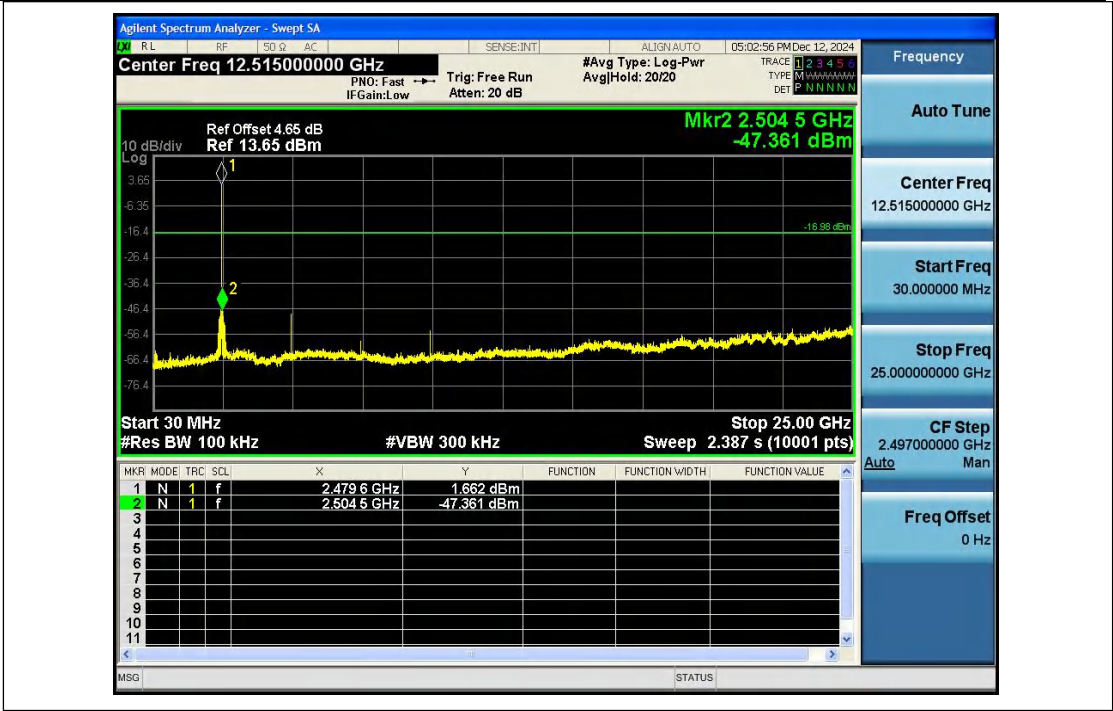

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com

Hotline 400-003-0500
www.anbotek.com


Appendix F: Bandedge

Condition	Antenna	Modulation	TX Mode	Ref_level(dBm)	Bandedge MAX.Value	Limit	Result
NVNT	ANT1	1-DH5	2402.00	3.466	-26.016	-16.534	Pass
NVNT	ANT1	1-DH5	Hopping_LCH	3.585	-27.015	-16.415	Pass
NVNT	ANT1	1-DH5	2480.00	2.874	-32.402	-17.126	Pass
NVNT	ANT1	1-DH5	Hopping_HCH	2.031	-36.844	-17.969	Pass
NVNT	ANT1	2-DH5	2402.00	3.691	-25.823	-16.309	Pass
NVNT	ANT1	2-DH5	Hopping_LCH	3.592	-30.876	-16.408	Pass
NVNT	ANT1	2-DH5	2480.00	2.923	-31.814	-17.077	Pass
NVNT	ANT1	2-DH5	Hopping_HCH	3.147	-39.545	-16.853	Pass
NVNT	ANT1	3-DH5	2402.00	3.841	-25.907	-16.159	Pass
NVNT	ANT1	3-DH5	Hopping_LCH	3.444	-30.213	-16.556	Pass
NVNT	ANT1	3-DH5	2480.00	3.025	-32.087	-16.975	Pass
NVNT	ANT1	3-DH5	Hopping_HCH	3.055	-41.942	-16.945	Pass


1_Reference_Level_NVNT_ANT1_1-DH5_2402_00




2_Bandedge_NVNT_ANT1_1-DH5_2402_00

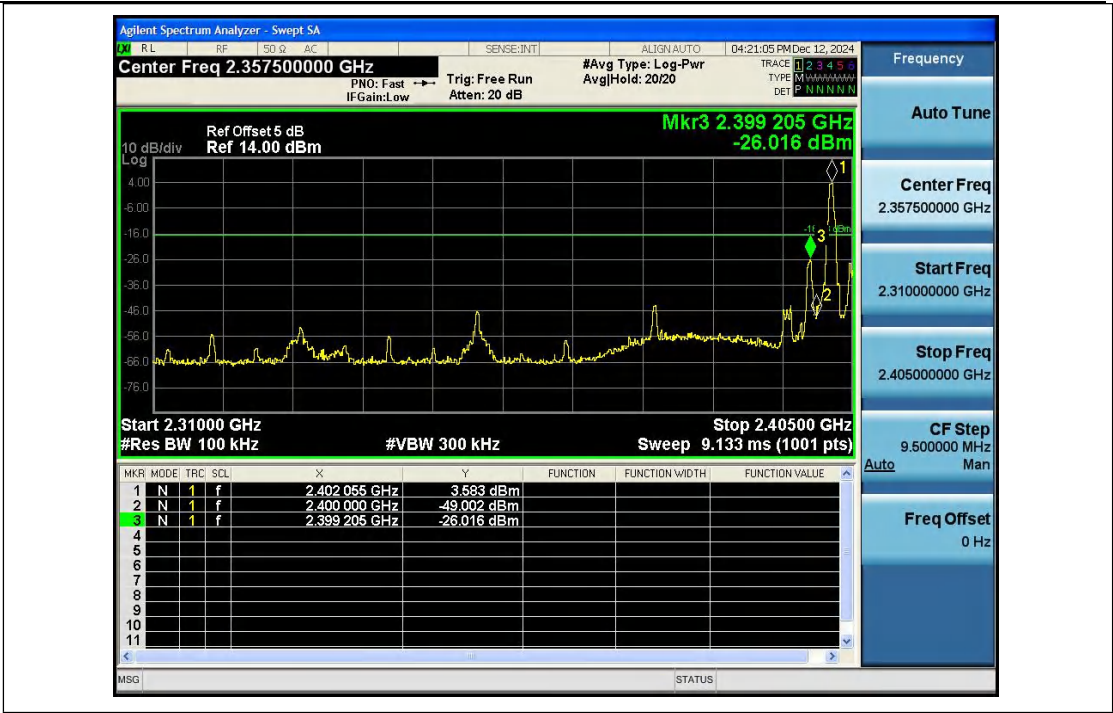


1_Reference_Level_Hopping_NVNT_ANT1_1-DH5_Hopping

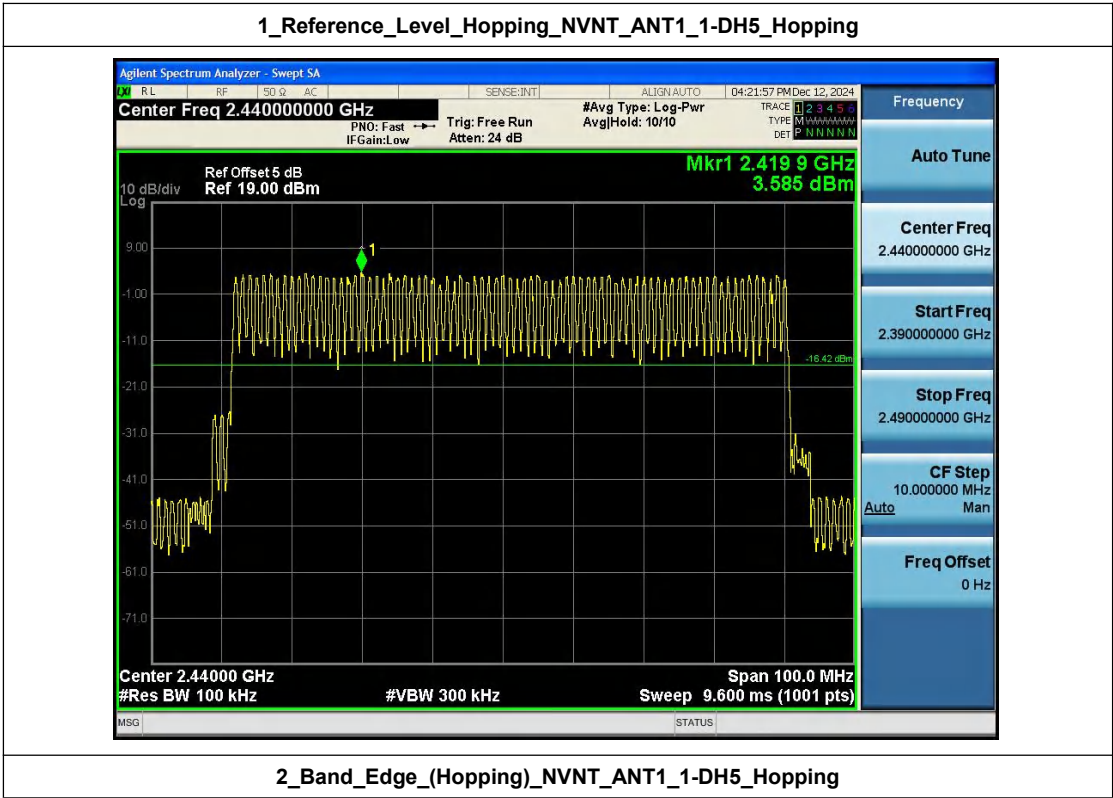


2_Band_Edge_(Hopping)_NVNT_ANT1_1-DH5_Hopping

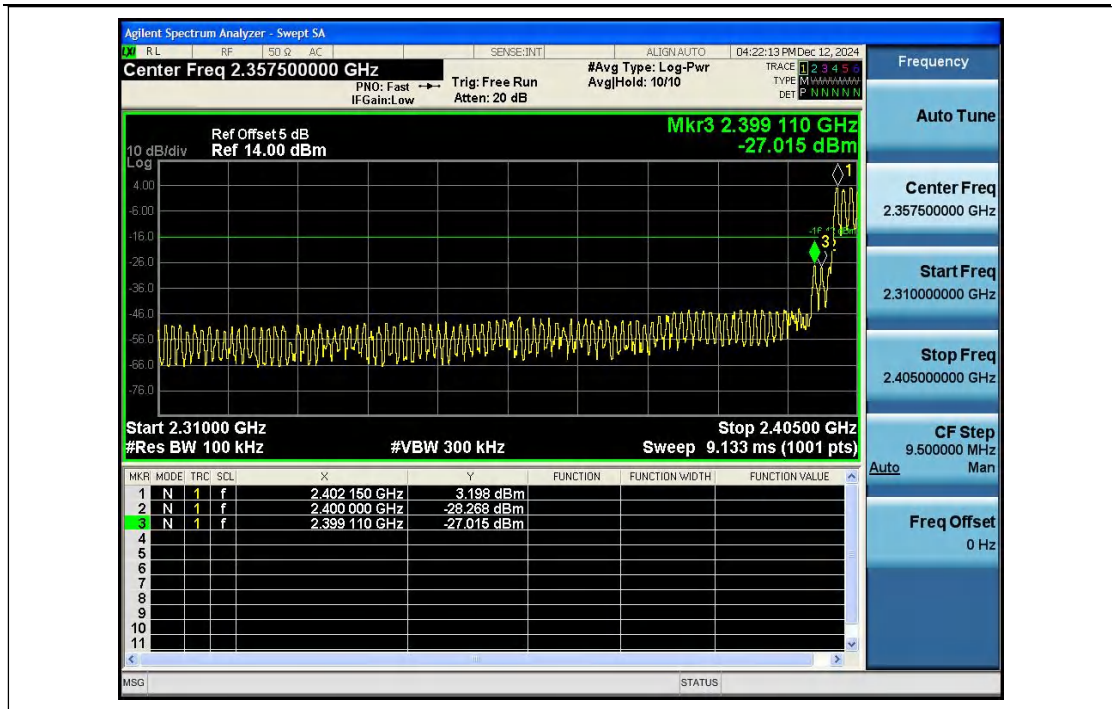


1_Reference_Level_NVNT_ANT1_1-DH5_2480_00

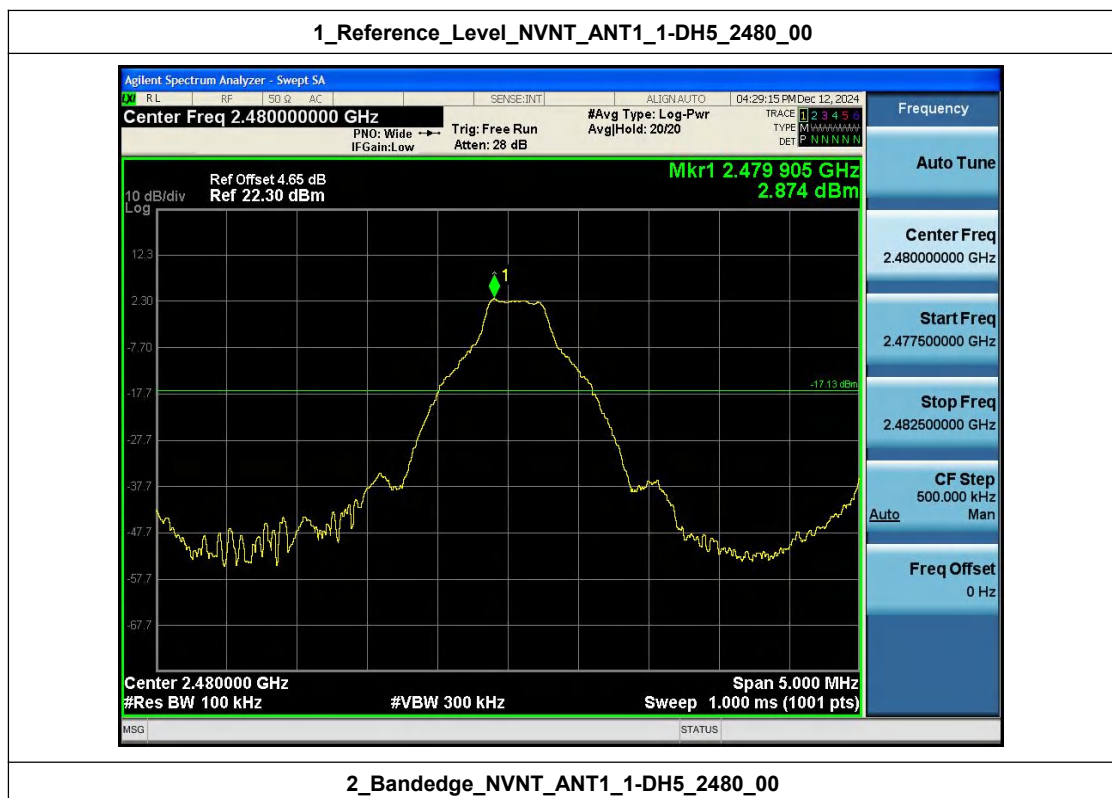


2_Bandedge_NVNT_ANT1_1-DH5_2480_00

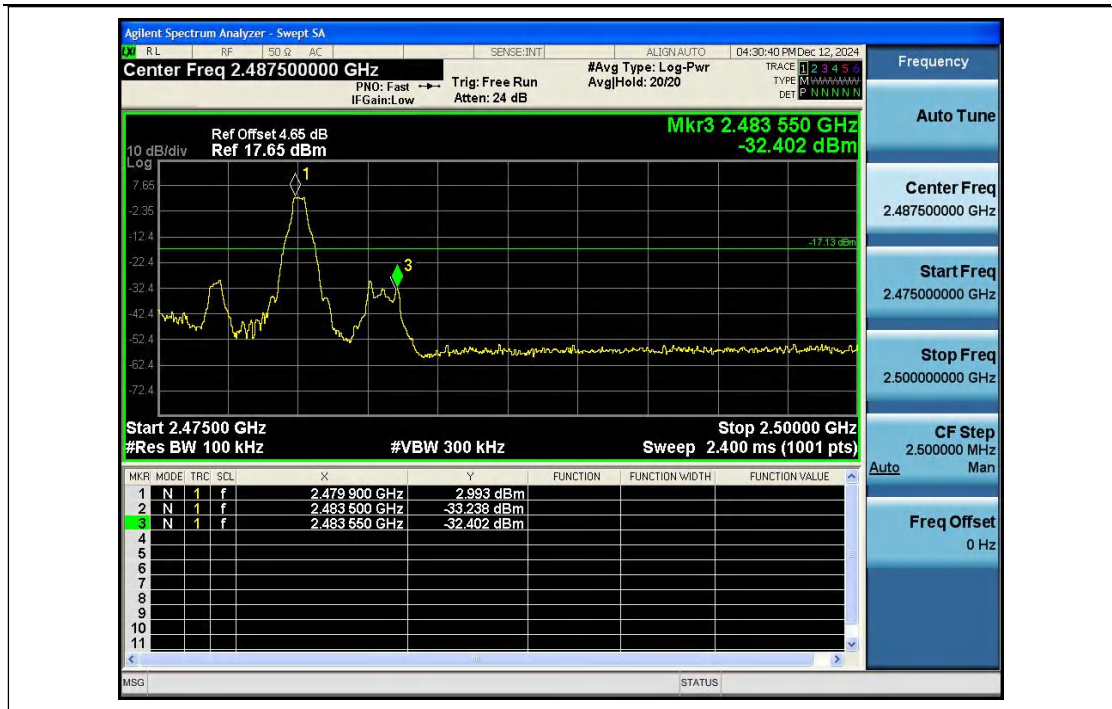


1_Reference_Level_Hopping_NVNT_ANT1_1-DH5_Hopping

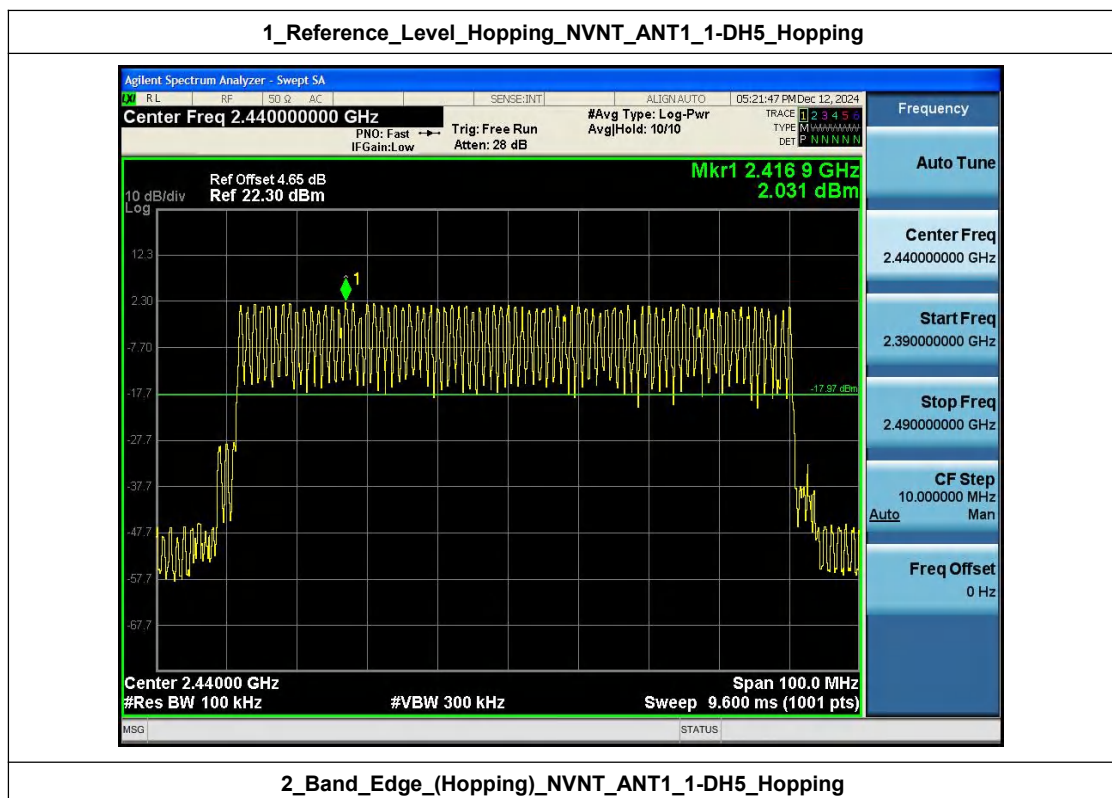

2_Band_Edge_(Hopping)_NVNT_ANT1_1-DH5_Hopping

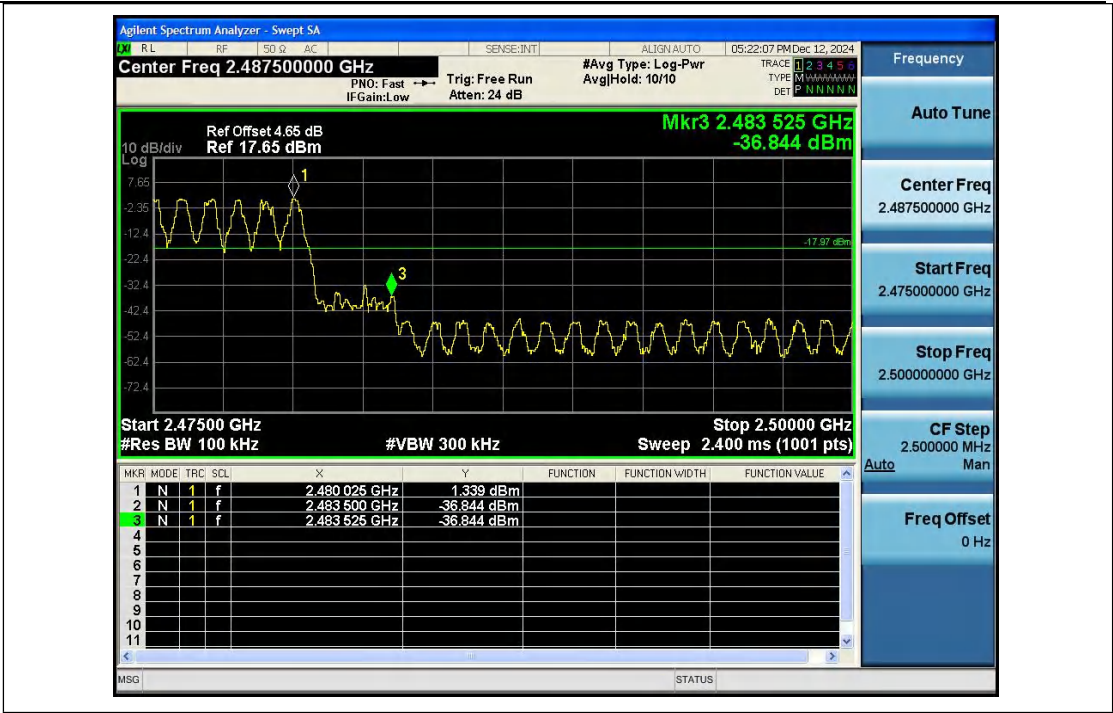


1_Reference_Level_NVNT_ANT1_2-DH5_2402_00

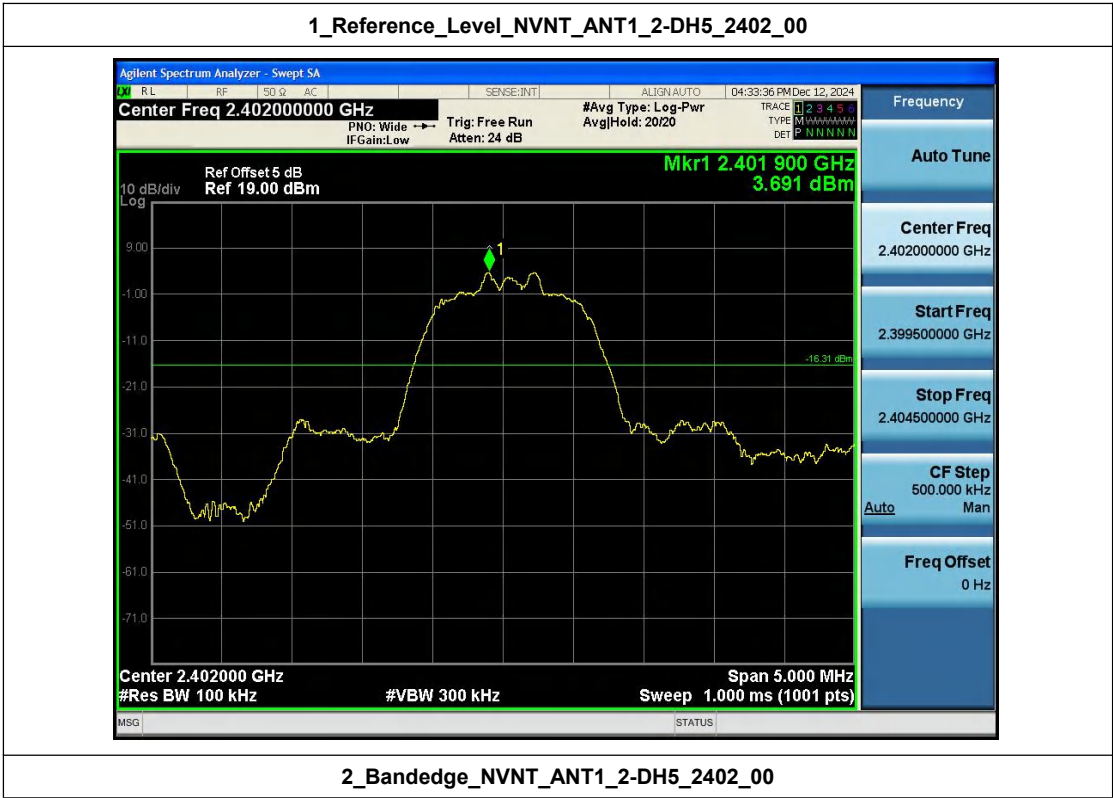

2_Bandedge_NVNT_ANT1_2-DH5_2402_00




1_Reference_Level_Hopping_NVNT_ANT1_2-DH5_Hopping

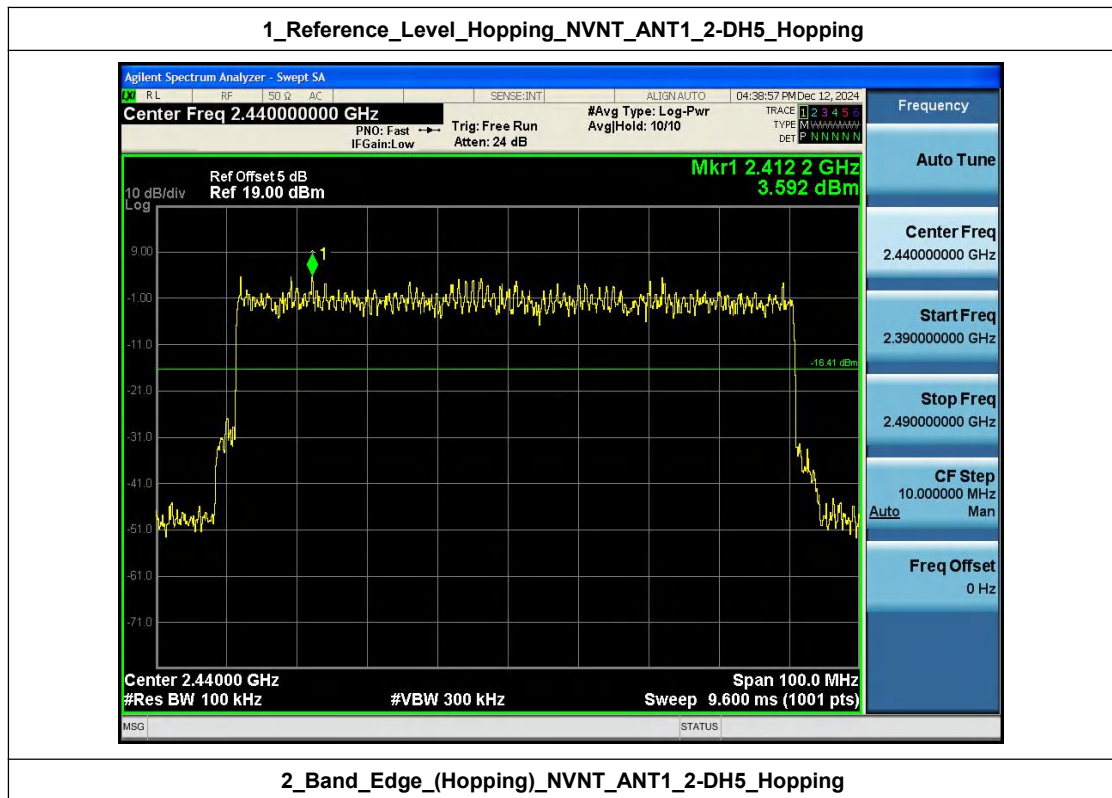


2_Band_Edge_(Hopping)_NVNT_ANT1_2-DH5_Hopping



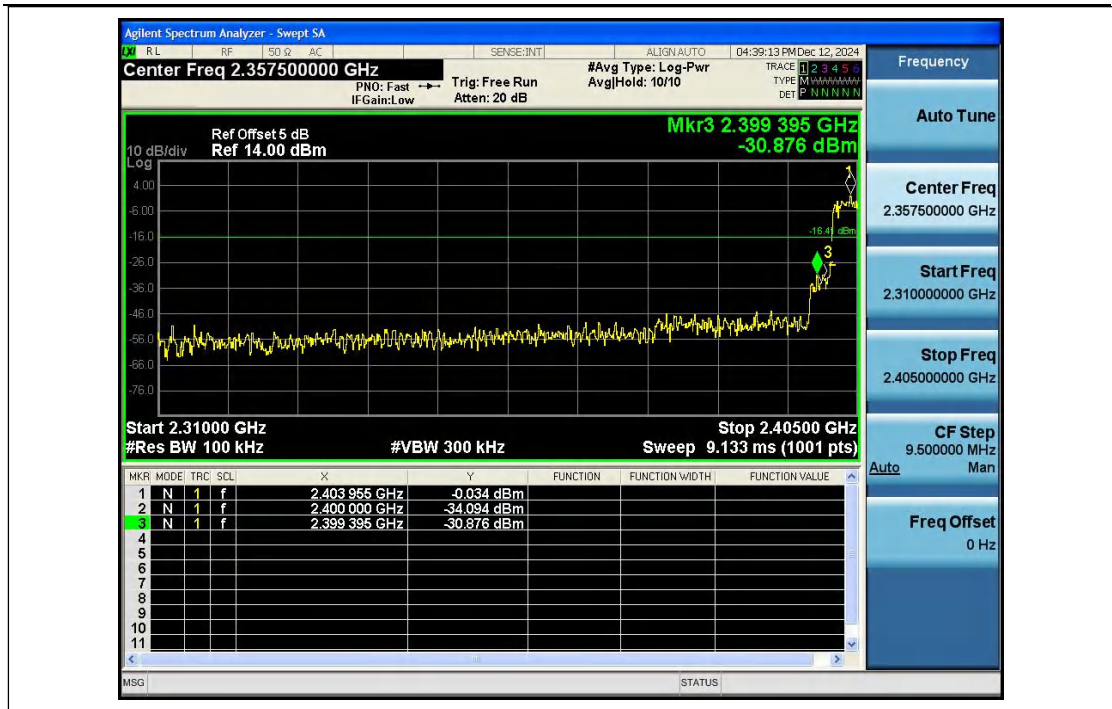

1_Reference_Level_NVNT_ANT1_2-DH5_2480_00

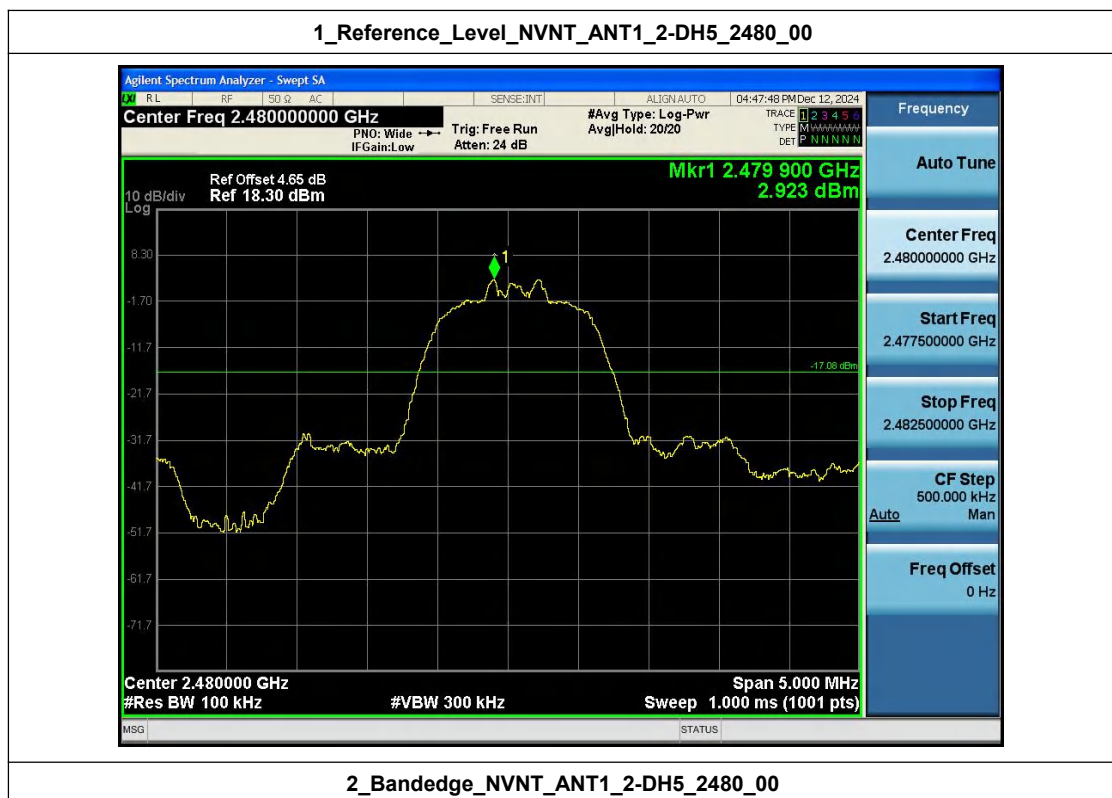

2_Bandedge_NVNT_ANT1_2-DH5_2480_00

Shenzhen Anbotech Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com



Hotline
400-003-0500
www.anbotech.com




1_Reference_Level_Hopping_NVNT_ANT1_2-DH5_Hopping

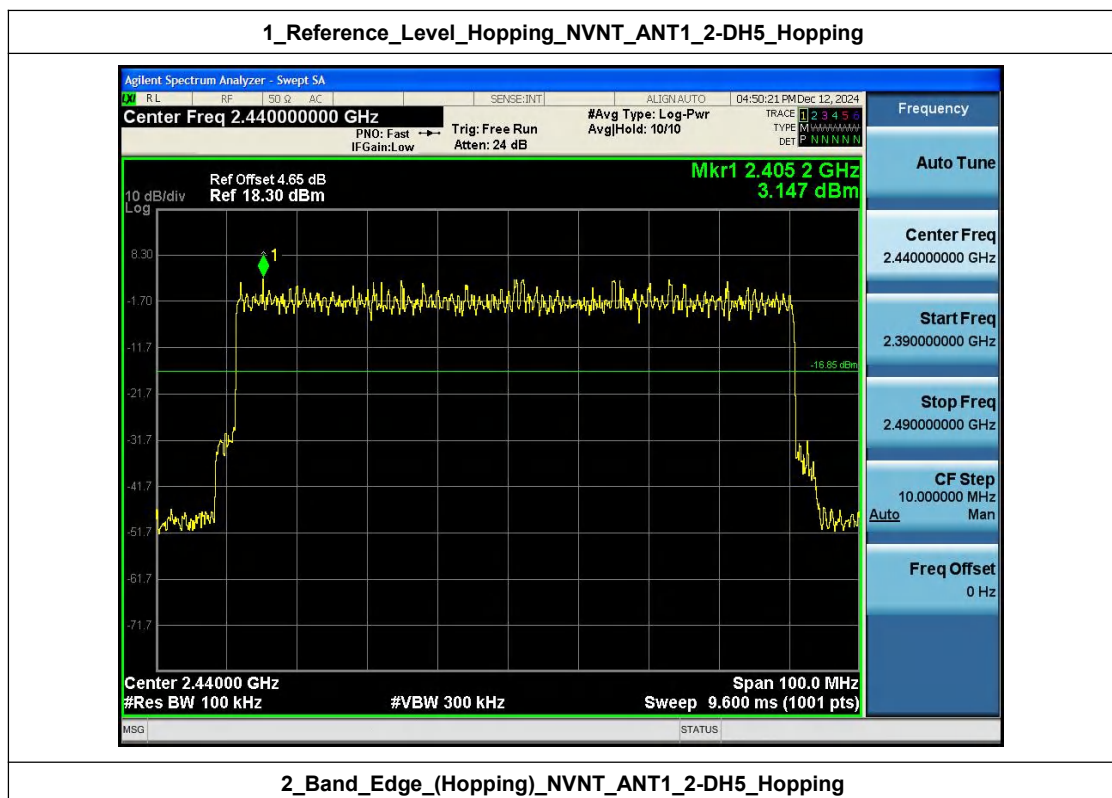


2_Band_Edge_(Hopping)_NVNT_ANT1_2-DH5_Hopping




1_Reference_Level_NVNT_ANT1_3-DH5_2402_00

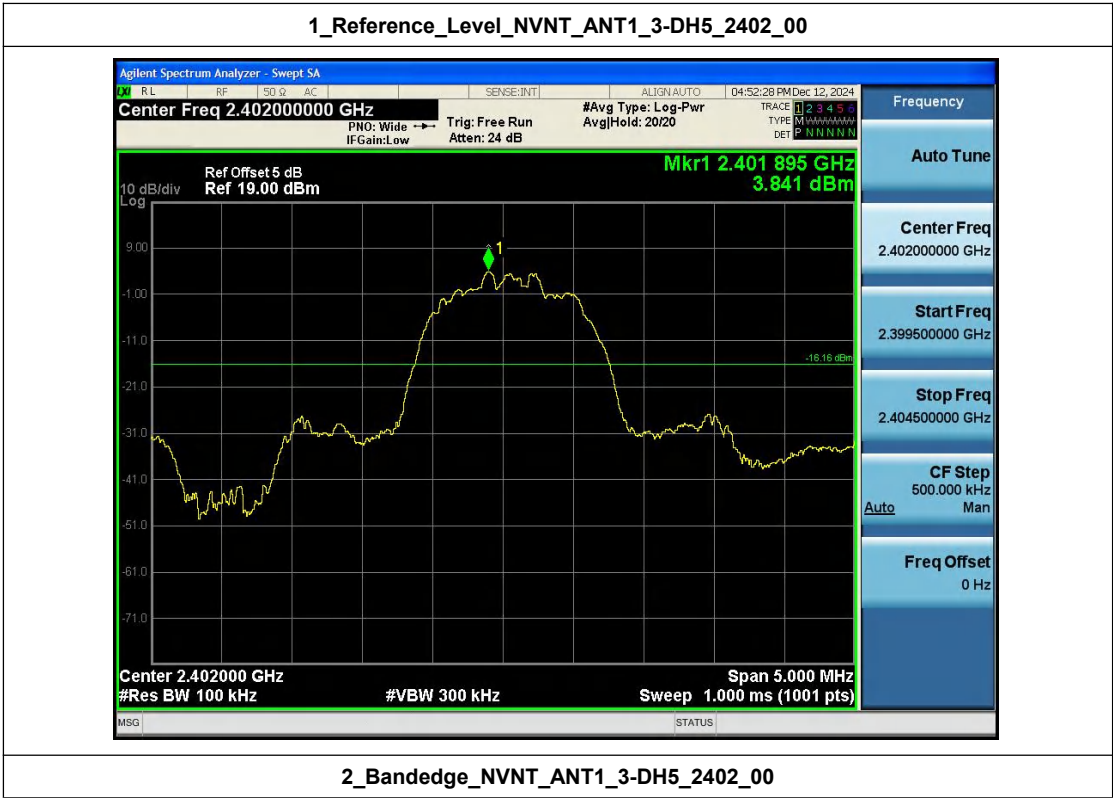


2_Bandedge_NVNT_ANT1_3-DH5_2402_00

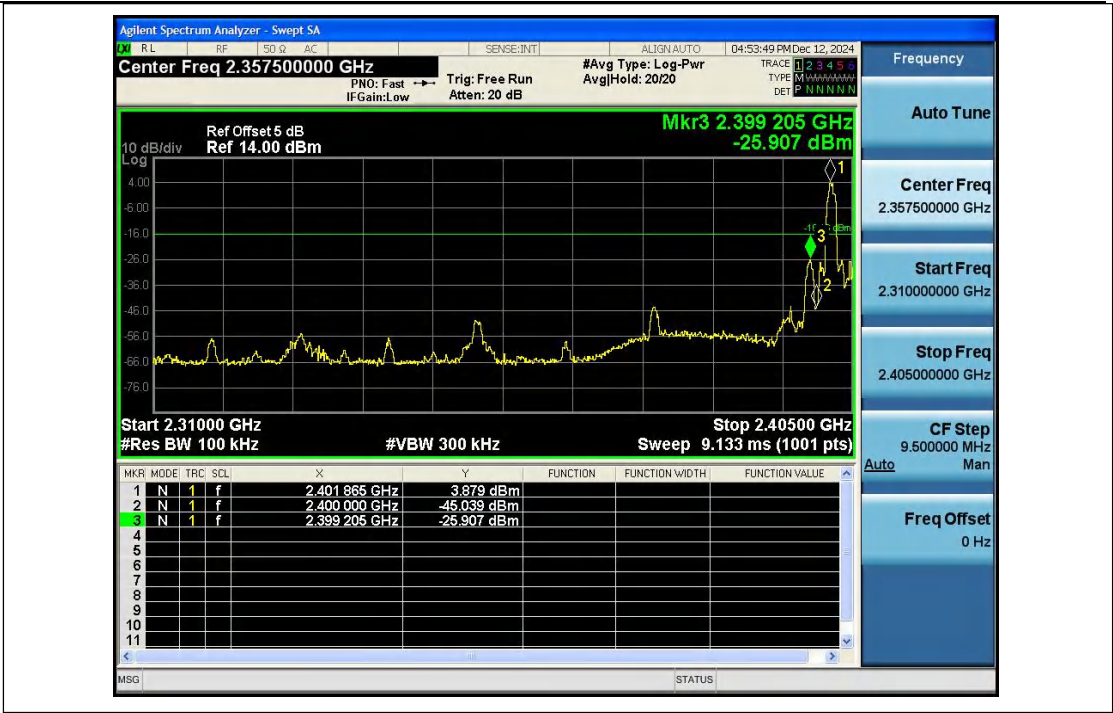


1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

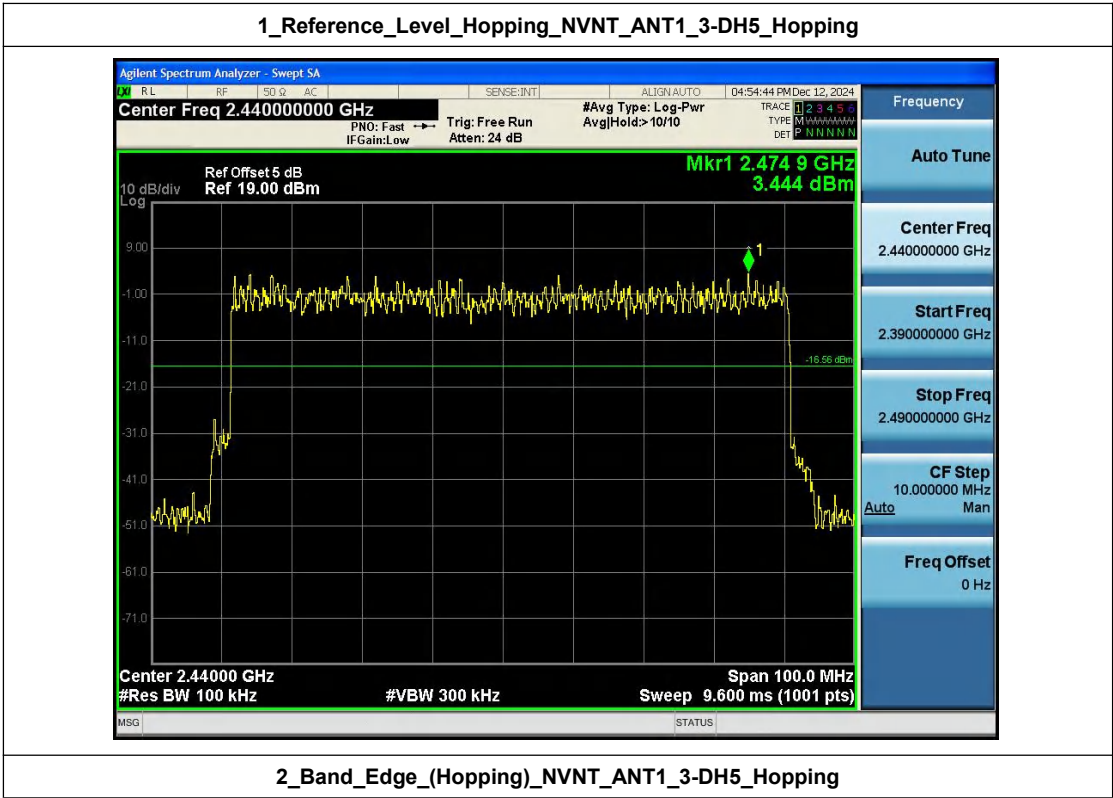

2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping

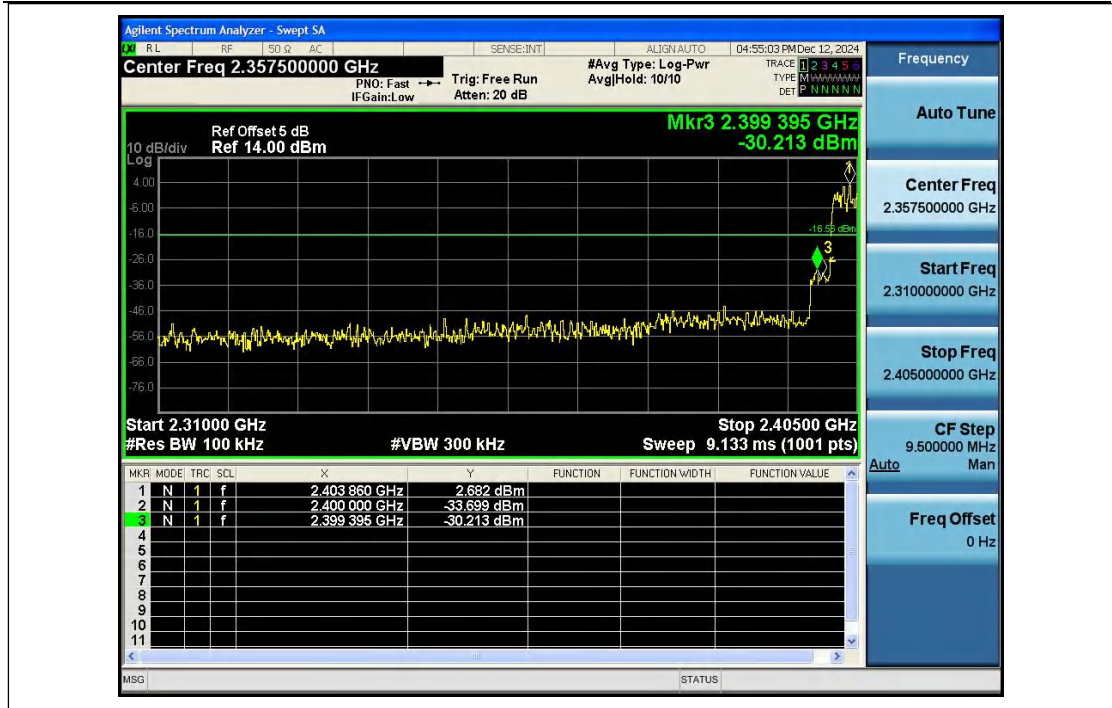

1_Reference_Level_NVNT_ANT1_3-DH5_2480_00

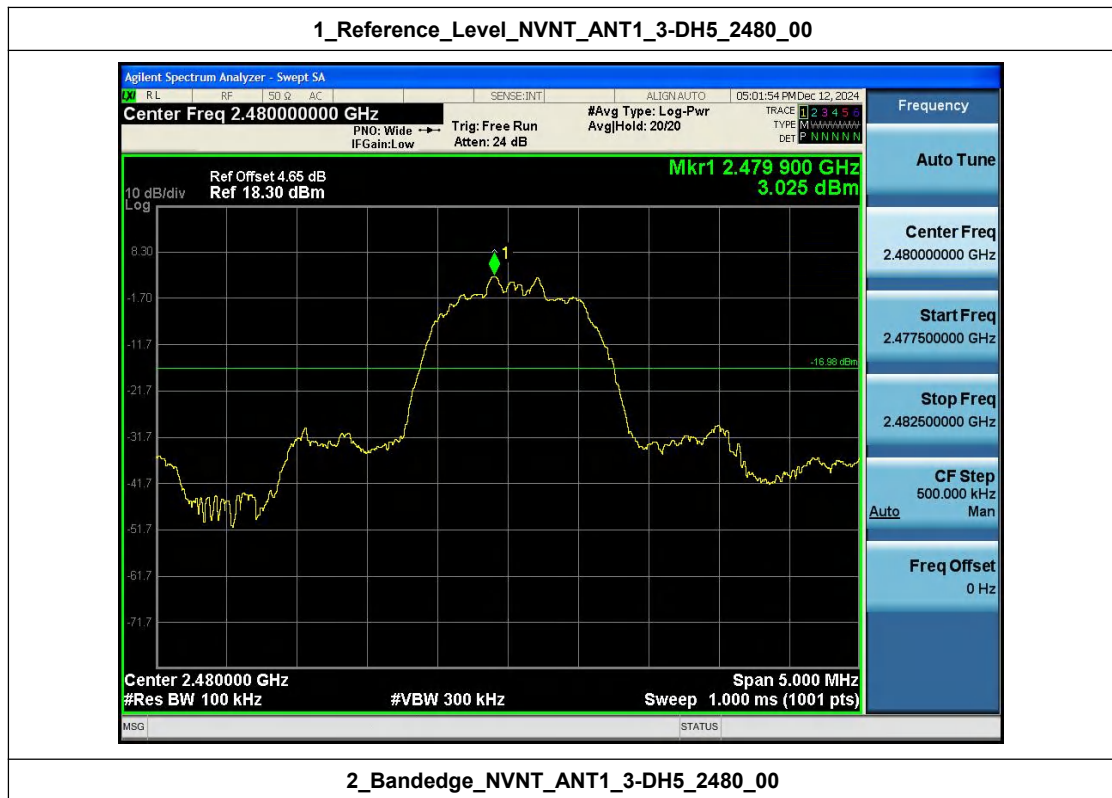

2_Bandedge_NVNT_ANT1_3-DH5_2480_00

Shenzhen Anbotech Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com



Hotline
400-003-0500
www.anbotech.com



1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

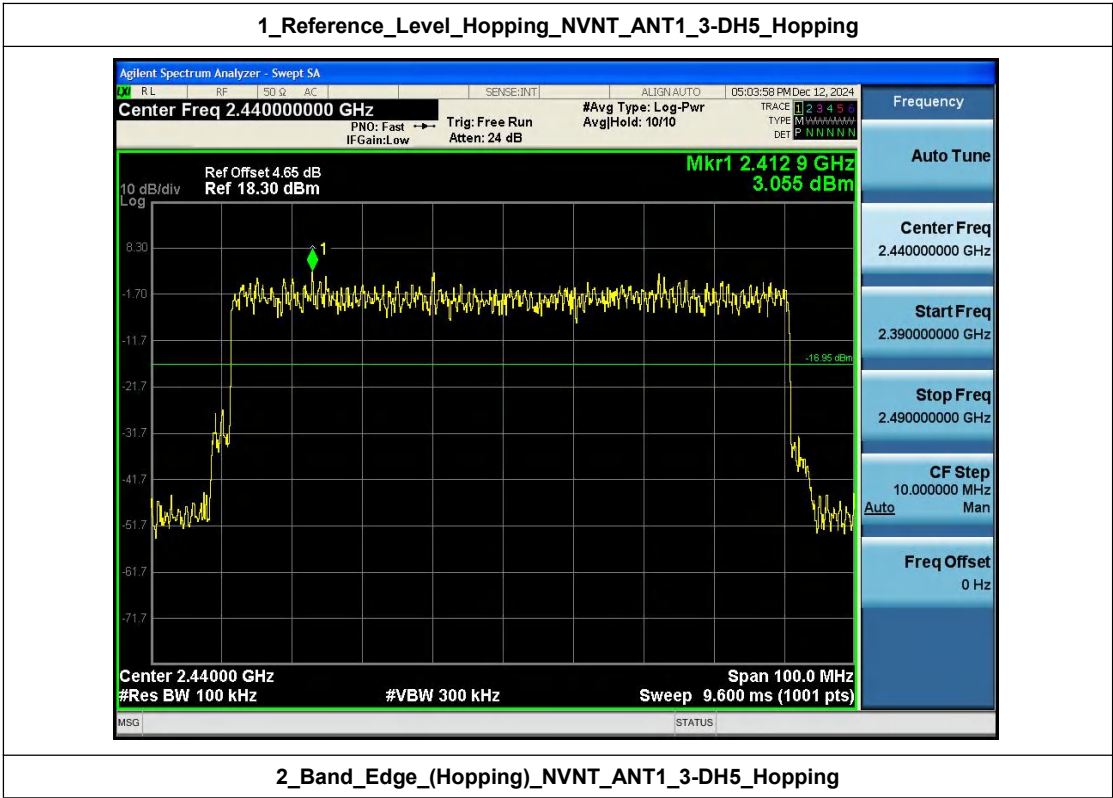

2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping



Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com

Hotline
400-003-0500
www.anbotek.com

Appendix G: Carrier Frequencies Separation (Hopping)

Condition	Antenna	Modulation	Frequency(MHz)	Hopping NO.0 (MHz)	Hopping NO.1 (MHz)	Carrier Frequencies Separation(MHz)	Limit(MHz)	Result
NVNT	ANT1	1-DH5	2441.00	2440.906	2441.905	1.00	0.639	Pass
NVNT	ANT1	2-DH5	2441.00	2440.897	2442.202	1.30	0.881	Pass
NVNT	ANT1	3-DH5	2441.00	2440.894	2442.190	1.30	0.875	Pass


Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_1-DH5_Hopping



Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_2-DH5_Hopping




Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_3-DH5_Hopping

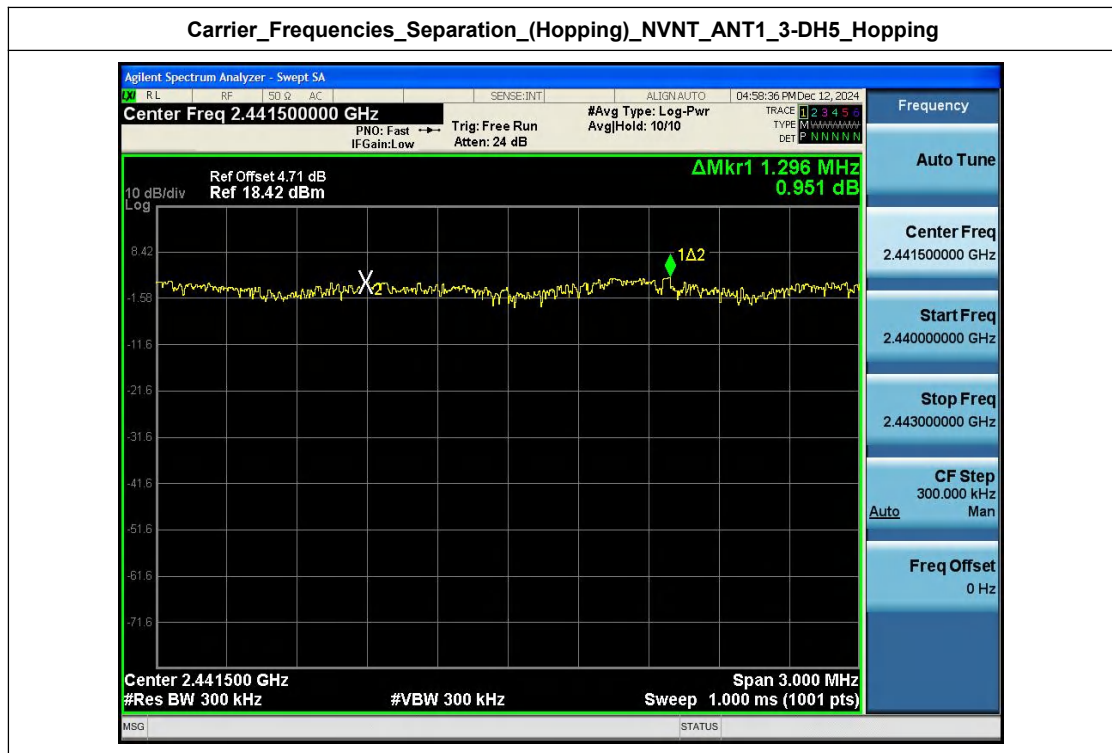


Appendix H: Number of Hopping Channel (Hopping)


Condition	Antenna	Modulation	Hopping Num	Limit	Result
NVNT	ANT1	1-DH5	79	15	Pass
NVNT	ANT1	2-DH5	79	15	Pass
NVNT	ANT1	3-DH5	79	15	Pass

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_1-DH5_Hopping

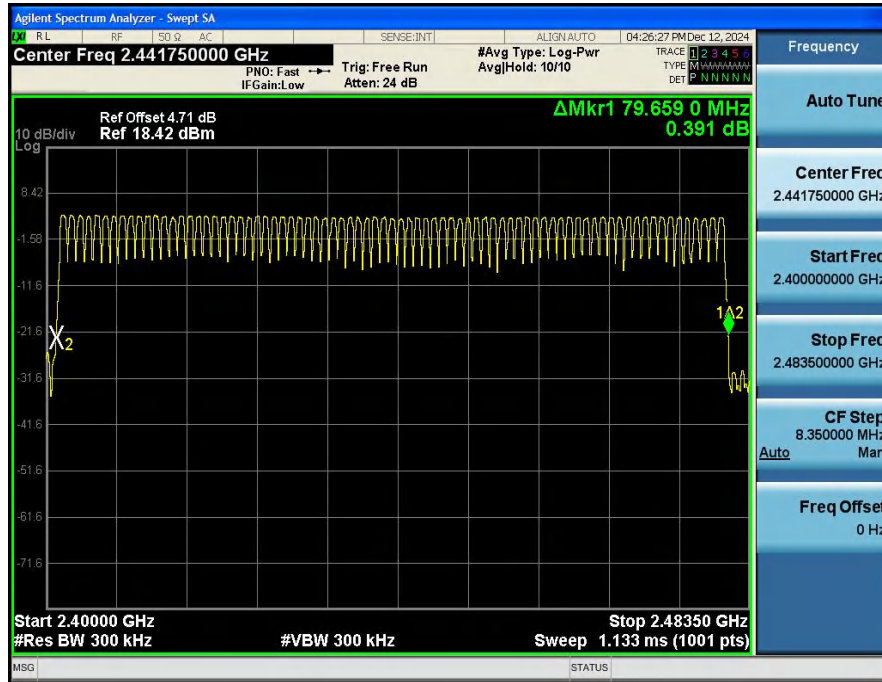

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_2-DH5_Hopping

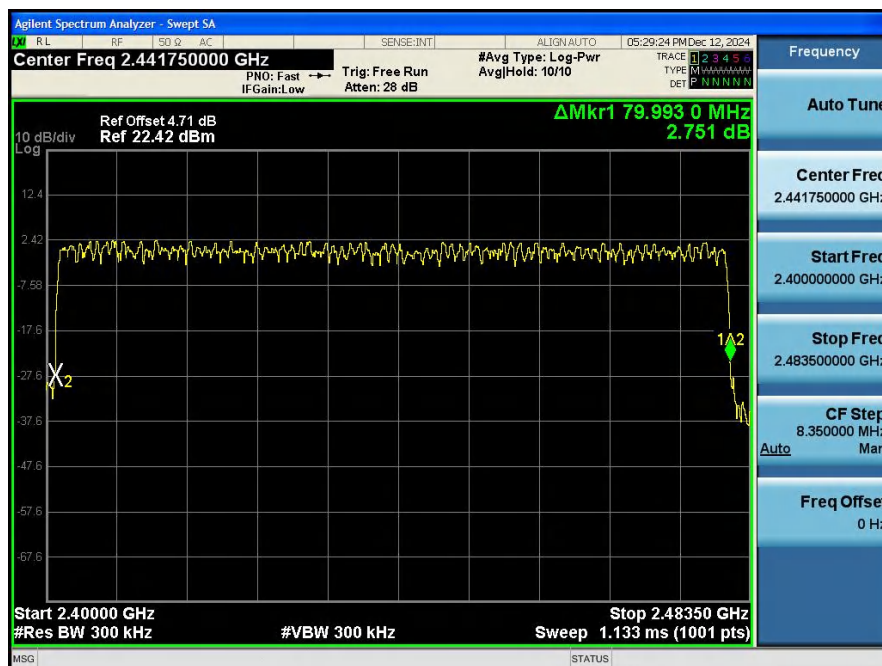

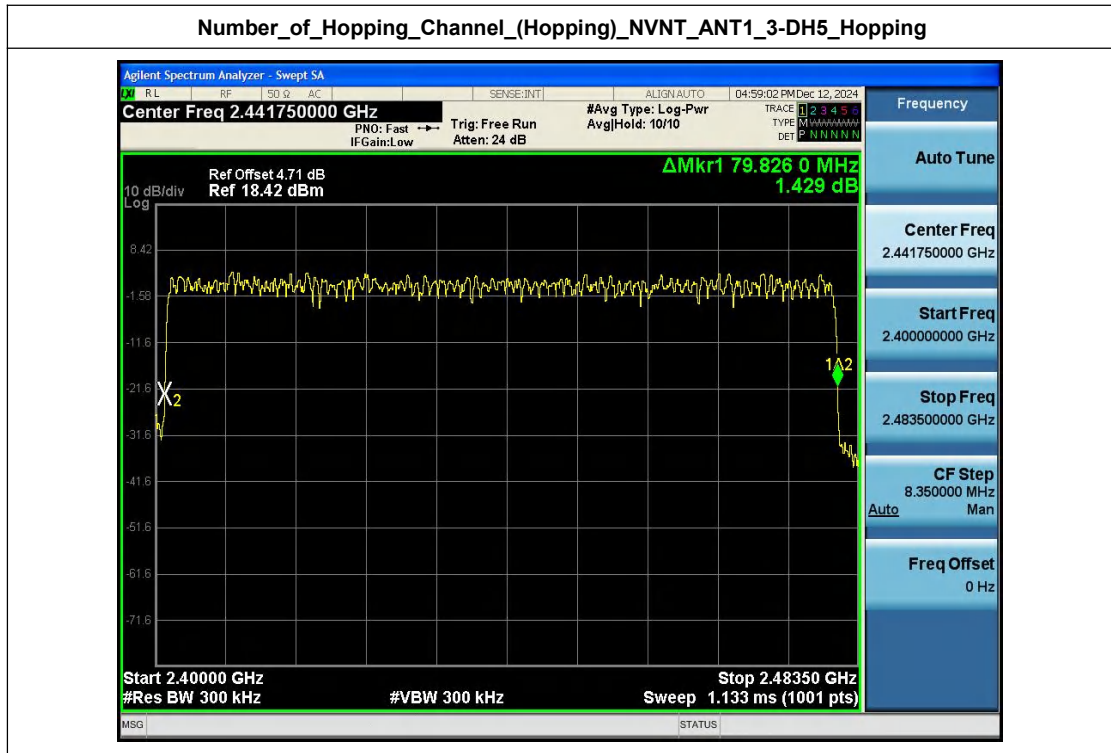

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com


Appendix I: Dwell Time (Hopping)

Condition	Antenna	Packet Type	Pulse Time(ms)	Hops	Dwell Time(ms)	Limit(s)	Result
NVNT	ANT1	1-DH5	2.881	107.00	308.267	0.40	Pass
NVNT	ANT1	2-DH5	2.887	104.00	300.248	0.40	Pass
NVNT	ANT1	3-DH5	2.889	118.00	340.902	0.40	Pass
NVNT	ANT1	1-DH1	0.377	320.00	120.640	0.40	Pass
NVNT	ANT1	1-DH3	1.633	163.00	266.179	0.40	Pass
NVNT	ANT1	2-DH1	0.387	320.00	123.840	0.40	Pass
NVNT	ANT1	2-DH3	1.639	157.00	257.323	0.40	Pass
NVNT	ANT1	3-DH1	0.388	320.00	124.160	0.40	Pass
NVNT	ANT1	3-DH3	1.638	154.00	252.252	0.40	Pass


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH5_2441_00_One_Burst_Time

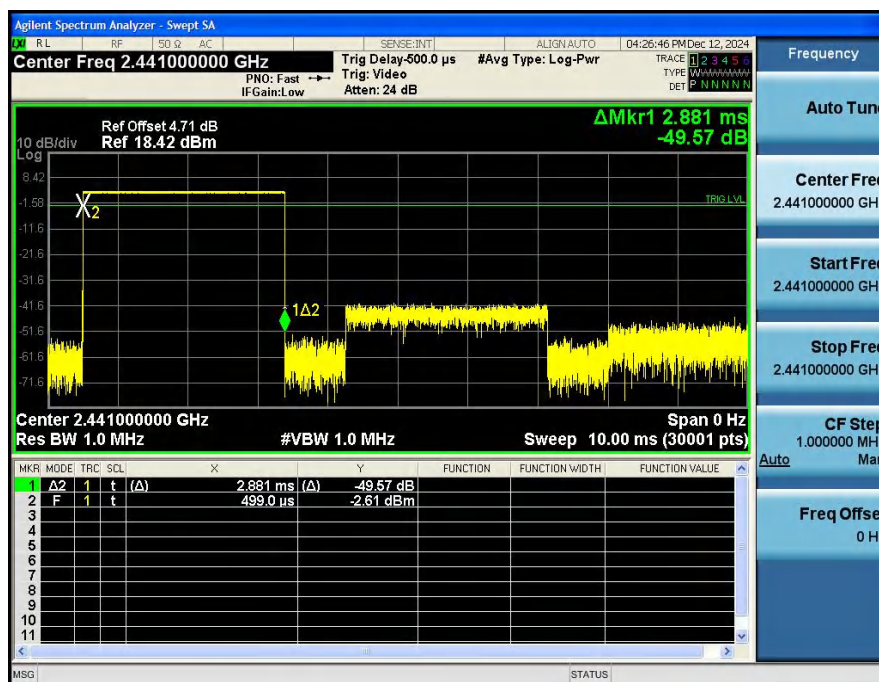


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH5_2441_00_Accumulated

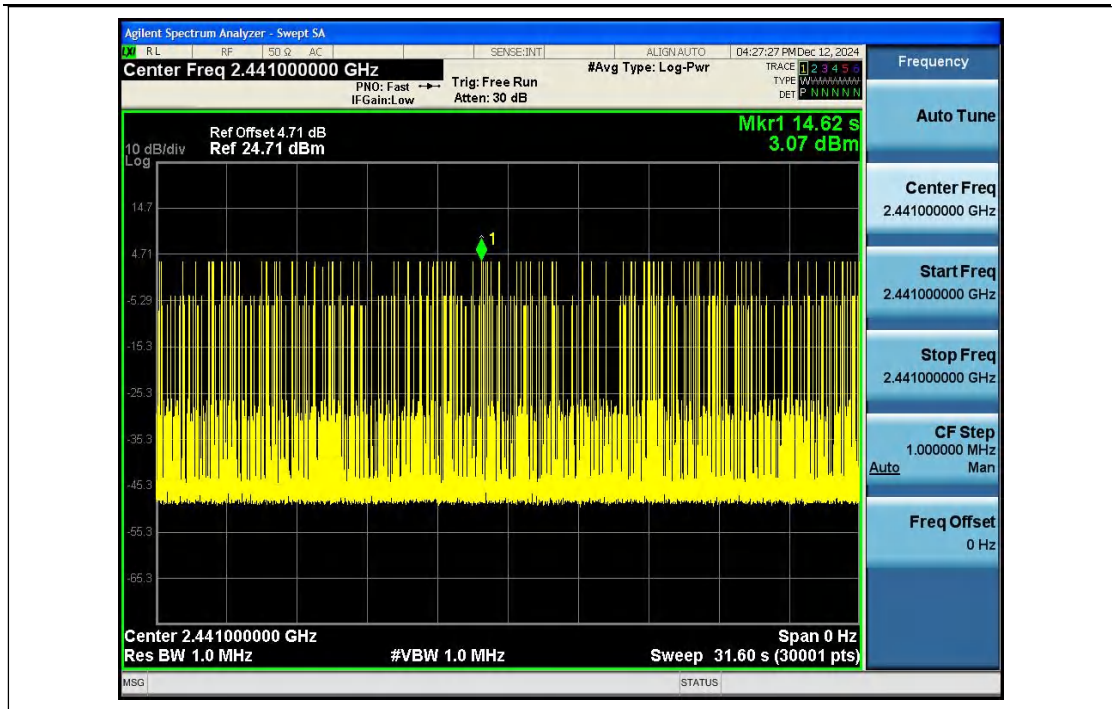


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH5_2441_00_One_Burst_Time

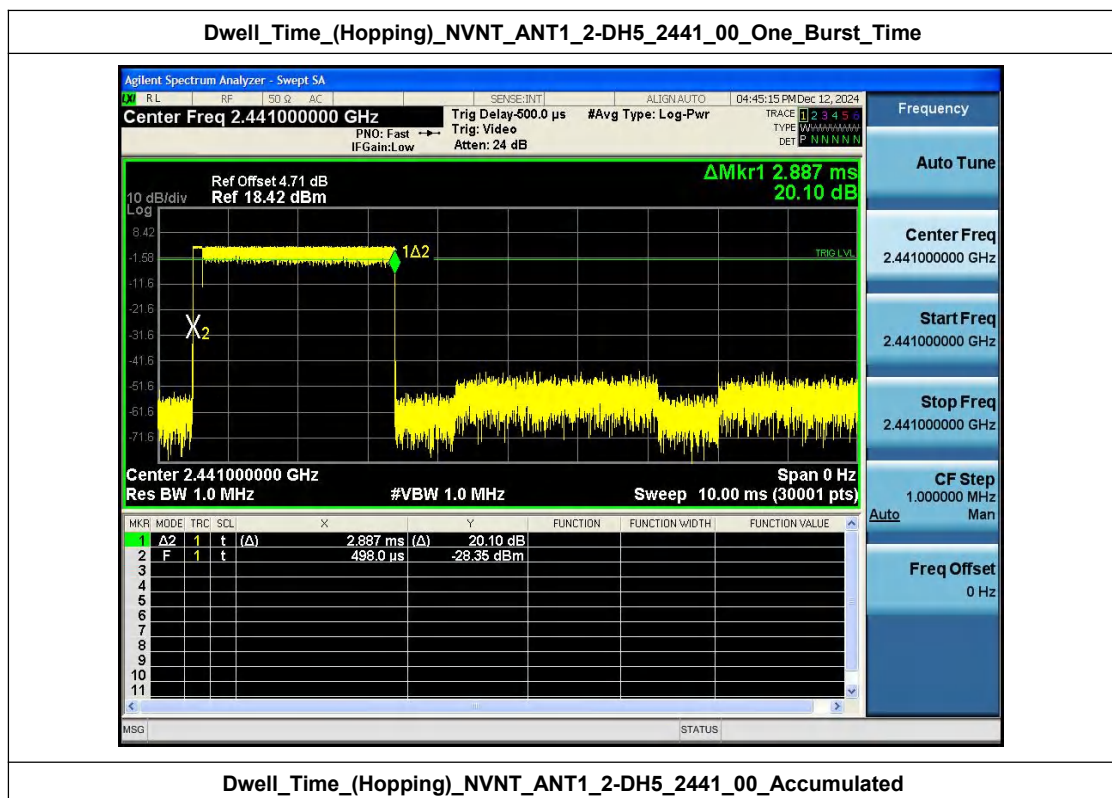


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH5_2441_00_Accumulated

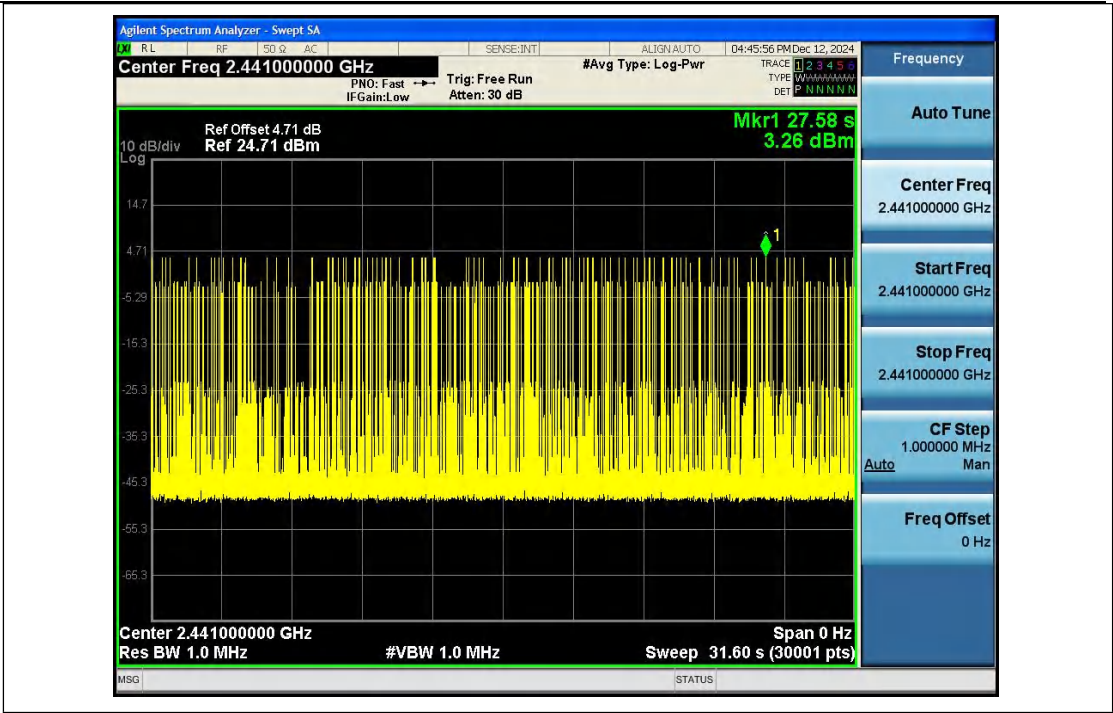


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH5_2441_00_One_Burst_Time

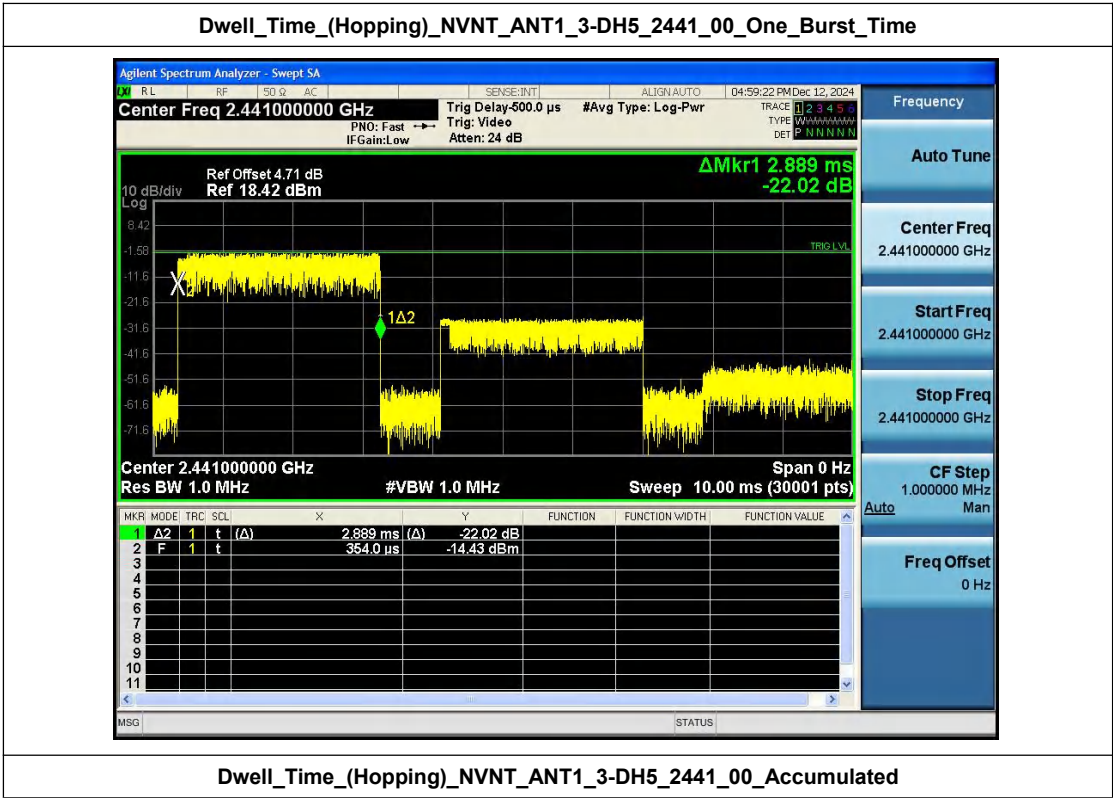


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH5_2441_00_Accumulated

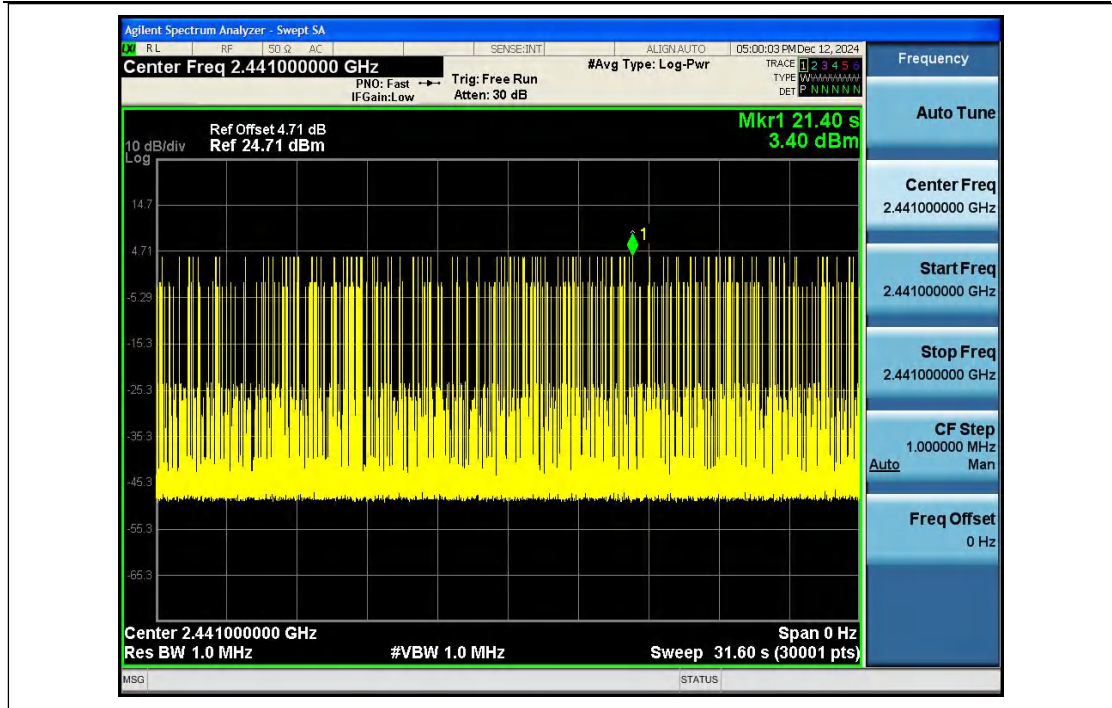


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH1_2441_00_One_Burst_Time

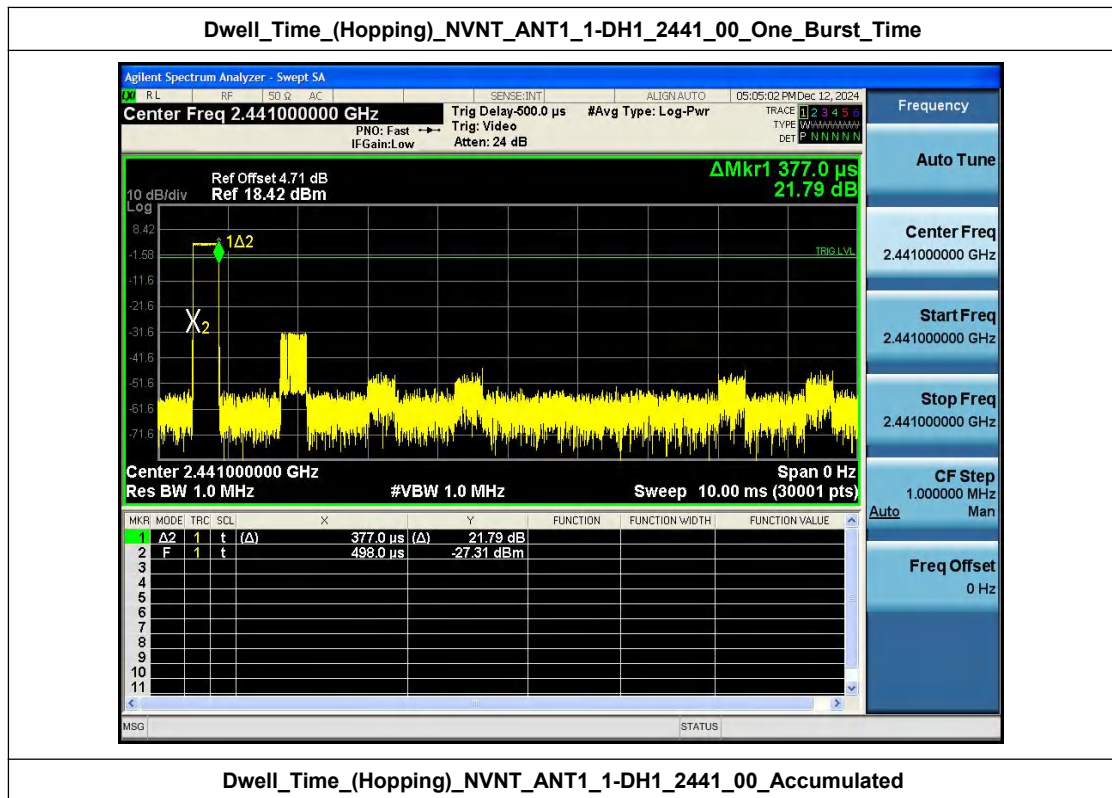


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH1_2441_00_Accumulated

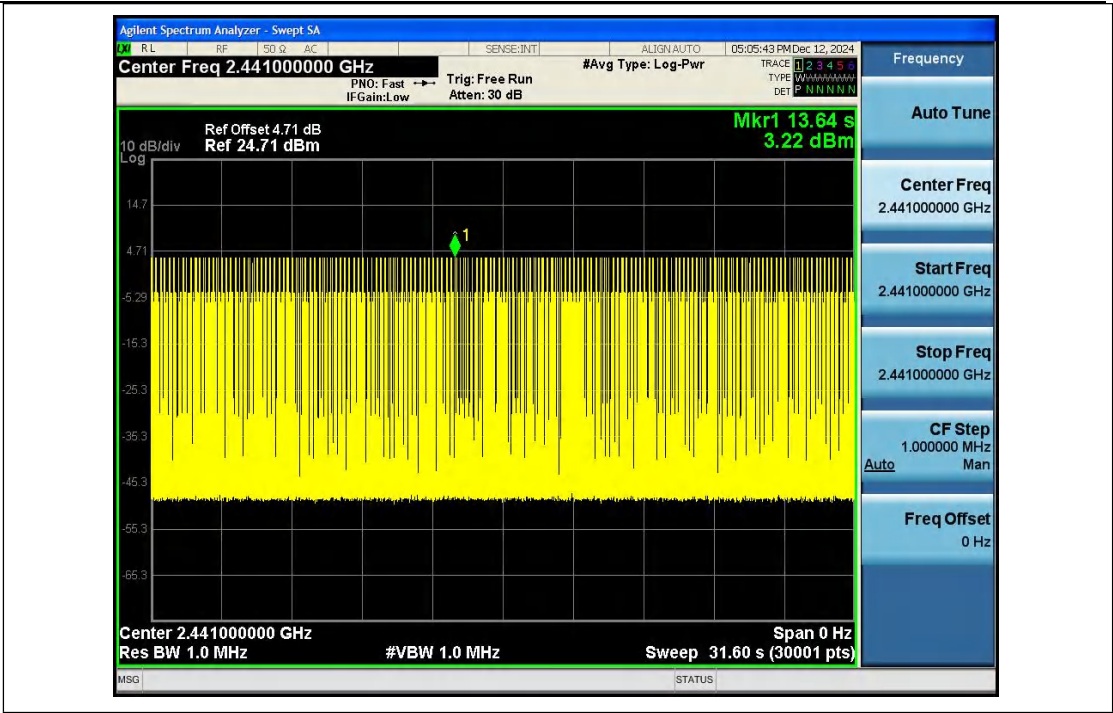


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH3_2441_00_One_Burst_Time

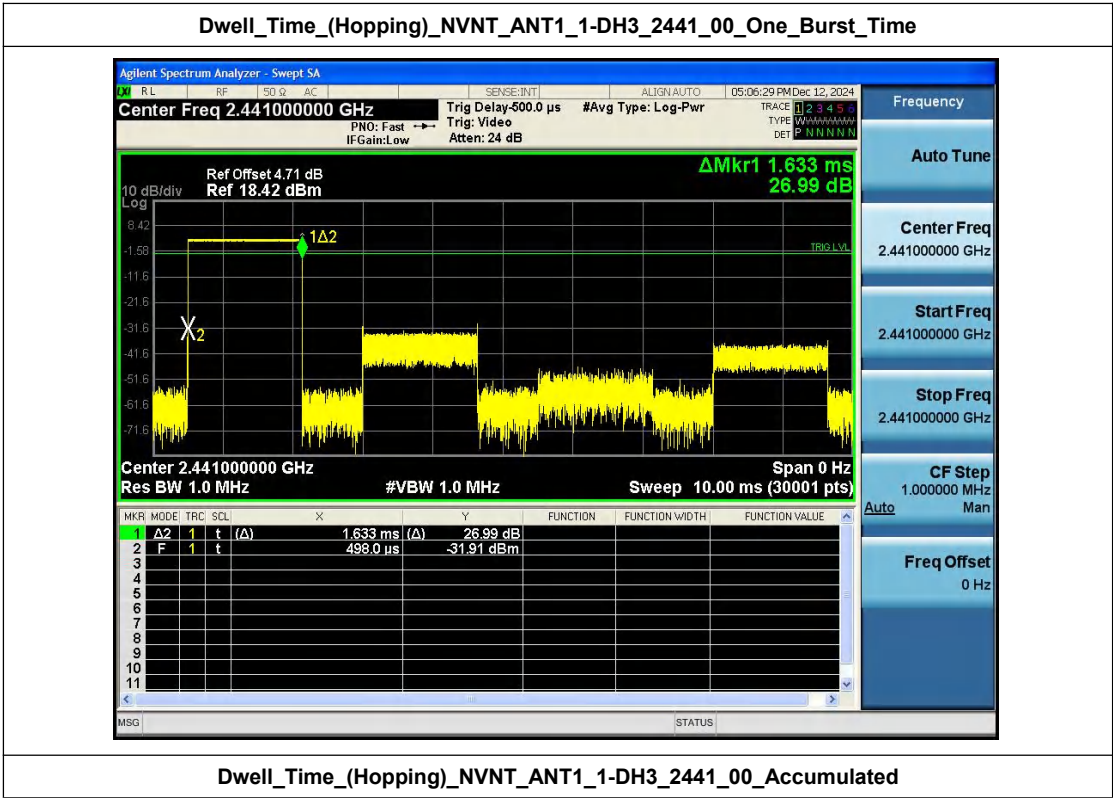


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH3_2441_00_Accumulated

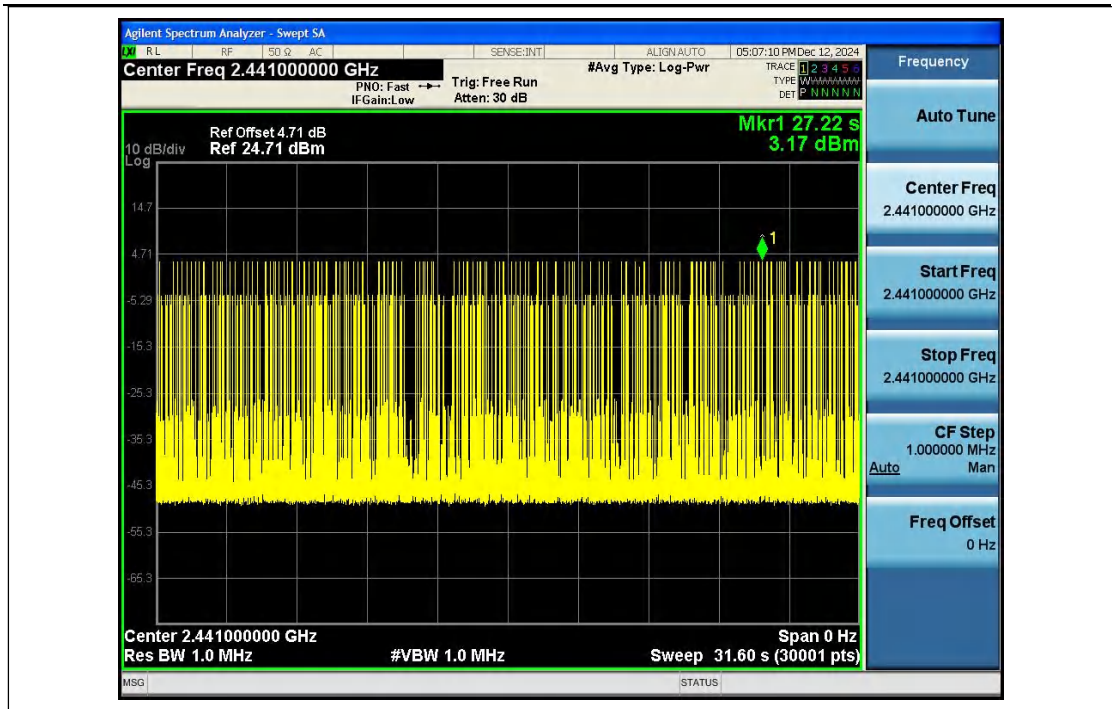


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH1_2441_00_One_Burst_Time

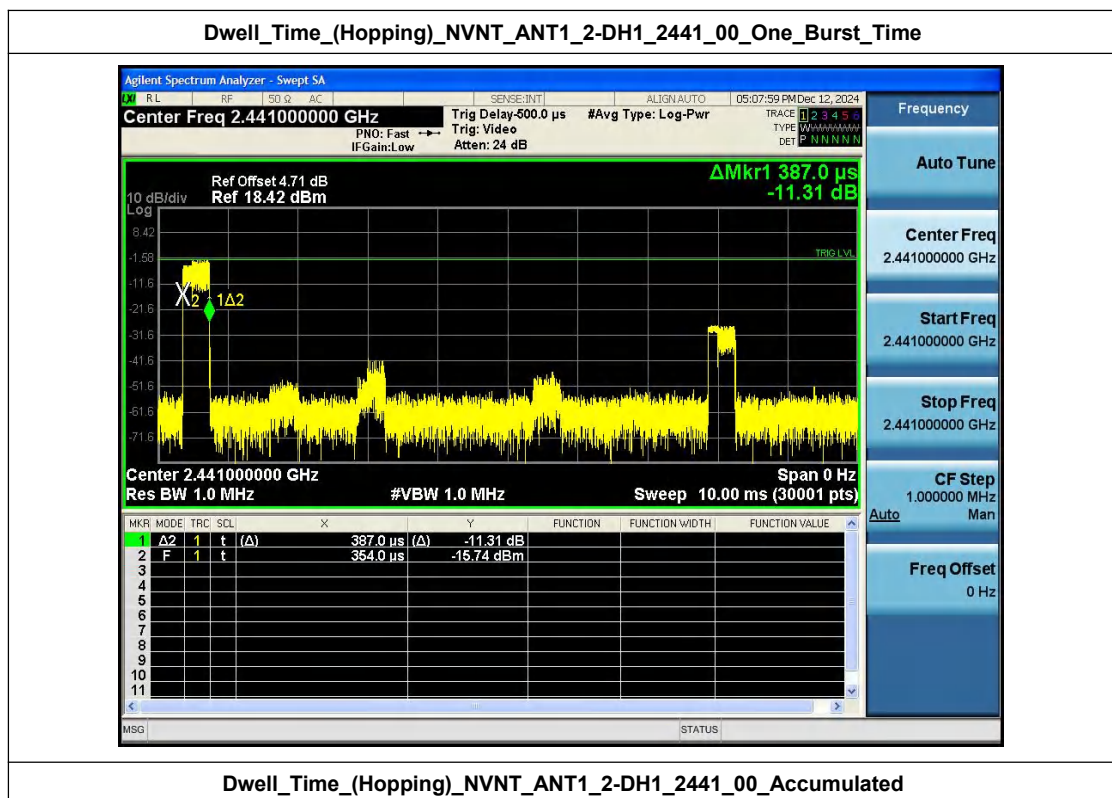


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH1_2441_00_Accumulated

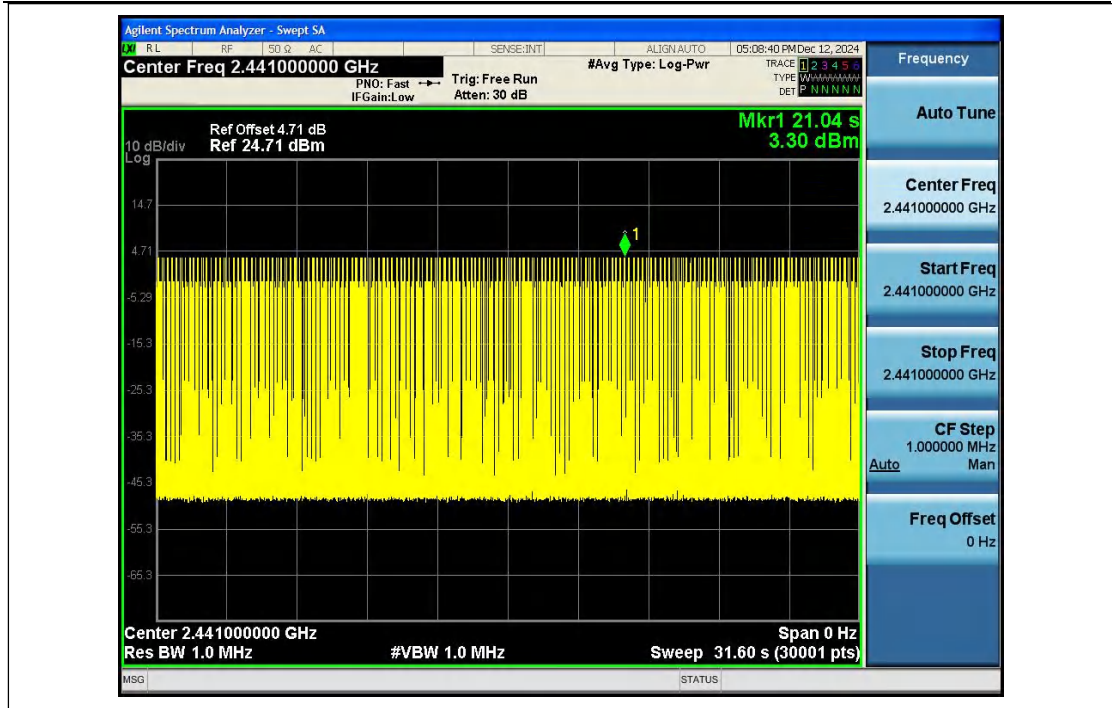


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_One_Burst_Time

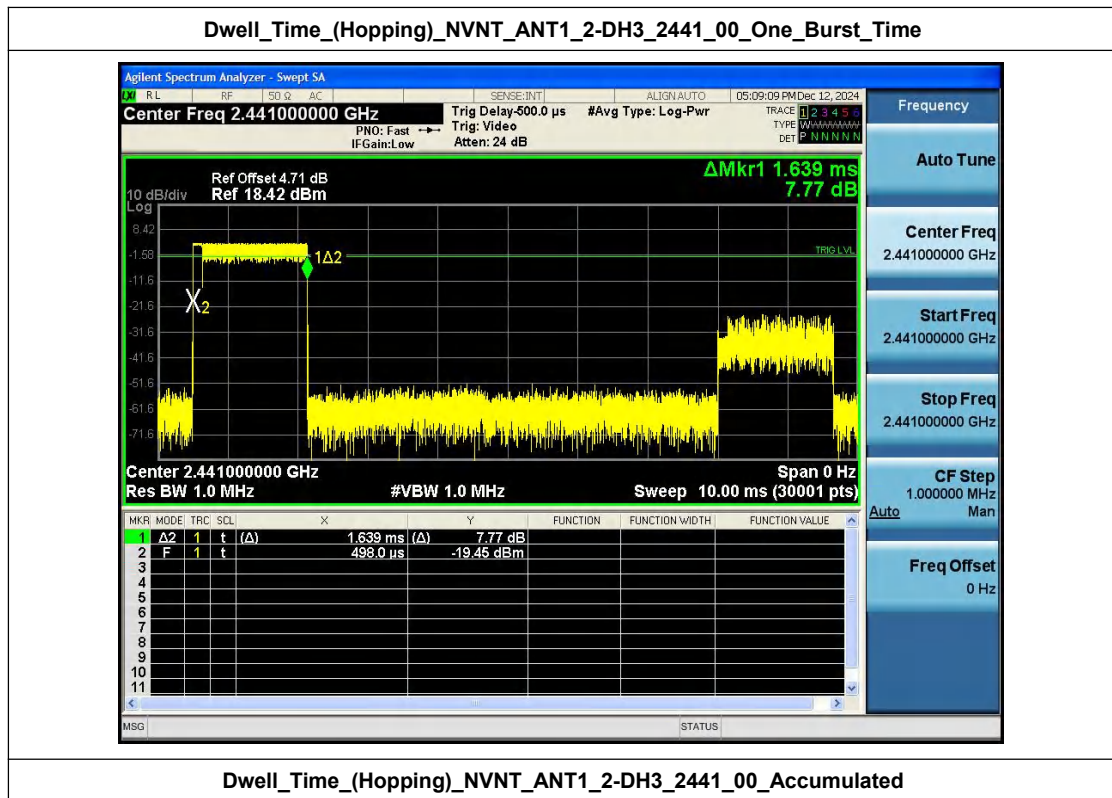


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_Accumulated

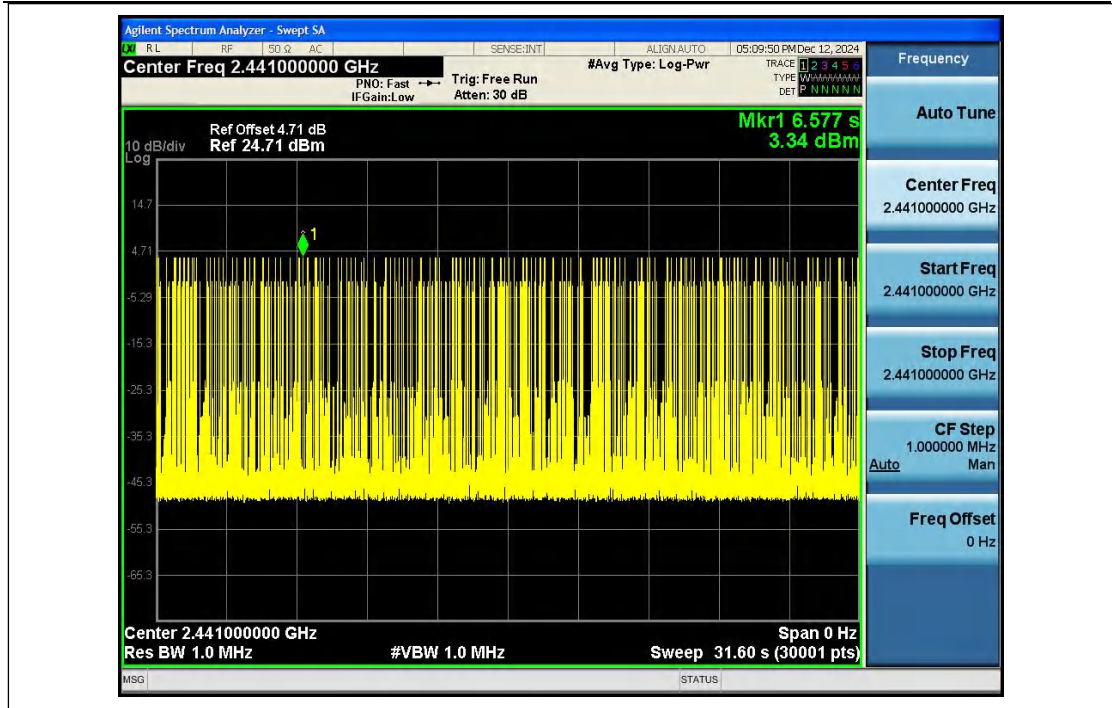


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH1_2441_00_One_Burst_Time

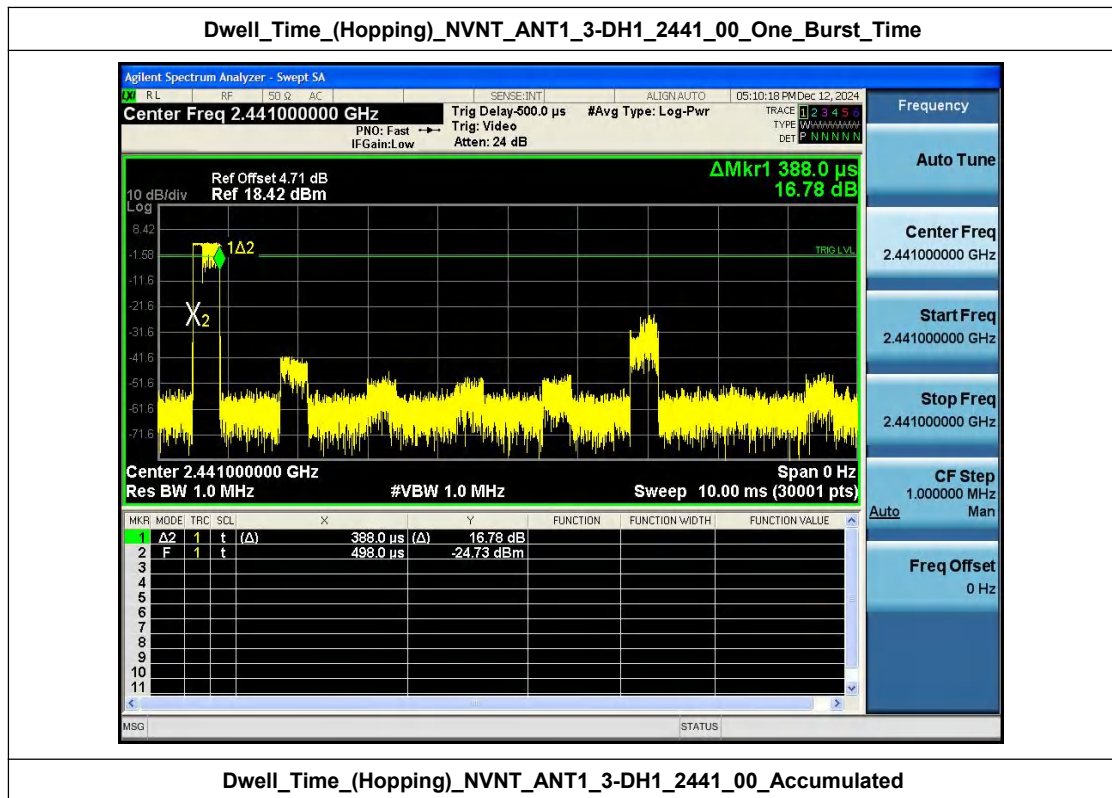


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH1_2441_00_Accumulated

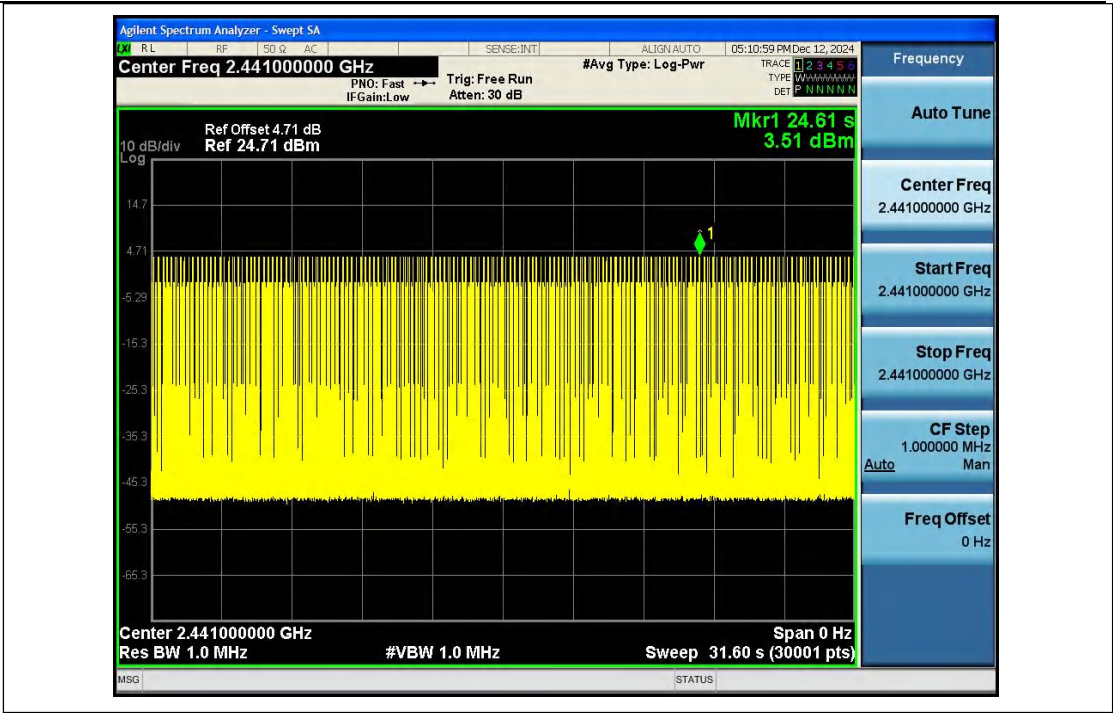

Dwell_Time_(Hopping)_NVNT_ANT1_3-DH3_2441_00_One_Burst_Time

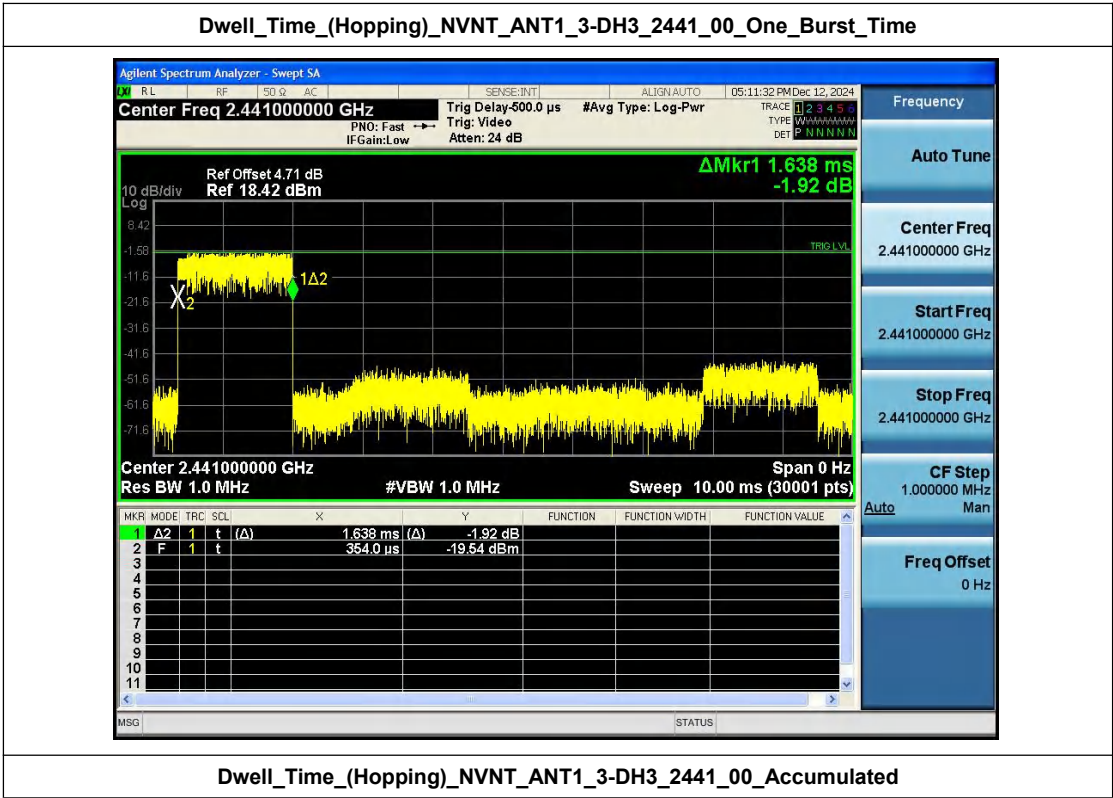

Dwell_Time_(Hopping)_NVNT_ANT1_3-DH3_2441_00_Accumulated

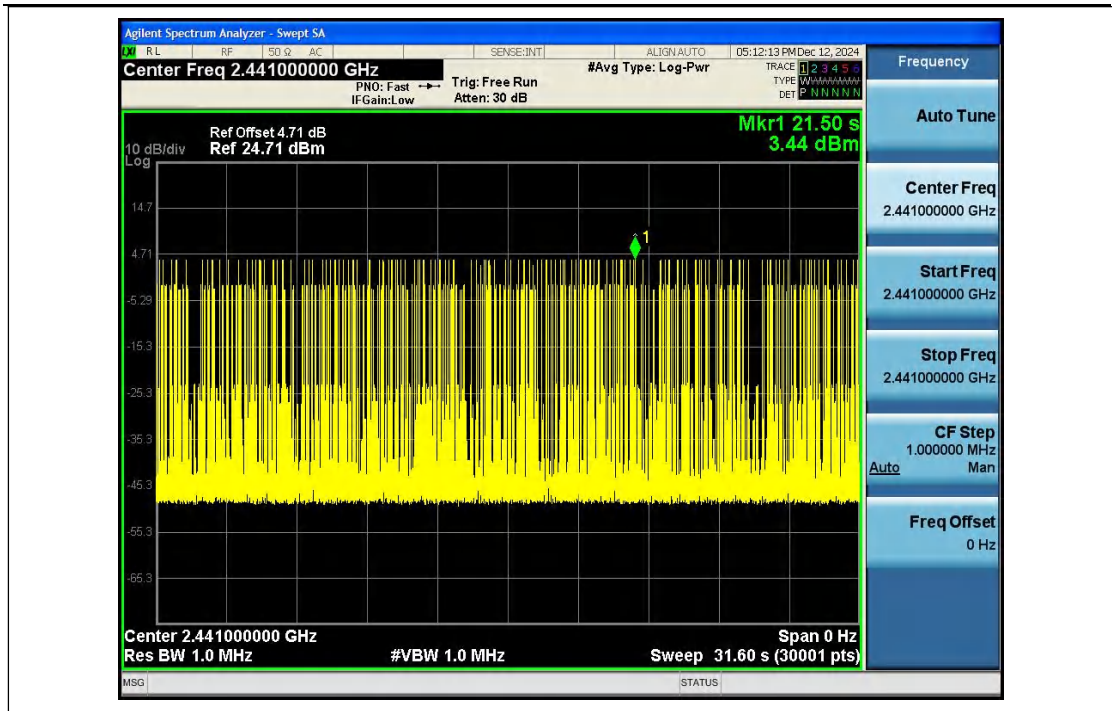

---END---

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com