


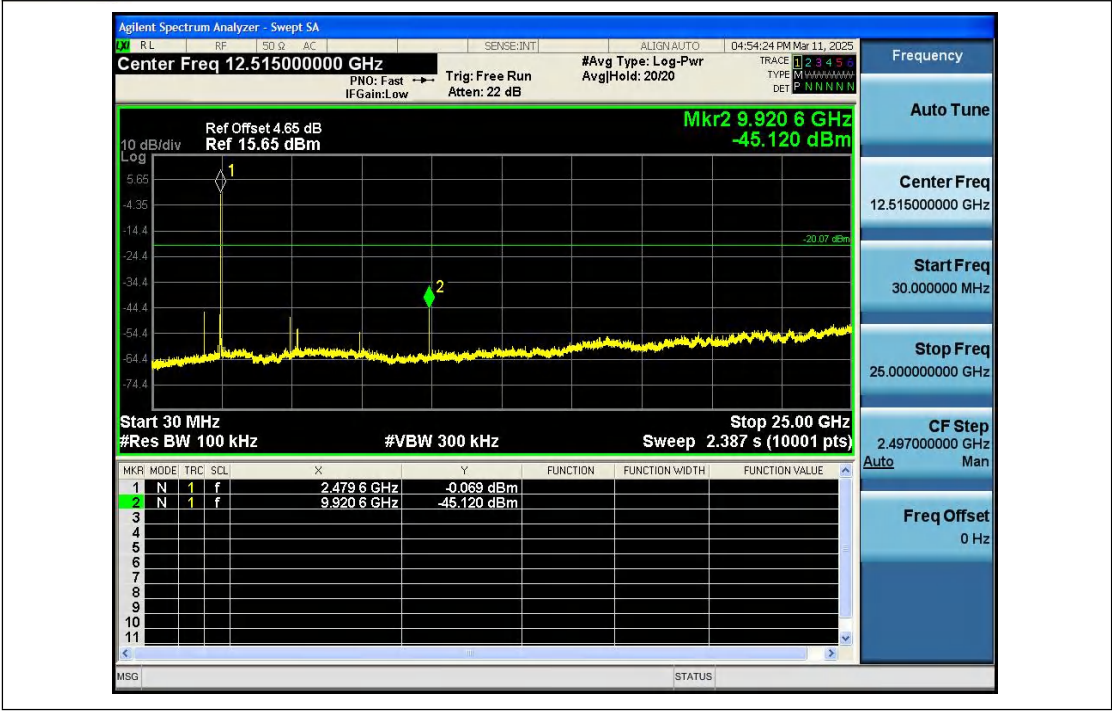

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com

Hotline
400-003-0500
www.anbotek.com


AppendixF: Bandedge

Condition	Antenna	Modulation	TX Mode	Ref_level(dBm)	Bandedge MAX.Value	Limit	Result
NVNT	ANT1	1-DH5	2402.00	1.759	-51.063	-18.241	Pass
NVNT	ANT1	1-DH5	Hopping_LCH	1.655	-49.348	-18.345	Pass
NVNT	ANT1	1-DH5	2480.00	-0.218	-54.773	-20.218	Pass
NVNT	ANT1	1-DH5	Hopping_HCH	-0.162	-56.475	-20.162	Pass
NVNT	ANT1	2-DH5	2402.00	1.842	-48.271	-18.158	Pass
NVNT	ANT1	2-DH5	Hopping_LCH	1.946	-50.306	-18.054	Pass
NVNT	ANT1	2-DH5	2480.00	-0.065	-55.531	-20.065	Pass
NVNT	ANT1	2-DH5	Hopping_HCH	0.004	-57.811	-19.996	Pass
NVNT	ANT1	3-DH5	2402.00	1.817	-51.745	-18.183	Pass
NVNT	ANT1	3-DH5	Hopping_LCH	1.825	-52.562	-18.175	Pass
NVNT	ANT1	3-DH5	2480.00	-0.068	-54.988	-20.068	Pass
NVNT	ANT1	3-DH5	Hopping_HCH	1.321	-56.034	-18.679	Pass


1_Reference_Level_NVNT_ANT1_1-DH5_2402_00

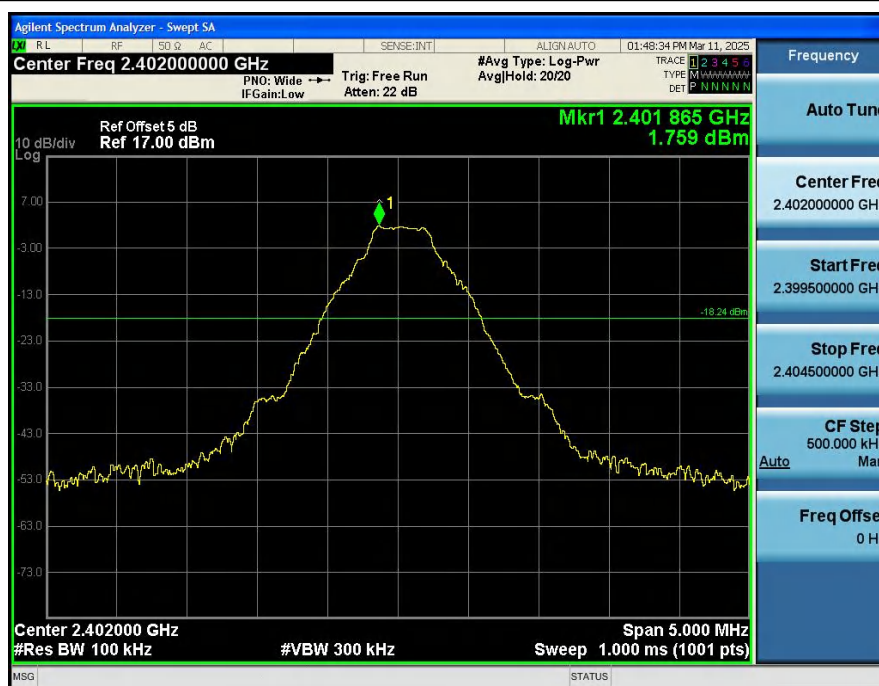

2_Bandedge_NVNT_ANT1_1-DH5_2402_00

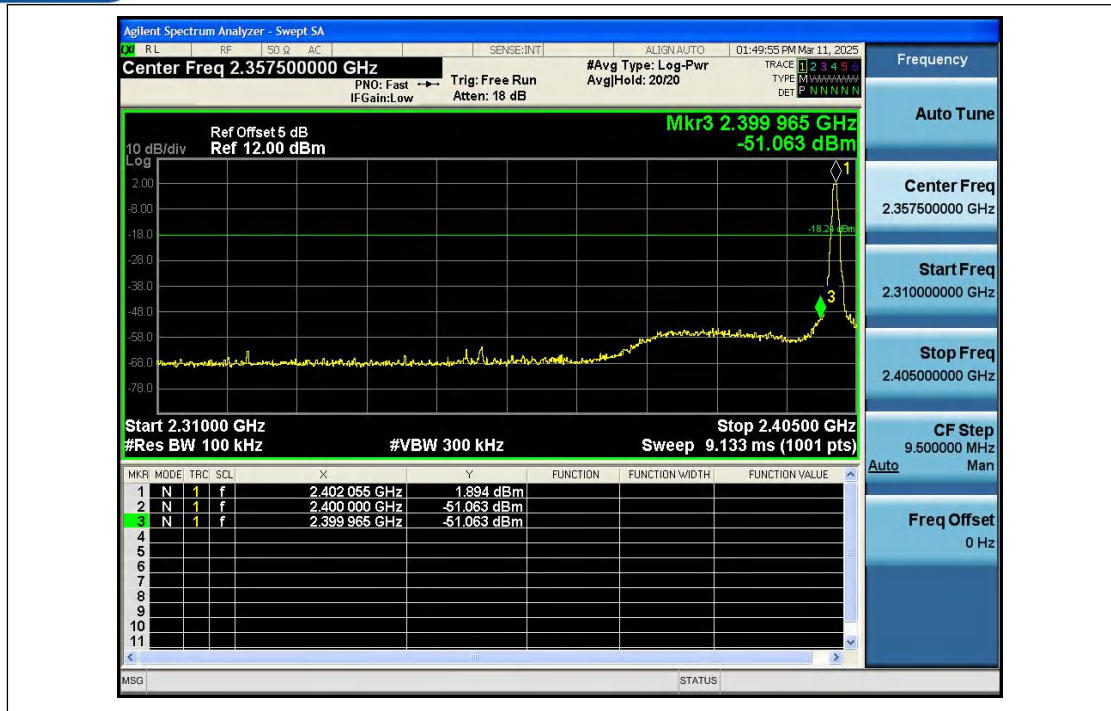


1_Reference_Level_Hopping_NVNT_ANT1_1-DH5_Hopping

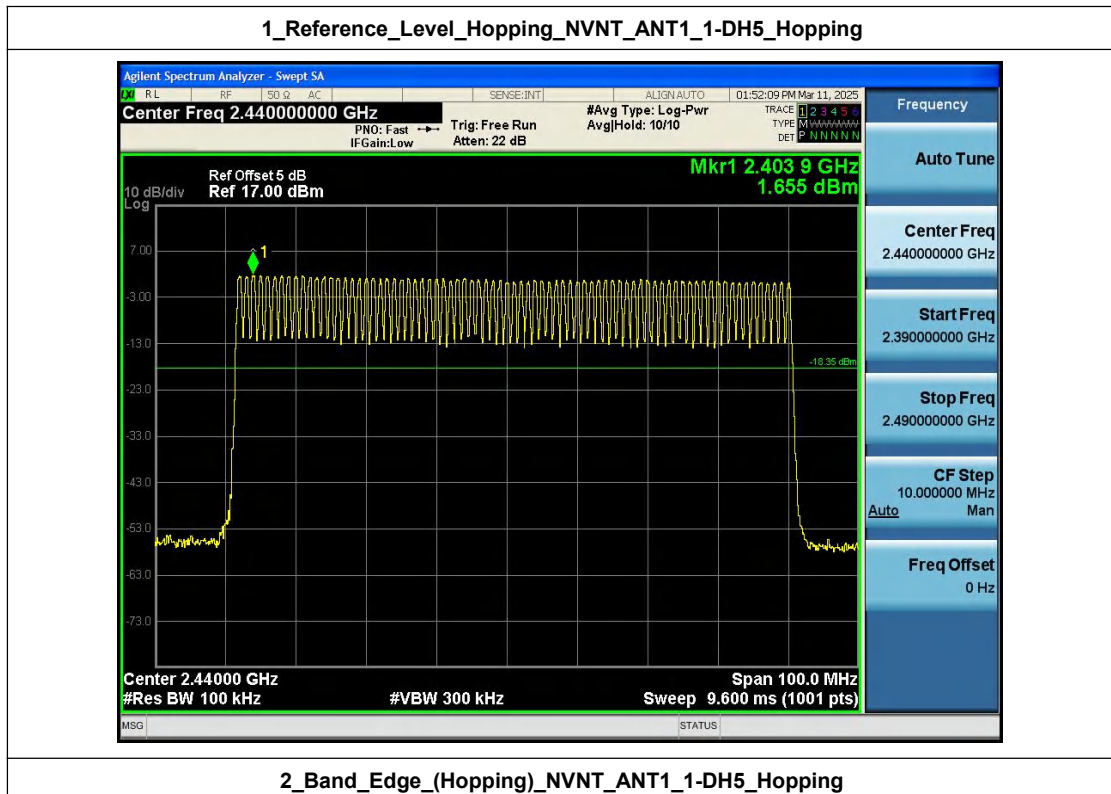


2_Band_Edge_(Hopping)_NVNT_ANT1_1-DH5_Hopping




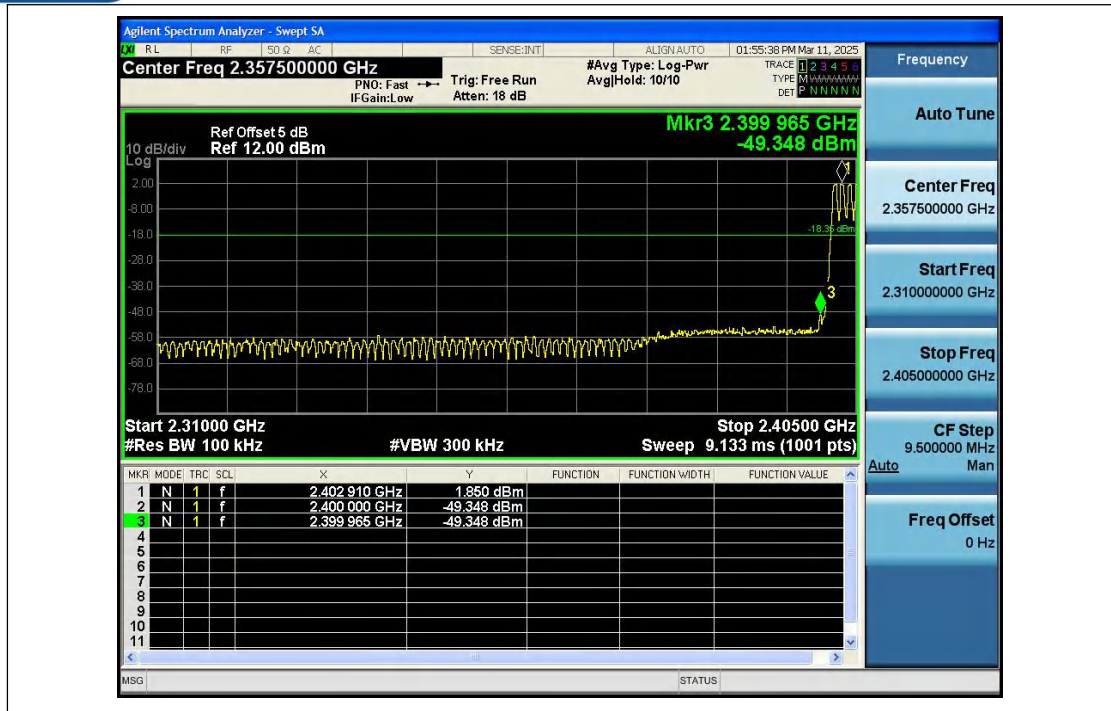


1_Reference_Level_NVNT_ANT1_1-DH5_2480_00

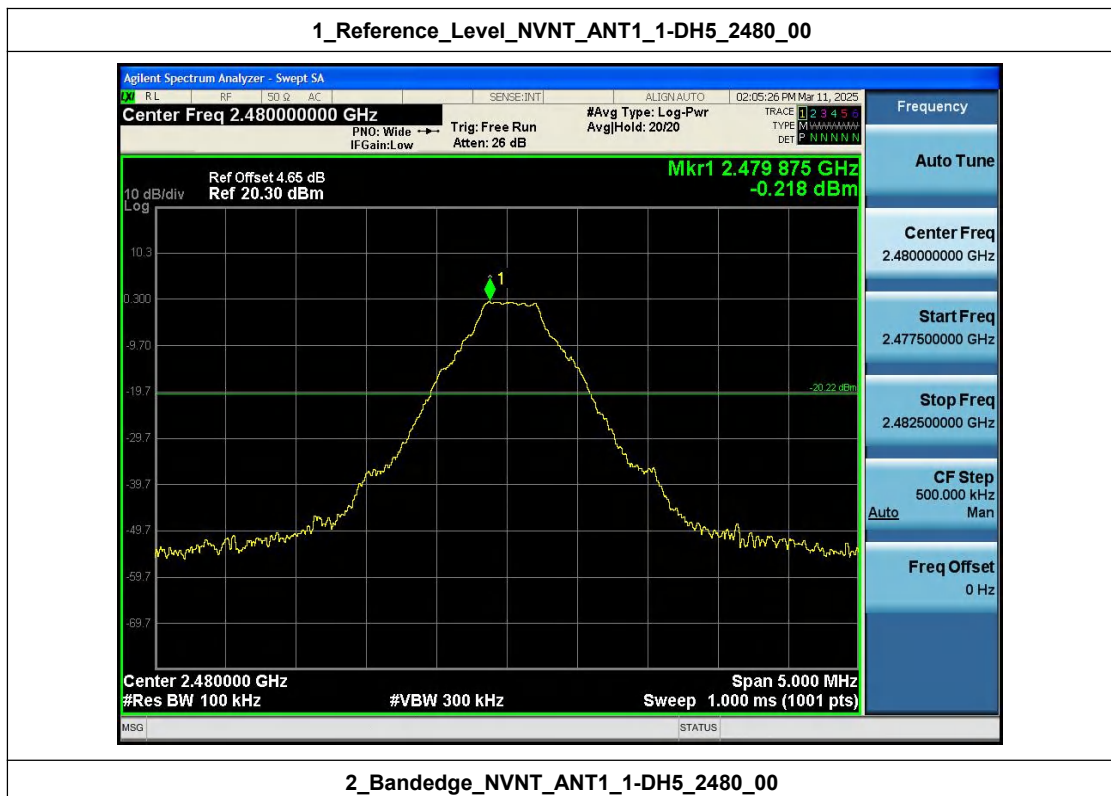


2_Bandedge_NVNT_ANT1_1-DH5_2480_00

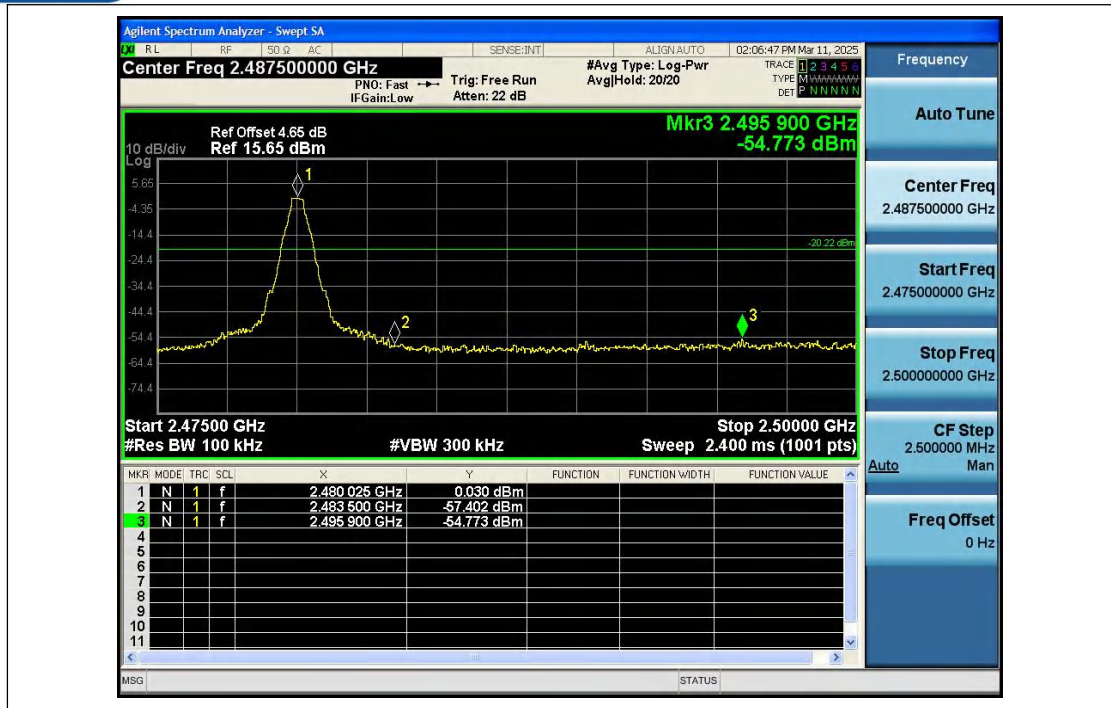


1_Reference_Level_Hopping_NVNT_ANT1_1-DH5_Hopping

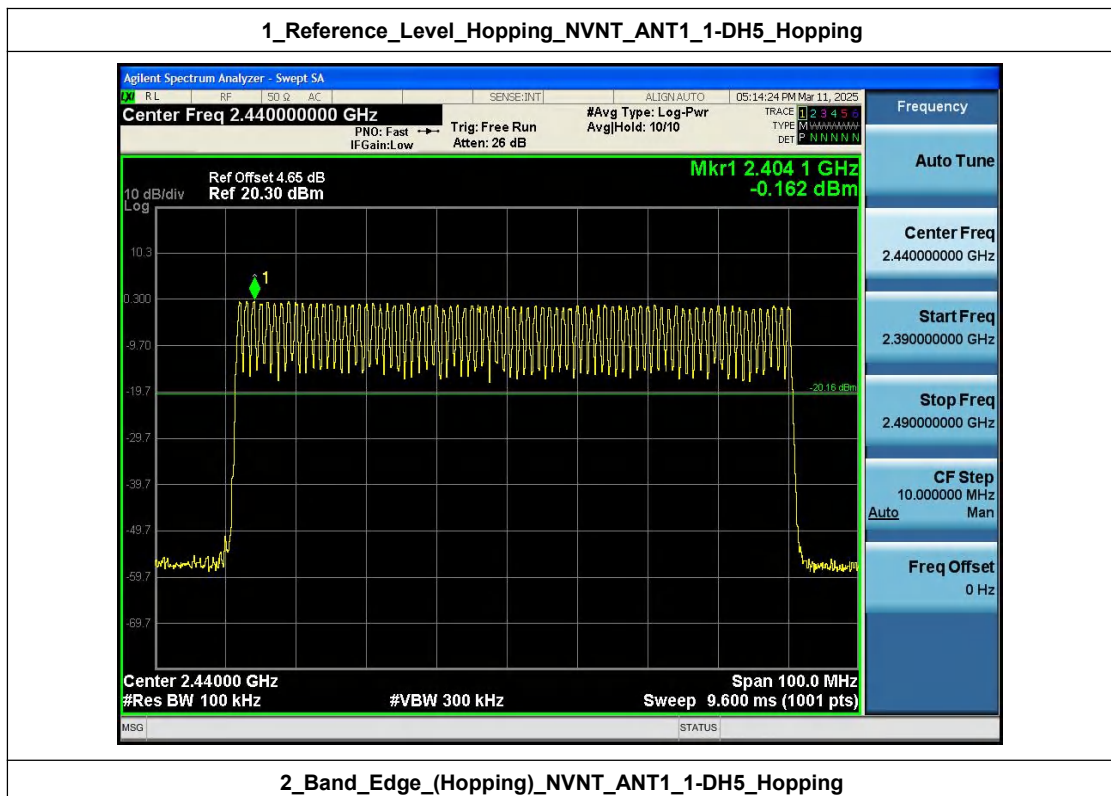


2_Band_Edge_(Hopping)_NVNT_ANT1_1-DH5_Hopping

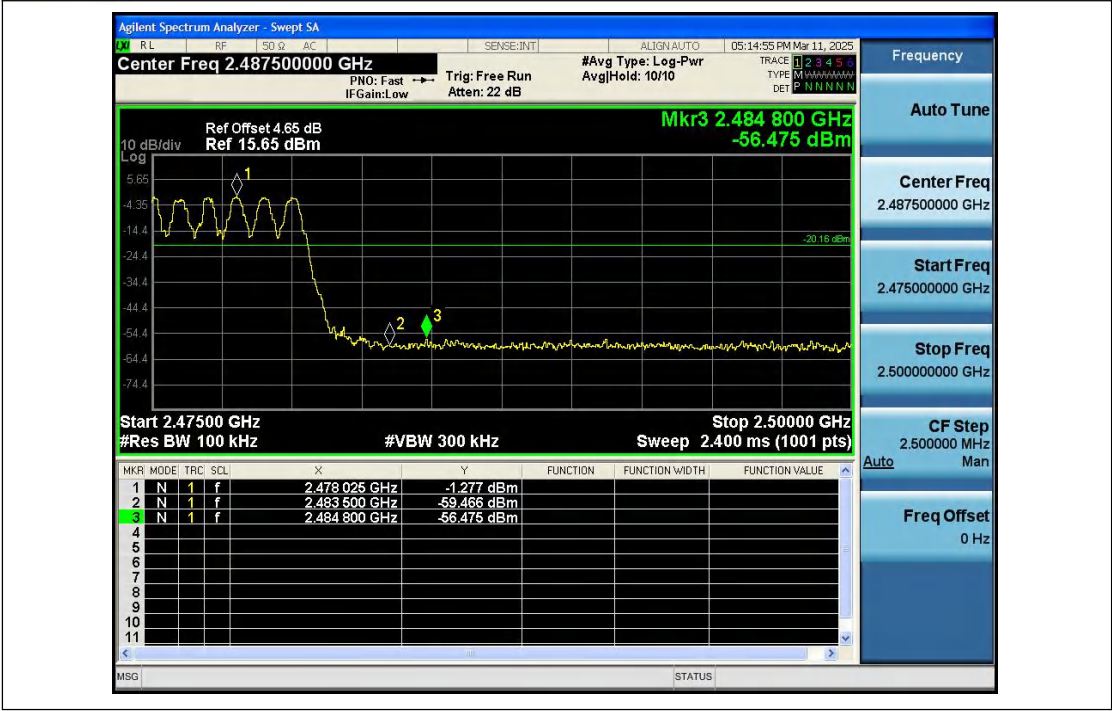


1_Reference_Level_NVNT_ANT1_2-DH5_2402_00

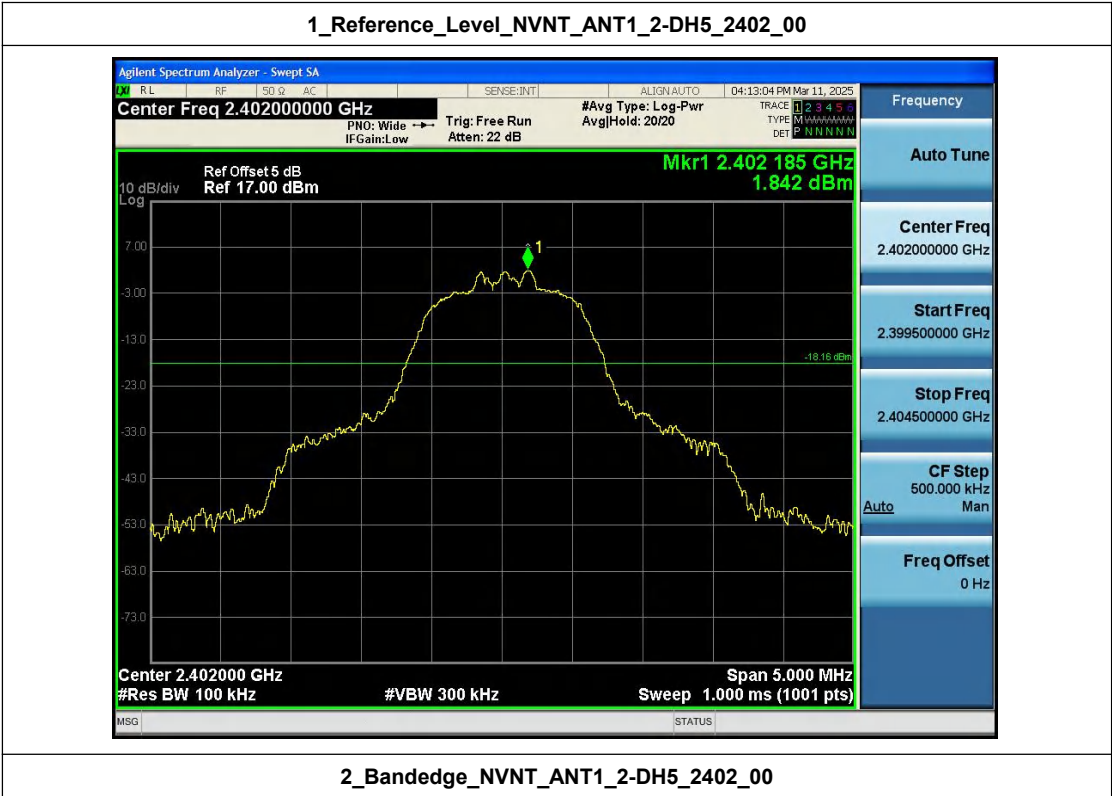


2_Bandedge_NVNT_ANT1_2-DH5_2402_00

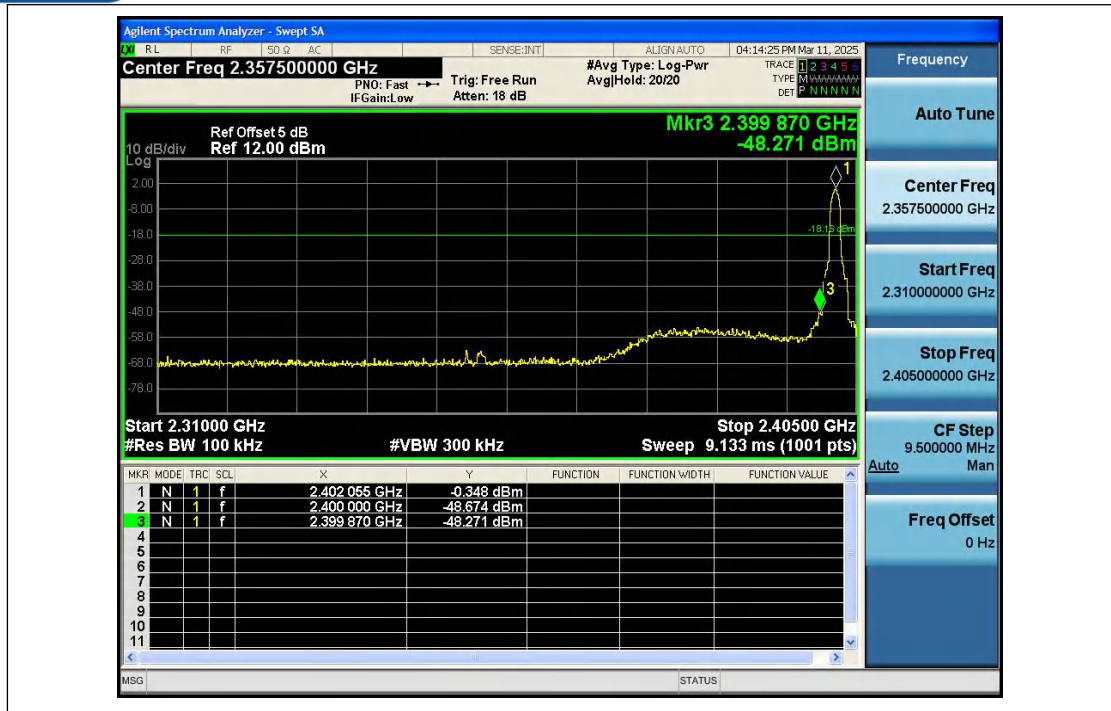


1_Reference_Level_Hopping_NVNT_ANT1_2-DH5_Hopping

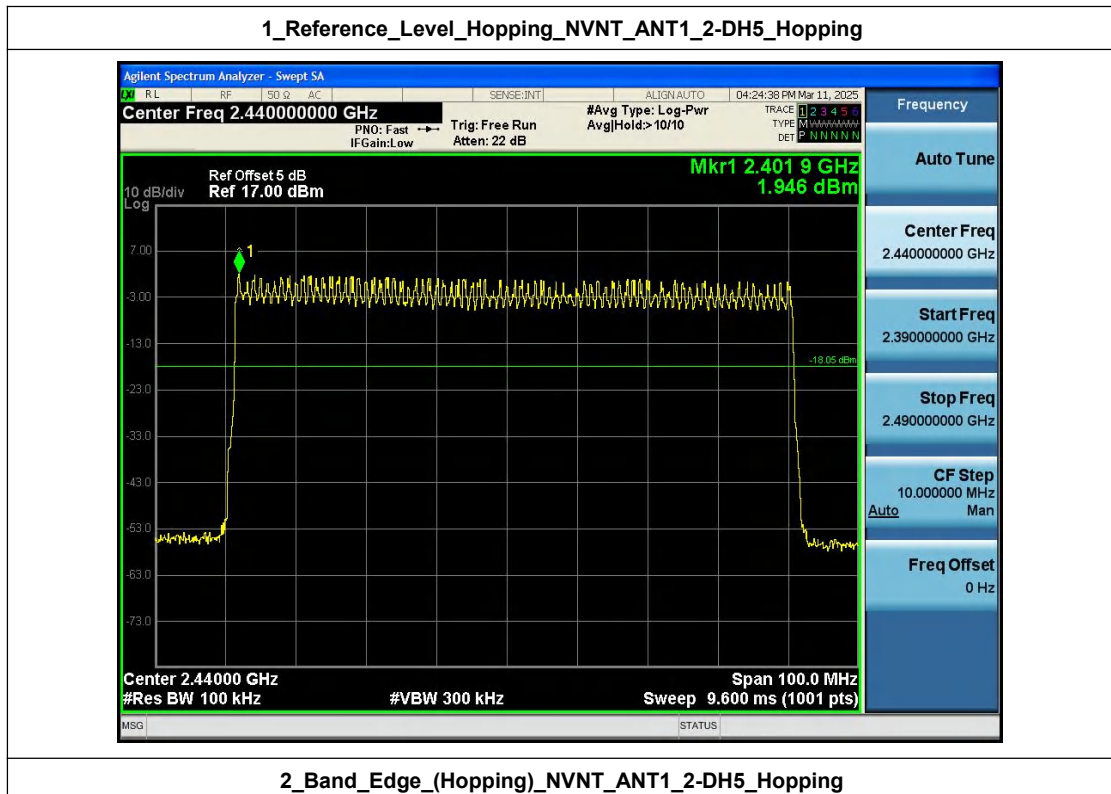


2_Band_Edge_(Hopping)_NVNT_ANT1_2-DH5_Hopping

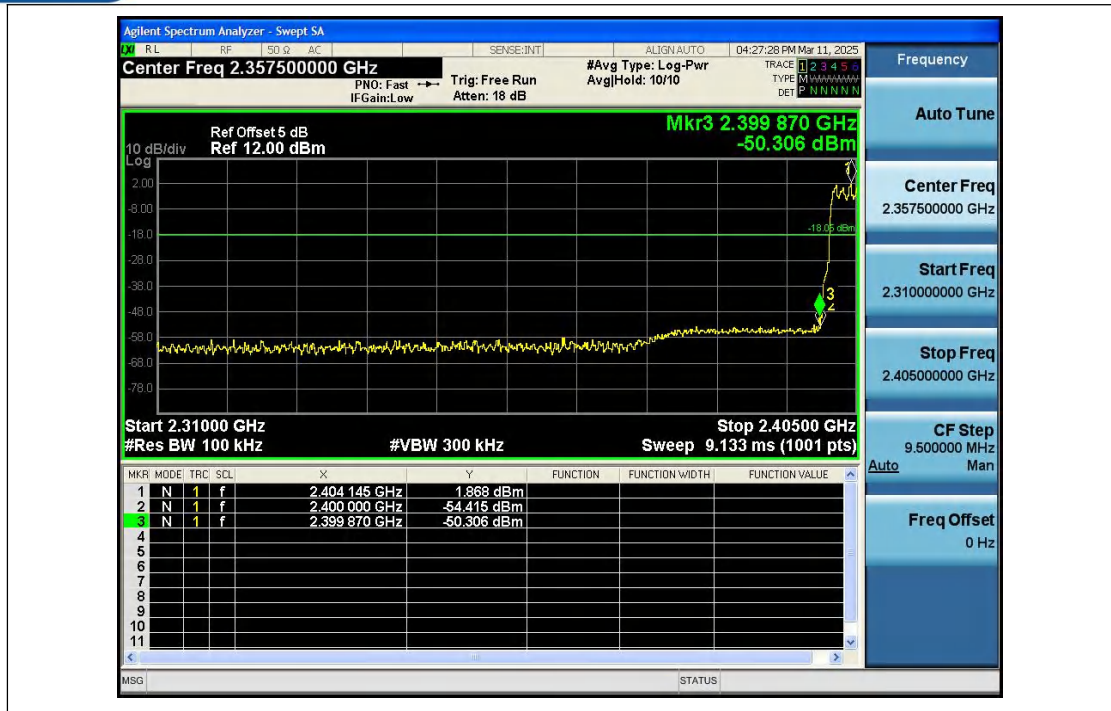


1_Reference_Level_NVNT_ANT1_2-DH5_2480_00

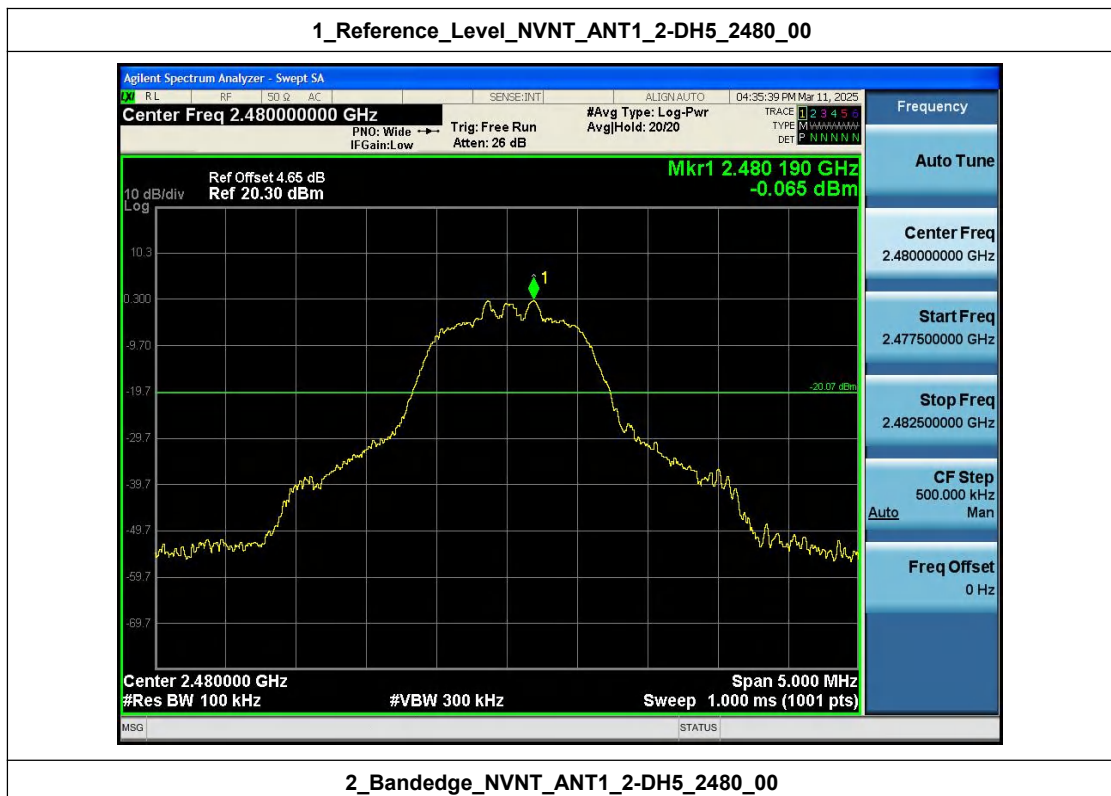


2_Bandedge_NVNT_ANT1_2-DH5_2480_00

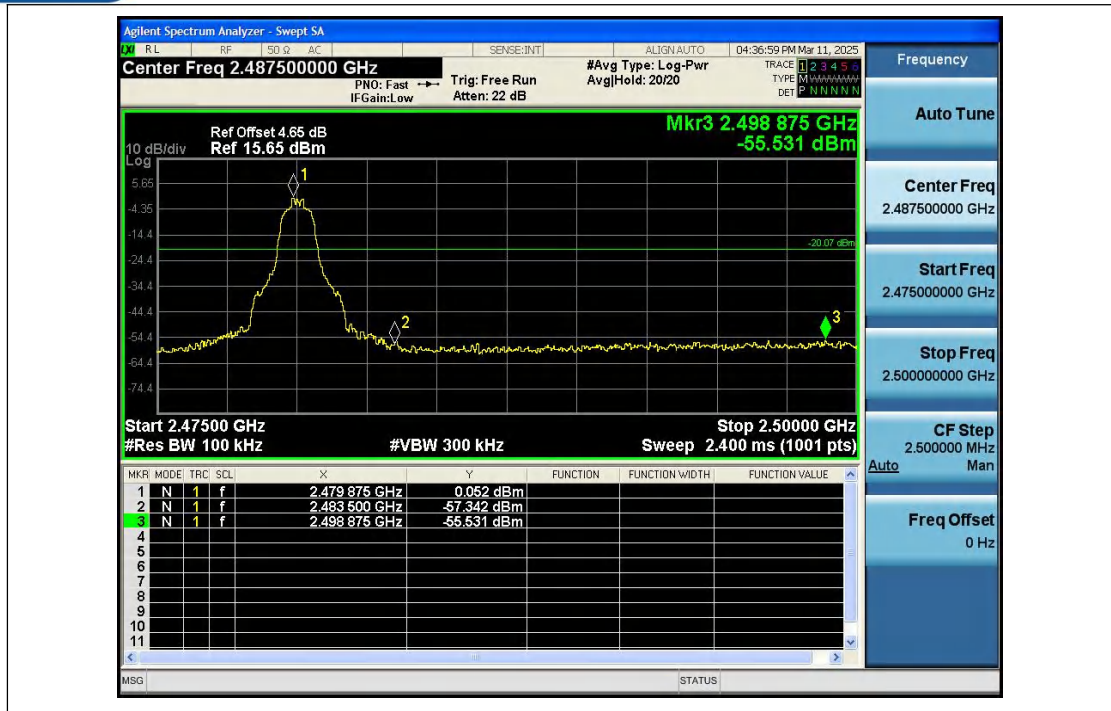


1_Reference_Level_Hopping_NVNT_ANT1_2-DH5_Hopping

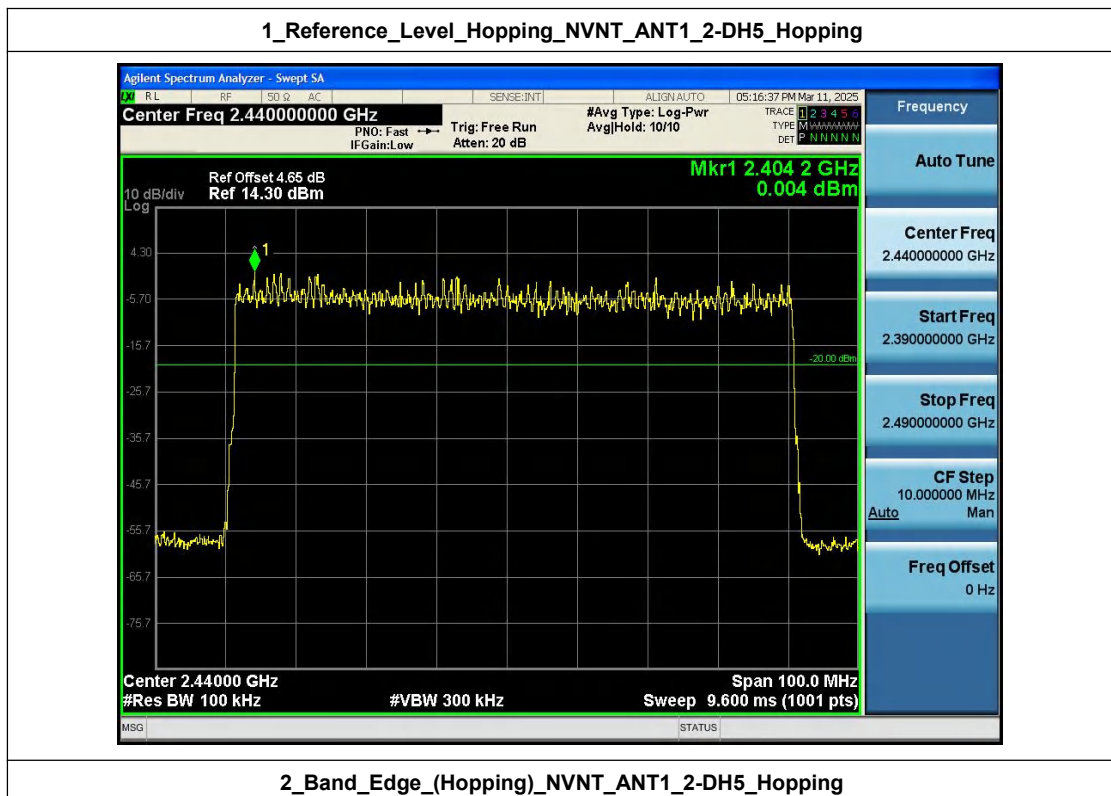


2_Band_Edge_(Hopping)_NVNT_ANT1_2-DH5_Hopping

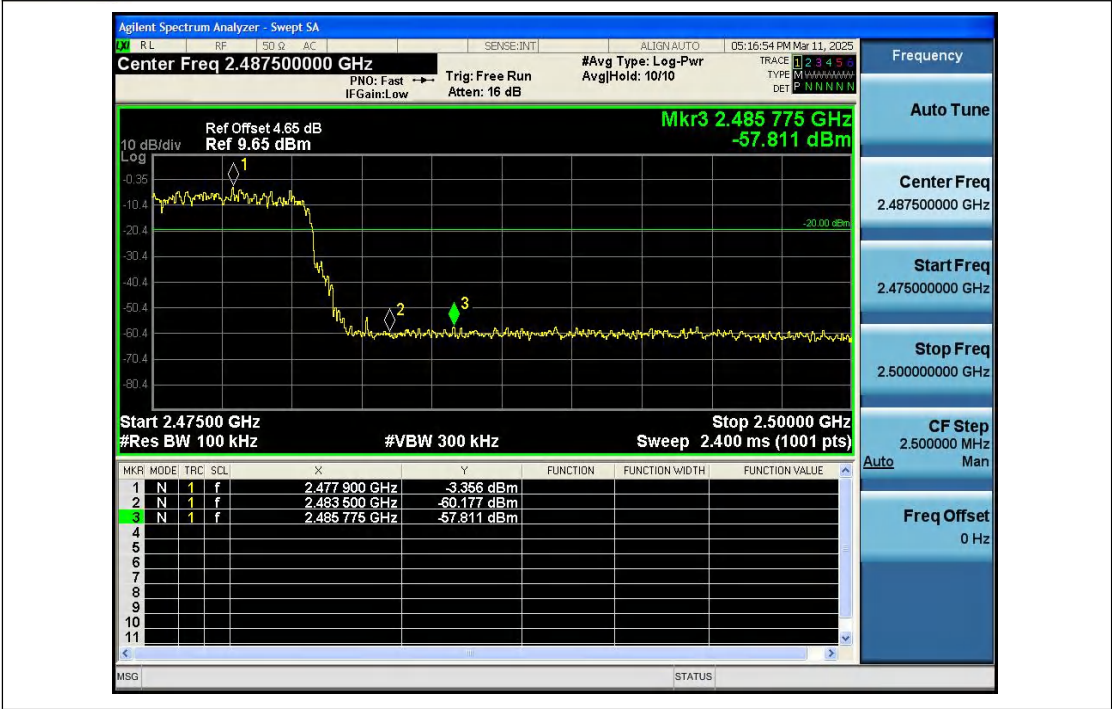


1_Reference_Level_NVNT_ANT1_3-DH5_2402_00

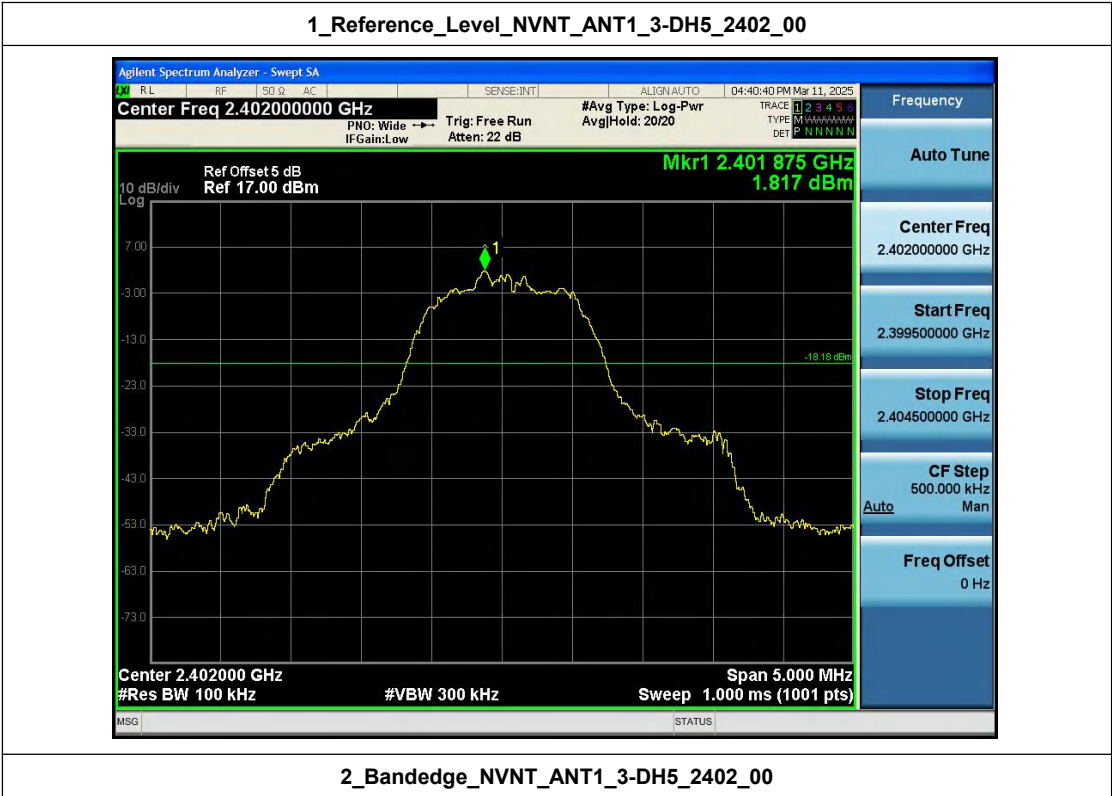

2_Bandedge_NVNT_ANT1_3-DH5_2402_00

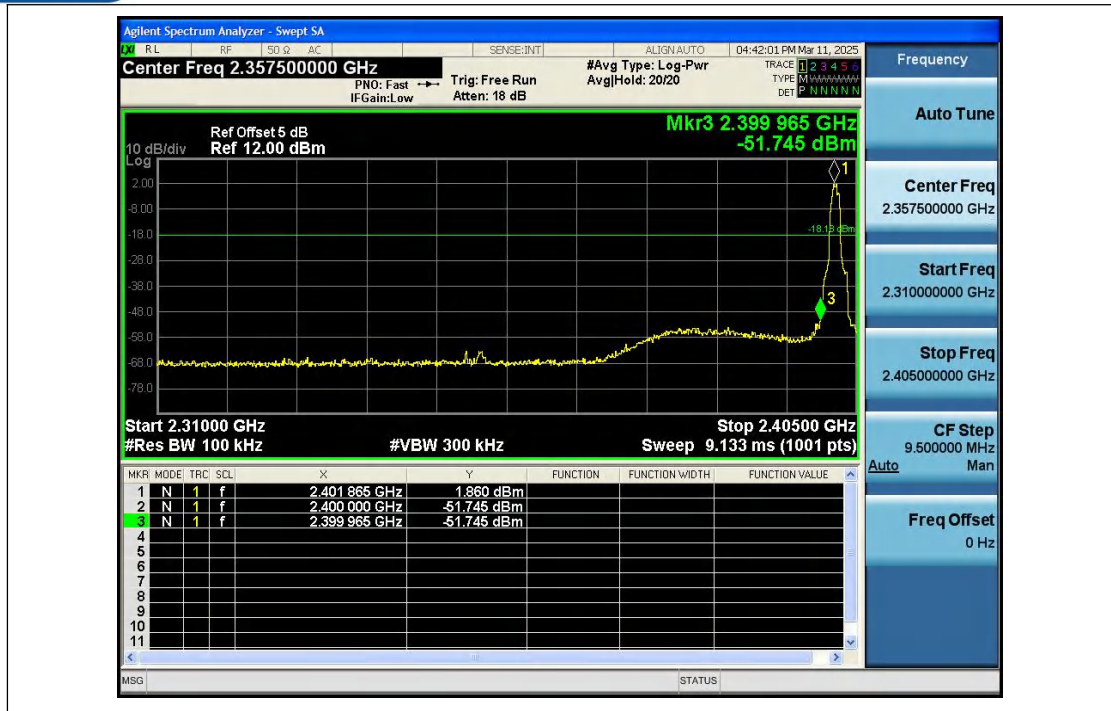

1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

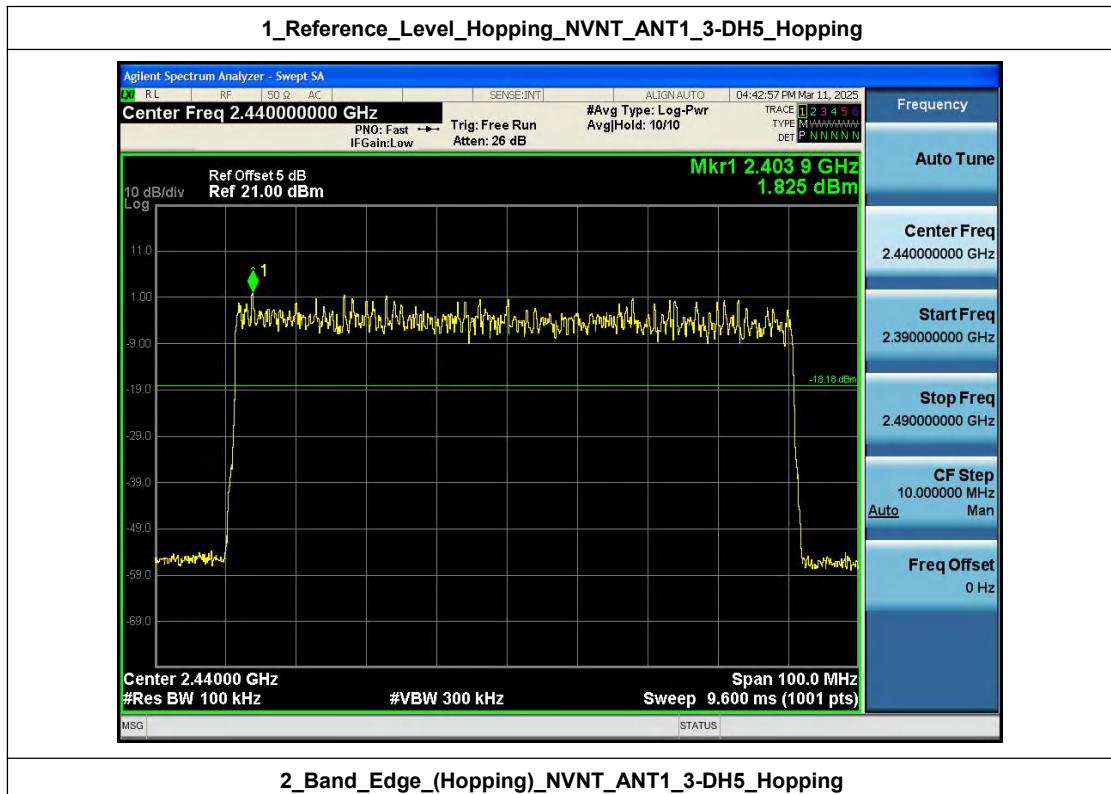


2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com

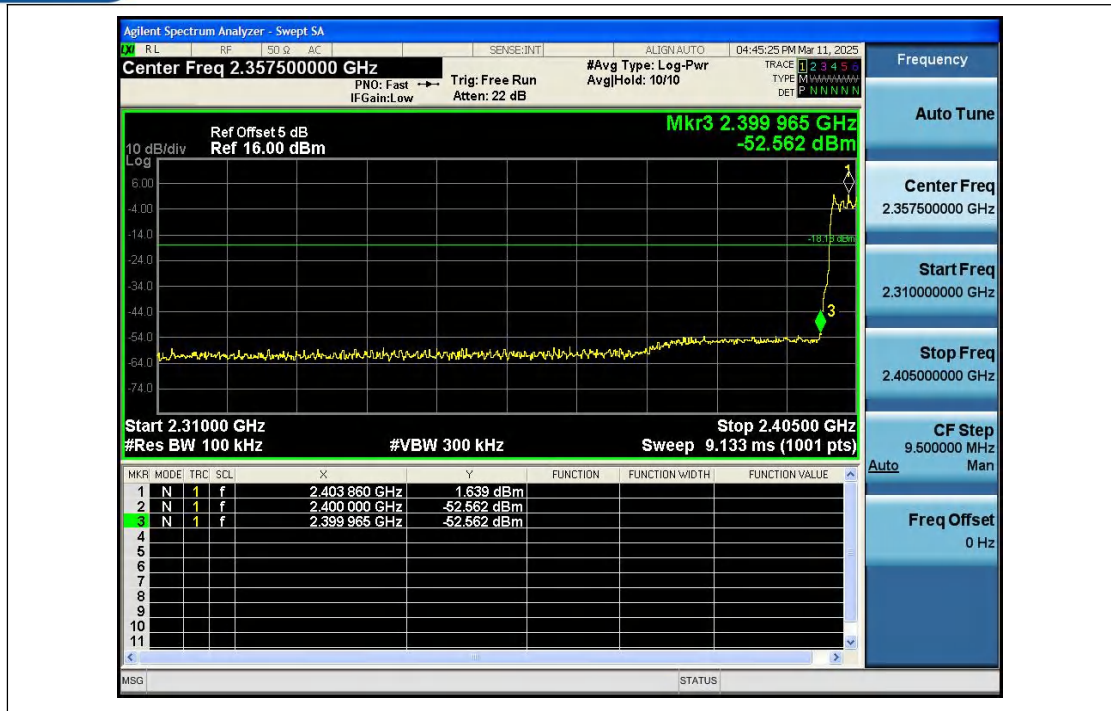


1_Reference_Level_NVNT_ANT1_3-DH5_2480_00

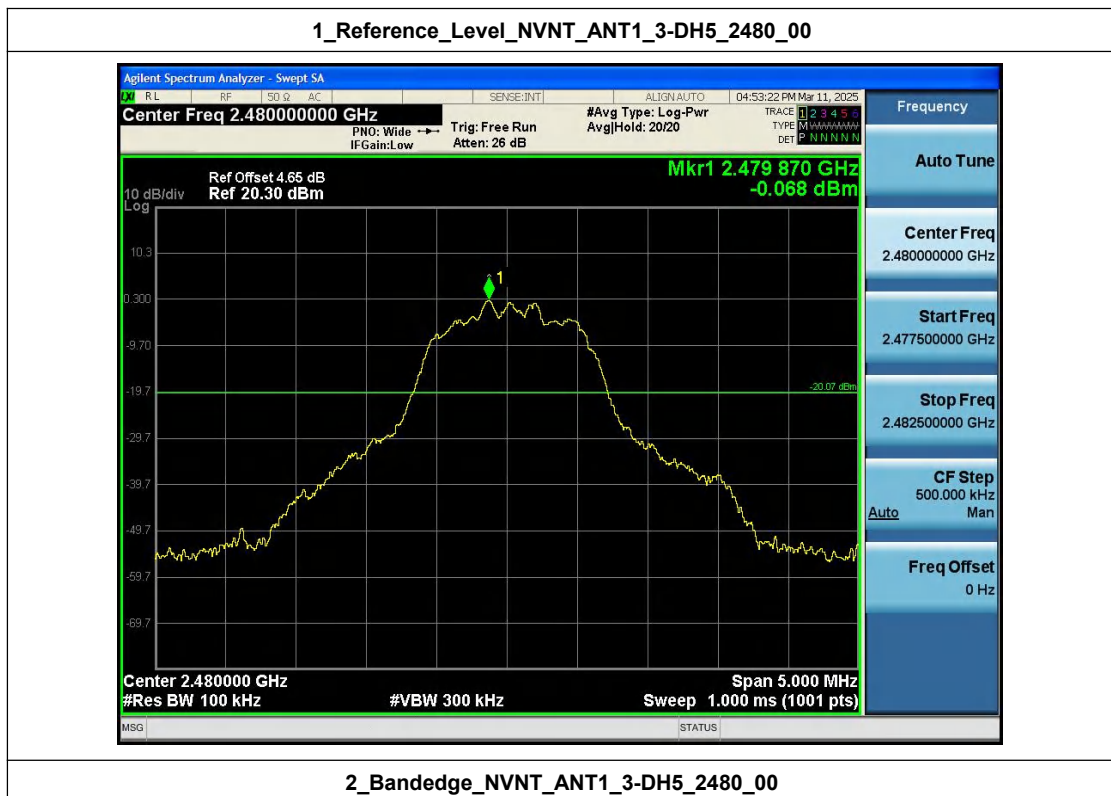


2_Bandedge_NVNT_ANT1_3-DH5_2480_00



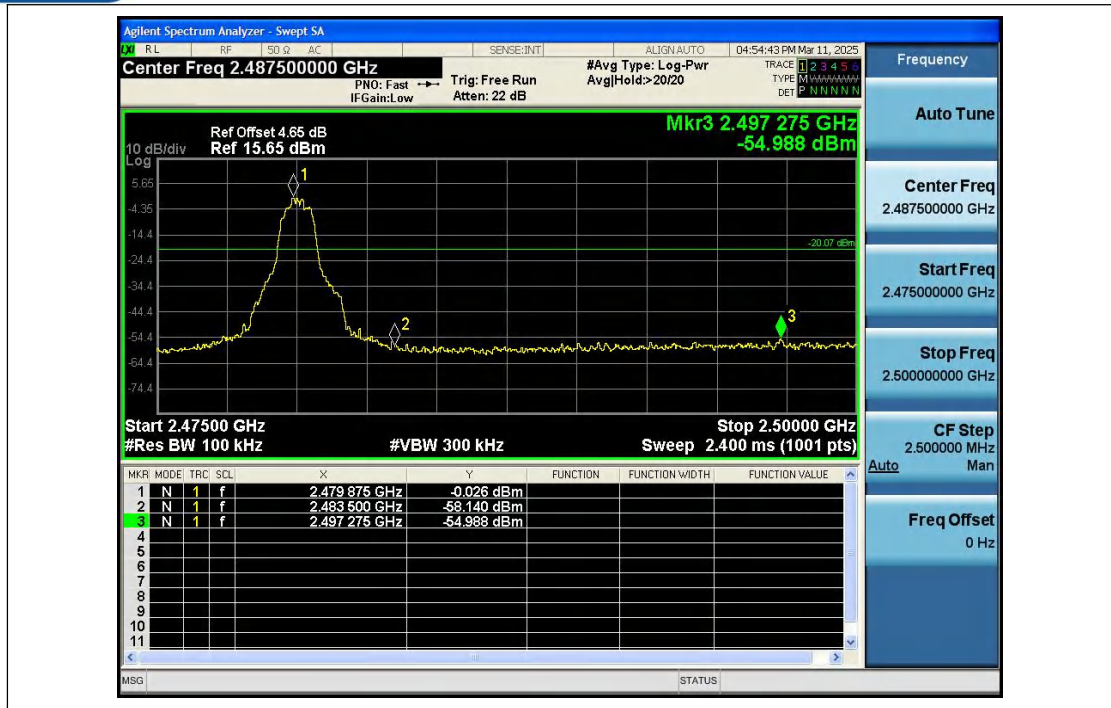

1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

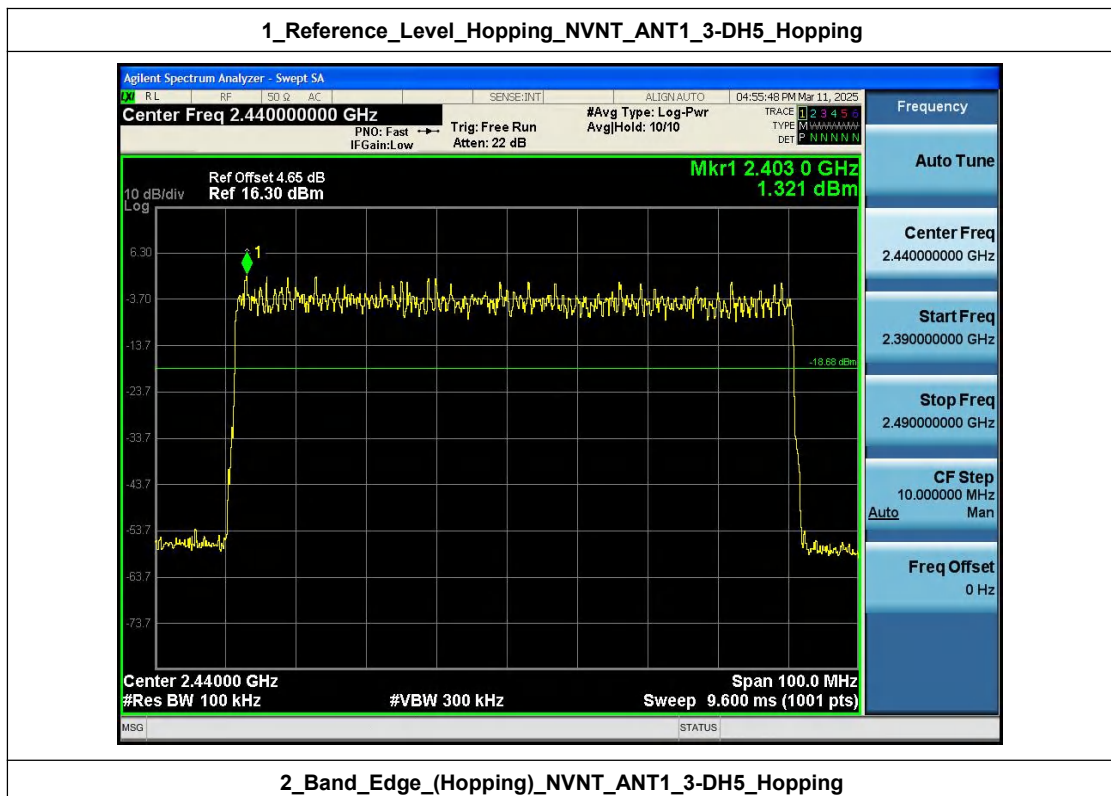

2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping



Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com

Appendix G: Carrier Frequencies Separation (Hopping)

Condition	Antenna	Modulation	Frequency(MHz)	Hopping NO.0 (MHz)	Hopping NO.1 (MHz)	Carrier Frequencies Separation(MHz)	Limit(MHz)	Result
NVNT	ANT1	1-DH5	2441.00	2440.939	2441.905	0.97	0.713	Pass
NVNT	ANT1	2-DH5	2441.00	2440.852	2442.163	1.31	0.895	Pass
NVNT	ANT1	3-DH5	2441.00	2440.984	2441.992	1.01	0.869	Pass


Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_1-DH5_Hopping

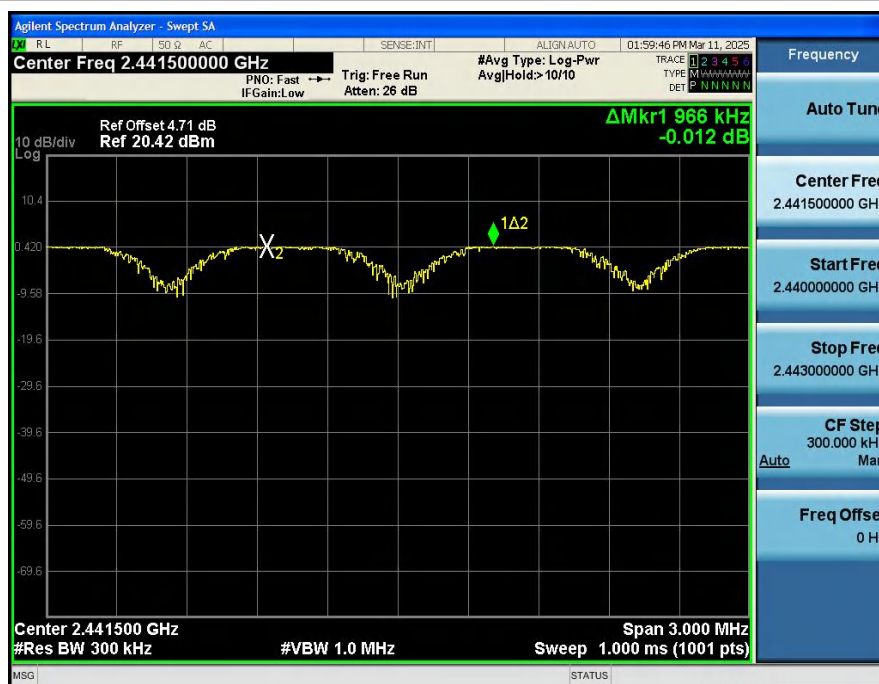

Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_2-DH5_Hopping



Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_3-DH5_Hopping

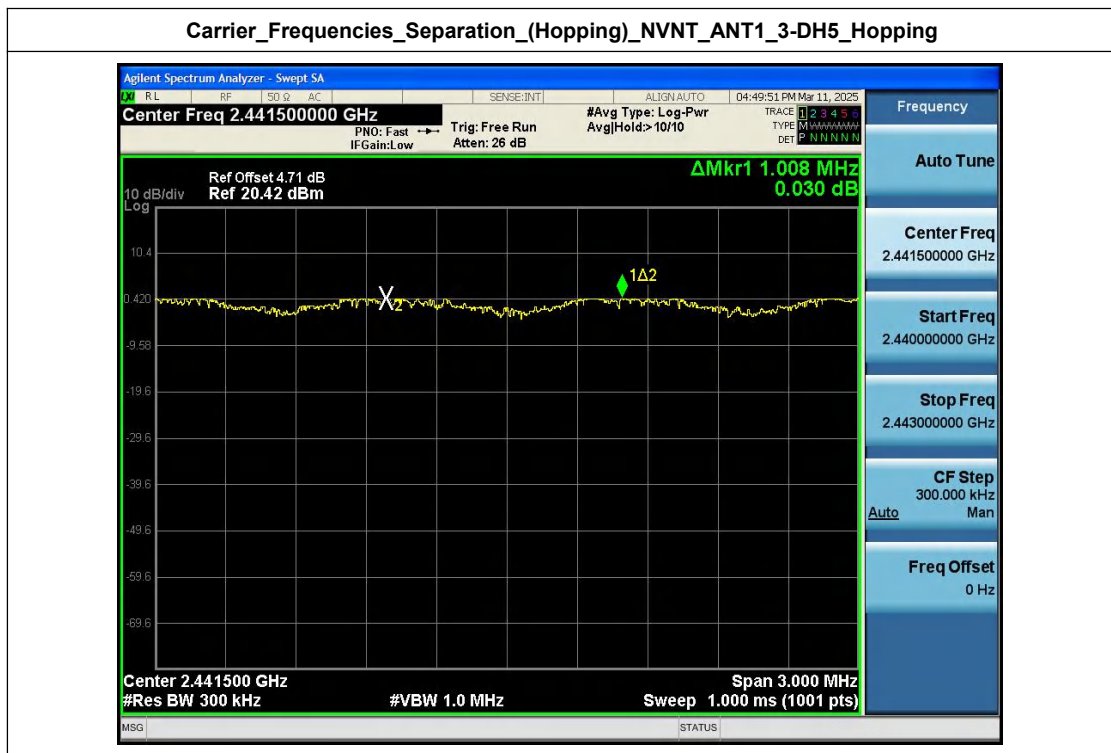

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com


Appendix H: Number of Hopping Channel (Hopping)


Condition	Antenna	Modulation	Hopping Num	Limit	Result
NVNT	ANT1	1-DH5	79	15	Pass
NVNT	ANT1	2-DH5	79	15	Pass
NVNT	ANT1	3-DH5	79	15	Pass

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_1-DH5_Hopping

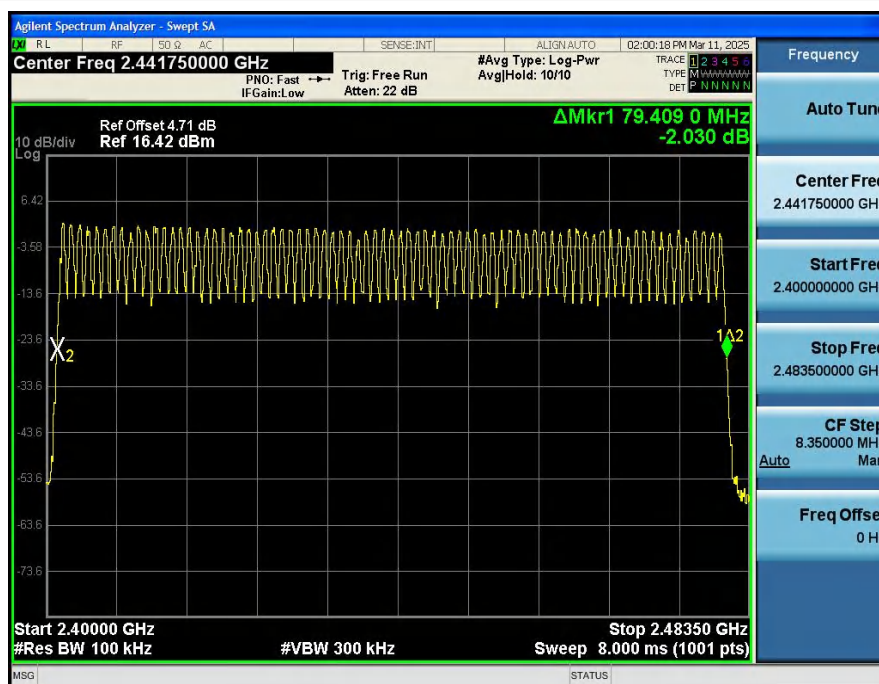

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_2-DH5_Hopping

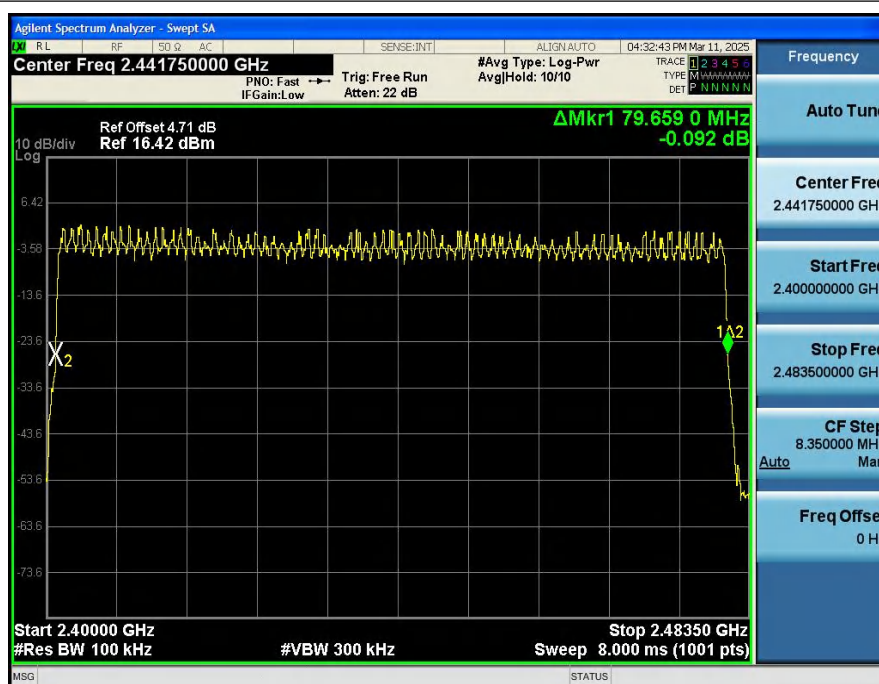

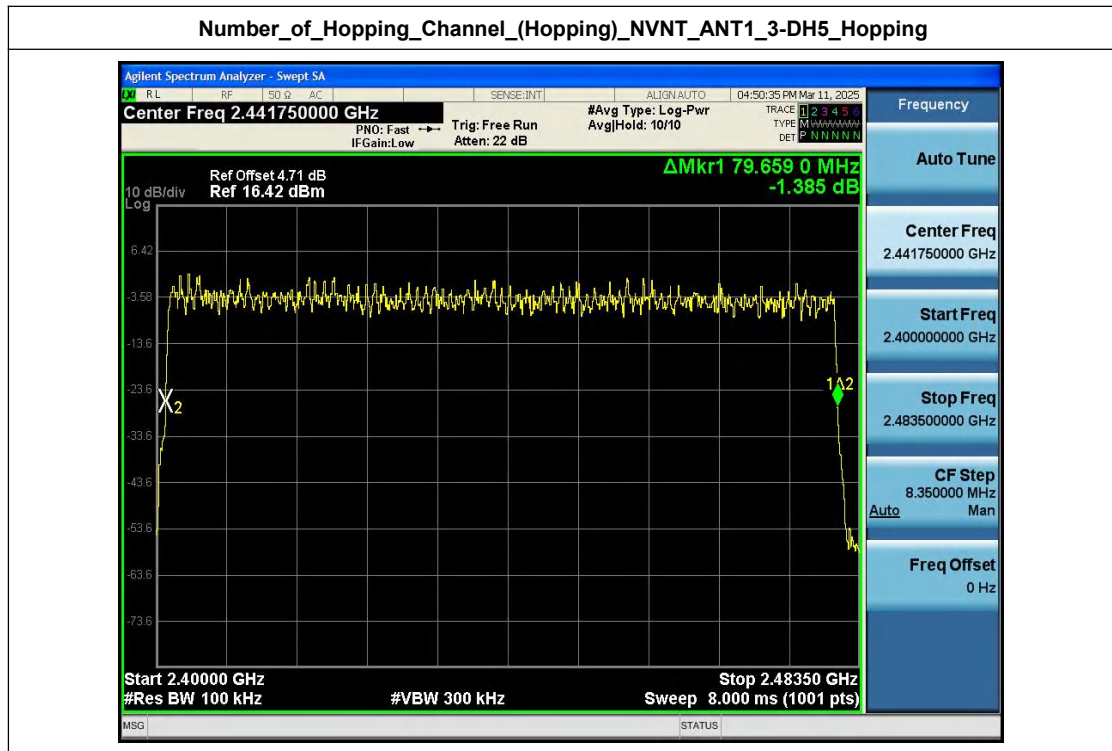

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com


Appendix I: Dwell Time (Hopping)

Condition	Antenna	Packet Type	Pulse Time(ms)	Hops	Dwell Time(ms)	Limit(s)	Result
NVNT	ANT1	1-DH5	2.890	116.00	335.240	0.40	Pass
NVNT	ANT1	2-DH5	2.900	111.00	321.900	0.40	Pass
NVNT	ANT1	3-DH5	2.900	111.00	321.900	0.40	Pass
NVNT	ANT1	1-DH1	0.390	320.00	124.800	0.40	Pass
NVNT	ANT1	1-DH3	1.640	168.00	275.520	0.40	Pass
NVNT	ANT1	2-DH1	0.400	320.00	128.000	0.40	Pass
NVNT	ANT1	2-DH3	1.650	168.00	277.200	0.40	Pass
NVNT	ANT1	3-DH1	0.400	320.00	128.000	0.40	Pass
NVNT	ANT1	3-DH3	1.650	159.00	262.350	0.40	Pass


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH5_2441_00_One_Burst_Time

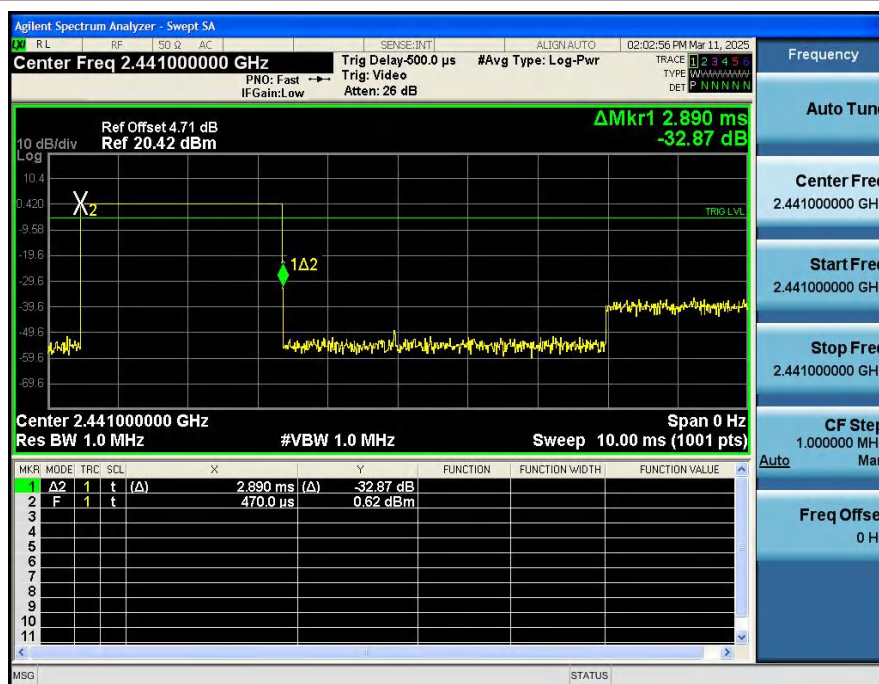



Dwell_Time_(Hopping)_NVNT_ANT1_1-DH5_2441_00_Accumulated

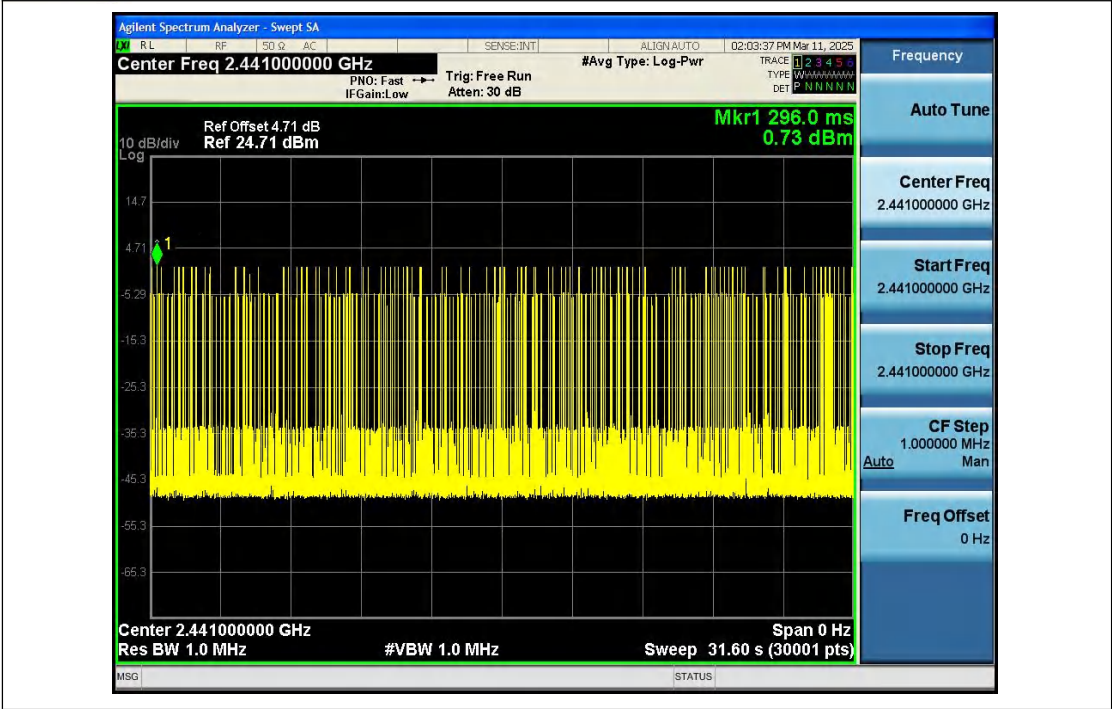


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH5_2441_00_One_Burst_Time

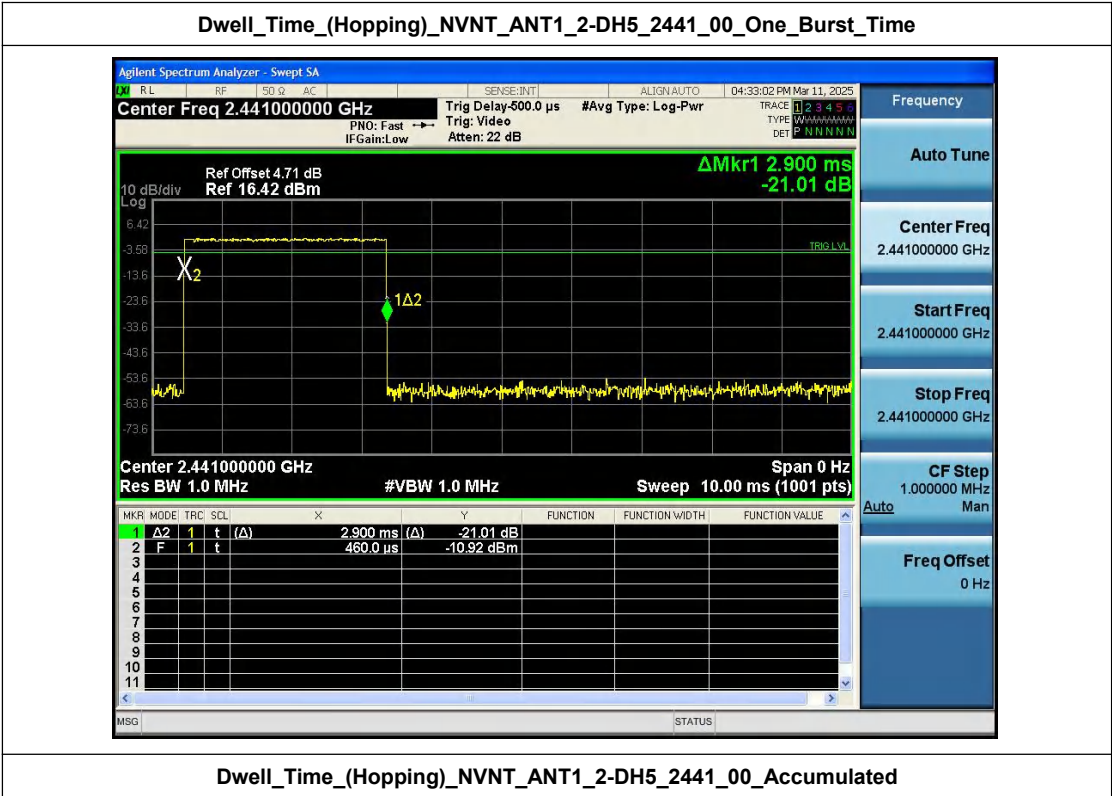


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH5_2441_00_Accumulated

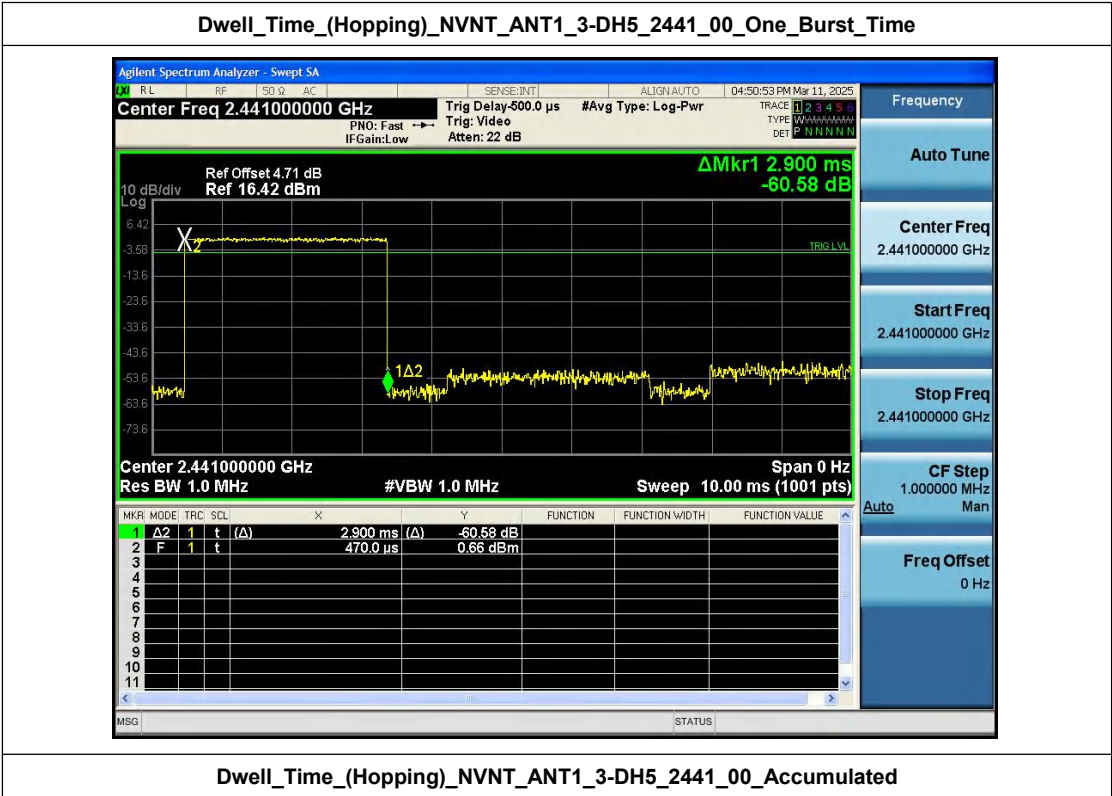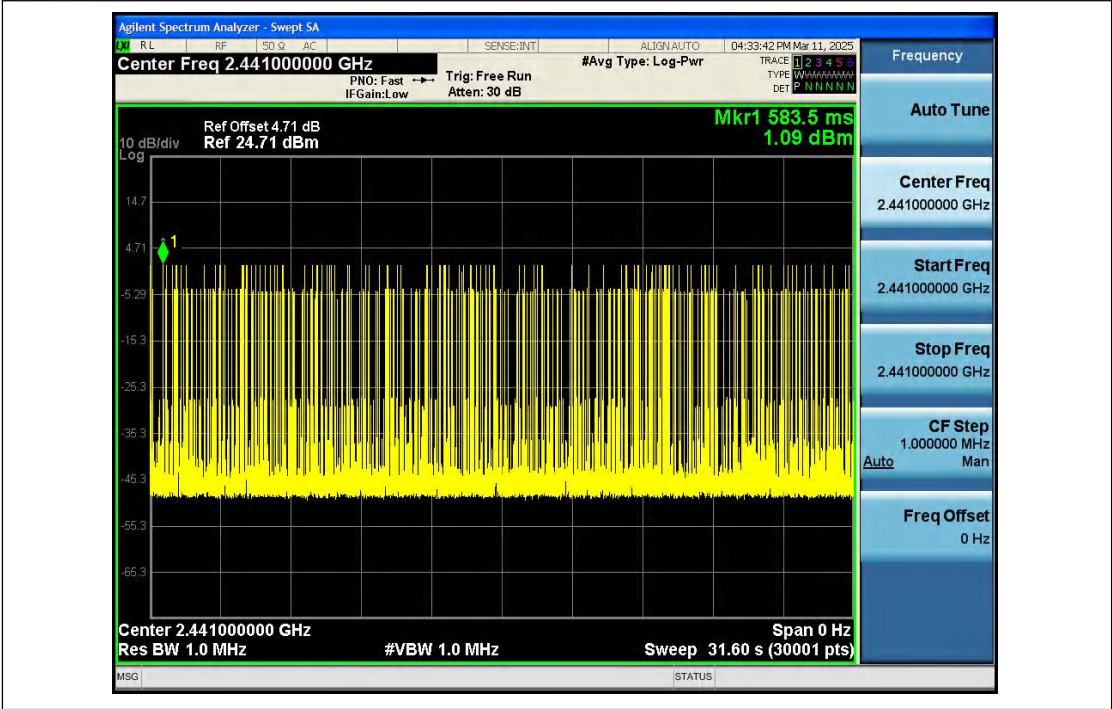


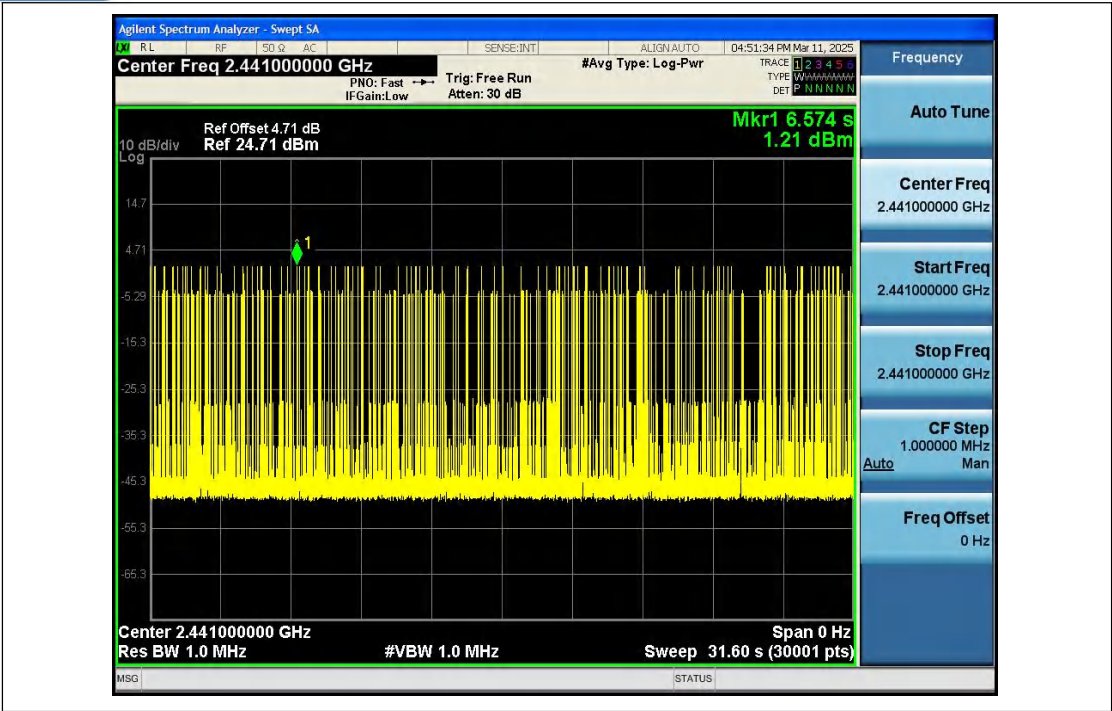


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH1_2441_00_One_Burst_Time

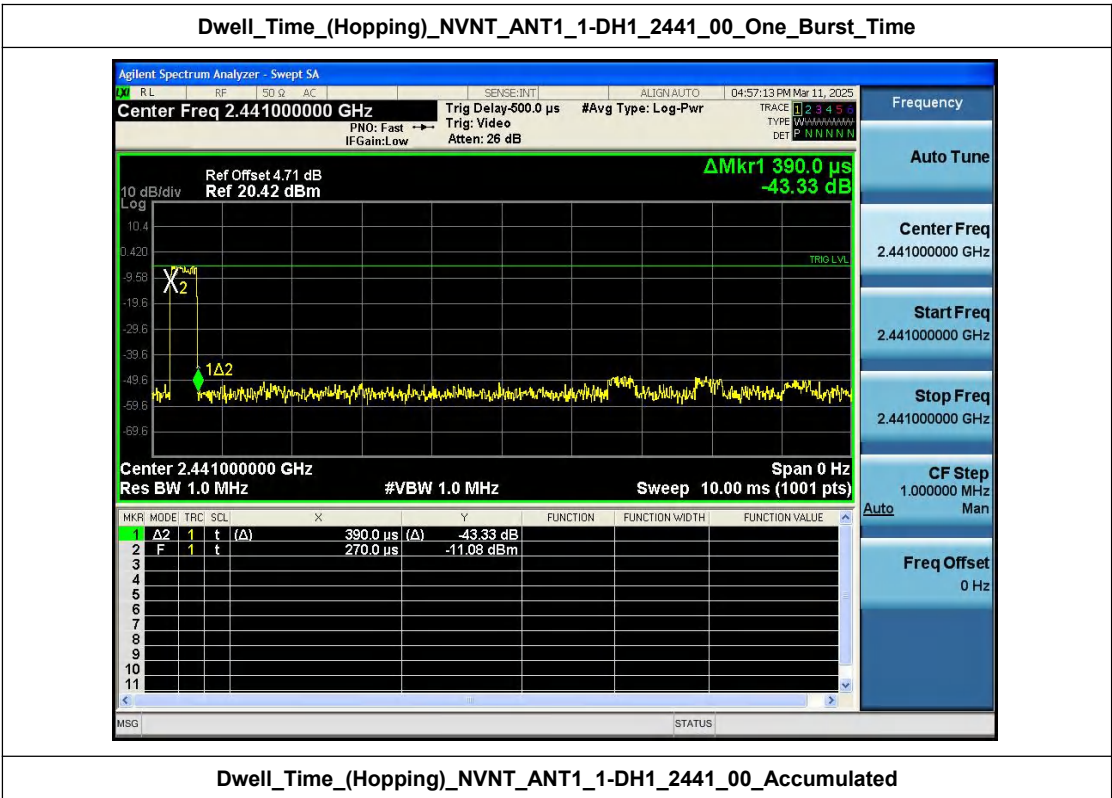


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH1_2441_00_Accumulated

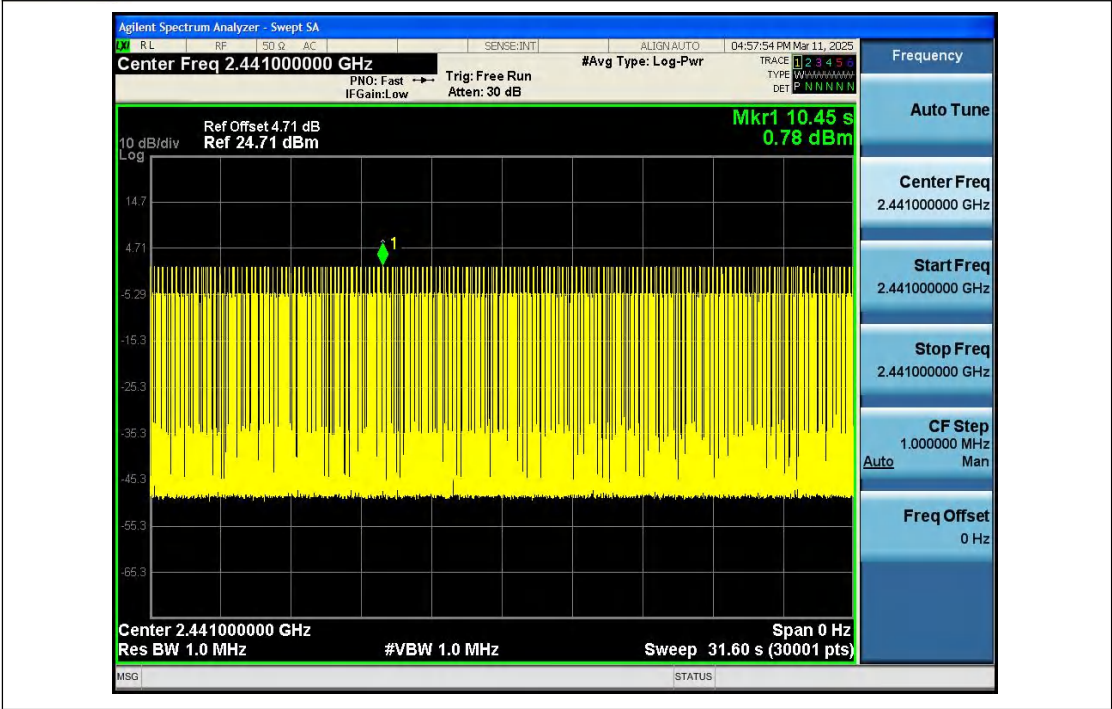


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH3_2441_00_One_Burst_Time

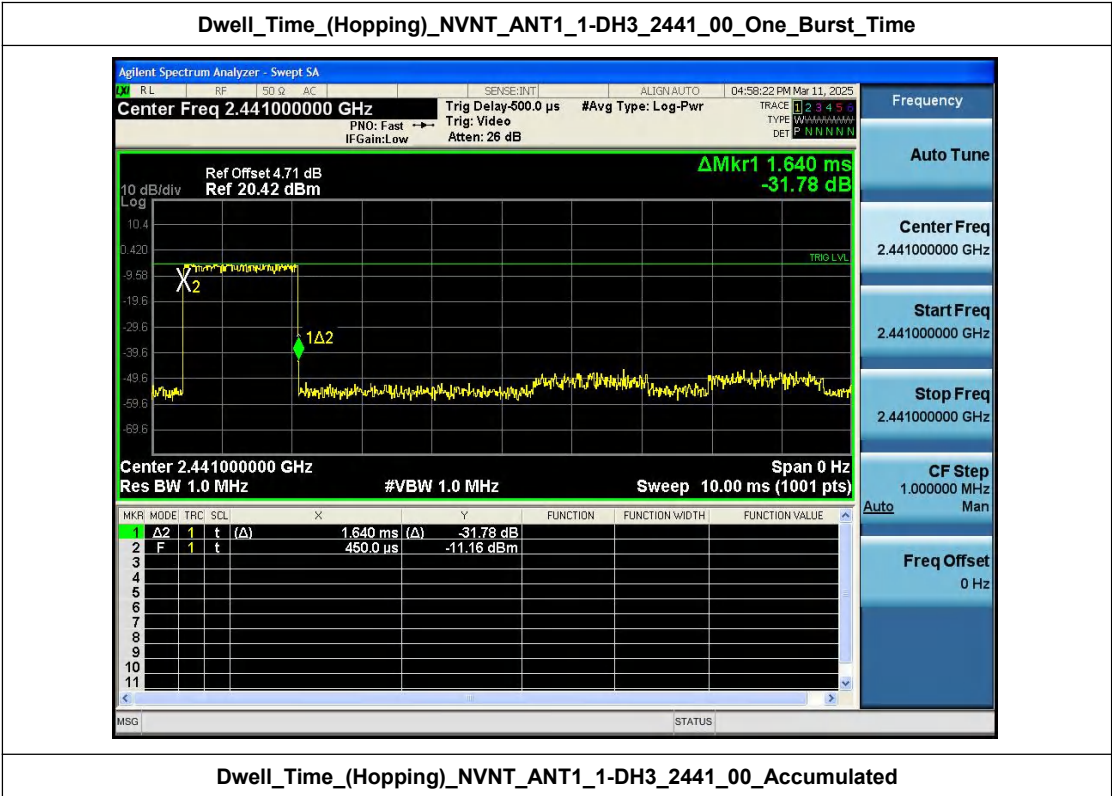


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH3_2441_00_Accumulated

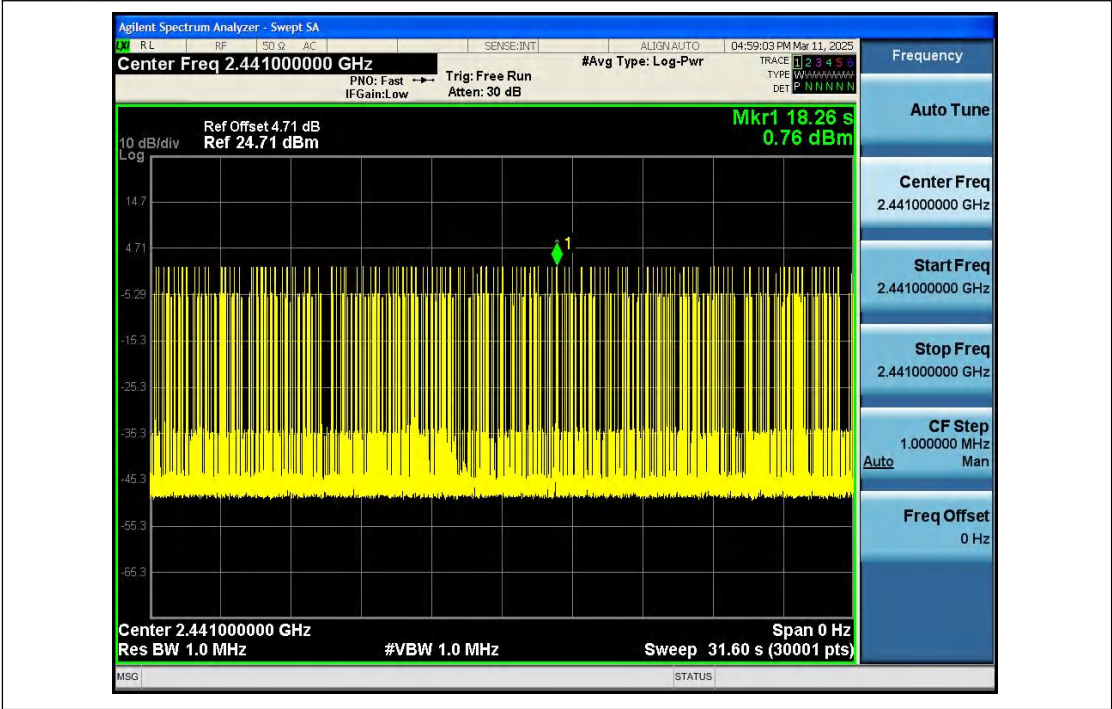


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH1_2441_00_One_Burst_Time

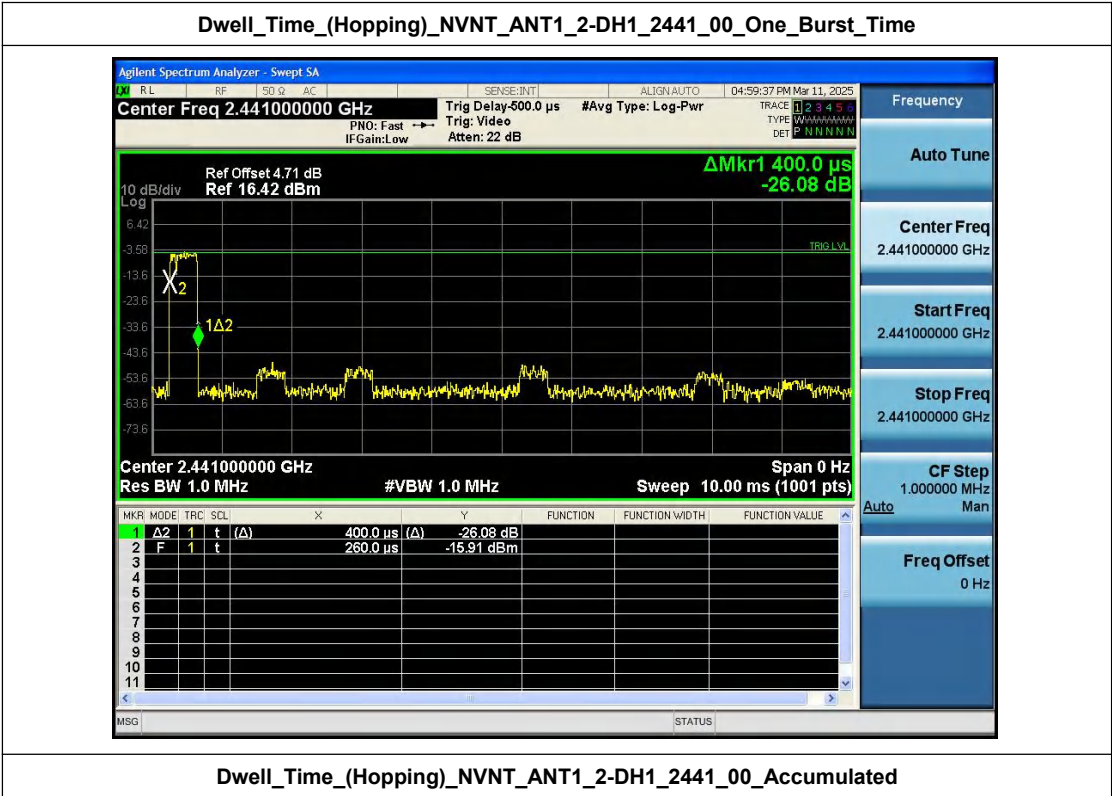


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH1_2441_00_Accumulated

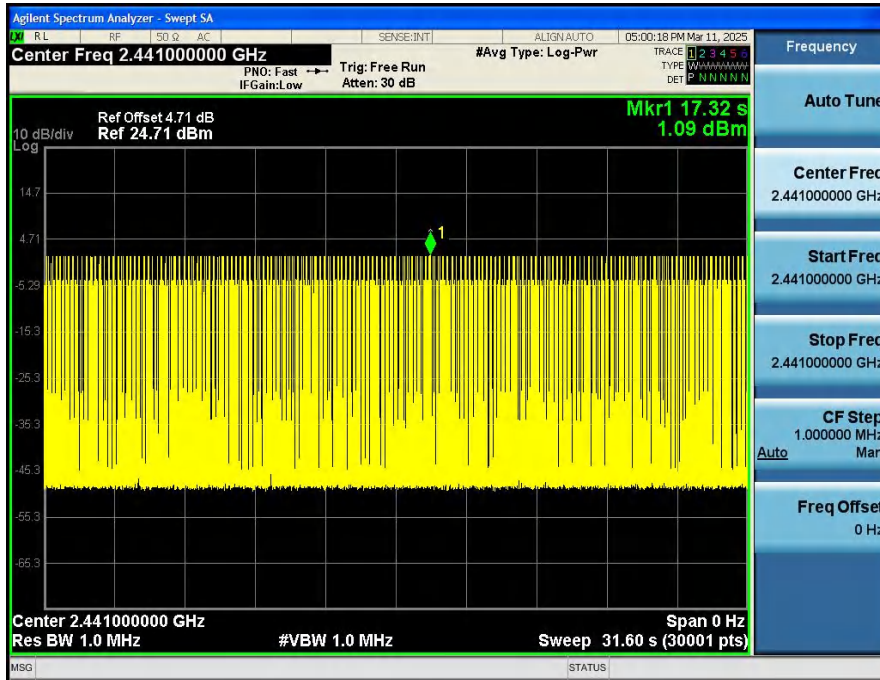


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_One_Burst_Time

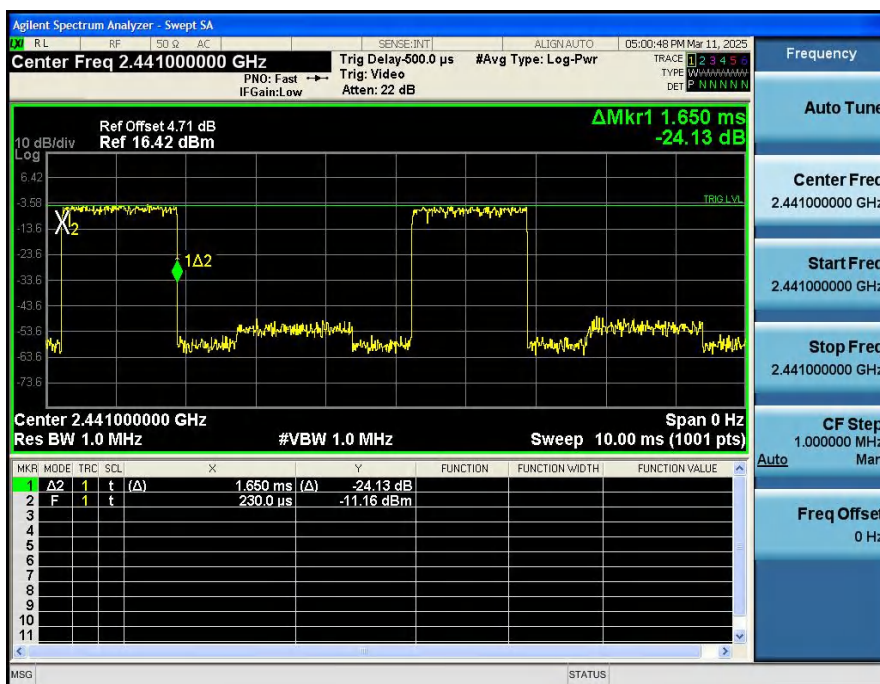


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_Accumulated

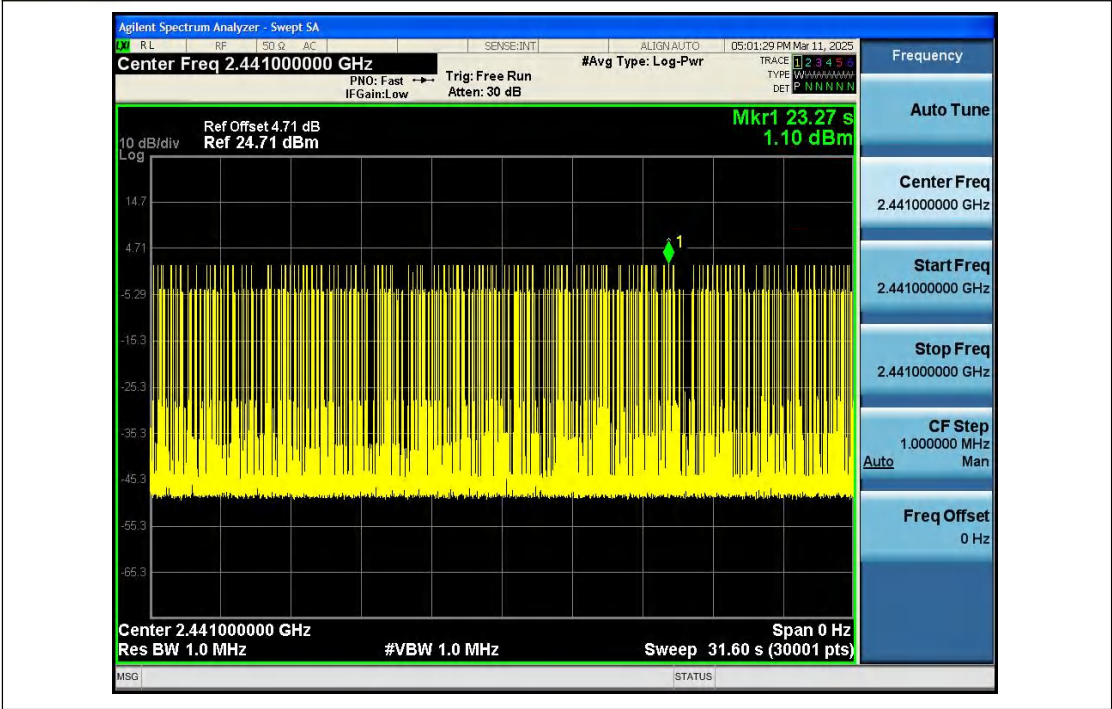


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH1_2441_00_One_Burst_Time

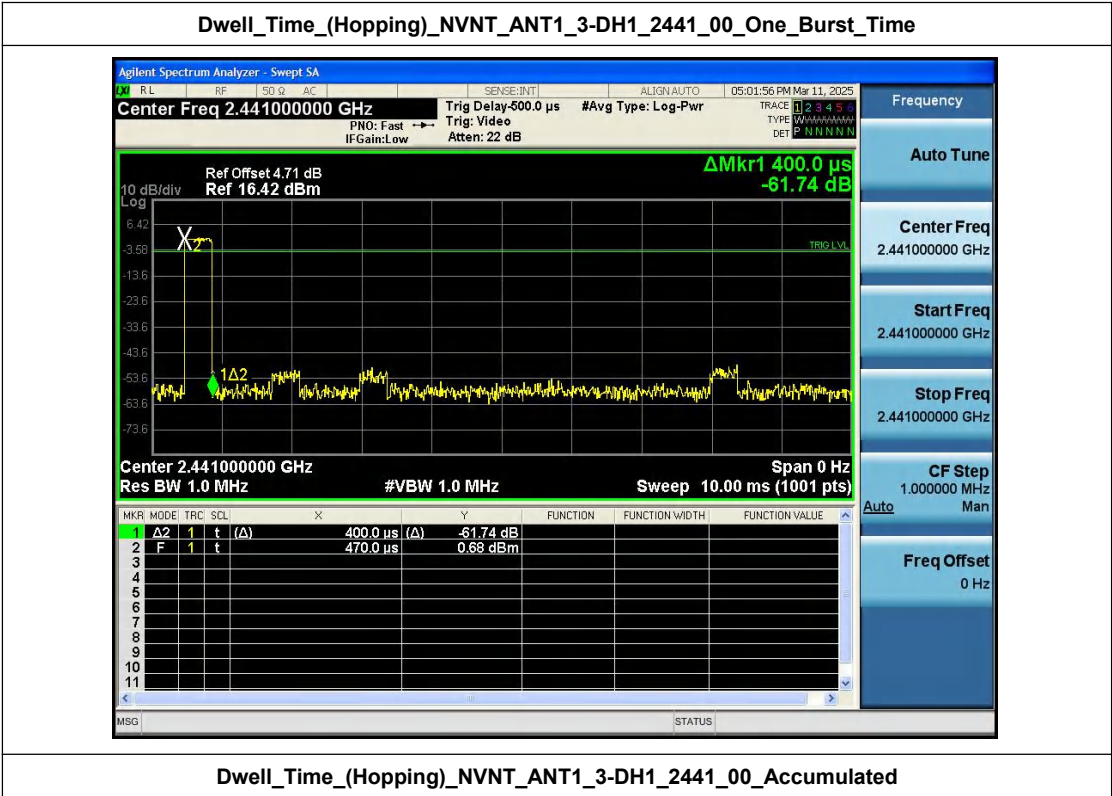


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH1_2441_00_Accumulated

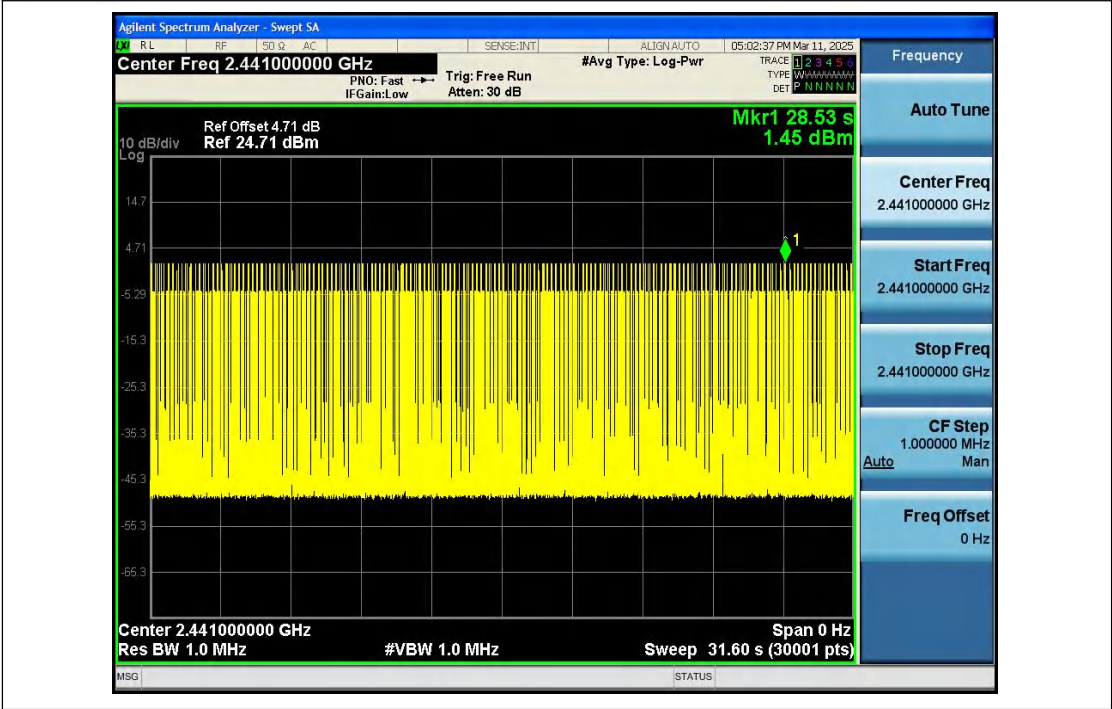

Dwell_Time_(Hopping)_NVNT_ANT1_3-DH3_2441_00_One_Burst_Time

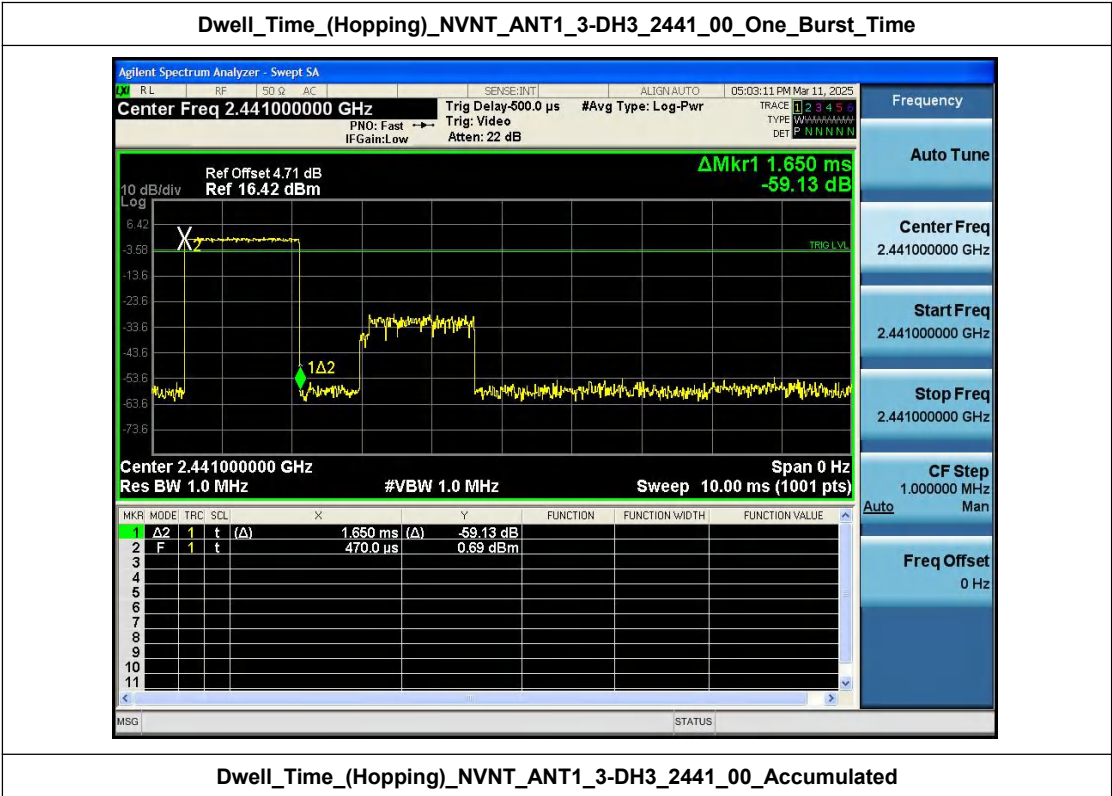

Dwell_Time_(Hopping)_NVNT_ANT1_3-DH3_2441_00_Accumulated

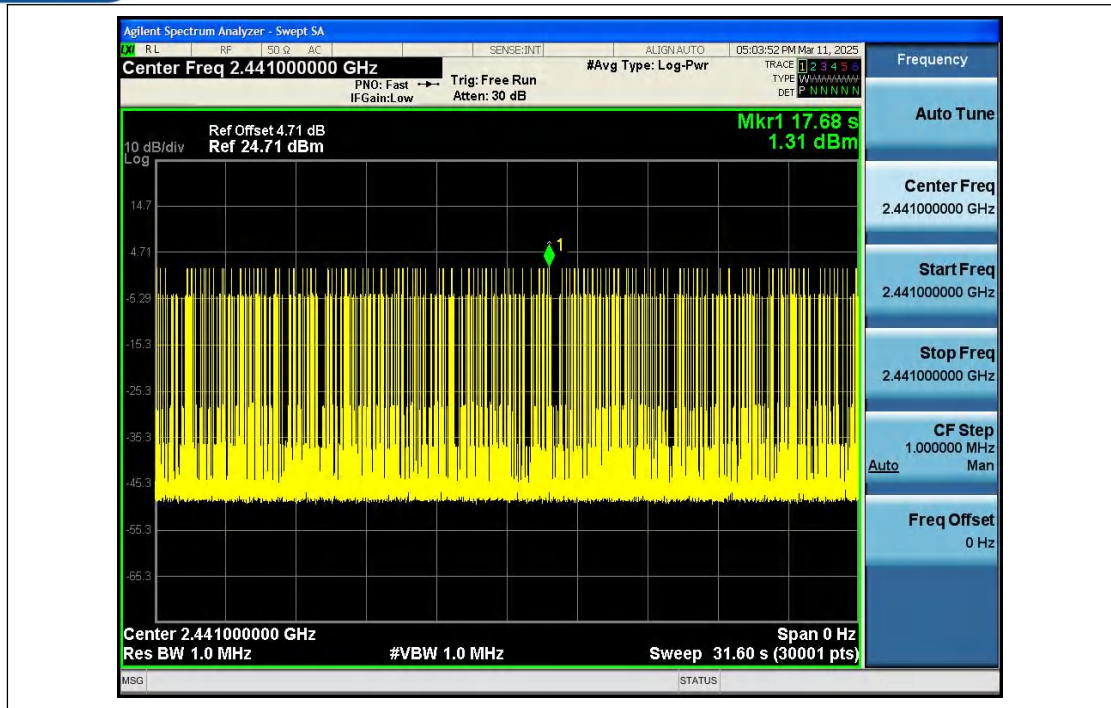

---END---

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com