



# VICTROLA STREAM - NORTH AMERICA - USER MANUAL


# ENGLISH

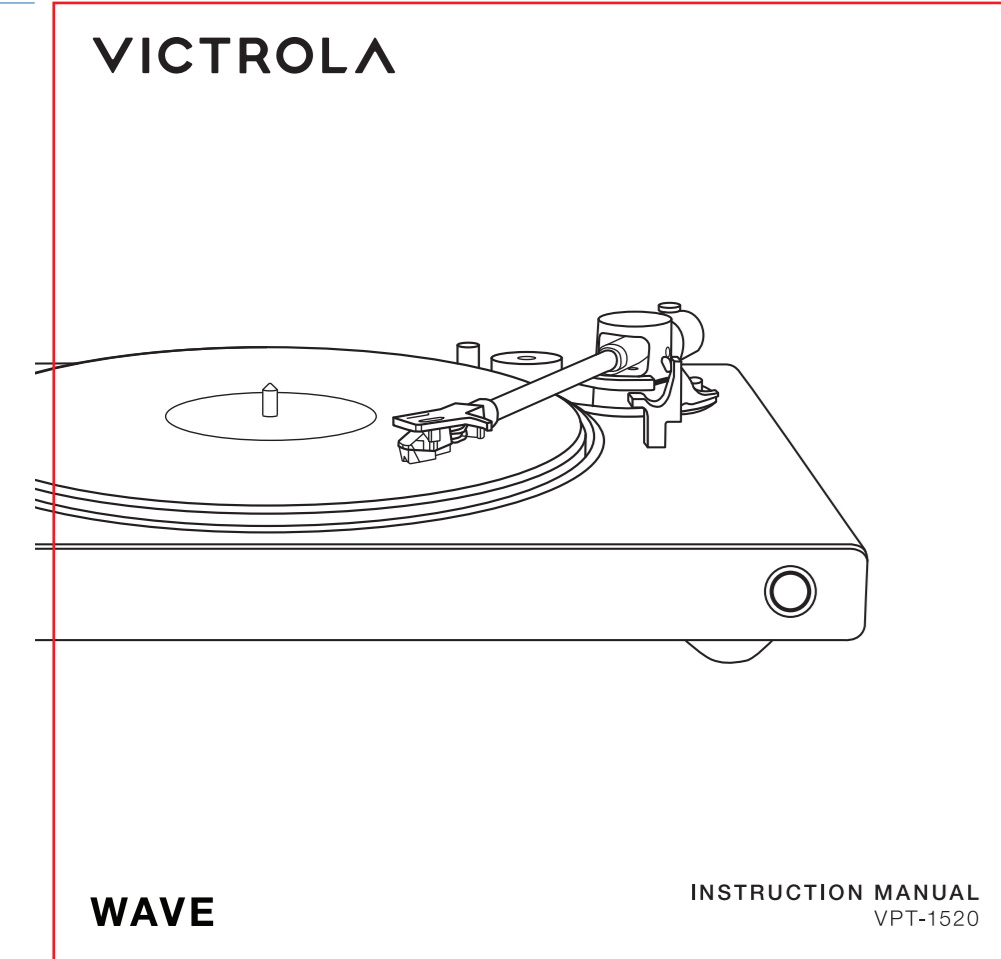


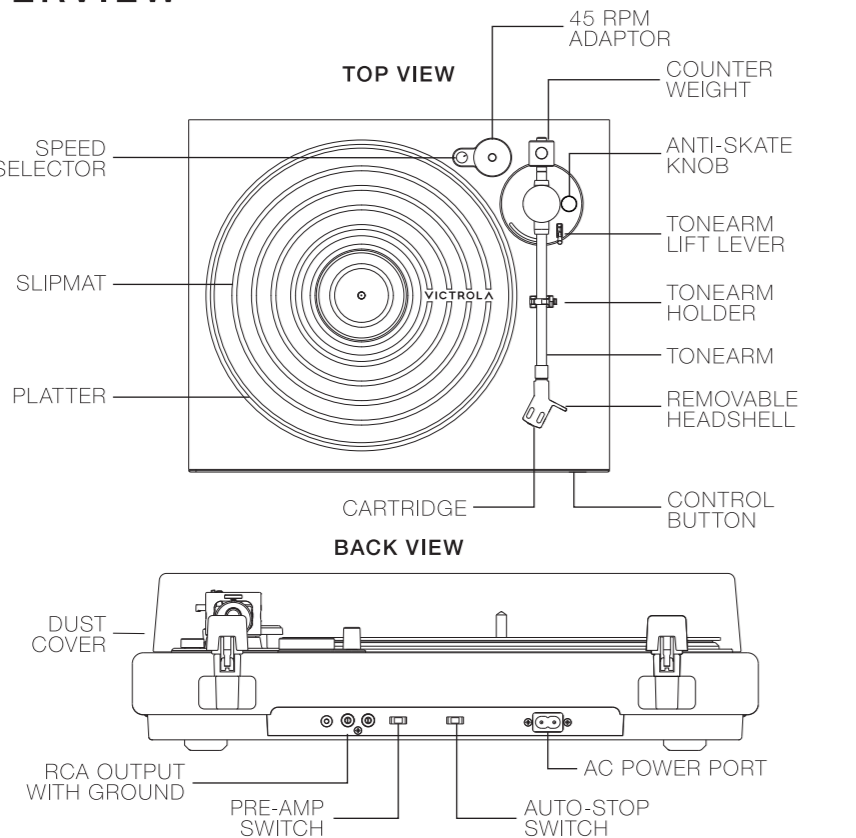


## OVERVIEW

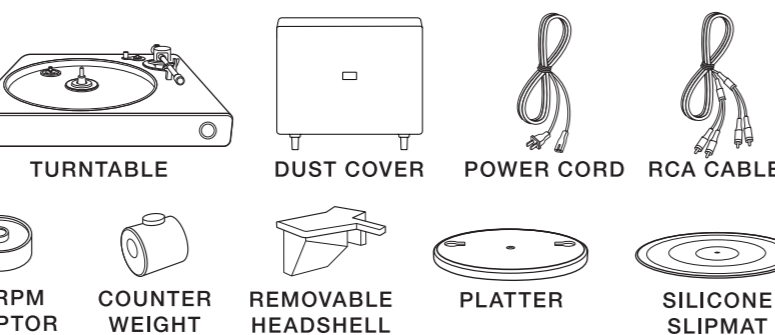

## IN THE BOX



CARTRIDGE DOWNFORCE GUIDE			
ALIGN THE FRONT OF THE COUNTERWEIGHT TO THE INDICATED COUNTERWEIGHT ALIGNMENT LINE			
CARTRIDGE		RECOMMENDED DOWNFORCE	COUNTERWEIGHT ALIGNMENT
	AUDIO TECHNICA AT-VM95 SERIES (AT-VM95E INCLUDED)	1.8-2.2g	BACK LINE
	ORTOFON OM SERIES	1.5-2.0g	FRONT LINE
	ORTOFON 2M SERIES	1.6-2.0g	REQUIRES DOWNFORCE SC.

## SPECIFICATIONS

<b>GENERAL</b>	
POWER INPUT:.....	AC 100-240V ~ 60HZ/60HZ
BLUETOOTH VERSION / PROFILE / FREQUENCY:.....	Bluetooth V5.4 / A2DP, AVRCP 2.402GHz-2.480GHz
SUPPORTED BLUETOOTH CODECS: .....	Qualcomm® aptX™ Adaptive, aptX™ HD, aptX™, SBC, LC3 (Auracast)
OUTPUTS:.....	RCA (Built-in pre-amp) 200-280 mV (5 CM/SEC at 1 KHZ-10) PHONO 2.5MV±3DB (5 CM/SEC at 1 KHZ-10)
DIMENSIONS:.....	W 16.93" x L 14.25" x H 4.53" W 430mm x L 362mm x H 115mm
WEIGHT:.....	5.66 kgs / 12.48 lbs (w/ cover)
ACCESSORIES INCLUDED:.....	Dust Cover, 45 RPM Adapter, 6' RCA cable

## TURNTABLE

DRIVE METHOD:	Belt-drive
PLATTER:	Die-cast aluminum
CARTRIDGE:	Audio Technica VM95E
MOTOR:	DC Servo-Controlled
SPEEDS:	33-1/3 RPM & 45 RPM
PHONO PRE-AMP GAIN:	35 dB Nominal, RIAA Equalized
SIGNAL-TO-NOISE:	>45 dB
WOW & FLUTTER:	<0.175
TO NEARM LENGTH:	225mm
OVERHANG:	18.50mm
TRACKING ERROR ANGLE:	<2 Degrees

## CONTROL BUTTON

<b>PRESS AND HOLD:</b>	Power On/Off
<b>SINGLE PRESS:</b>	Switch between Bluetooth (blue LED) and RCA (white LED) output
<b>DOUBLE PRESS:</b>	In Bluetooth® mode - Enable Auracast™ broadcast (light blue LED)

## AUTO-STOP SWITCH

**ON:** Platter will begin spinning when tonearm hovers over the edge of the record and stop spinning at the end of the record to prevent stylus wear.

**OFF:** Platter will spin when speed control is set to 33 or 45, regardless of tonearm position.

**PREF-AMP SWITCH**

**LINE:** Set the switch to line if connecting to line line-level input on speakers or amplifier.  
**PHONO:** Set the switch to phono if using external pre pre-amp or amplifier with phono input.

## ADDITIONAL NOTES

- Unit automatically powers off if no playback for 15 minutes.
- Wired RCA output is disabled when mode is set to Bluetooth Out.
- Unit automatically starts Bluetooth pairing when entering Bluetooth Out mode.
- To reset the unit, press and hold the function button (5 seconds). This will remove and forget all previously paired Bluetooth devices.

## WARNINGS

**Important Safety Instruction**

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture –

- Do not block any ventilation
- Do not install near any heat

9. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.

12 Unplug the apparatus during

10. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



**OPEN. / ATTENTION RISQUE  
CHOC ÉLECTRIQUE. NE PAS**

to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

4. a. **WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

5. b. The examination point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

15. **WARNING:** The equipment is not designed to be connected to electrical earth. It has been designed in such a way that it does not require a safety connection to electrical earth.

16. The main plug is used as disconnect device, the disconnect device shall remain readily operable.

17. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must be protected from dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.

18. The use of the equipment in moderate climate.

19. **WARNING:** Please refer the information on exterior bottom/back enclosure for electrical and safety information before installing or operating the apparatus.
20. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
21. No naked flame sources, such as lighted candles, should be placed on the apparatus.
22. Do not install this equipment in a confined space such as a book case or similar unit.

## SAFETY INFO

**Safety Information**

1. In order to shut off power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as during vacation.
2. Use of controls, adjustments and performance of procedures other than those specified here may result in hazardous conditions or equipment damage.
3. To prevent electric shock, match wide blade of plug to wide slot, fully insert.
4. If this product is experiencing problems during operation, contact qualified service centers, and use the product in defective states.

**Before Use**

1. Choose unit installation location carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.
2. Do not open the cabinet as this may result in damage to the circuitry or electrical shock. If a fault is suspected, the unit should be checked by a qualified technician.
3. Be sure not to handle record with dirty fingers. Never play a record that has a crack on the surface.
4. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
5. To protect the stylus, don't forget to put on the white protective needle cover after use.
6. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a dry cloth.
7. In order to shut off the power to this product completely, unplug the power cord from the wall outlet.
8. Do not use the unit for an extended period of time, such as a day.
9. Keep this manual in a safe place for future reference.

## FCC & IC WARNINGS

**FCC STATEMENTS**

Caution: the user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules and Innovation, Science and Economic Development Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter le brouillage subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE:  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC & IC RADIATION EXPOSURE STATEMENT:**

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Déclaration d'IC sur l'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour les environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimale entre l'antenne et votre corps. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

## LIMITED WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics, LLC.

**United States**

For detailed information about our warranty policy and limitations visit [victrola.com/pages/warranty](http://victrola.com/pages/warranty)

<p>signed and dated.</p>	<p><b>Outside the U.S., Canada, and US Territories</b>          The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.</p>	<p>product, or the distributor that supplied the product, with your original receipt.</p> <p>If assistance from the dealer or distributor was purchased is not possible, please contact our customer service for warranty assistance at <a href="mailto:us@victrola.com/contact">victrola.com/contact</a>.</p>
--------------------------	--	--

## CUSTOMER SUPPORT

20cm VICTROLA.COM/PAGES/CUSTOMER-CARE  
support@victrola.com  
(877)483-2497

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The Auracast™ word mark and logos are trademarks owned by the Bluetooth SIG. Any use of such marks by Innovative Technology Electronics, LLC is under license. Other trademarks and trade names are those of their respective owners.

Made in China.

This product has been manufactured and sold under the responsibility of Innovative TE Electronics, LLC. Victrola is a trademark used under license by Innovative Technology