


Test Data

Frequency Stability (worst case mode)


Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Deviation (ppm)	Limit (ppm)	Verdict
HVHT	a	5180	Ant1	5179.9834	-3.2	25	Pass
HVLT	a	5180	Ant1	5179.9836	-3.17	25	Pass
LVHT	a	5180	Ant1	5179.984	-3.09	25	Pass
LVLT	a	5180	Ant1	5179.9842	-3.05	25	Pass
NVNT	a	5180	Ant1	5179.985	-2.9	25	Pass
HVHT	ac80	5210	Ant1	5209.984	-3.07	25	Pass
HVLT	ac80	5210	Ant1	5209.9844	-2.99	25	Pass
LVHT	ac80	5210	Ant1	5209.9848	-2.92	25	Pass
LVLT	ac80	5210	Ant1	5209.9832	-3.22	25	Pass
NVNT	ac80	5210	Ant1	5209.9828	-3.3	25	Pass
HVHT	n40	5190	Ant1	5189.9826	-3.35	25	Pass
HVLT	n40	5190	Ant1	5189.9826	-3.35	25	Pass
LVHT	n40	5190	Ant1	5189.983	-3.28	25	Pass
LVLT	n40	5190	Ant1	5189.9832	-3.24	25	Pass
NVNT	n40	5190	Ant1	5189.9836	-3.16	25	Pass

Remark: "NTNV" means Normal Temperature Normal Voltage, "LTLV" means Low Temperature Low Voltage, "LTHV" means Low Temperature High Voltage, "HTLV" means High Temperature Low Voltage, "HTHV" means High Temperature High Voltage.


Freq. Stability HVHT a 5180MHz Ant1

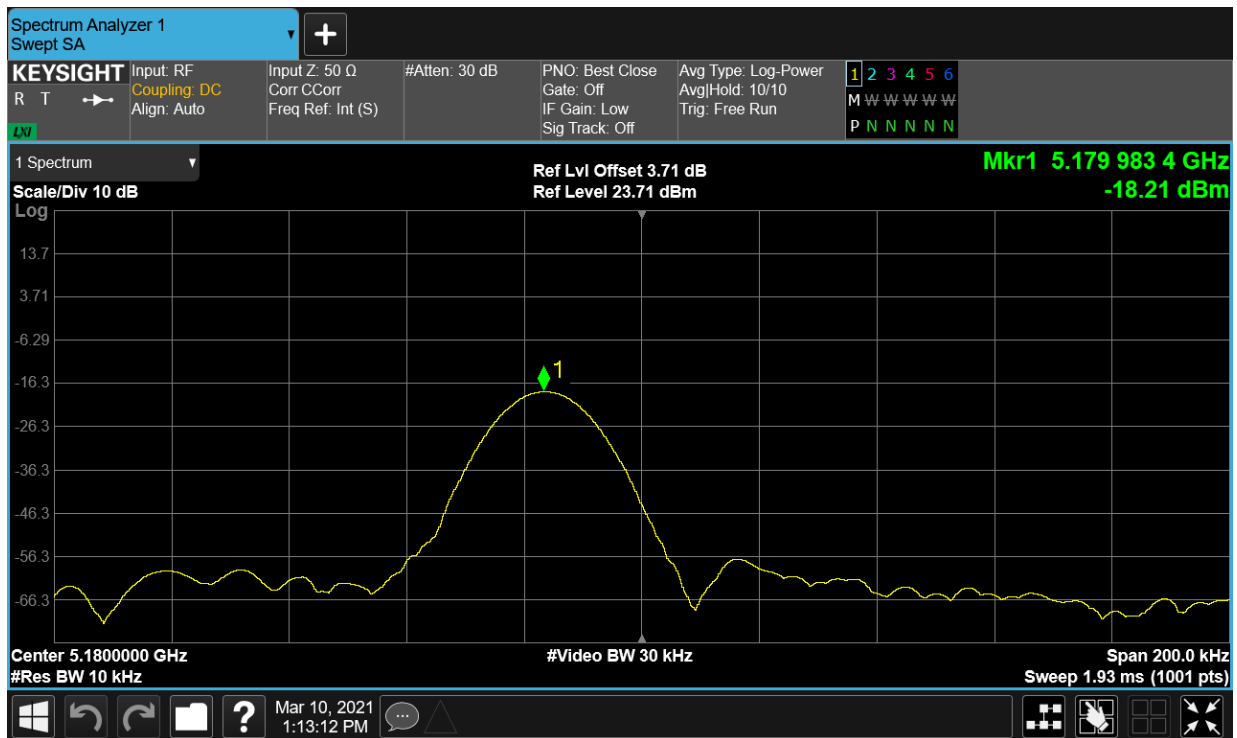


Freq. Stability HVLT a 5180MHz Ant1

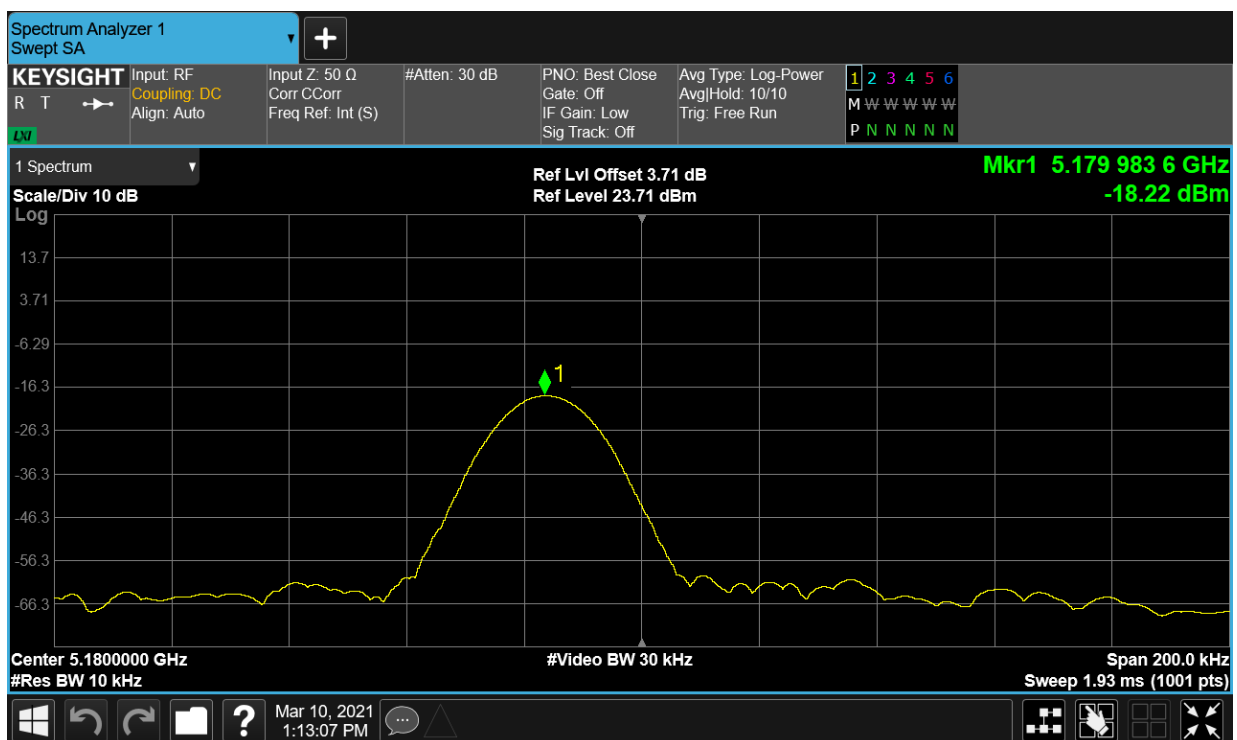


Freq. Stability LVHT a 5180MHz Ant1

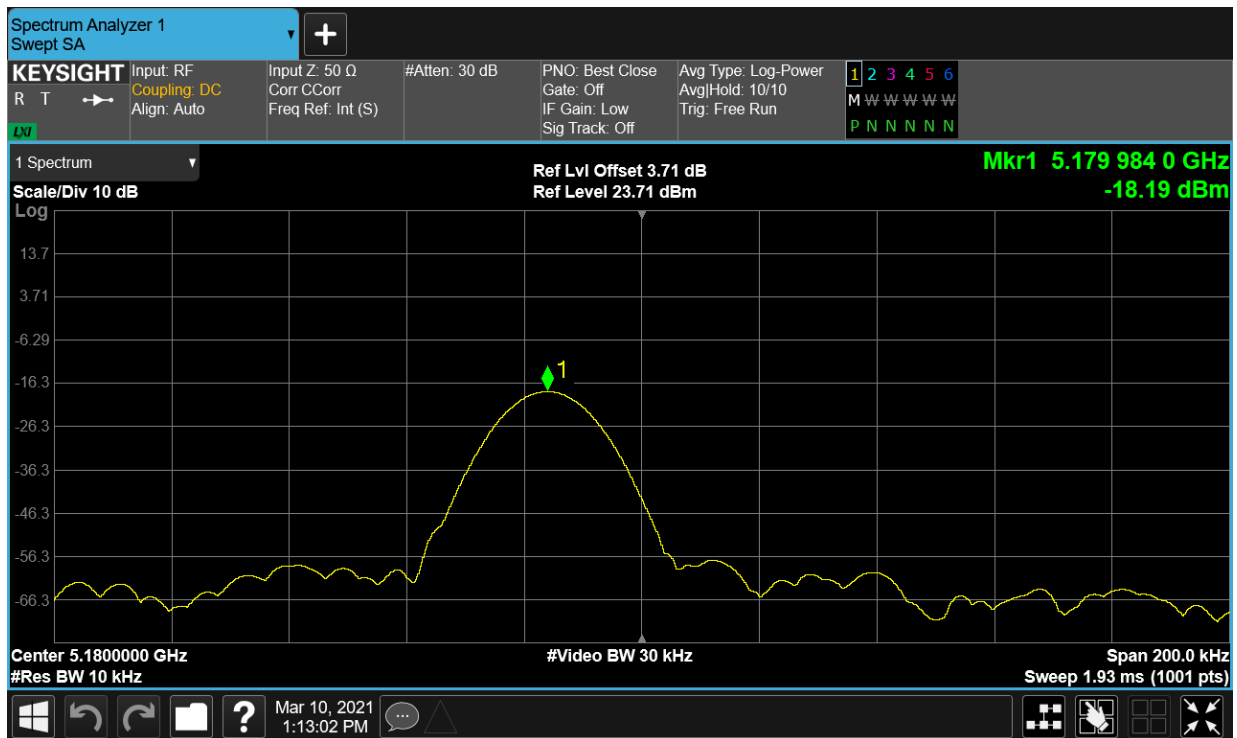


Freq. Stability LVLt a 5180MHz Ant1

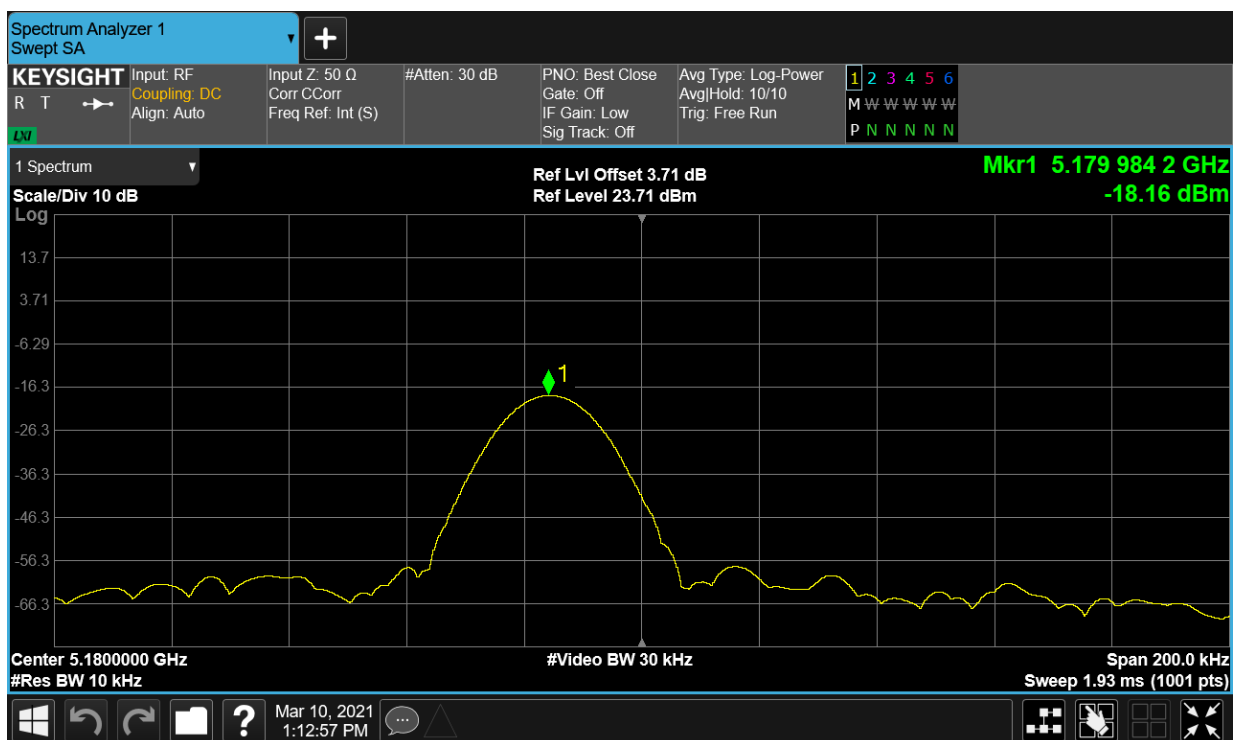


Freq. Stability NVNT a 5180MHz Ant1

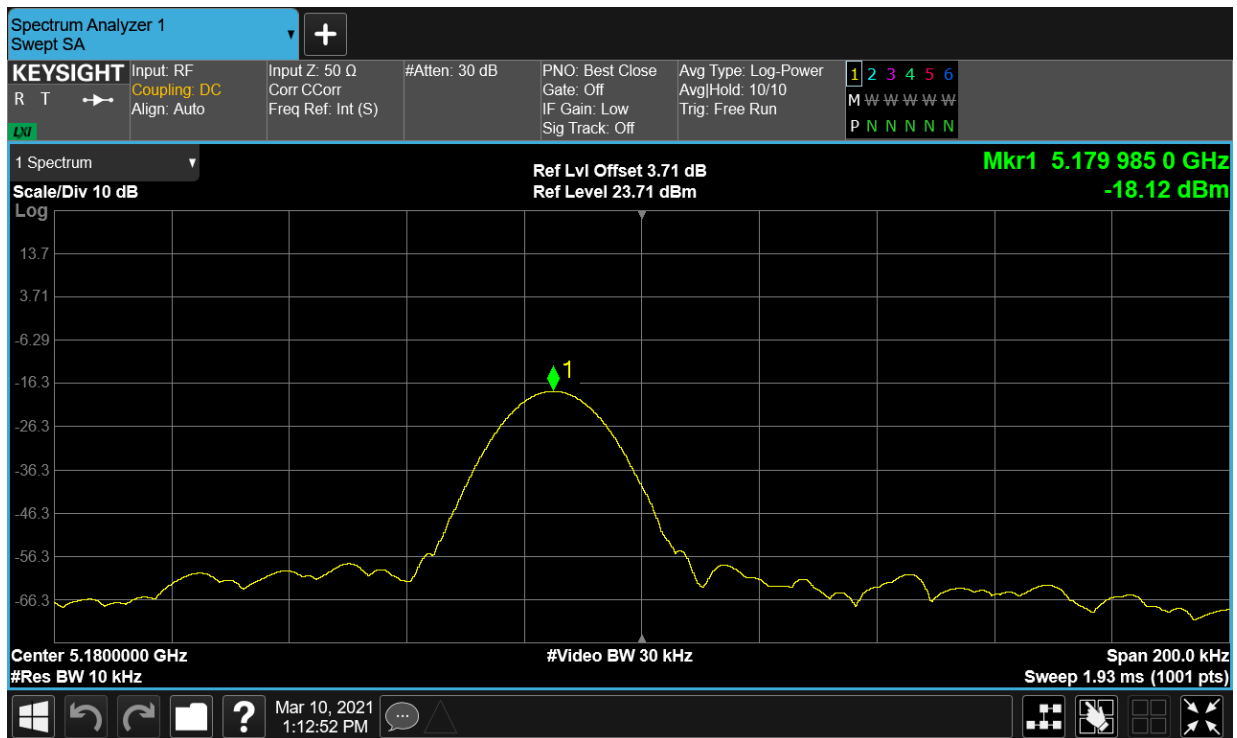


Freq. Stability HVHT ac80 5210MHz Ant1

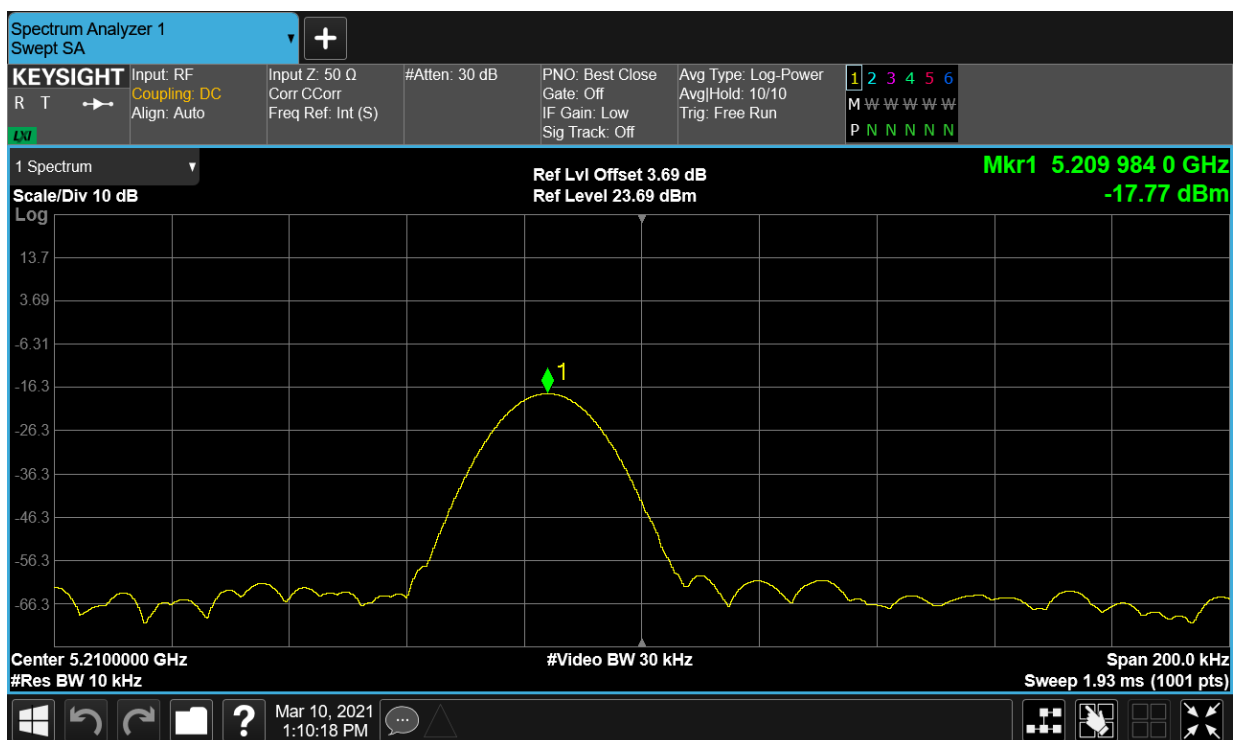


Freq. Stability HVLT ac80 5210MHz Ant1

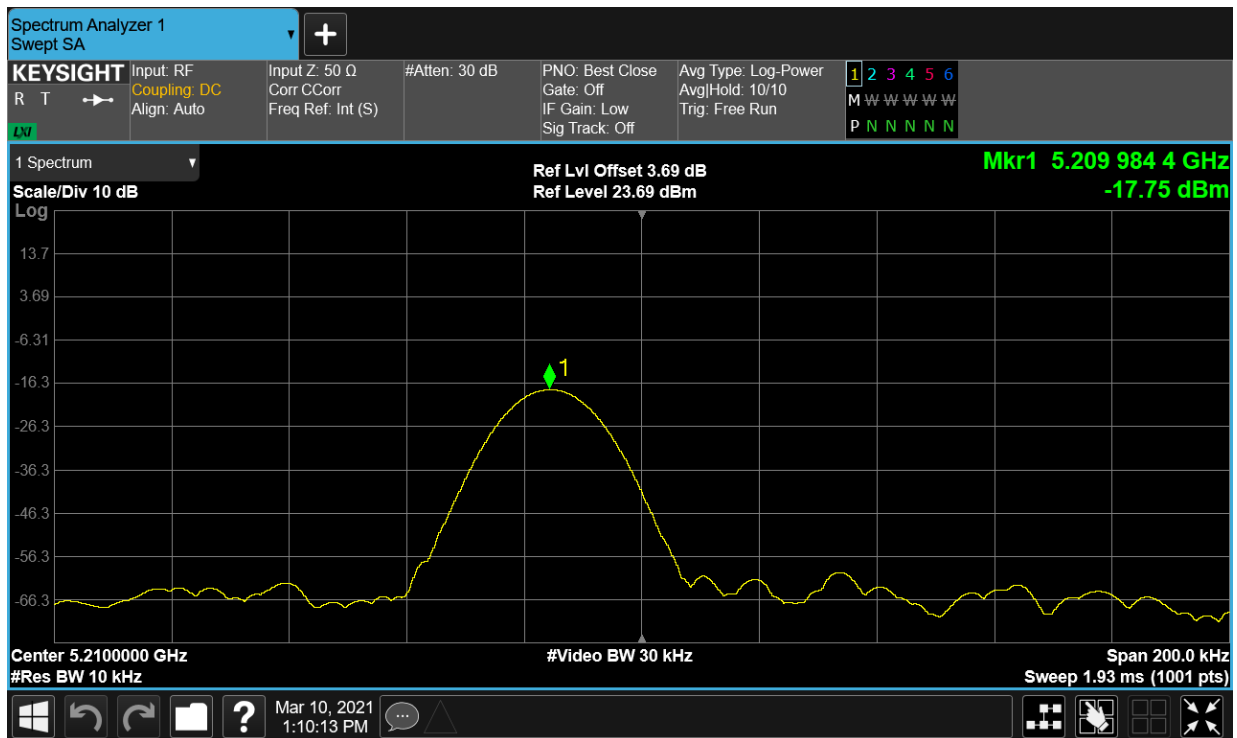


Freq. Stability LVHT ac80 5210MHz Ant1

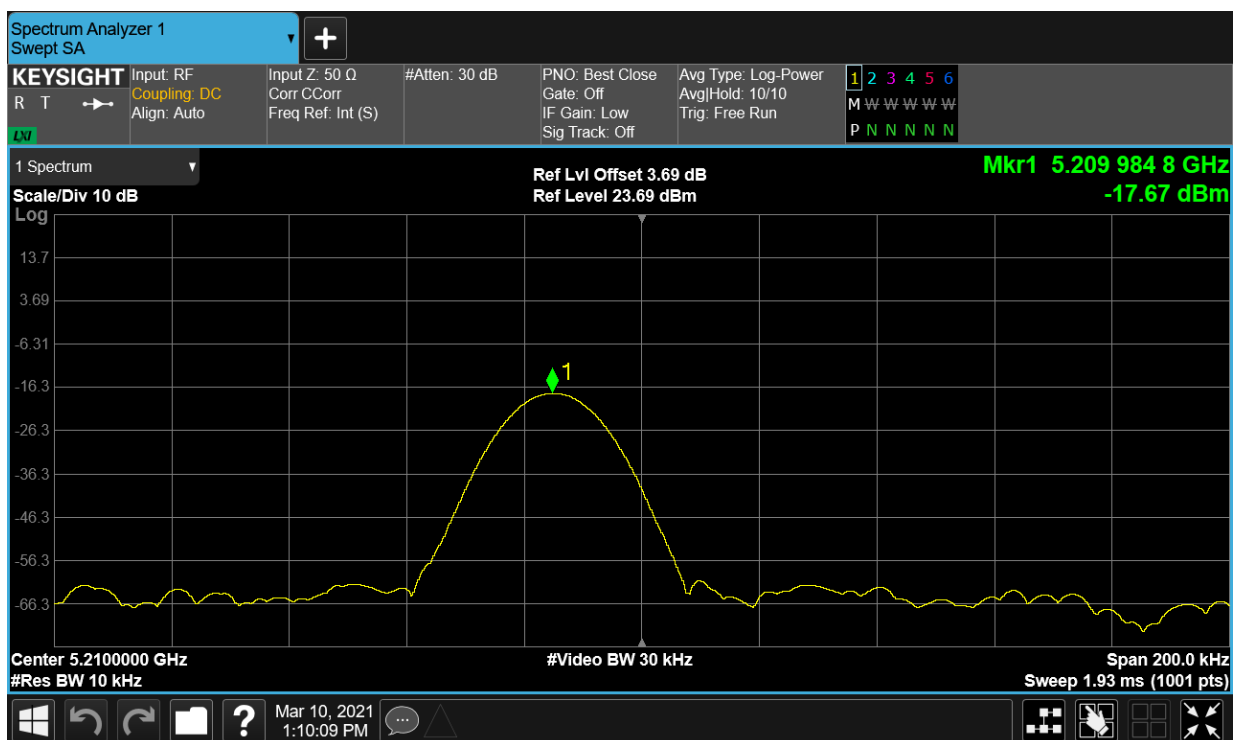


Freq. Stability LVLTL ac80 5210MHz Ant1

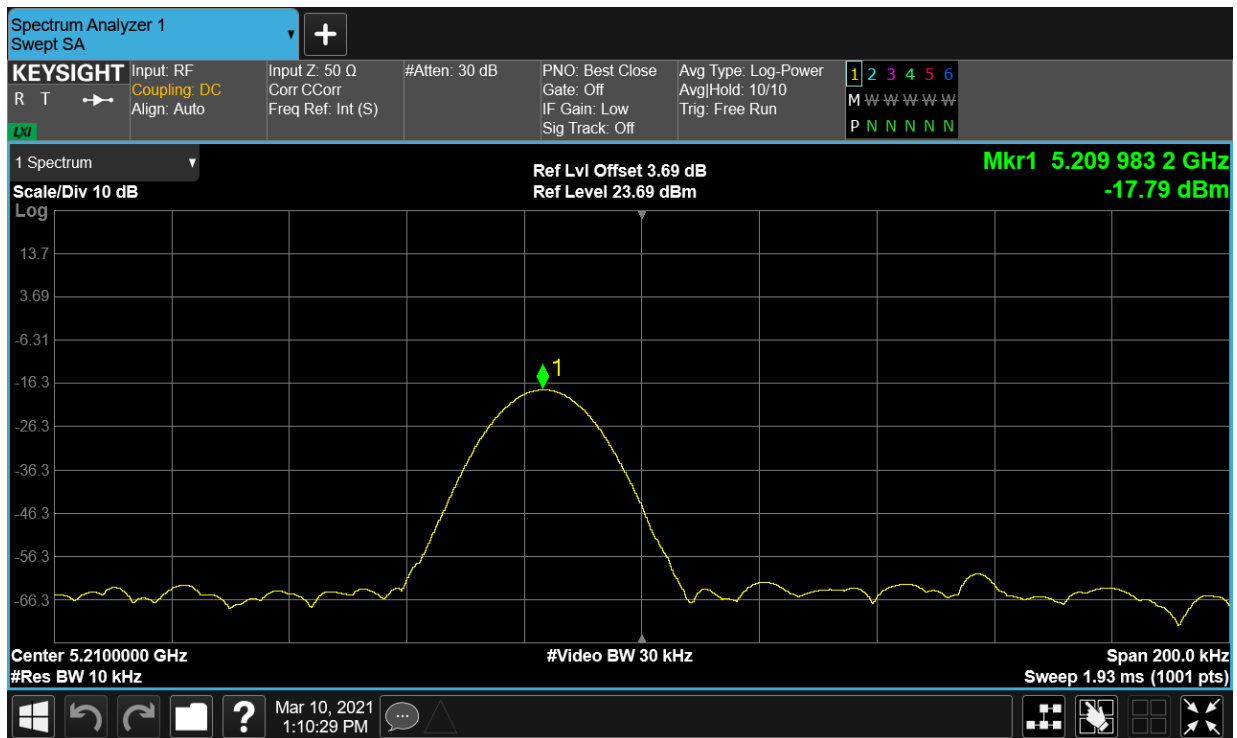


Freq. Stability NVNT ac80 5210MHz Ant1

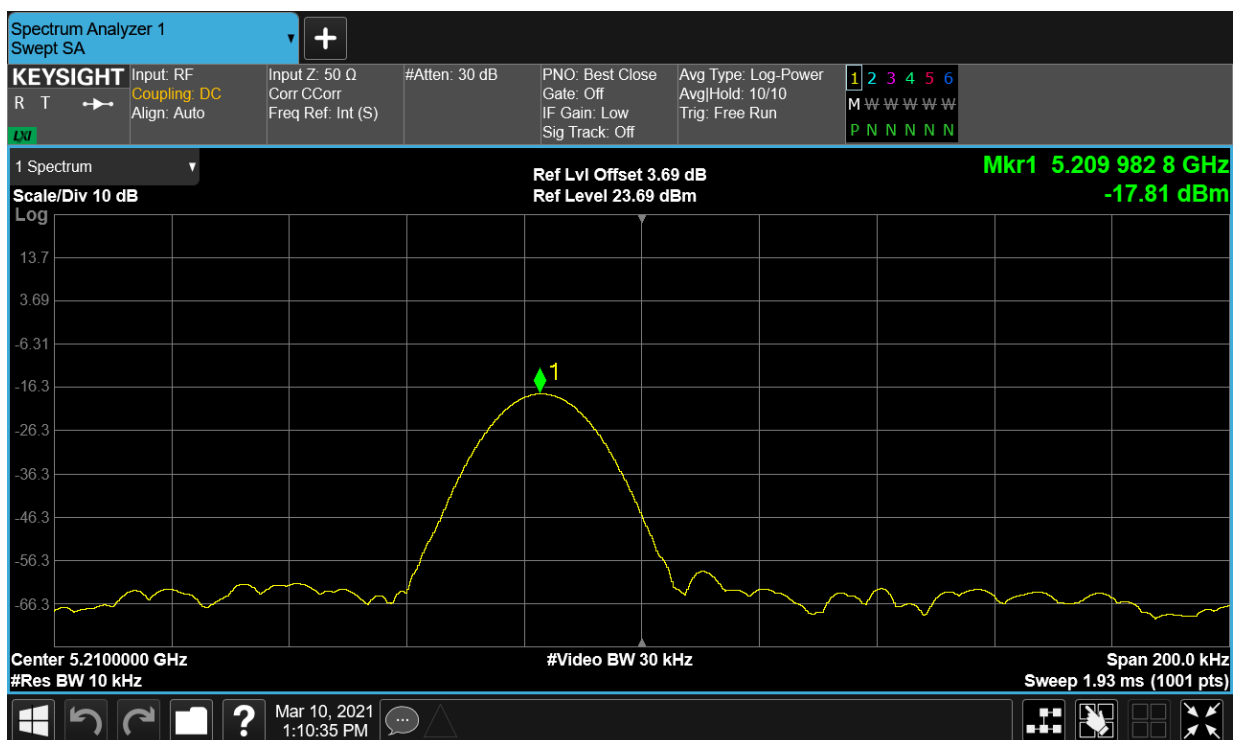


Freq. Stability HVHT n40 5190MHz Ant1

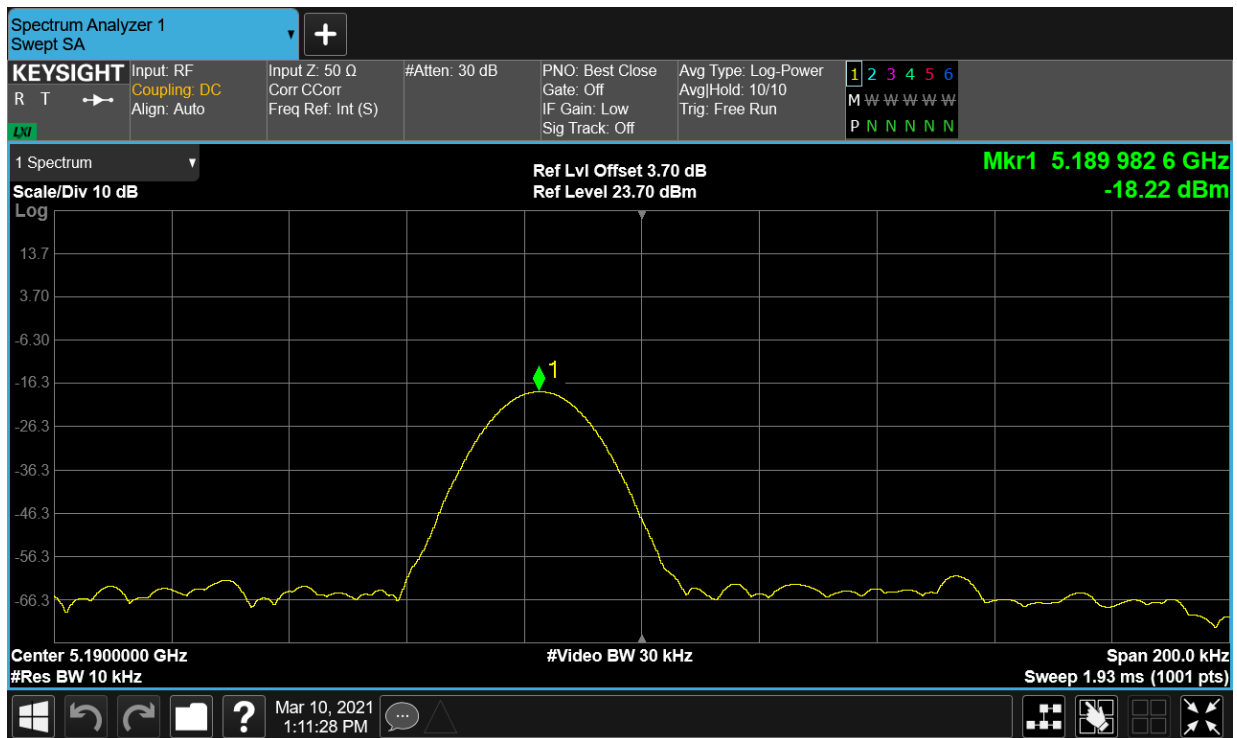


Freq. Stability HVLT n40 5190MHz Ant1

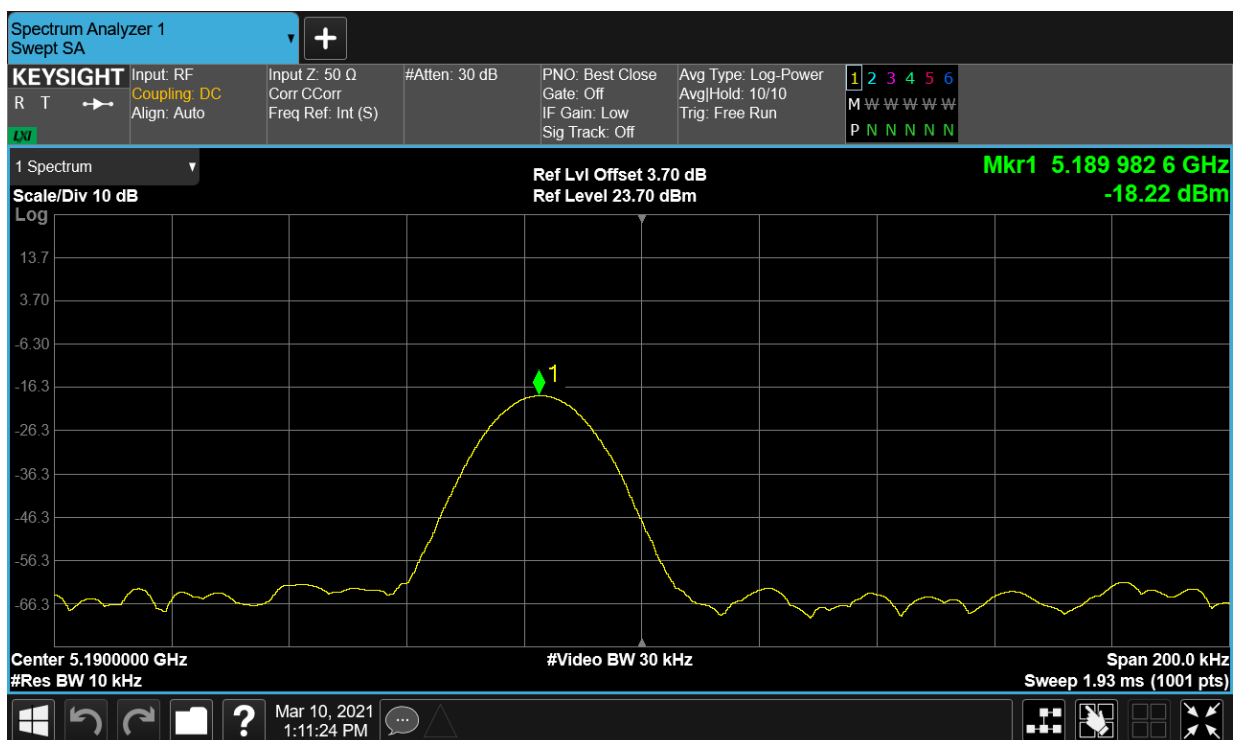


Freq. Stability LVHT n40 5190MHz Ant1

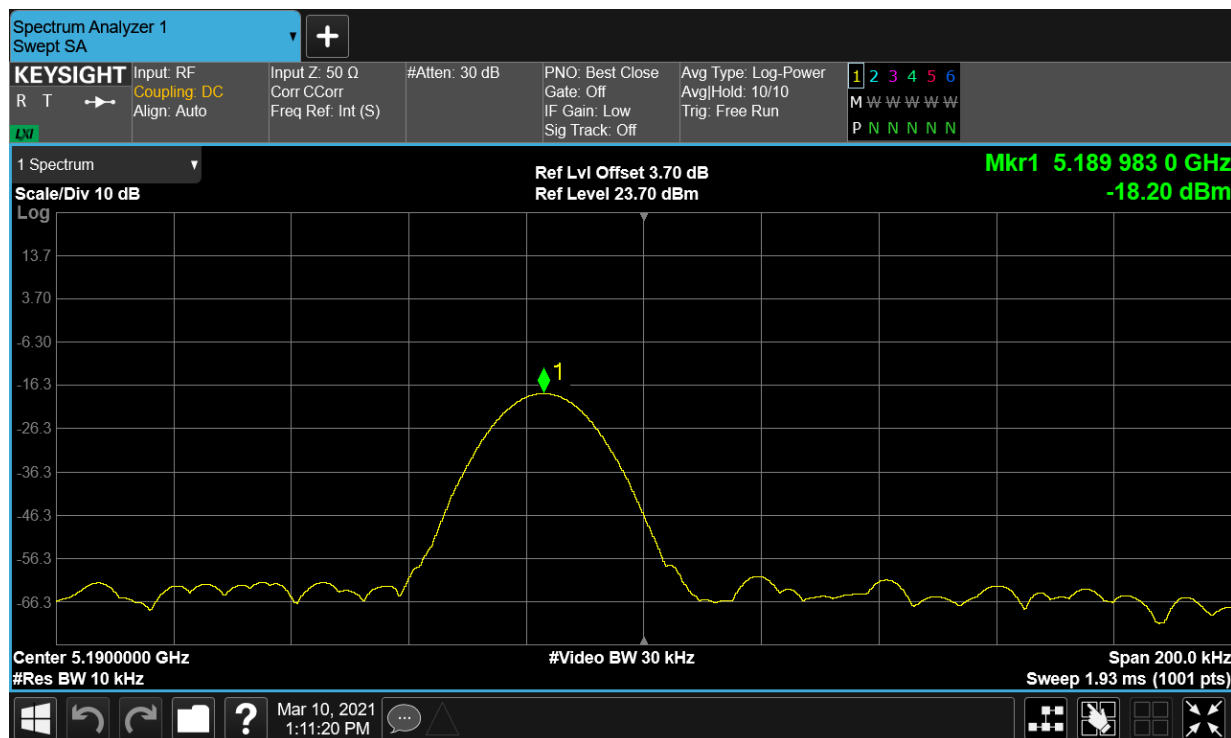

Freq. Stability LVLT n40 5190MHz Ant1

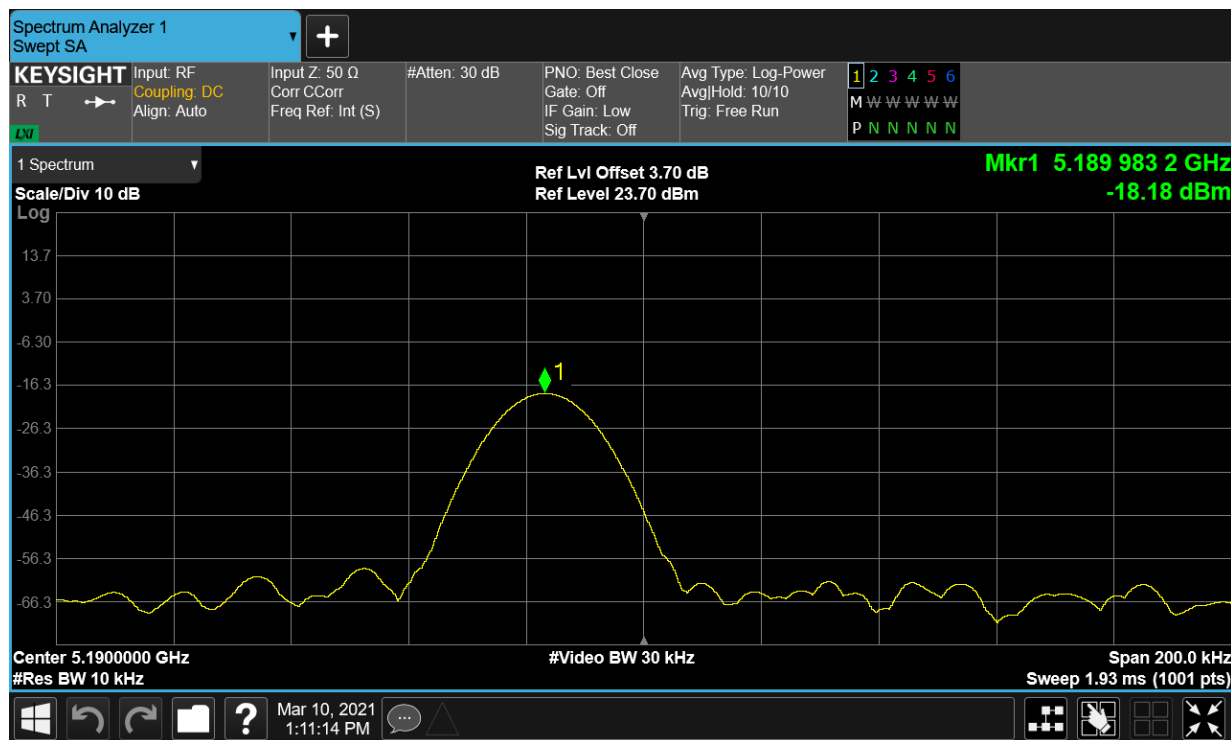


Freq. Stability NVNT n40 5190MHz Ant1

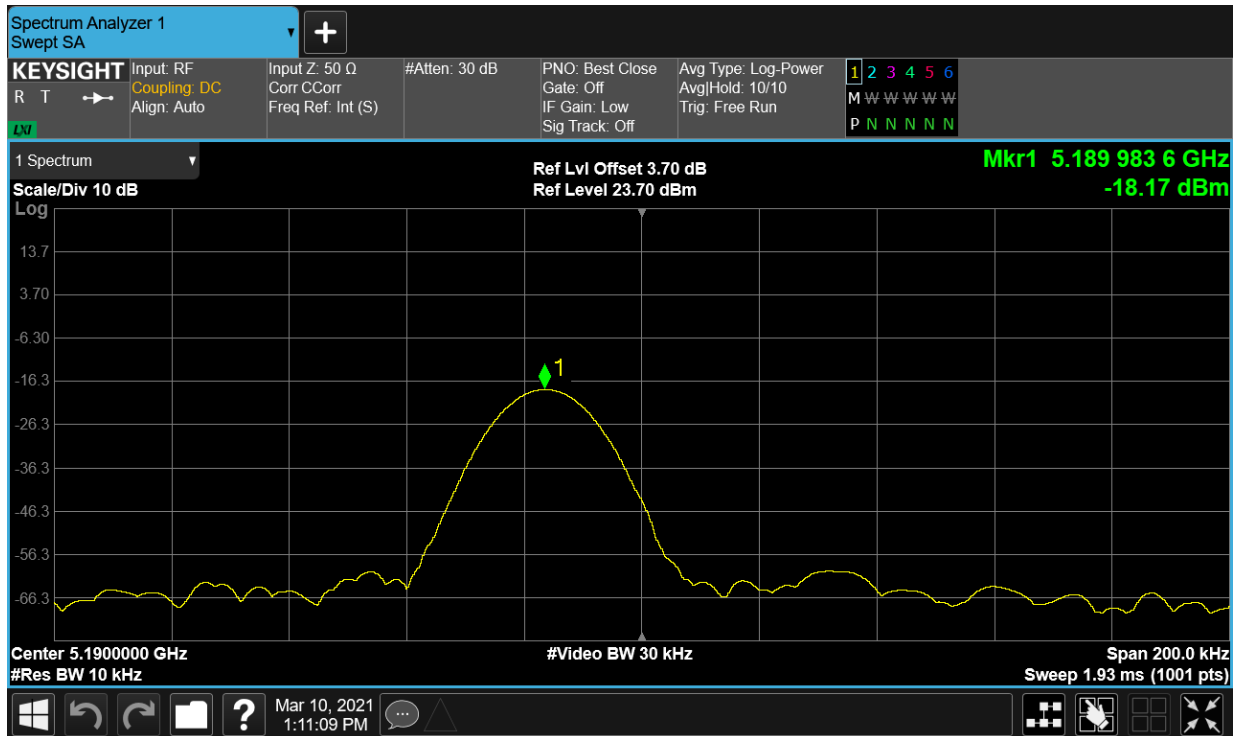


Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)
NVNT	a	5180	Ant1	97.74	0.1
NVNT	a	5200	Ant1	97.79	0.1
NVNT	a	5240	Ant1	97.76	0.1
NVNT	ac20	5180	Ant1	97.63	0.1
NVNT	ac20	5200	Ant1	97.63	0.1
NVNT	ac20	5240	Ant1	97.64	0.1
NVNT	ac40	5190	Ant1	95.39	0.2
NVNT	ac40	5230	Ant1	95.35	0.21
NVNT	ac80	5210	Ant1	91.18	0.4
NVNT	n20	5180	Ant1	97.57	0.11
NVNT	n20	5200	Ant1	97.62	0.1
NVNT	n20	5240	Ant1	97.59	0.11
NVNT	n40	5190	Ant1	95.32	0.21
NVNT	n40	5230	Ant1	95.32	0.21

Duty Cycle NVNT a 5180MHz Ant1

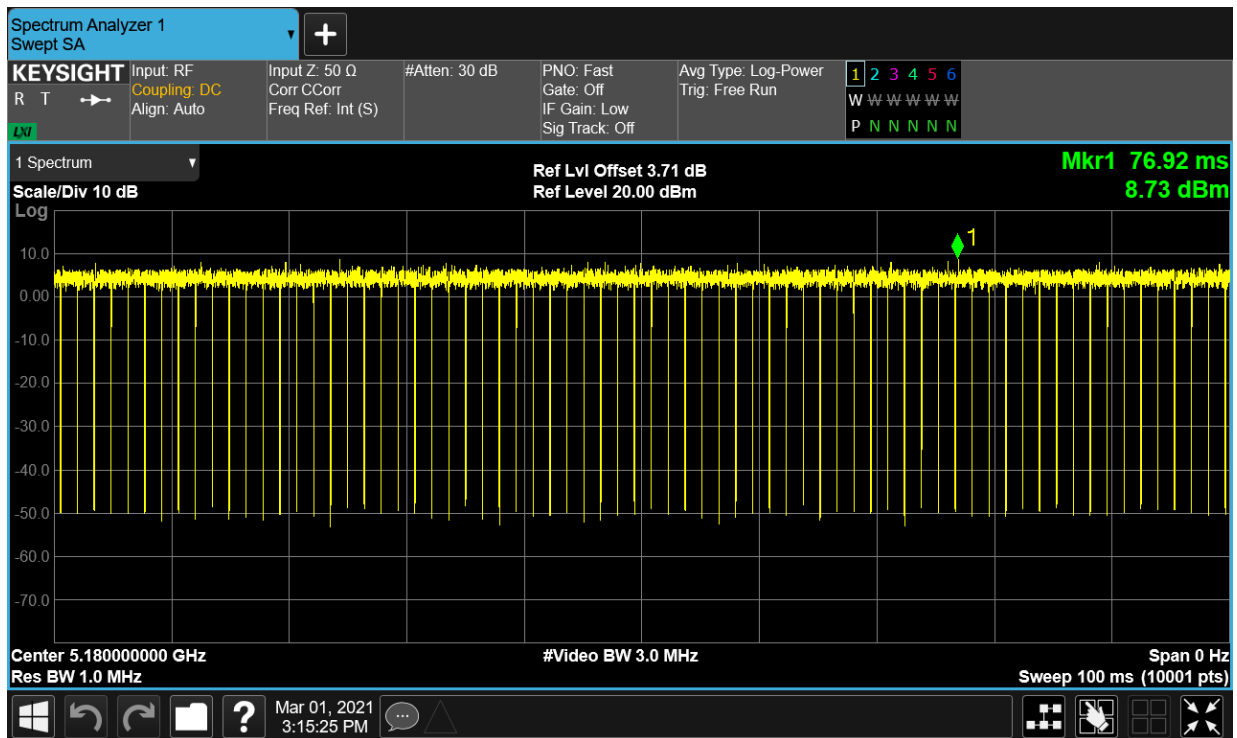


Duty Cycle NVNT a 5200MHz Ant1

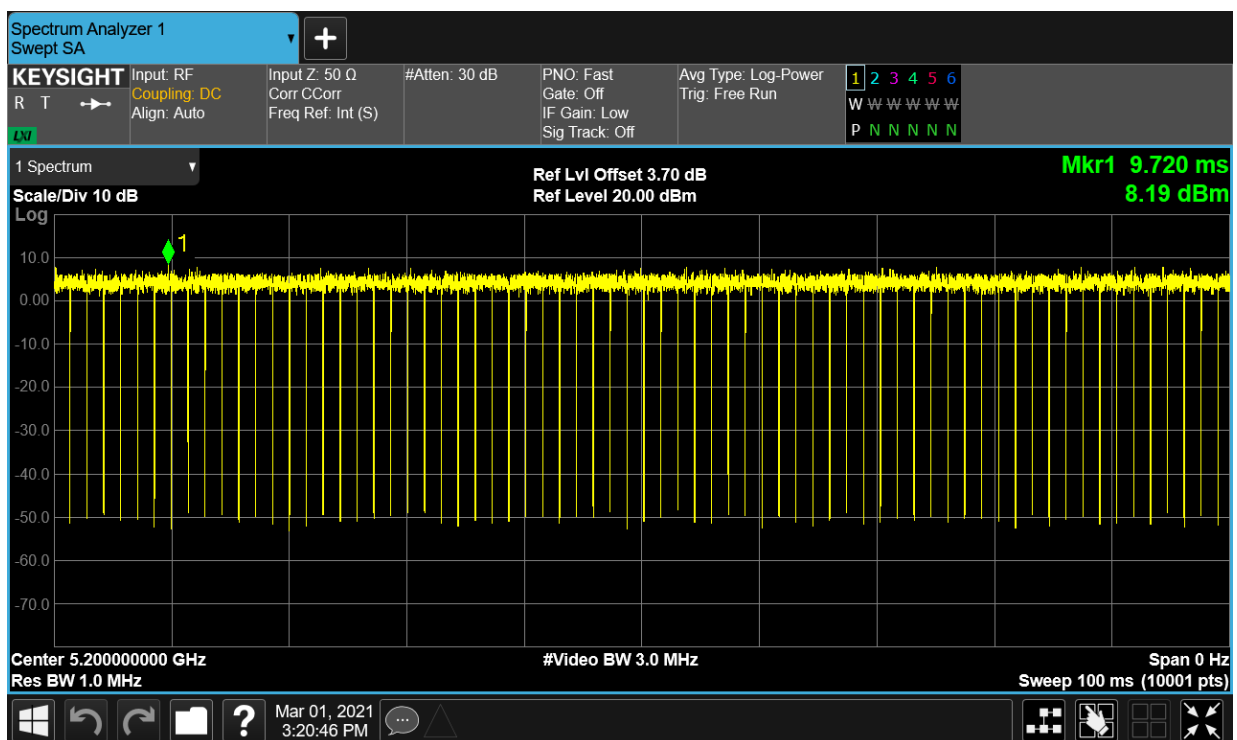


Duty Cycle NVNT a 5240MHz Ant1




Duty Cycle NVNT ac20 5180MHz Ant1

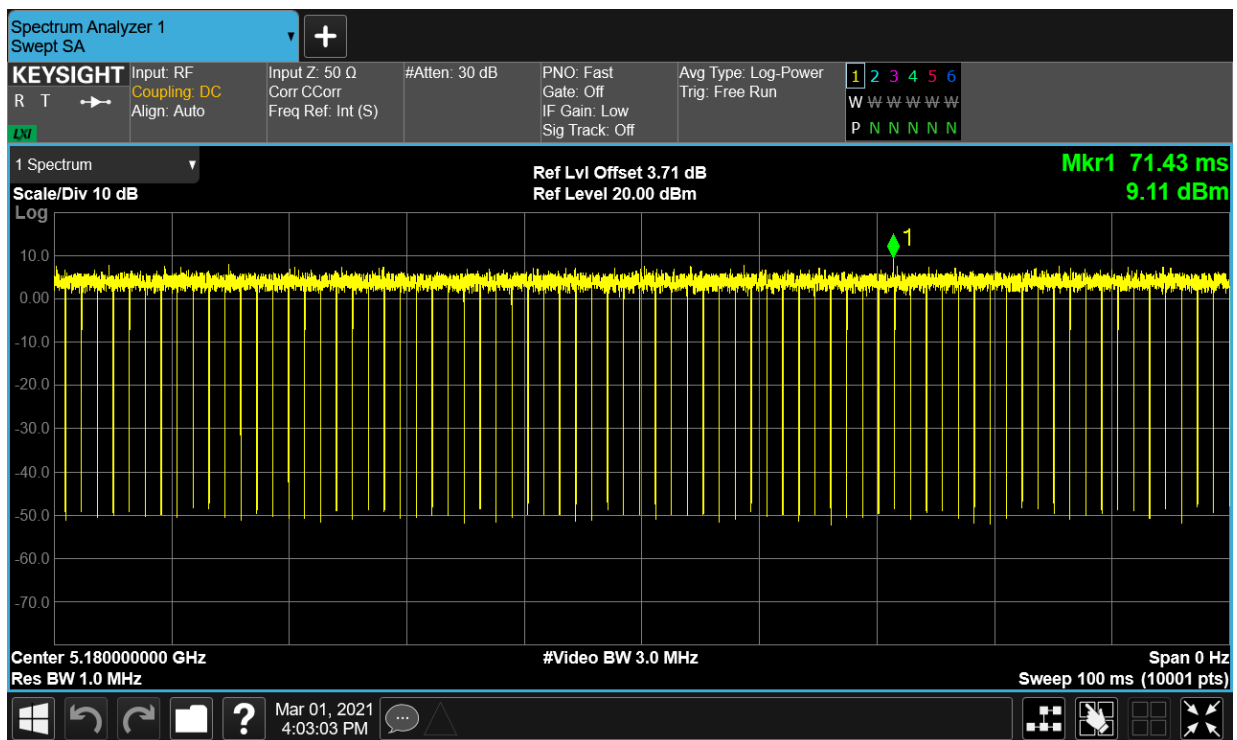


Duty Cycle NVNT ac20 5200MHz Ant1

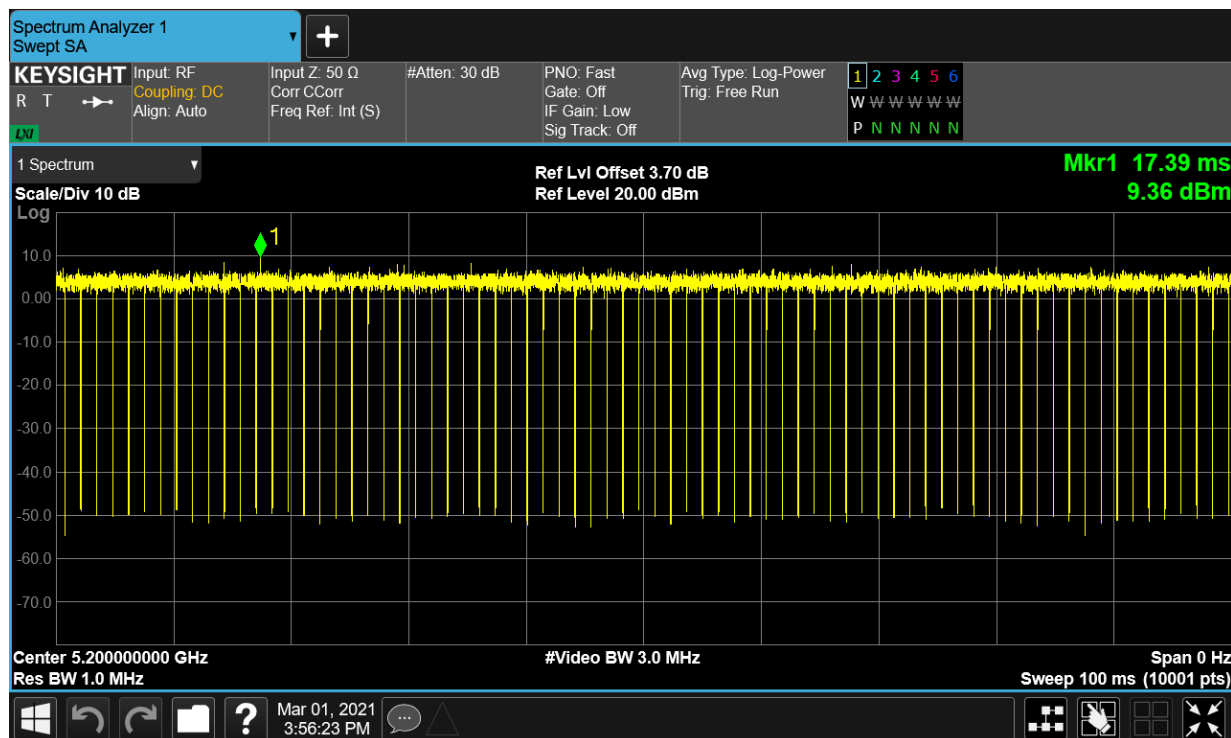


Duty Cycle NVNT ac20 5240MHz Ant1

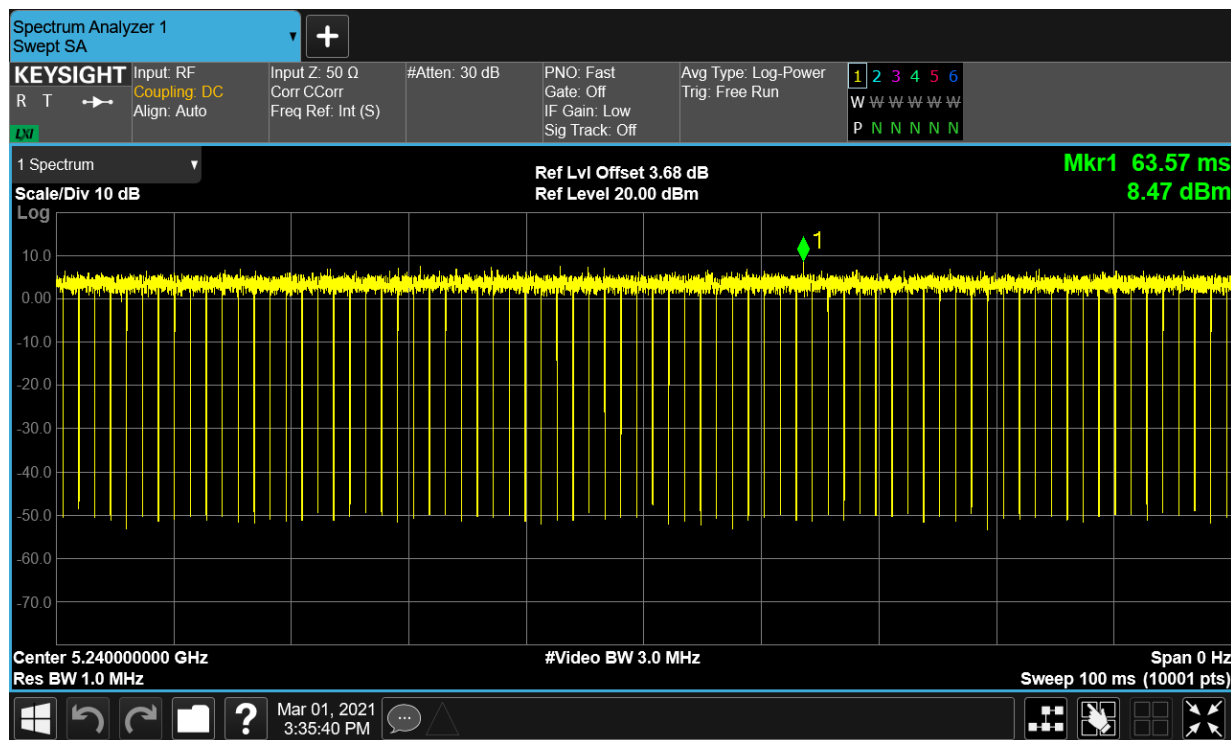


Duty Cycle NVNT ac40 5190MHz Ant1

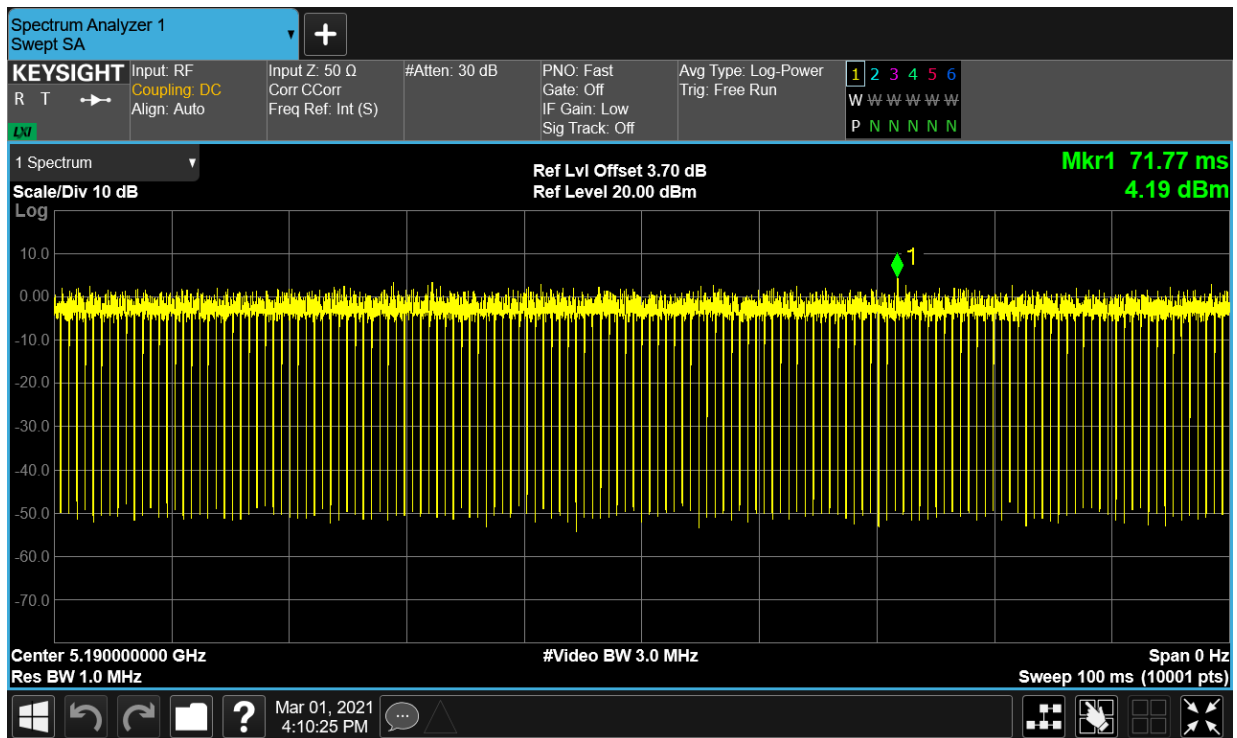


Duty Cycle NVNT ac40 5230MHz Ant1

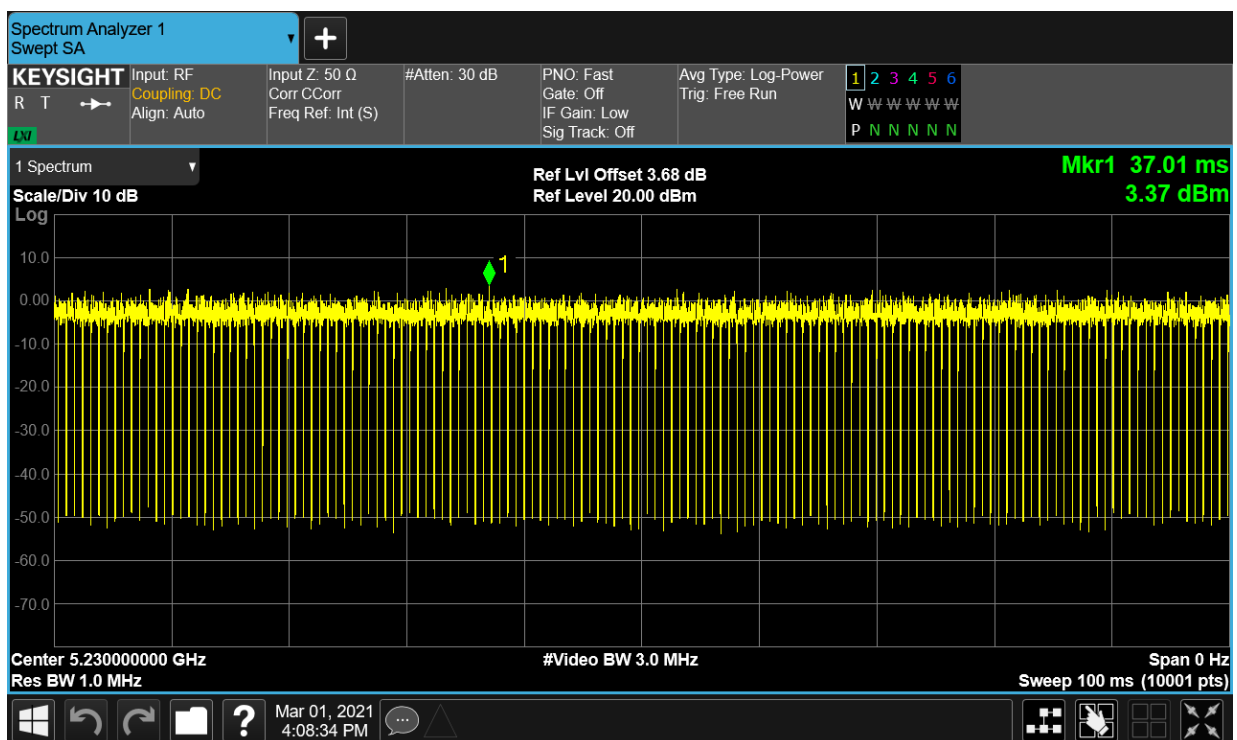


Duty Cycle NVNT ac80 5210MHz Ant1

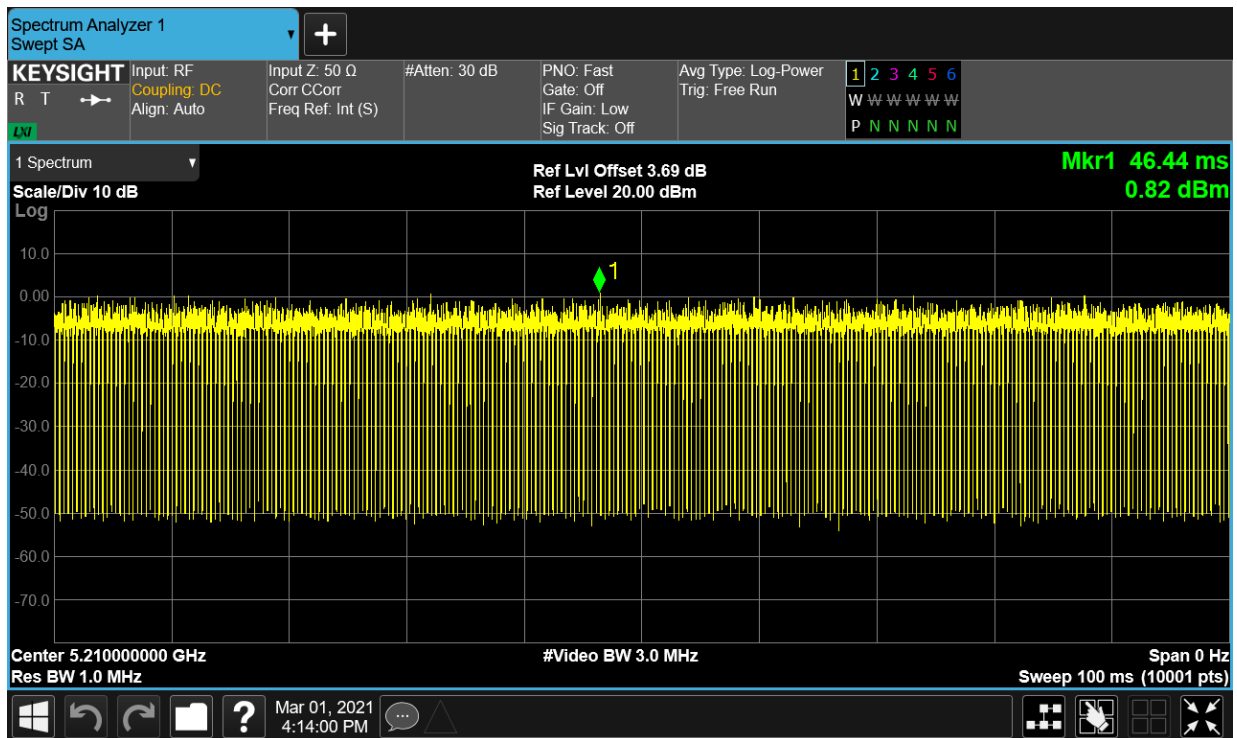


Duty Cycle NVNT n20 5180MHz Ant1

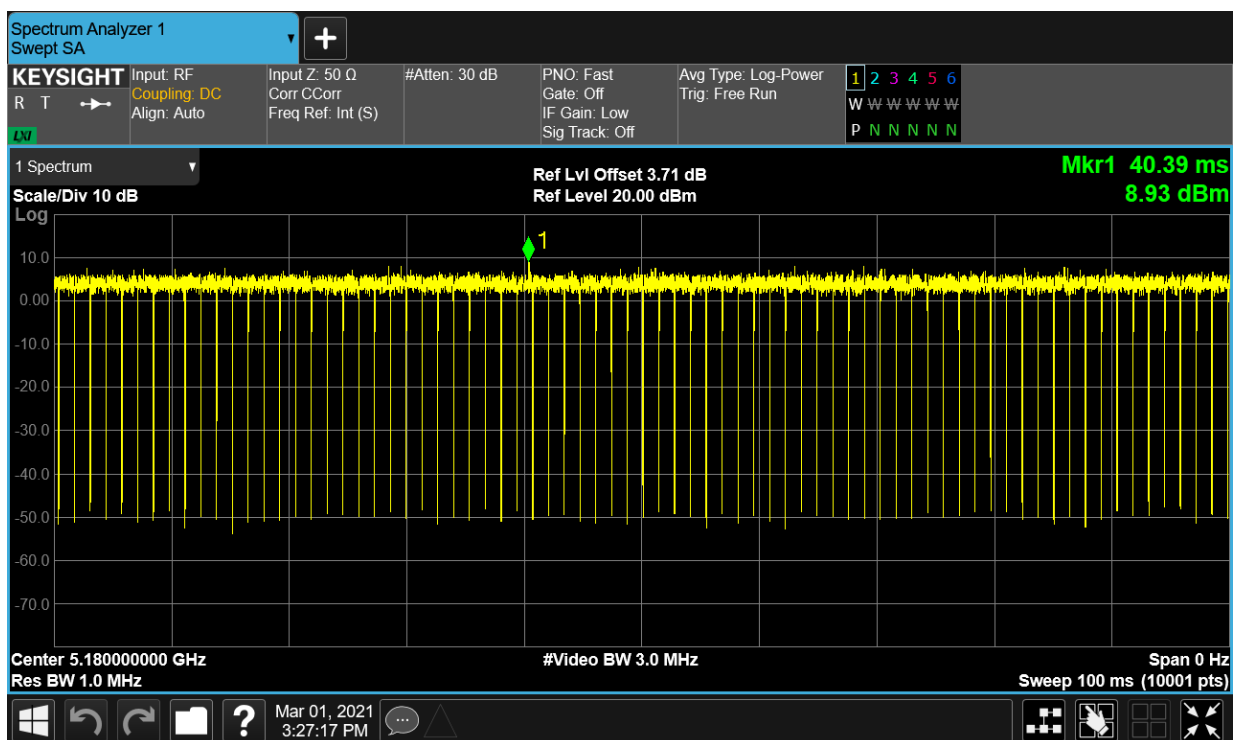


Duty Cycle NVNT n20 5200MHz Ant1

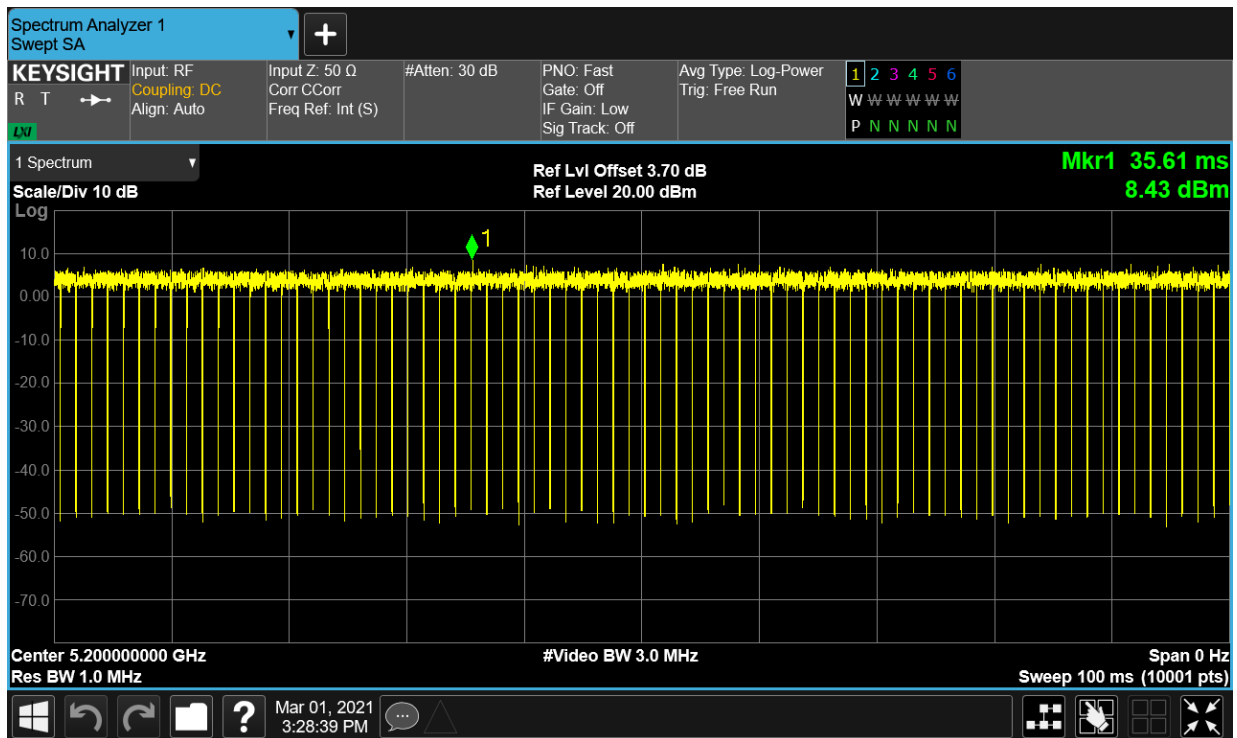


Duty Cycle NVNT n20 5240MHz Ant1

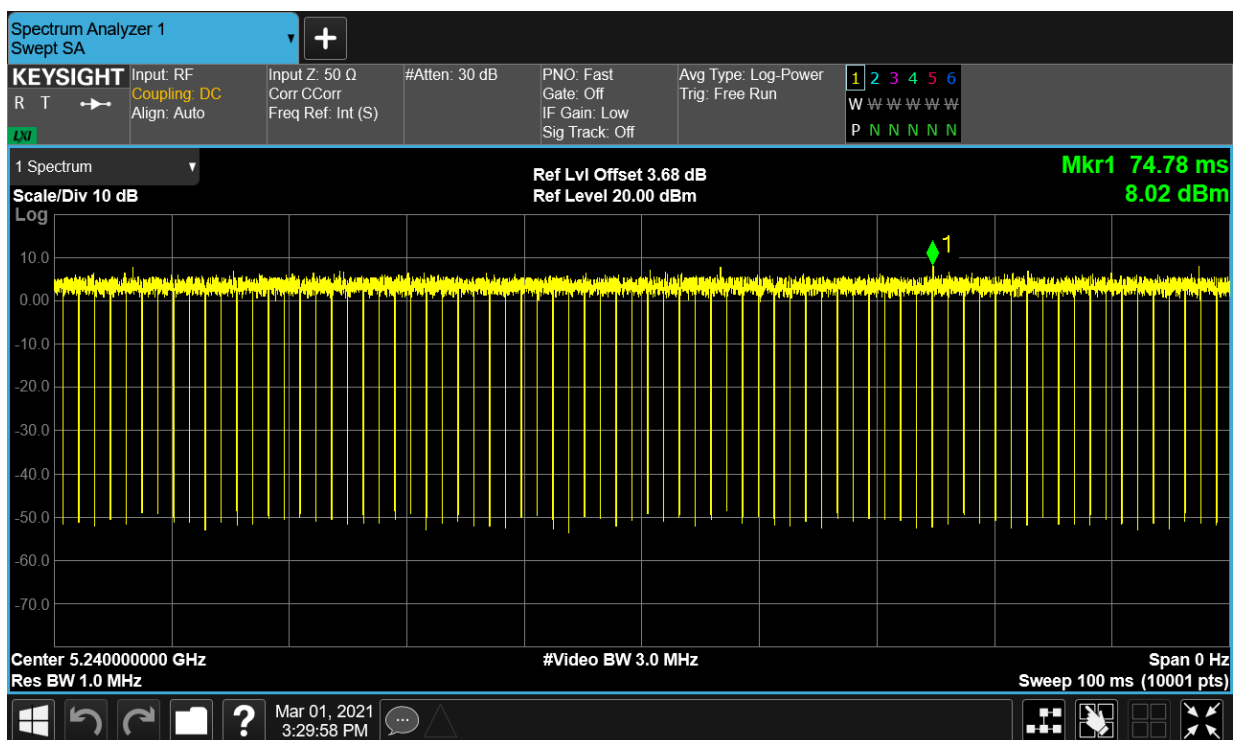

Duty Cycle NVNT n40 5190MHz Ant1

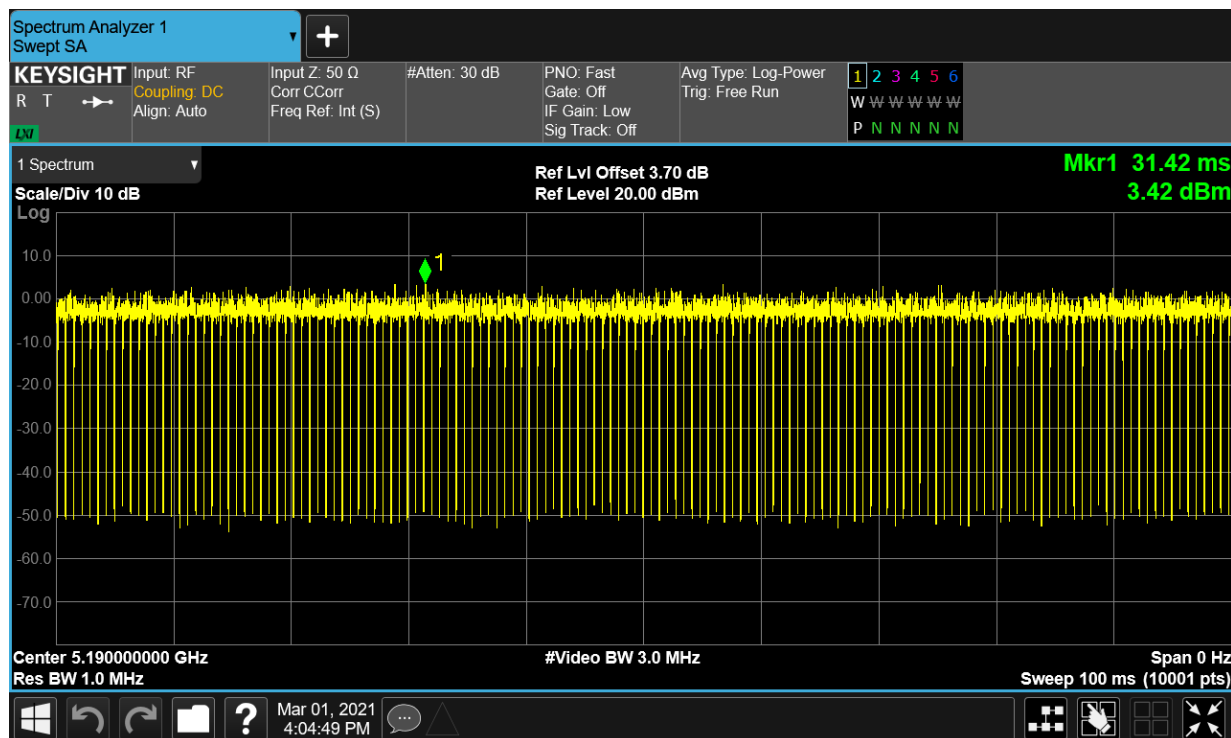

Duty Cycle NVNT n40 5230MHz Ant1

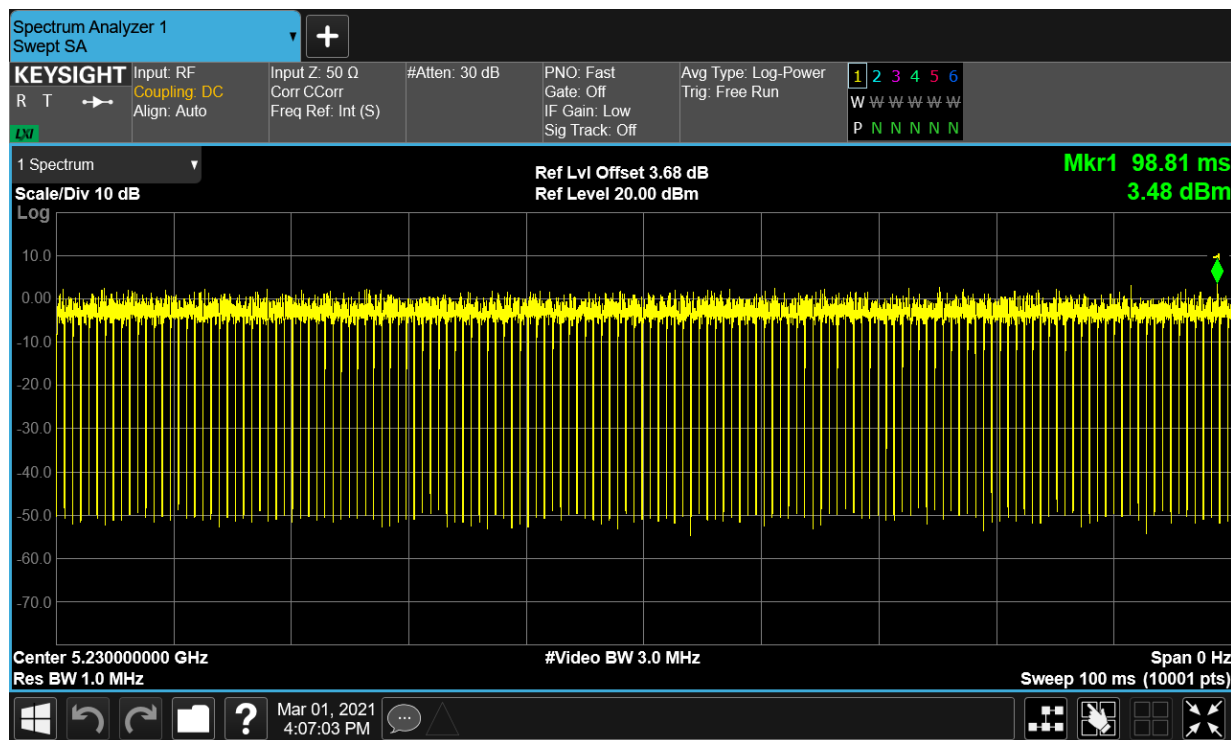

Maximum Conducted Output Power

Condition	Mode	Frequency (MHz)	Antenna	Conducted Power (dBm)	Duty Factor (dB)	Total Power (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	10.61	0.1	10.71	24	Pass
NVNT	a	5200	Ant1	10.3	0.1	10.4	24	Pass
NVNT	a	5240	Ant1	10.28	0.1	10.38	24	Pass

JianYan Testing Group Shenzhen Co., Ltd.

Project No.: JYTSZE2102019

No.101, Building 8, Innovation Wisdom Port, No.155 Hongtian Road, Huangpu Community,
Xinqiao Street, Bao'an District, Shenzhen, Guangdong, People's Republic of China.


Tel: +86-755-23118282, Fax: +86-755-23116366

NVNT	ac20	5180	Ant1	10.46	0.1	10.56	24	Pass
NVNT	ac20	5200	Ant1	10.19	0.1	10.29	24	Pass
NVNT	ac20	5240	Ant1	10.1	0.1	10.2	24	Pass
NVNT	ac40	5190	Ant1	10.2	0.2	10.4	24	Pass
NVNT	ac40	5230	Ant1	10.29	0.21	10.5	24	Pass
NVNT	ac80	5210	Ant1	10.36	0.4	10.76	24	Pass
NVNT	n20	5180	Ant1	10.46	0.11	10.57	24	Pass
NVNT	n20	5200	Ant1	10.18	0.1	10.28	24	Pass
NVNT	n20	5240	Ant1	10.13	0.11	10.24	24	Pass
NVNT	n40	5190	Ant1	10.2	0.21	10.41	24	Pass
NVNT	n40	5230	Ant1	10.27	0.21	10.48	24	Pass


Occupied Channel Bandwidth

Condition	Mode	Frequency (MHz)	Antenna	99% OBW (MHz)
NVNT	a	5180	Ant1	16.39104739
NVNT	a	5200	Ant1	16.37392209
NVNT	a	5240	Ant1	16.37665545
NVNT	ac20	5180	Ant1	17.55998444
NVNT	ac20	5200	Ant1	17.53414757
NVNT	ac20	5240	Ant1	17.53395706
NVNT	ac40	5190	Ant1	35.94314524
NVNT	ac40	5230	Ant1	35.93757503
NVNT	ac80	5210	Ant1	75.16837959
NVNT	n20	5180	Ant1	17.54009693
NVNT	n20	5200	Ant1	17.52442363
NVNT	n20	5240	Ant1	17.53653341
NVNT	n40	5190	Ant1	35.9672005
NVNT	n40	5230	Ant1	35.94350813


OBW NVNT a 5180MHz Ant1

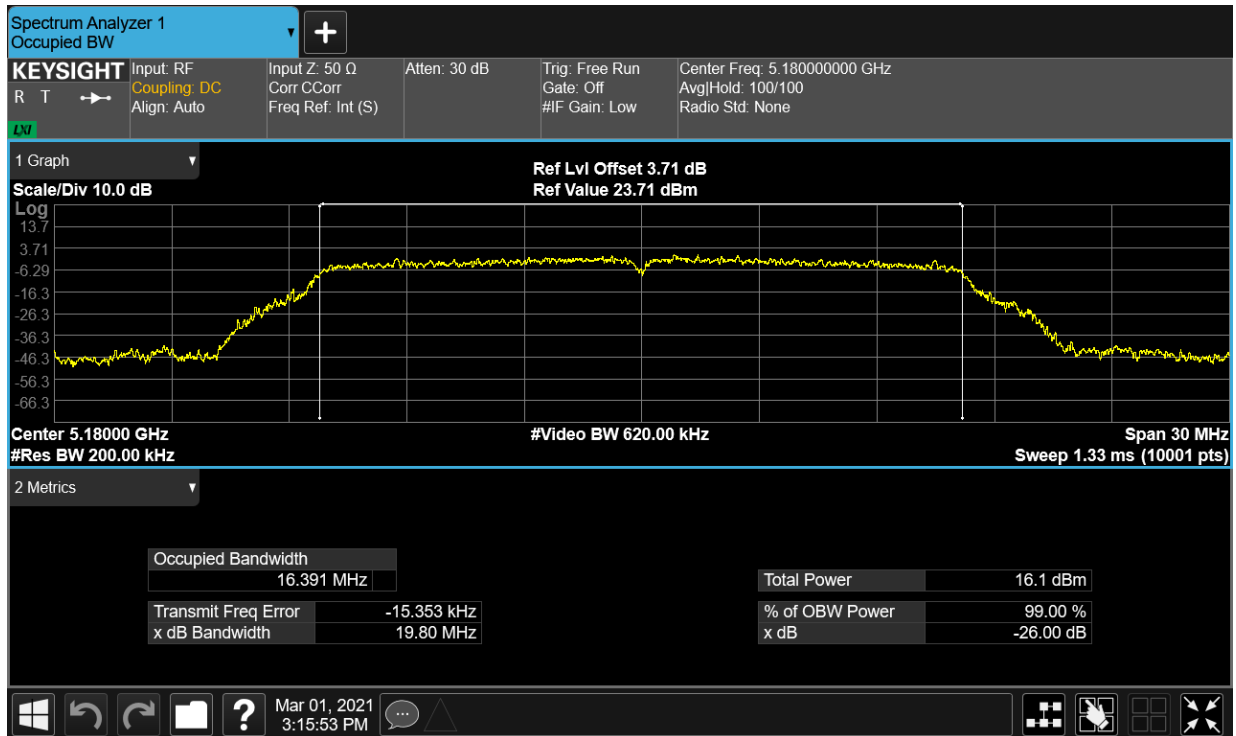


OBW NVNT a 5200MHz Ant1

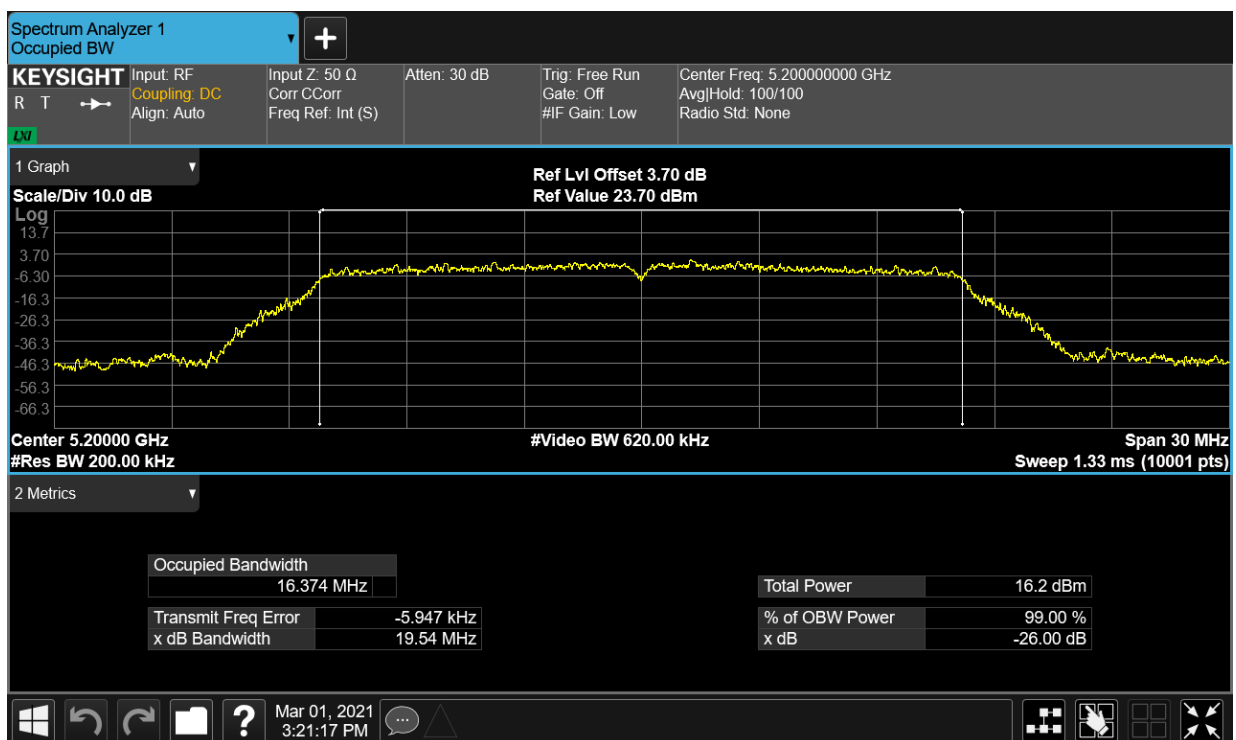


OBW NVNT a 5240MHz Ant1

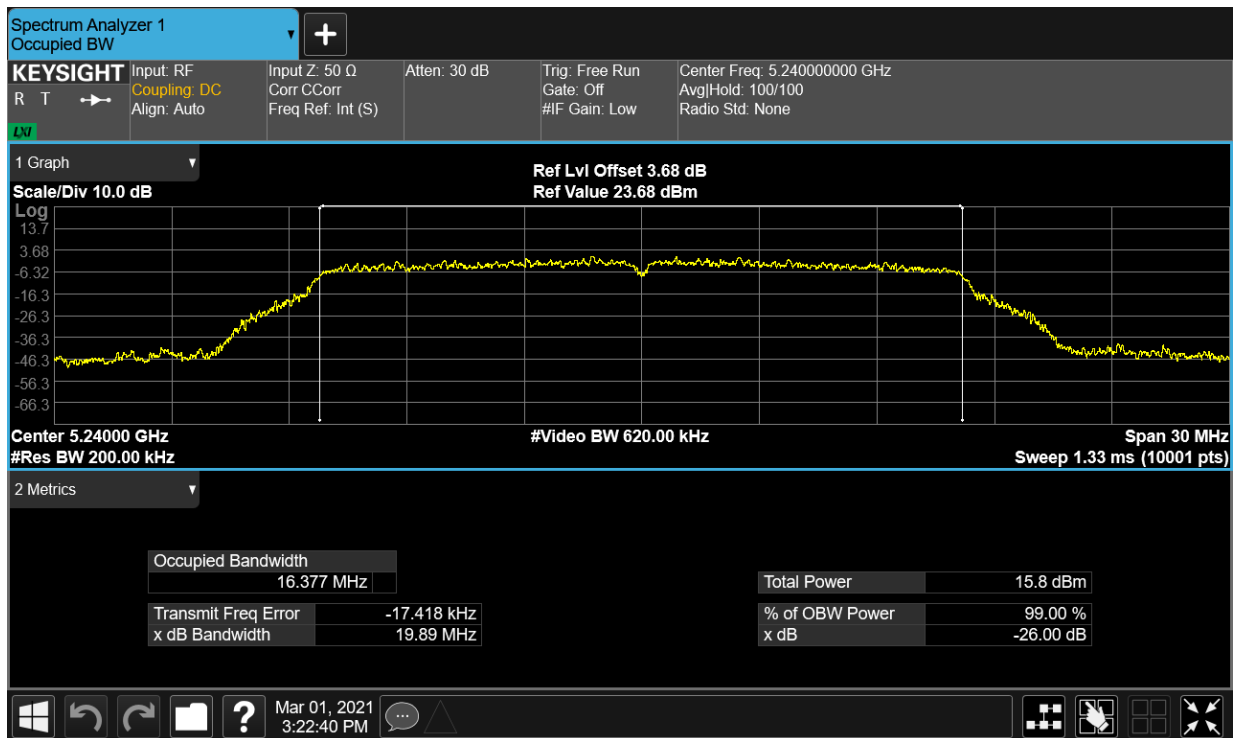


OBW NVNT ac20 5180MHz Ant1

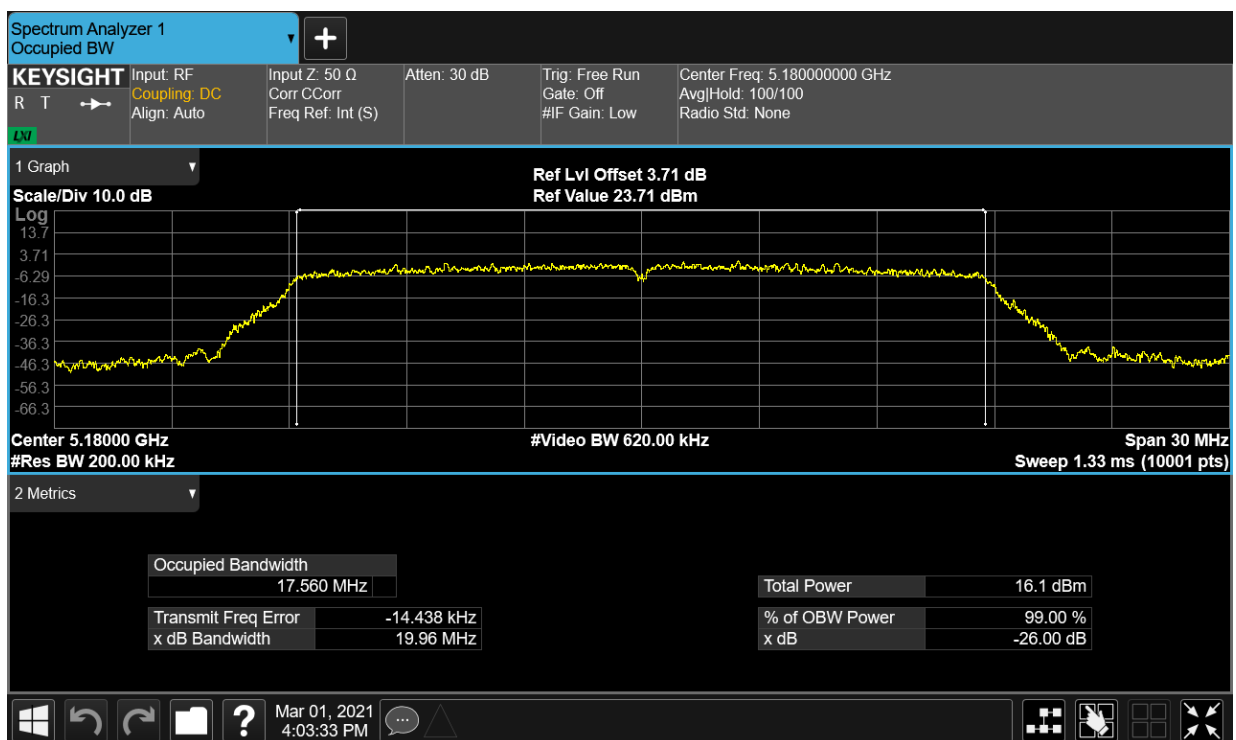

OBW NVNT ac20 5200MHz Ant1

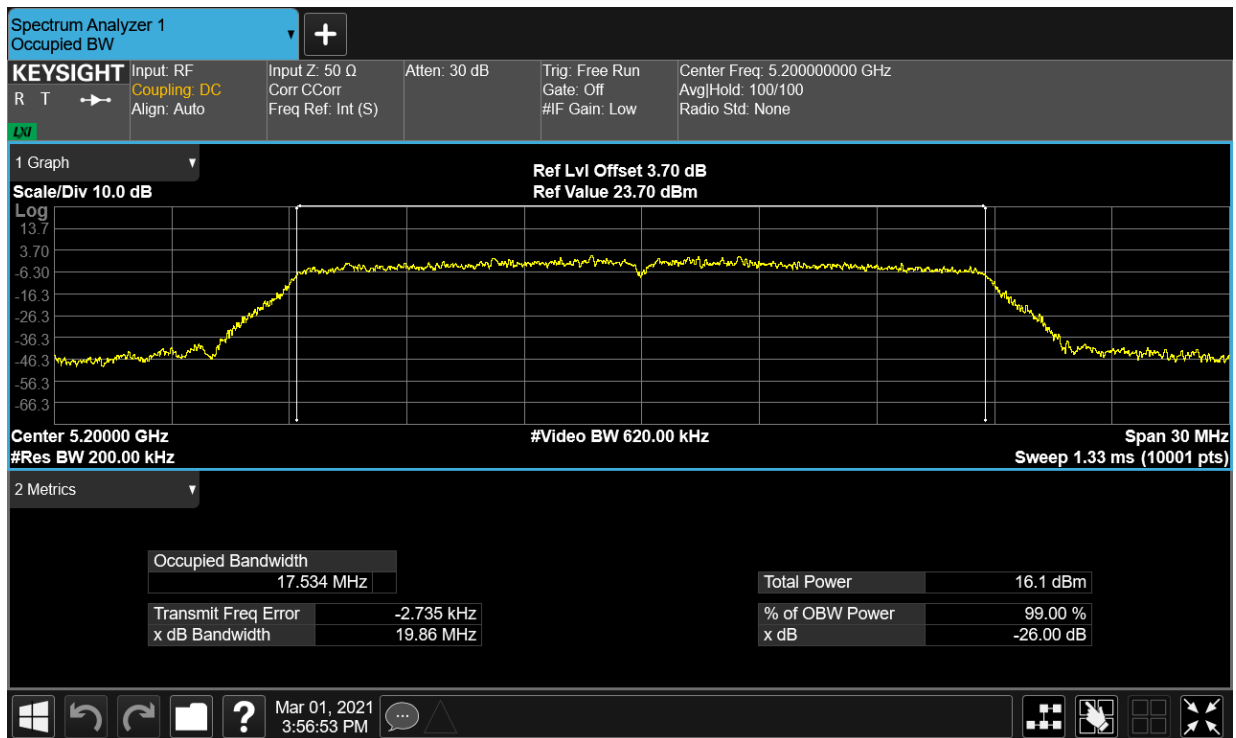

OBW NVNT ac20 5240MHz Ant1

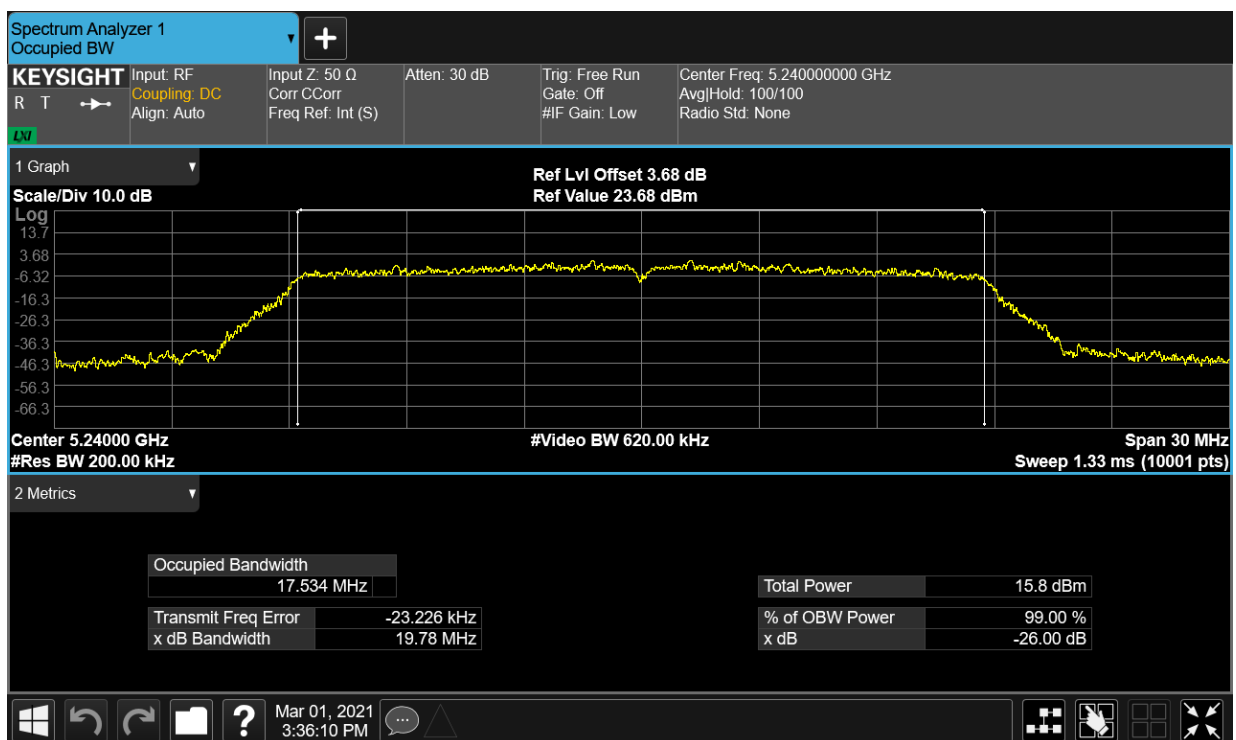


OBW NVNT ac40 5190MHz Ant1




OBW NVNT ac40 5230MHz Ant1




OBW NVNT ac80 5210MHz Ant1

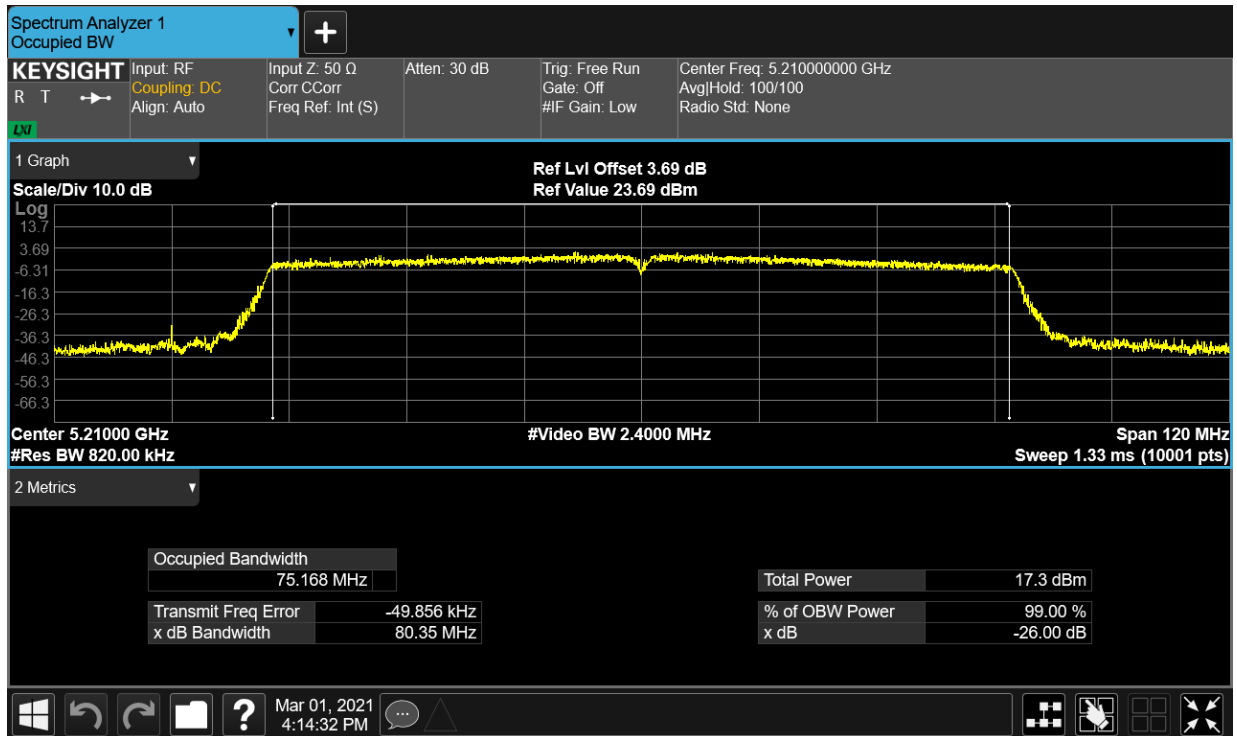


OBW NVNT n20 5180MHz Ant1

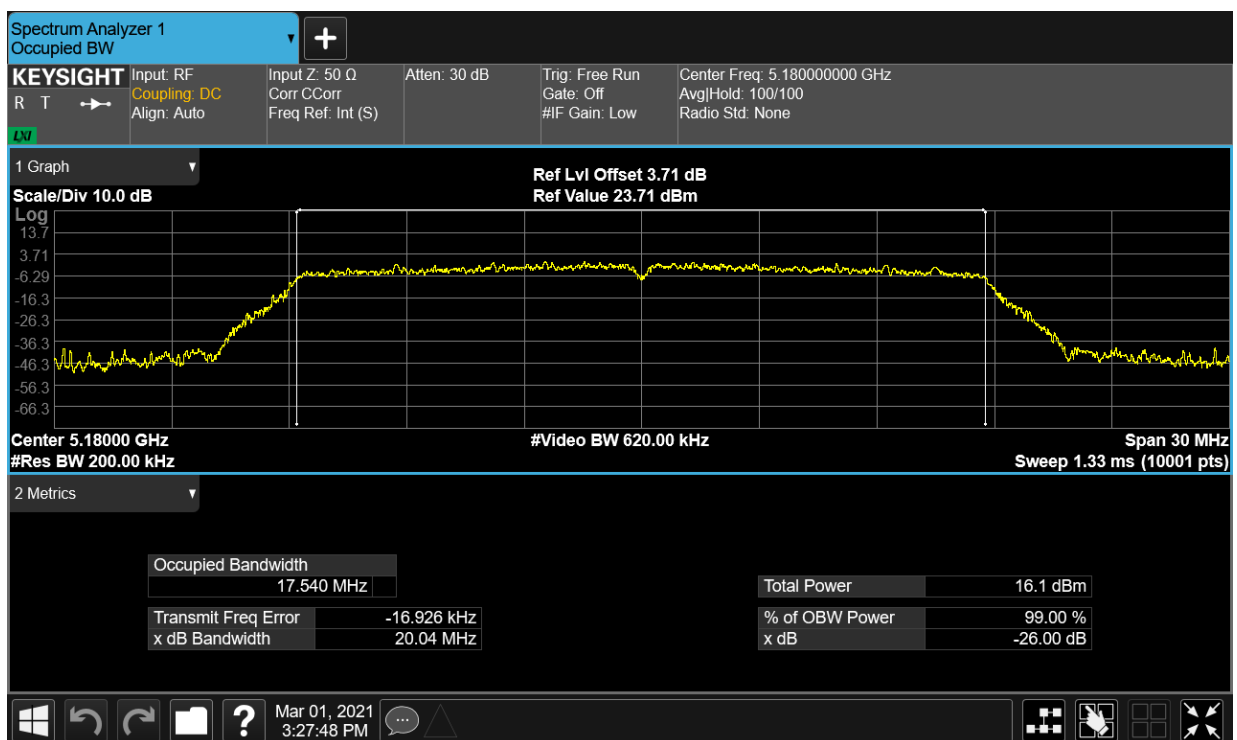


OBW NVNT n20 5200MHz Ant1

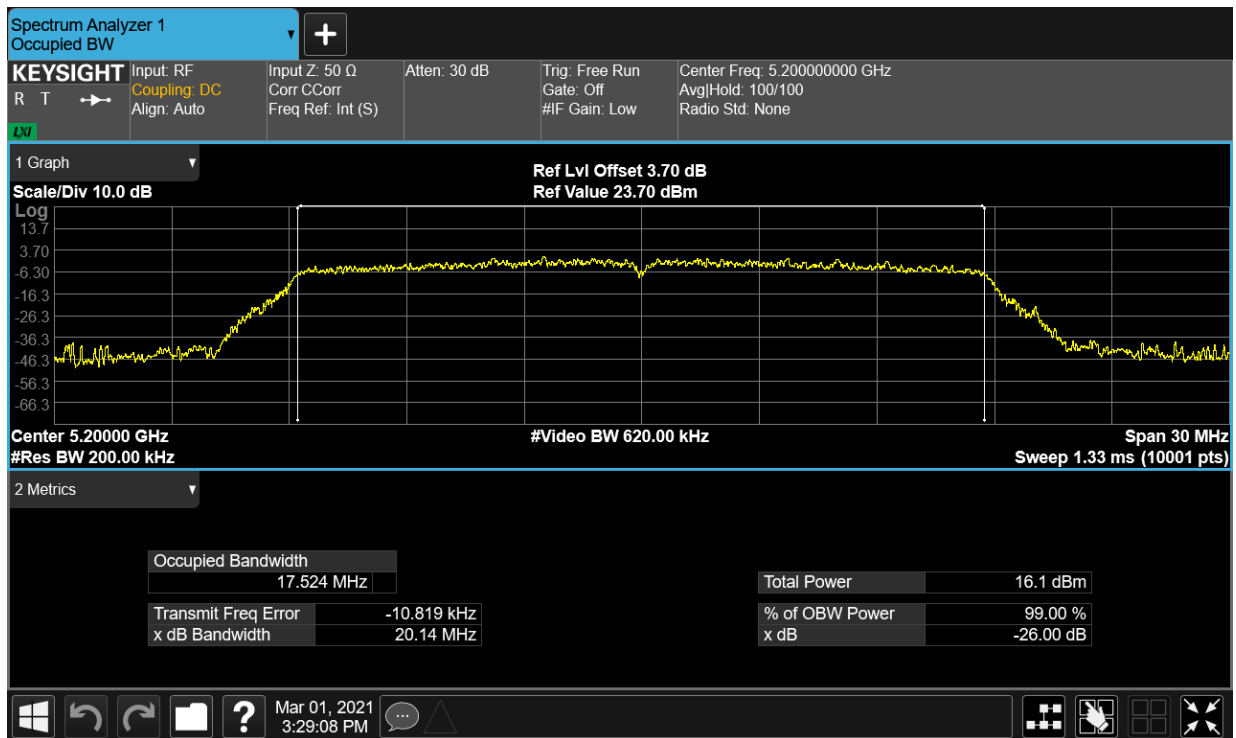


OBW NVNT n20 5240MHz Ant1

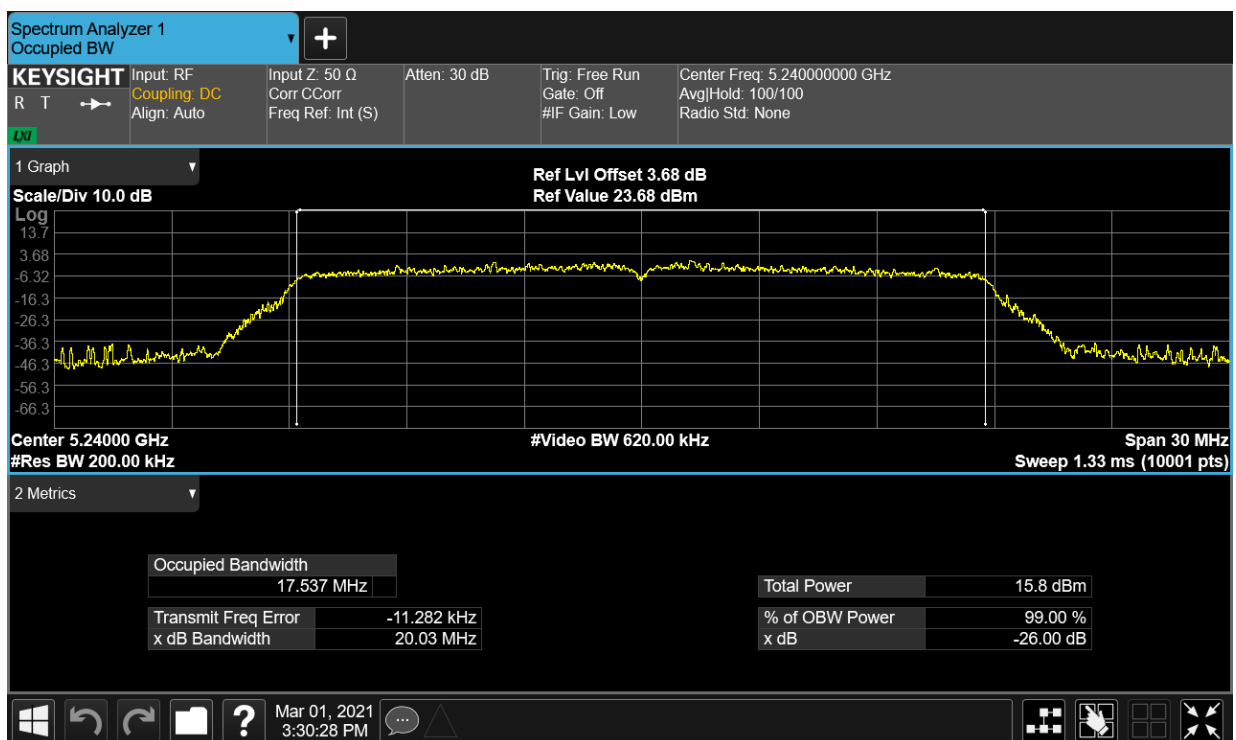

OBW NVNT n40 5190MHz Ant1

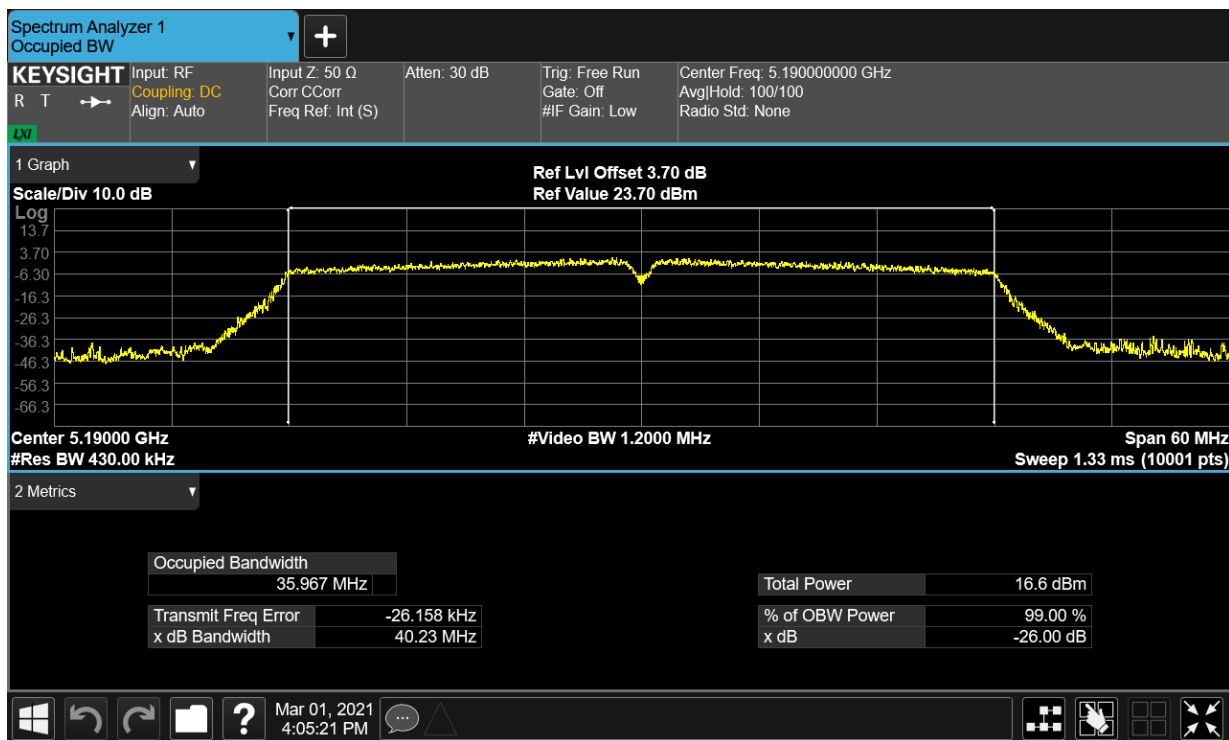

OBW NVNT n40 5230MHz Ant1

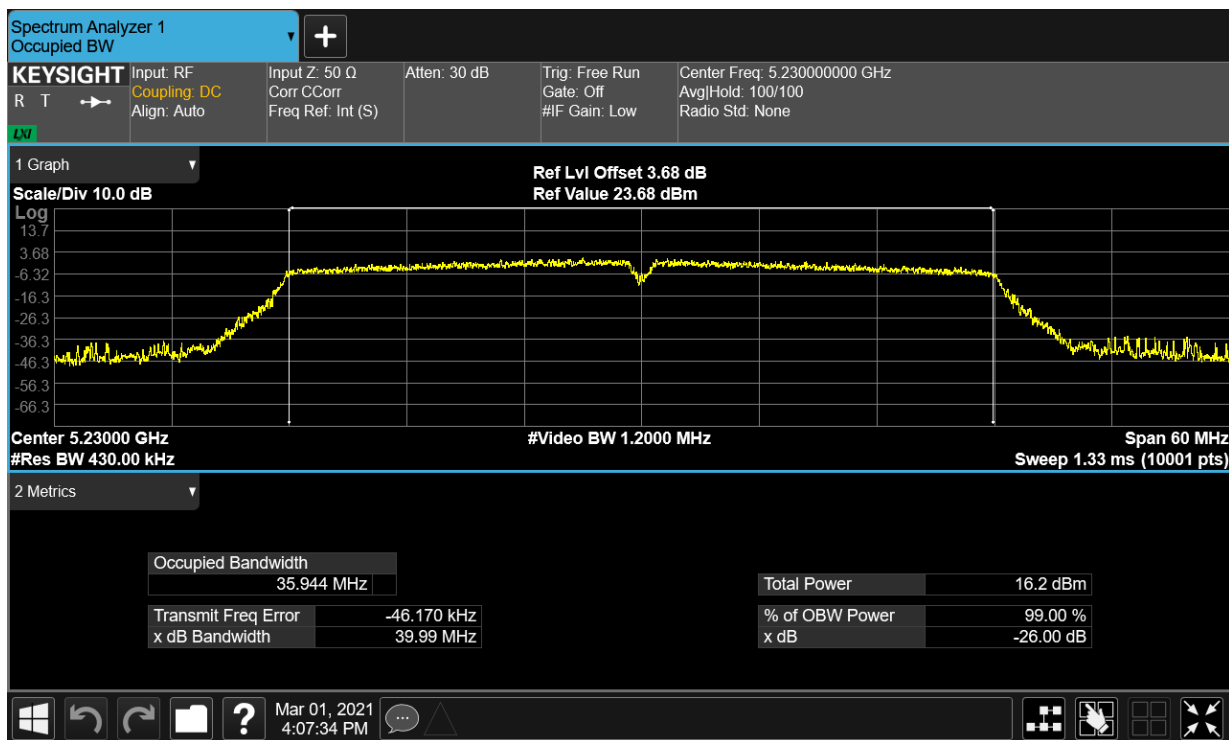


Maximum Power Spectral Density Level


Condition	Mode	Frequency (MHz)	Antenna	Max PSD (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	0.777	11	Pass
NVNT	a	5200	Ant1	0.879	11	Pass
NVNT	a	5240	Ant1	0.318	11	Pass
NVNT	ac20	5180	Ant1	0.49	11	Pass

NVNT	ac20	5200	Ant1	0.443	11	Pass
NVNT	ac20	5240	Ant1	0.192	11	Pass
NVNT	ac40	5190	Ant1	-1.794	11	Pass
NVNT	ac40	5230	Ant1	-2.354	11	Pass
NVNT	ac80	5210	Ant1	-5.405	11	Pass
NVNT	n20	5180	Ant1	0.606	11	Pass
NVNT	n20	5200	Ant1	0.623	11	Pass
NVNT	n20	5240	Ant1	0.075	11	Pass
NVNT	n40	5190	Ant1	-1.802	11	Pass
NVNT	n40	5230	Ant1	-2.263	11	Pass


PSD NVNT a 5180MHz Ant1

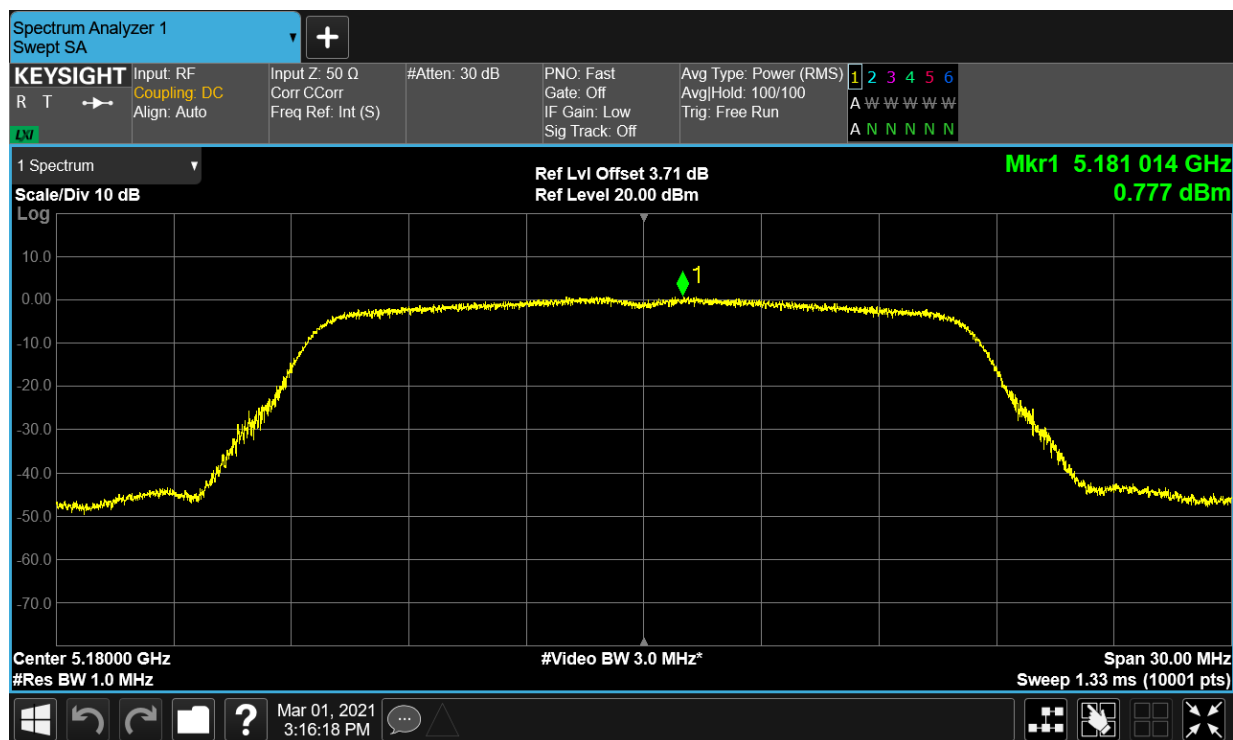


PSD NVNT a 5200MHz Ant1

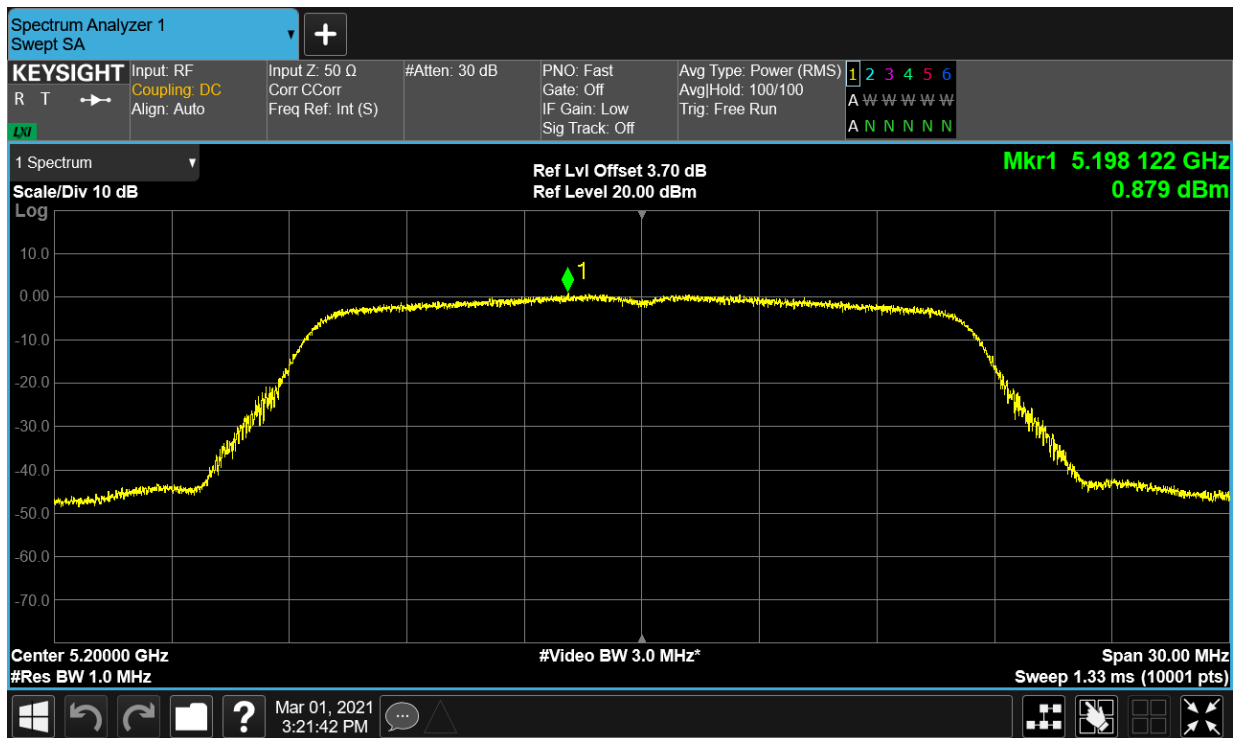


PSD NVNT a 5240MHz Ant1

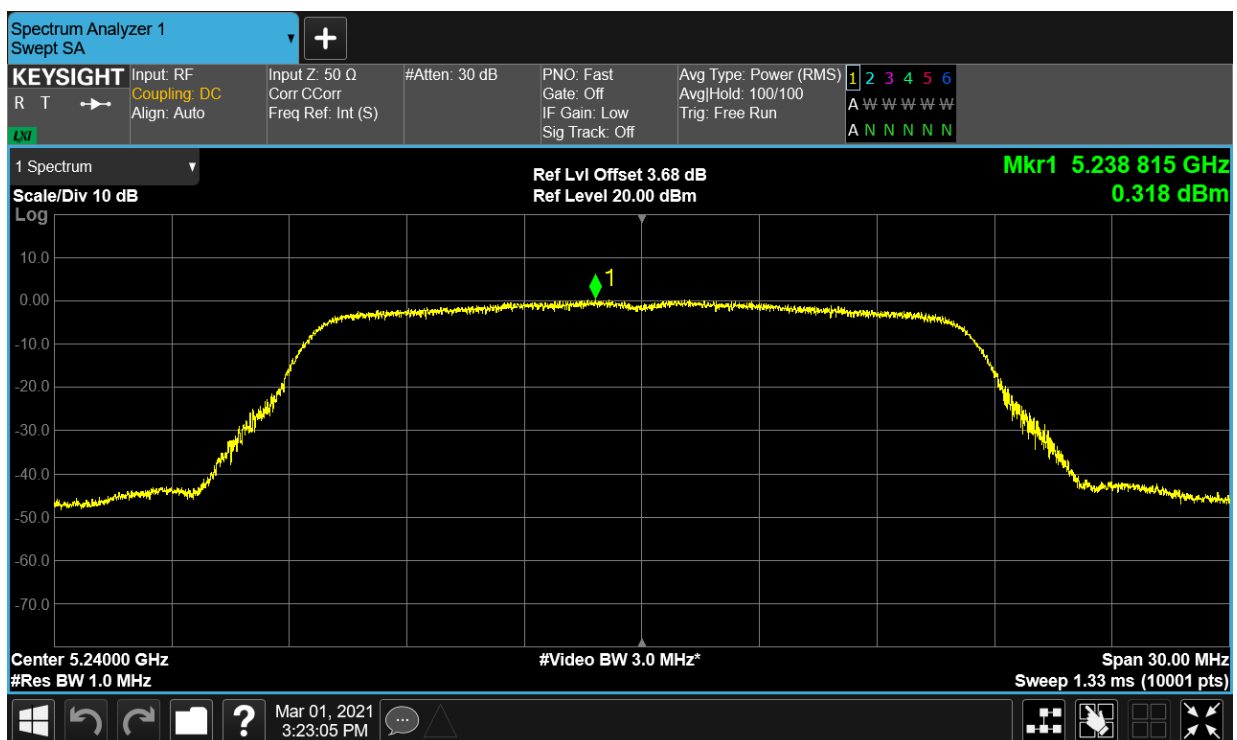


PSD NVNT ac20 5180MHz Ant1

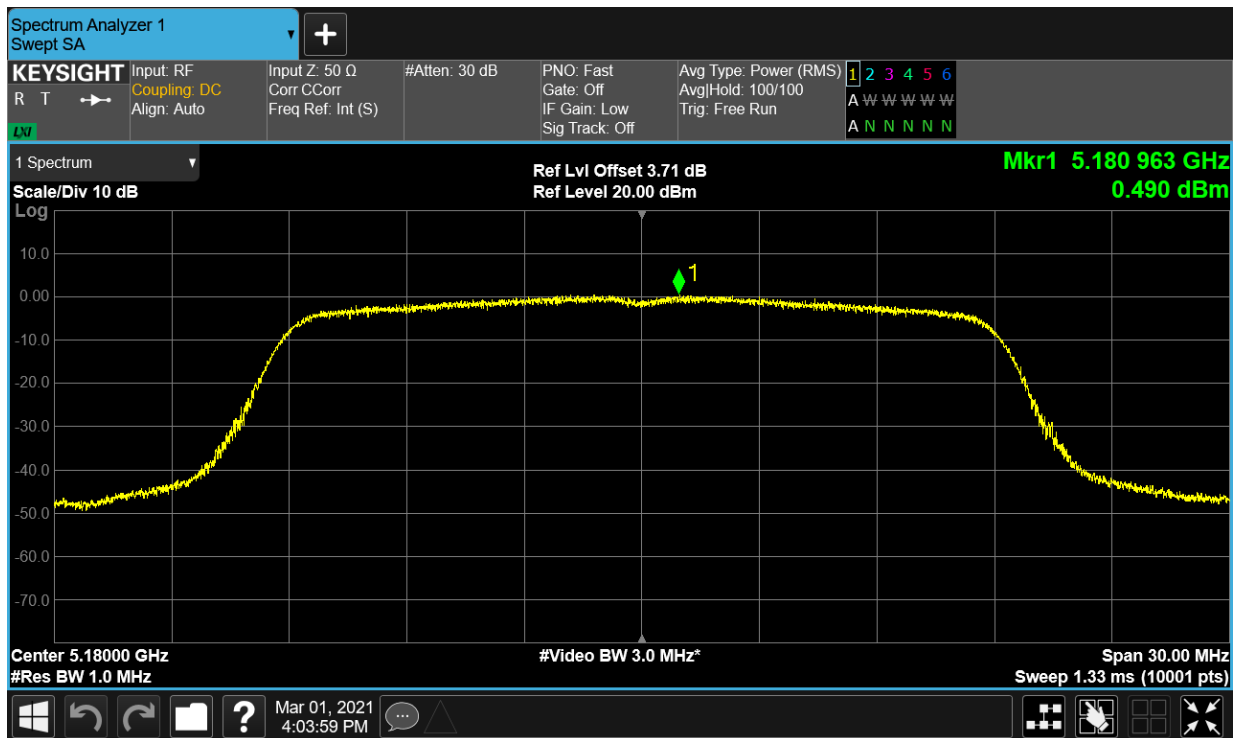


PSD NVNT ac20 5200MHz Ant1

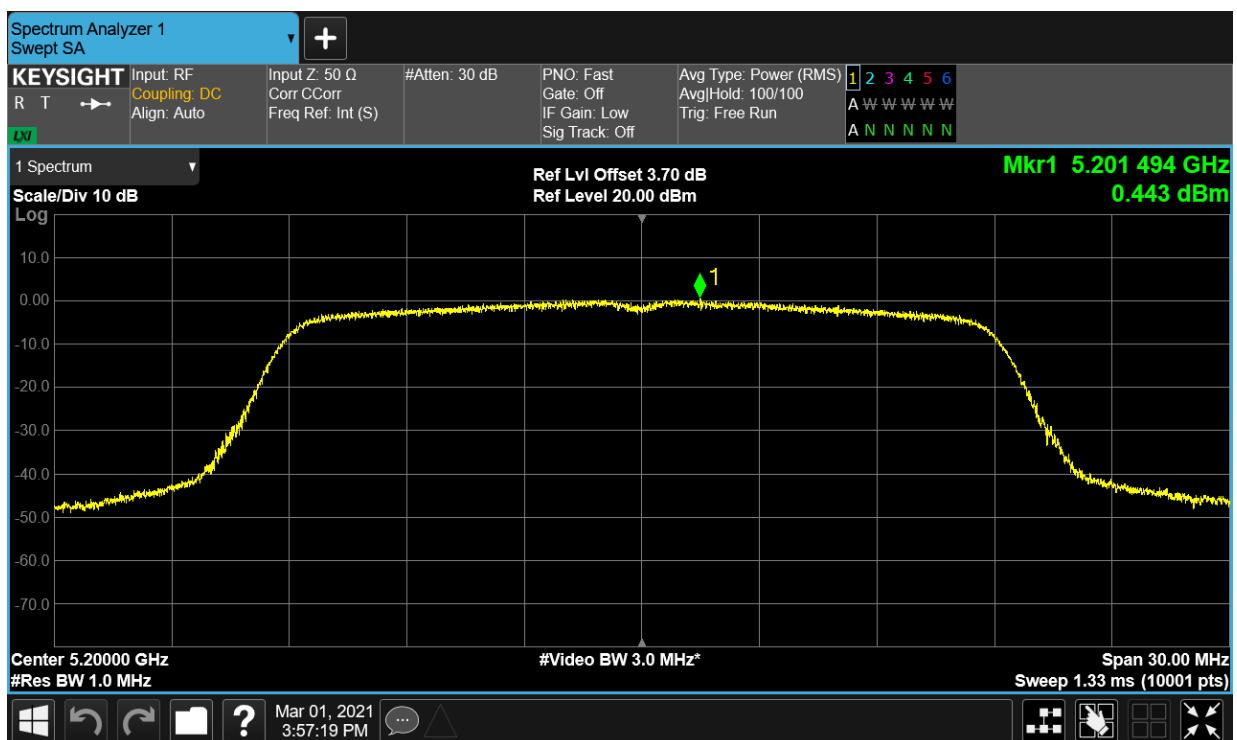


PSD NVNT ac20 5240MHz Ant1

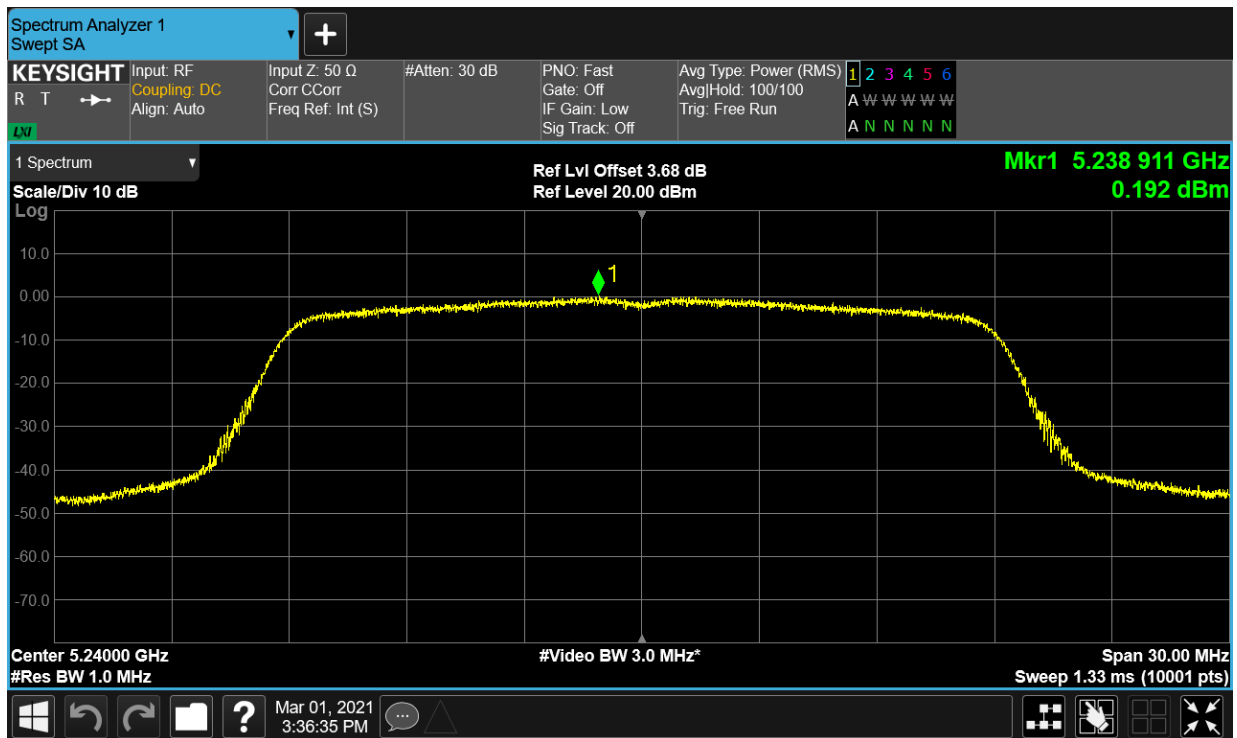


PSD NVNT ac40 5190MHz Ant1

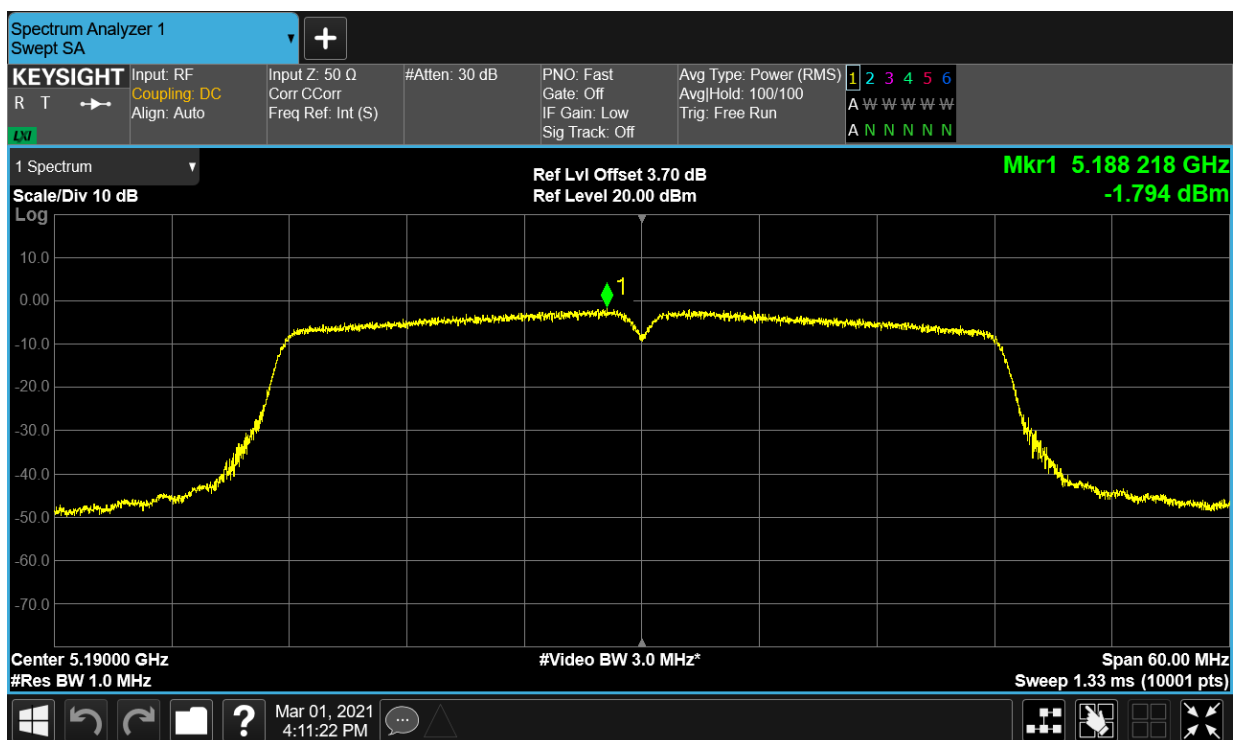


PSD NVNT ac40 5230MHz Ant1

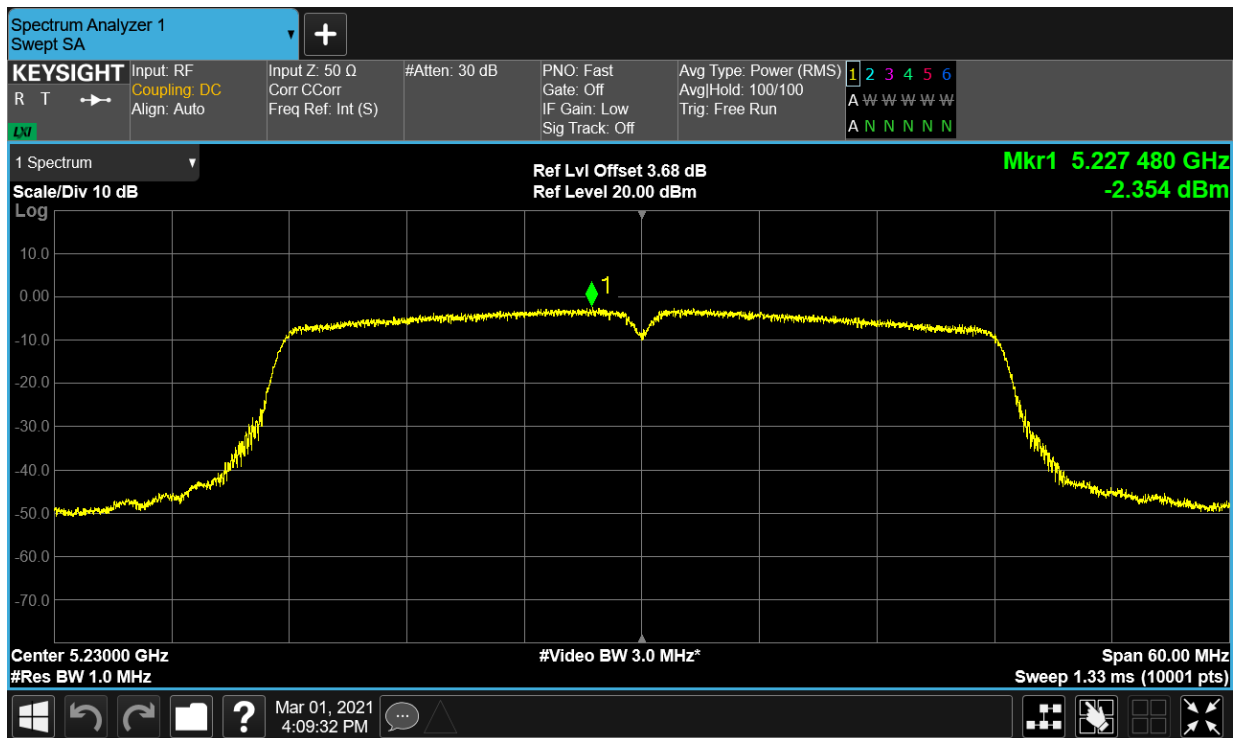


PSD NVNT ac80 5210MHz Ant1

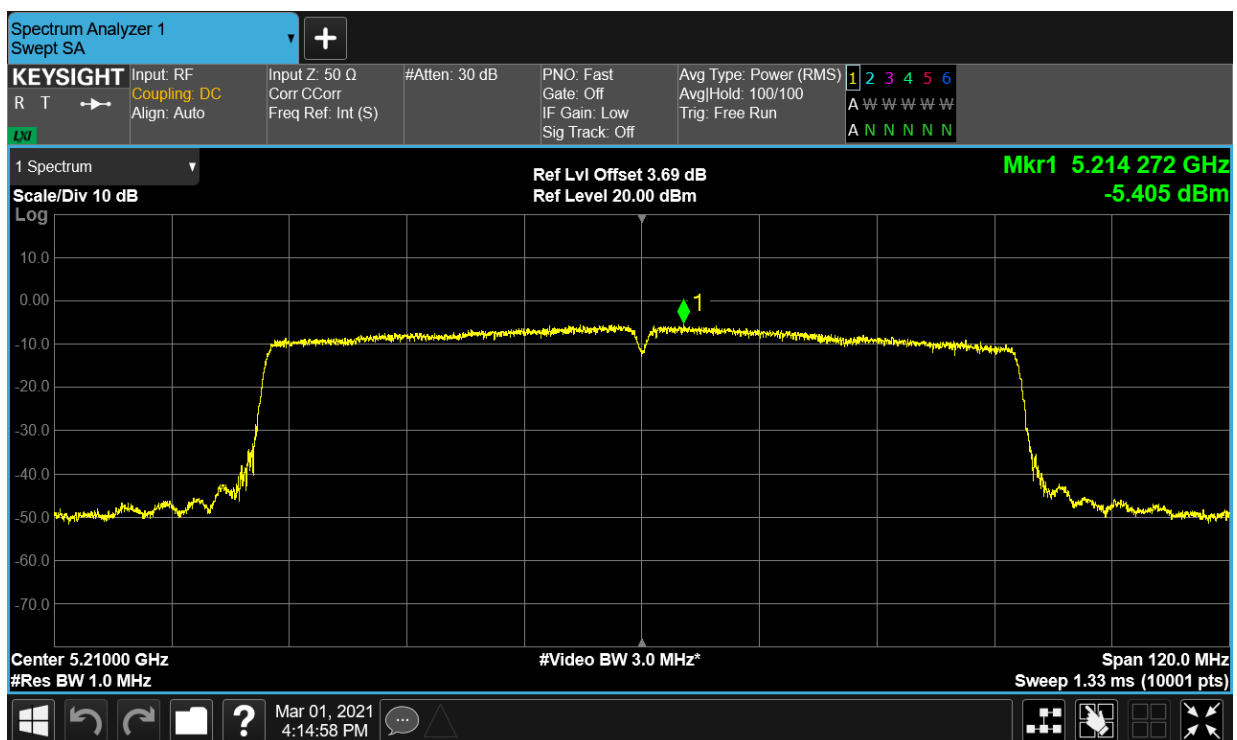


PSD NVNT n20 5180MHz Ant1

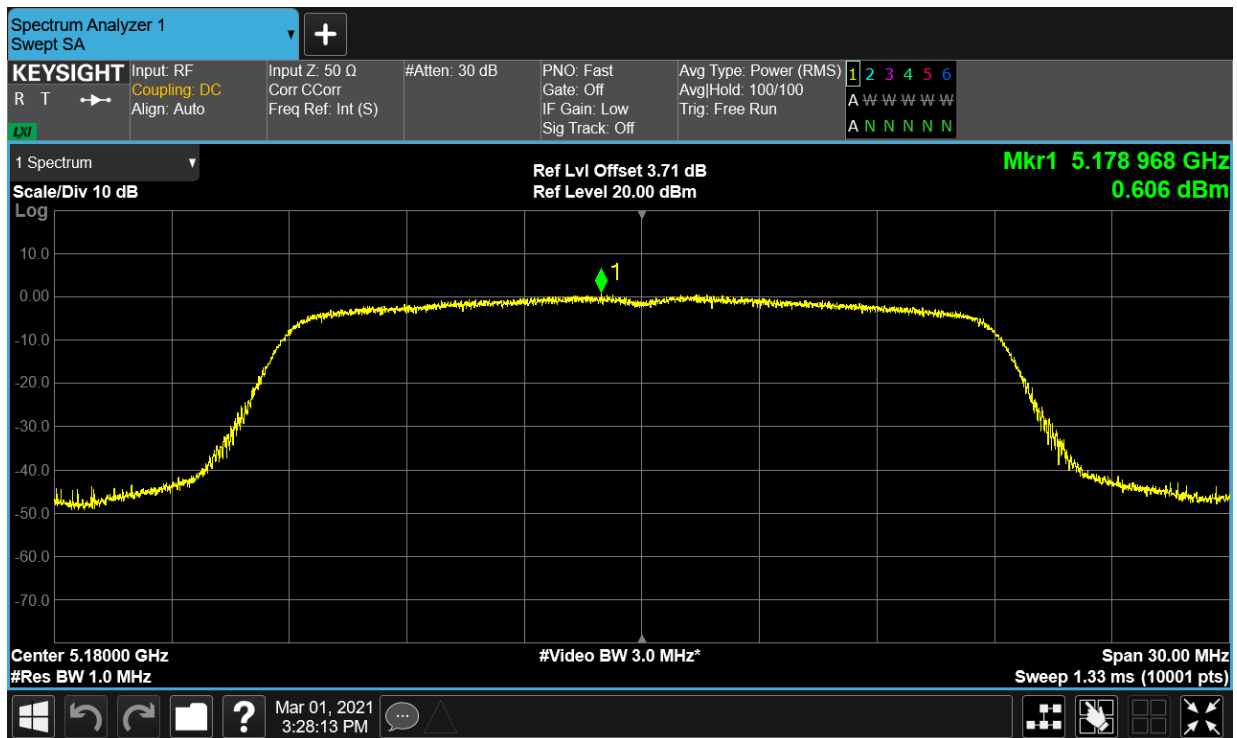


PSD NVNT n20 5200MHz Ant1

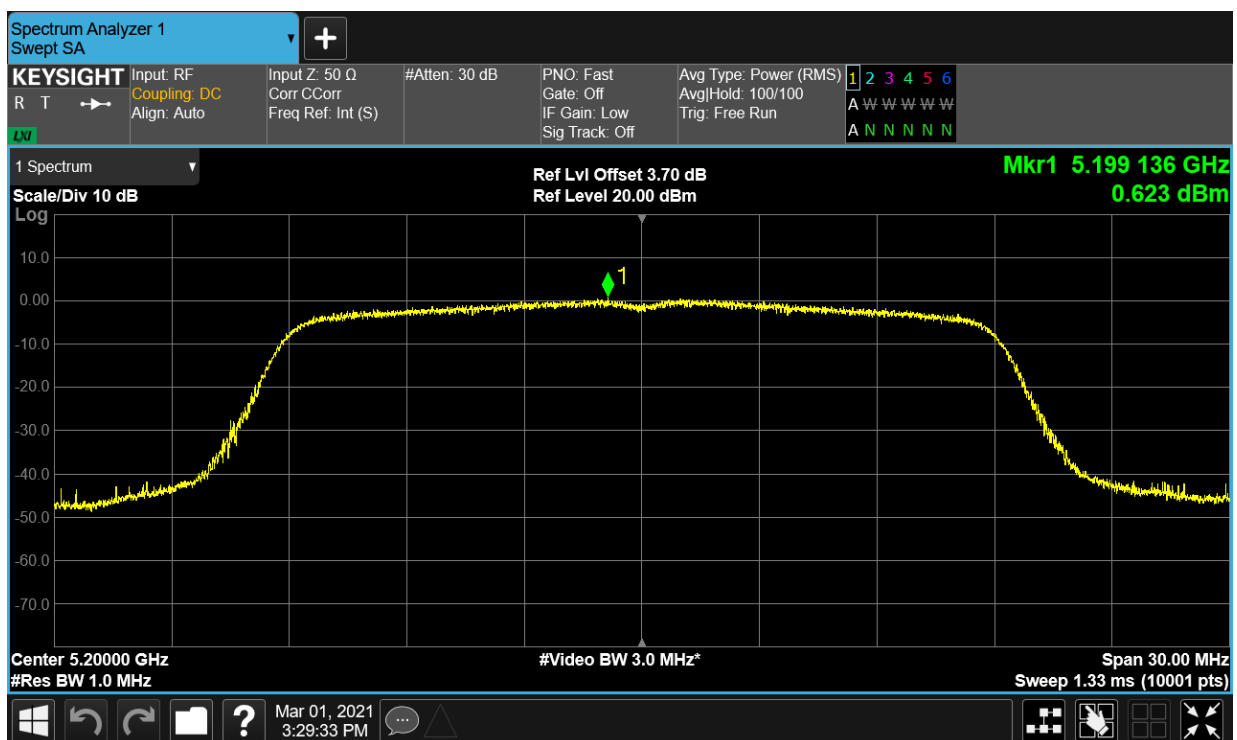

PSD NVNT n20 5240MHz Ant1

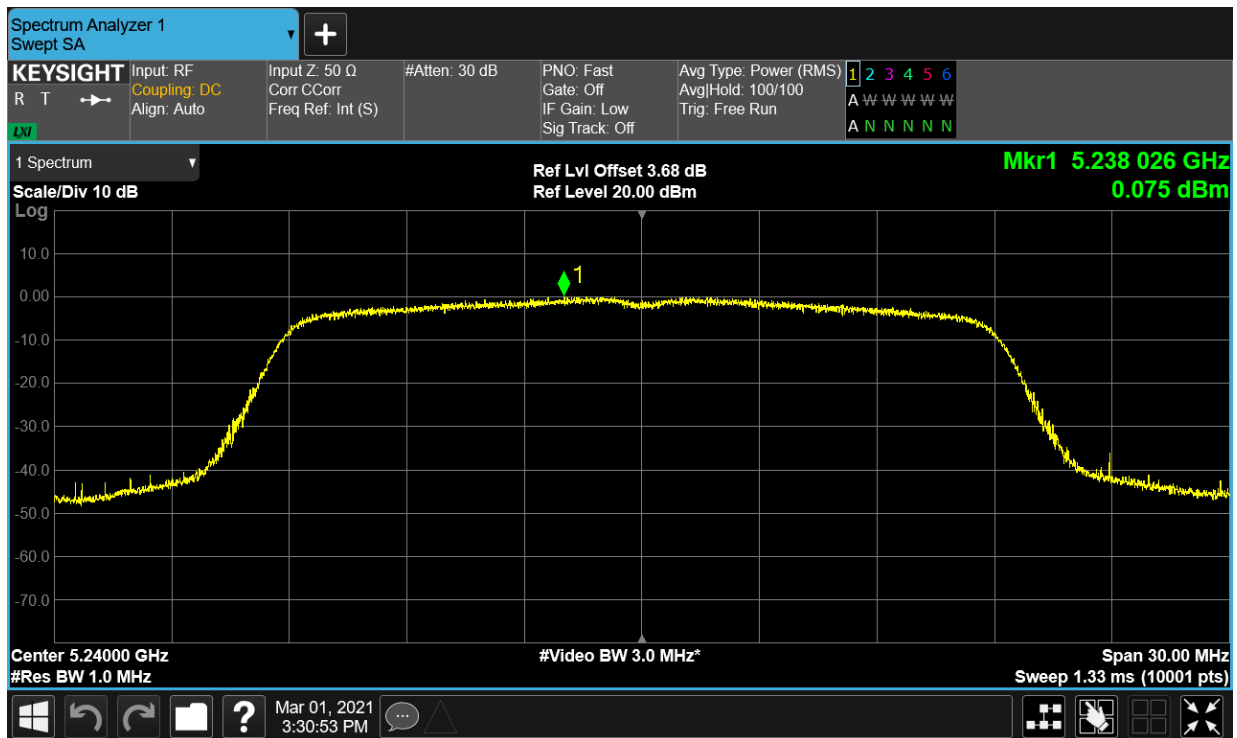

PSD NVNT n40 5190MHz Ant1

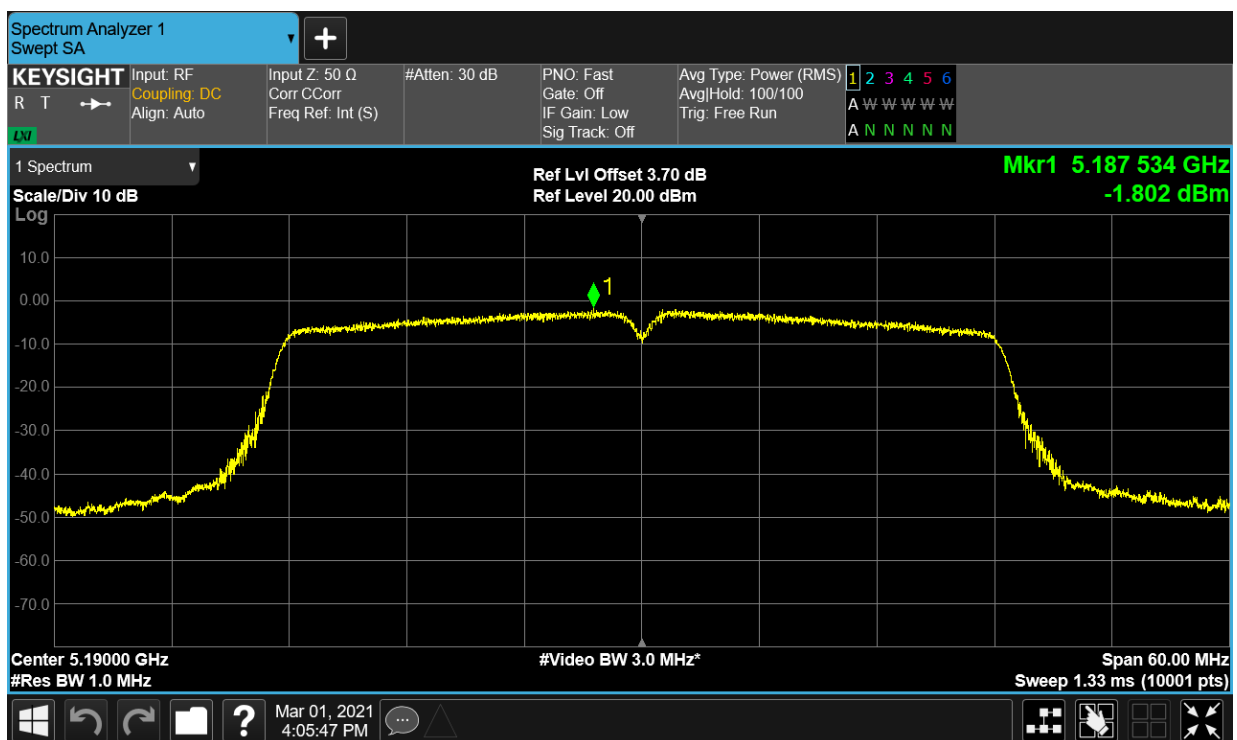

PSD NVNT n40 5230MHz Ant1

