





Restrict Band NVNT ac20 5825MHz Ant1 Peak

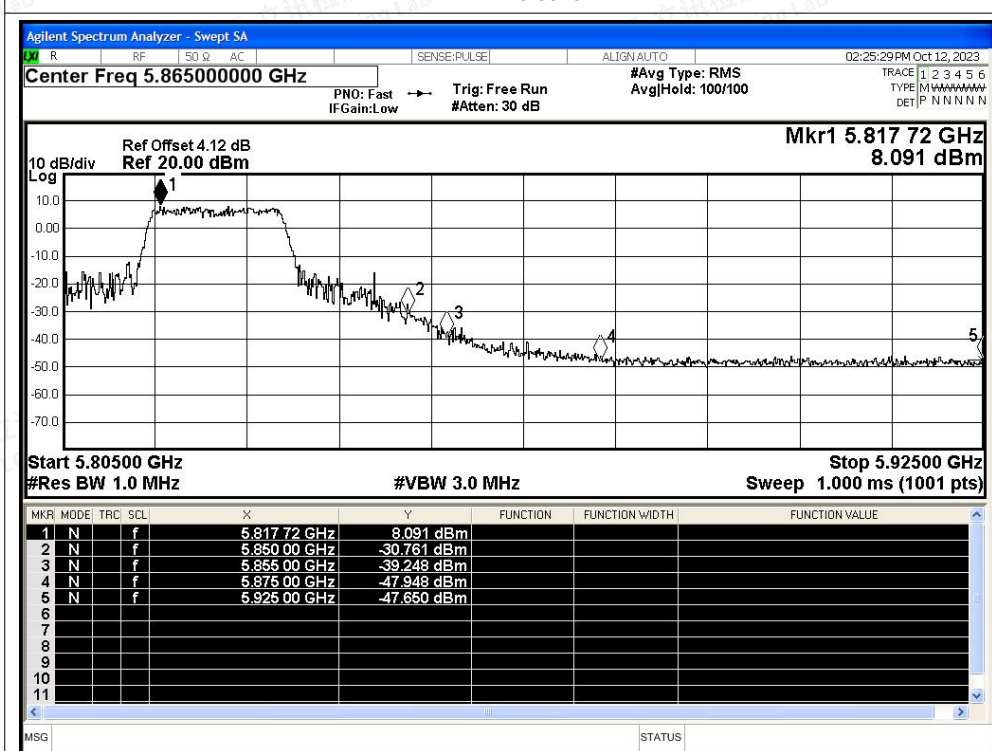


Restrict Band NVNT ac20 5825MHz Ant1 Average

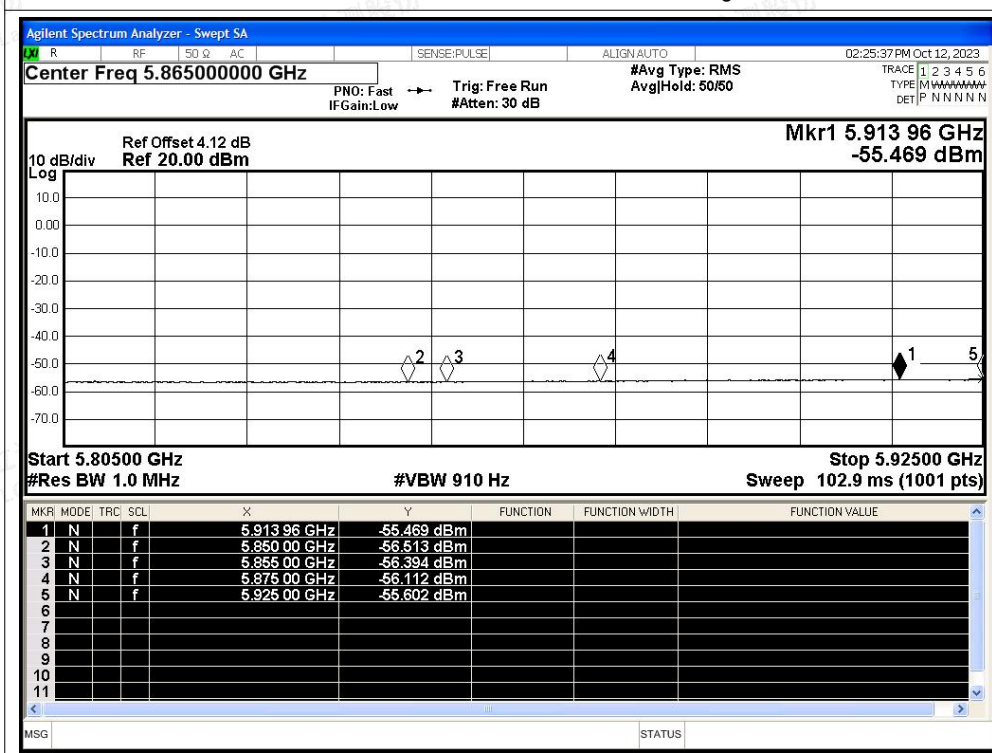




Restrict Band NVNT ac40 5755MHz Ant1 Peak

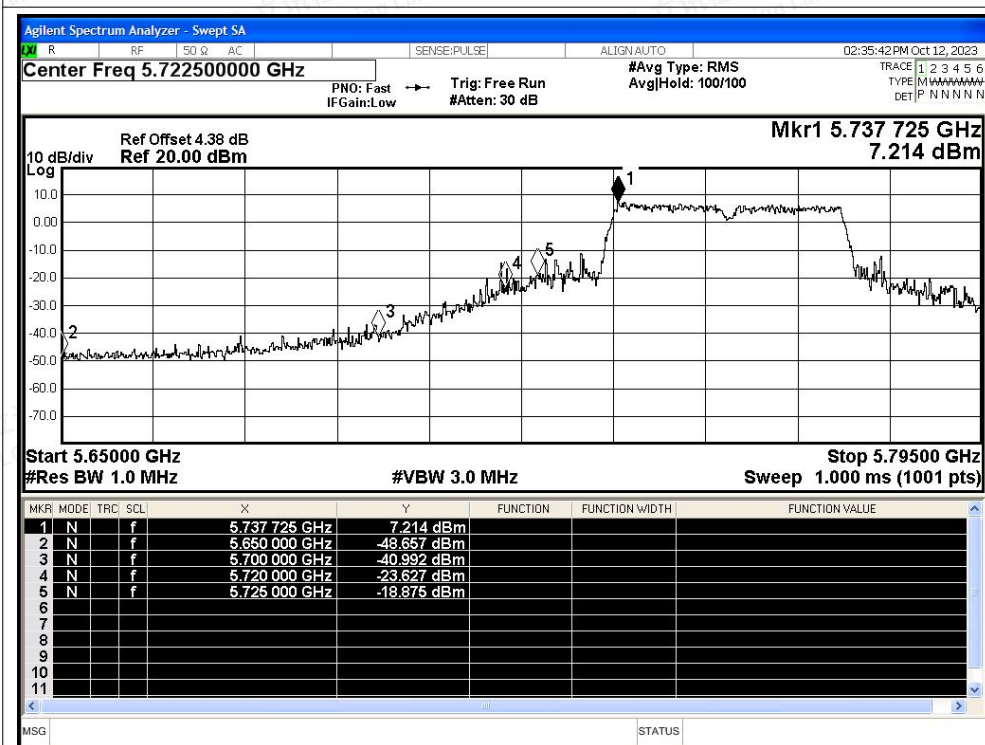


Restrict Band NVNT ac40 5755MHz Ant1 Average

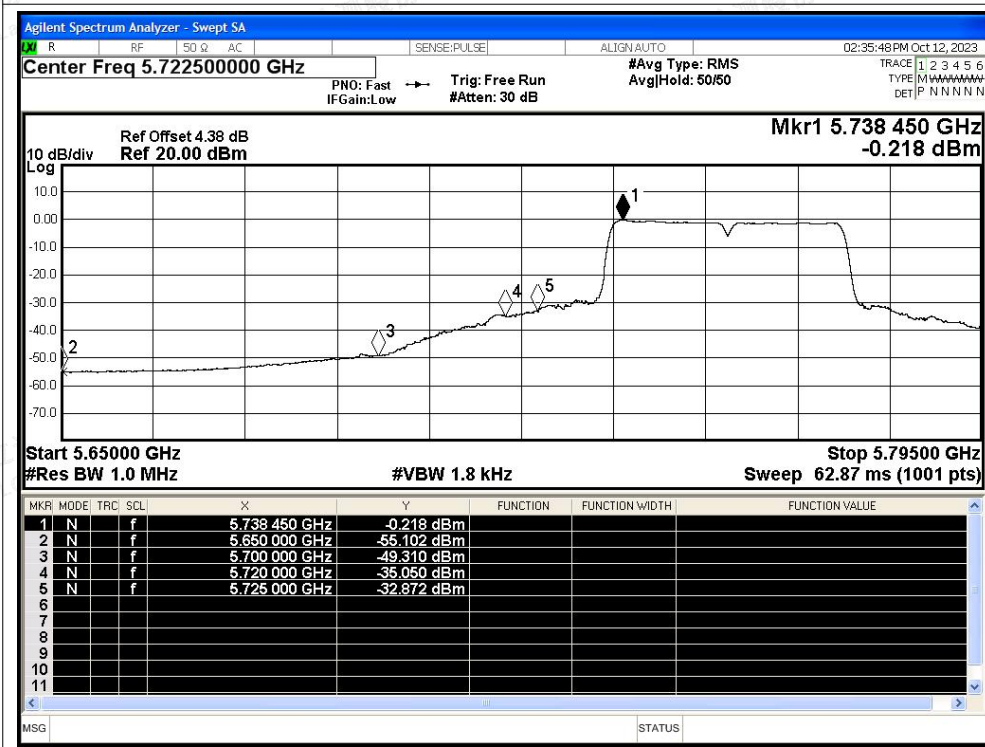




Restrict Band NVNT ac40 5795MHz Ant1 Peak

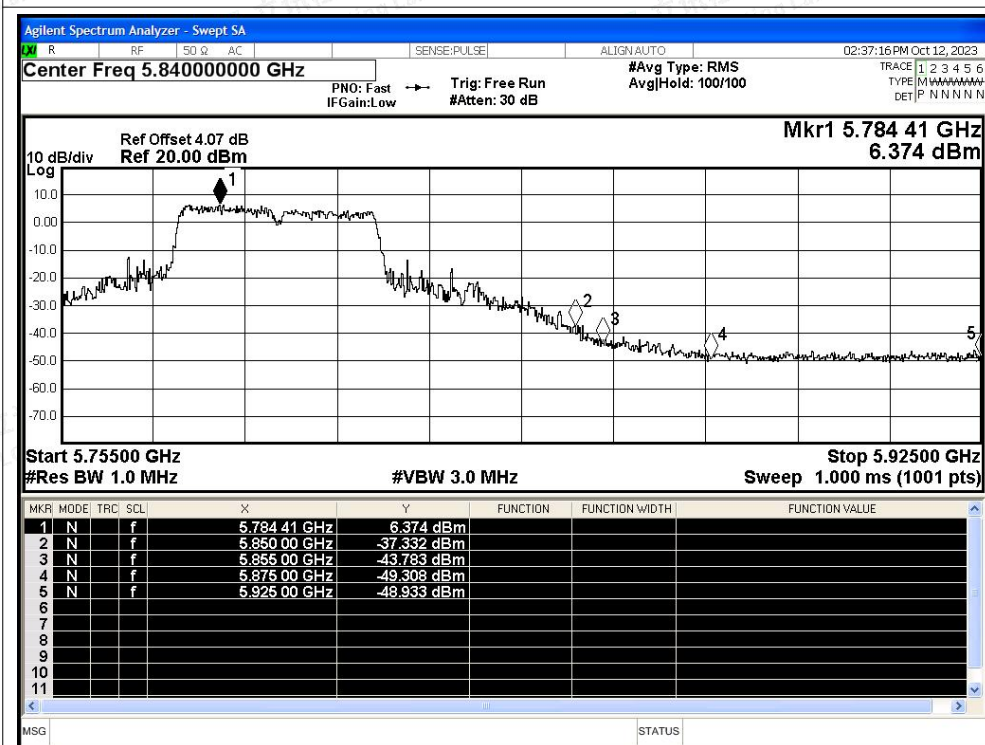

Restrict Band NVNT ac40 5795MHz Ant1 Average

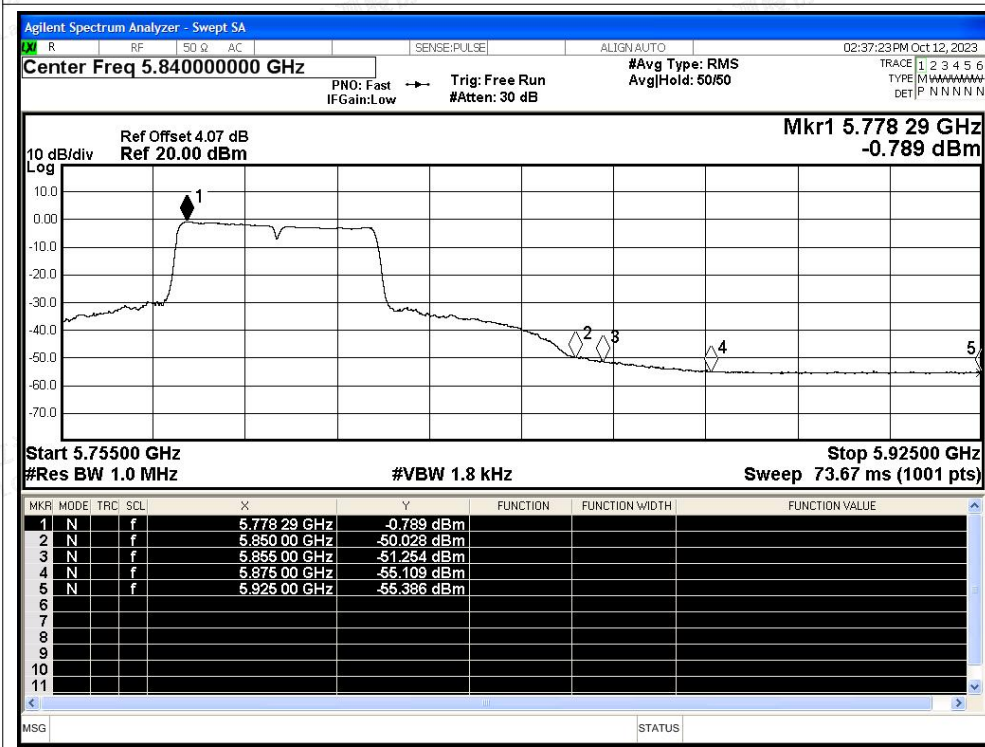



E.5 Frequency Stability


Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	ac20	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	ac20	5785	Ant1	5784.96	-40000	-6.91	25	Pass
NVNT	ac20	5825	Ant1	5824.96	-40000	-6.87	25	Pass
NVNT	ac40	5755	Ant1	5755	0	0	25	Pass
NVNT	ac40	5795	Ant1	5795	0	0	25	Pass







Test Graphs

Freq. Stability NVNT ac20 5745MHz Ant1

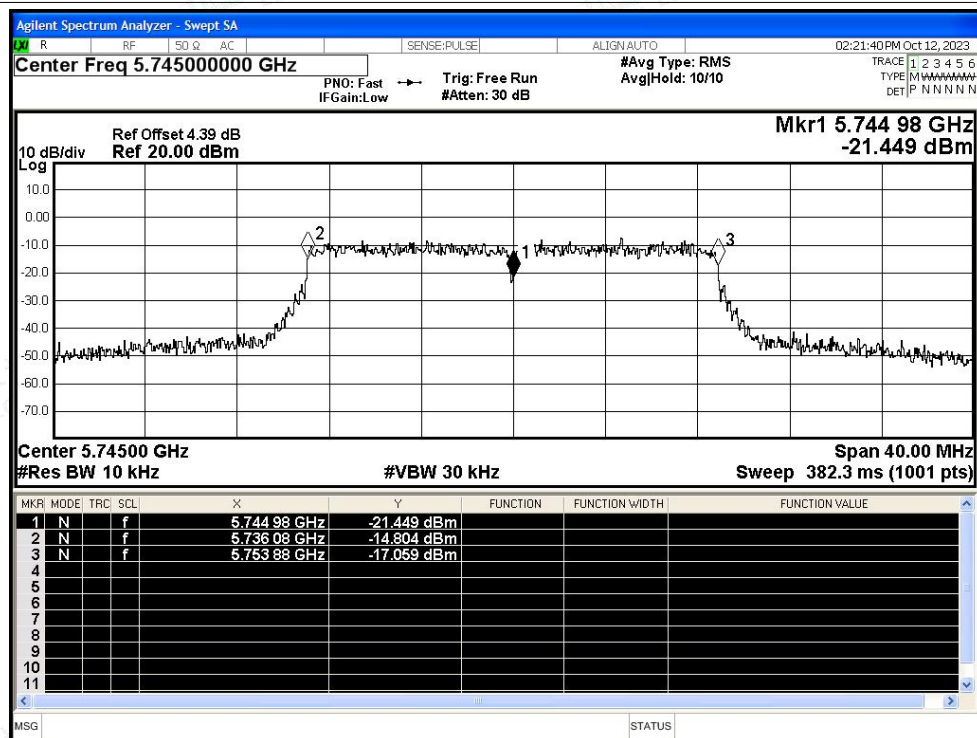



Freq. Stability NVNT ac20 5785MHz Ant1

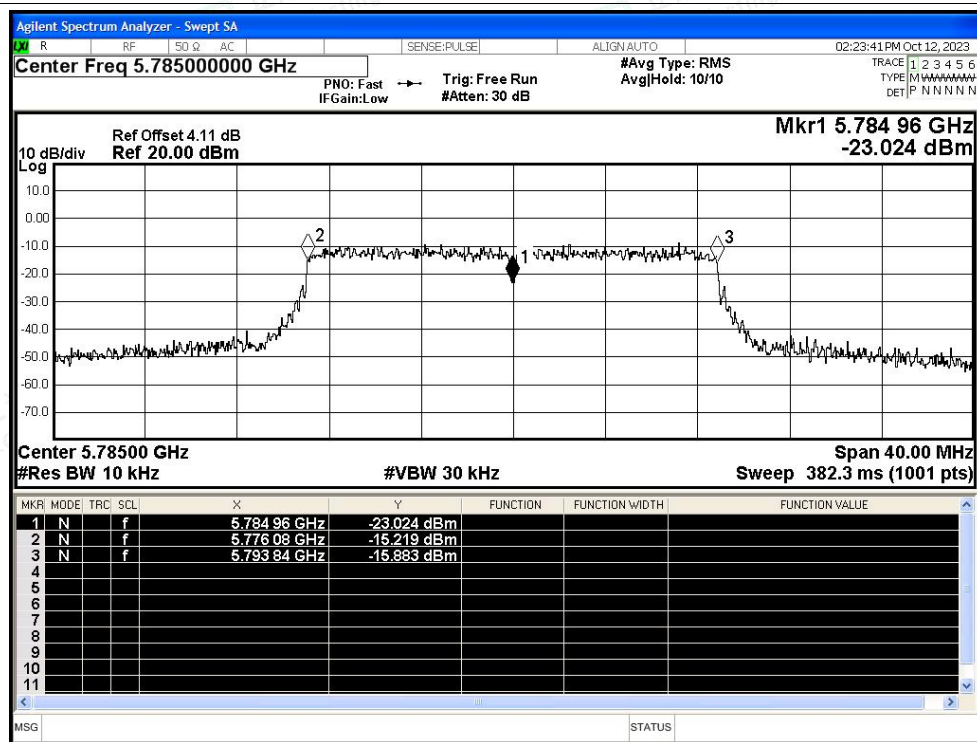

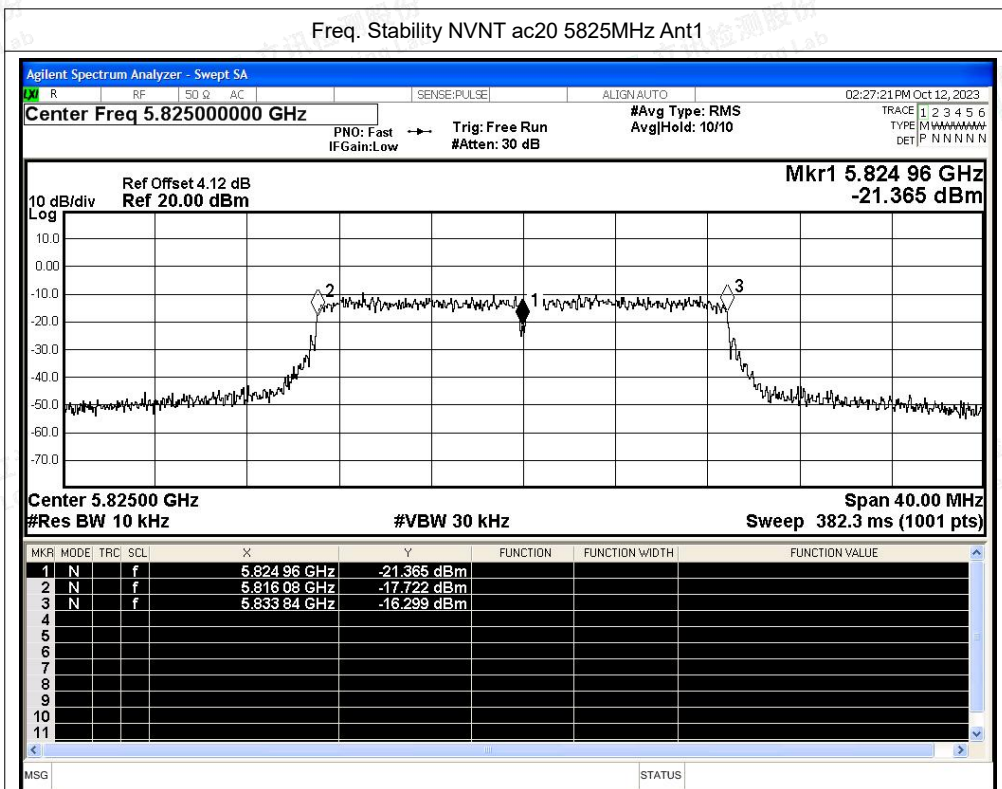

Freq. Stability NVNT ac40 5755MHz Ant1

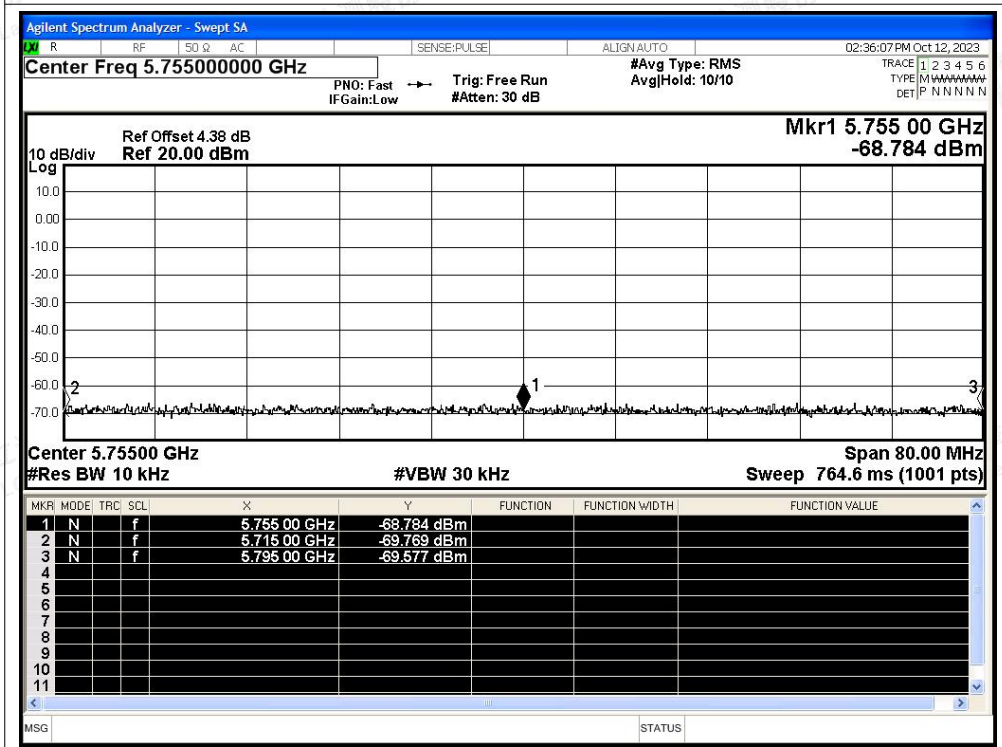

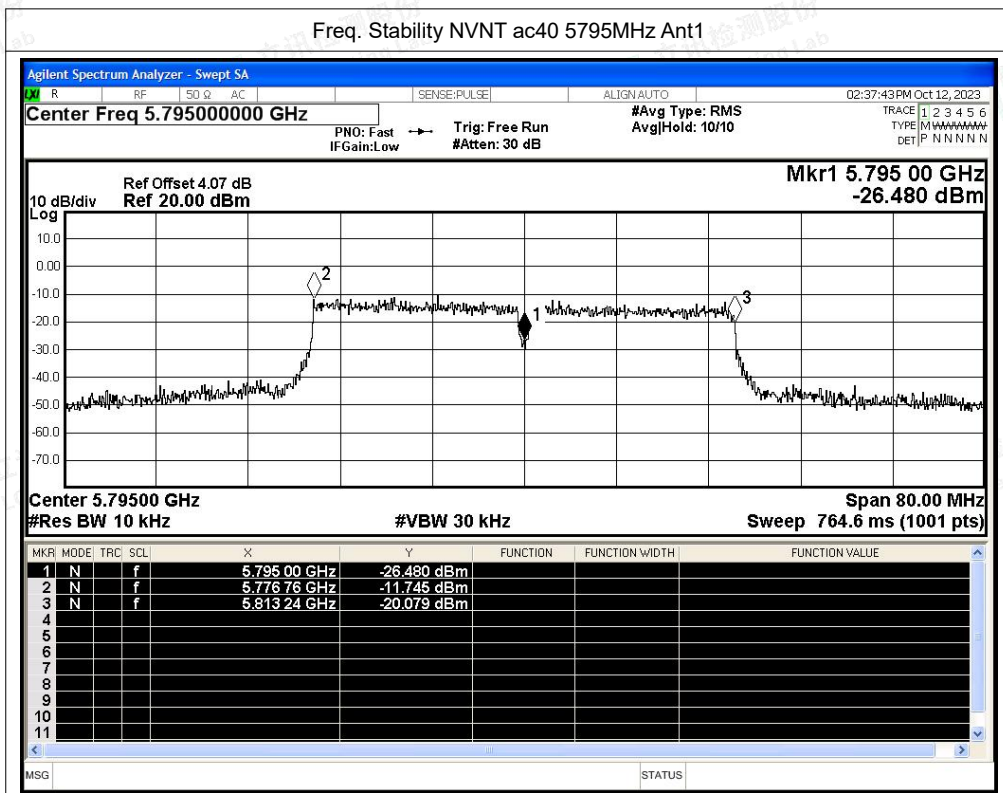



E.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant1	89.12	0.5	0.72
NVNT	a	5785	Ant1	89.06	0.5	0.72
NVNT	a	5825	Ant1	89.06	0.5	0.72
NVNT	n20	5745	Ant1	87.29	0.59	0.85
NVNT	n20	5785	Ant1	82.4	0.84	0.85
NVNT	n20	5825	Ant1	86.13	0.65	0.85
NVNT	n40	5755	Ant1	75.87	1.2	1.7
NVNT	n40	5795	Ant1	77.54	1.1	1.7
NVNT	ac20	5745	Ant1	87.46	0.58	0.84
NVNT	ac20	5785	Ant1	86.24	0.64	0.84
NVNT	ac20	5825	Ant1	86.81	0.61	0.84
NVNT	ac40	5755	Ant1	77.79	1.09	1.69
NVNT	ac40	5795	Ant1	77.79	1.09	1.69




Shenzhen LCS Compliance Testing Laboratory Ltd.
Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
Scan code to check authenticity




Test Graphs

Duty Cycle NVNT a 5745MHz Ant1

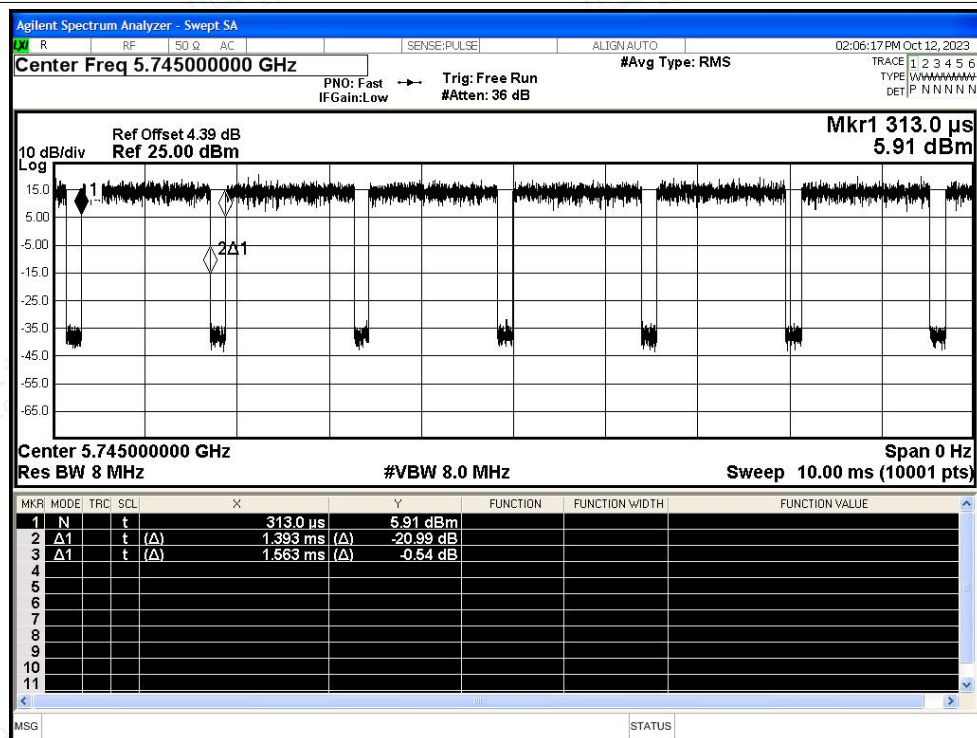


Duty Cycle NVNT a 5785MHz Ant1

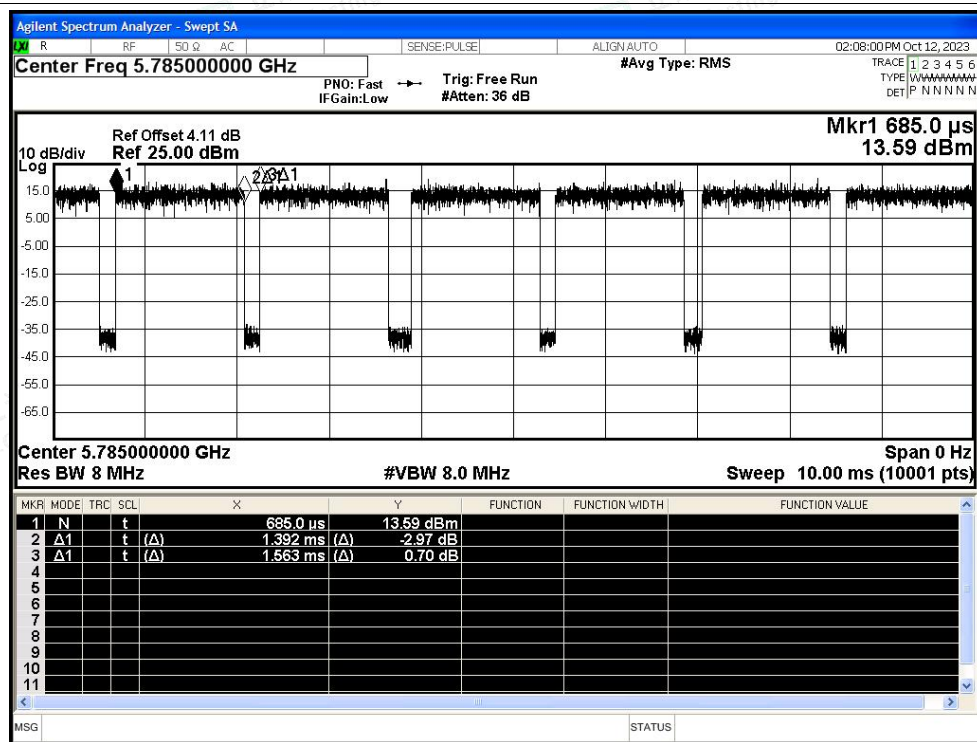




Duty Cycle NVNT a 5825MHz Ant1

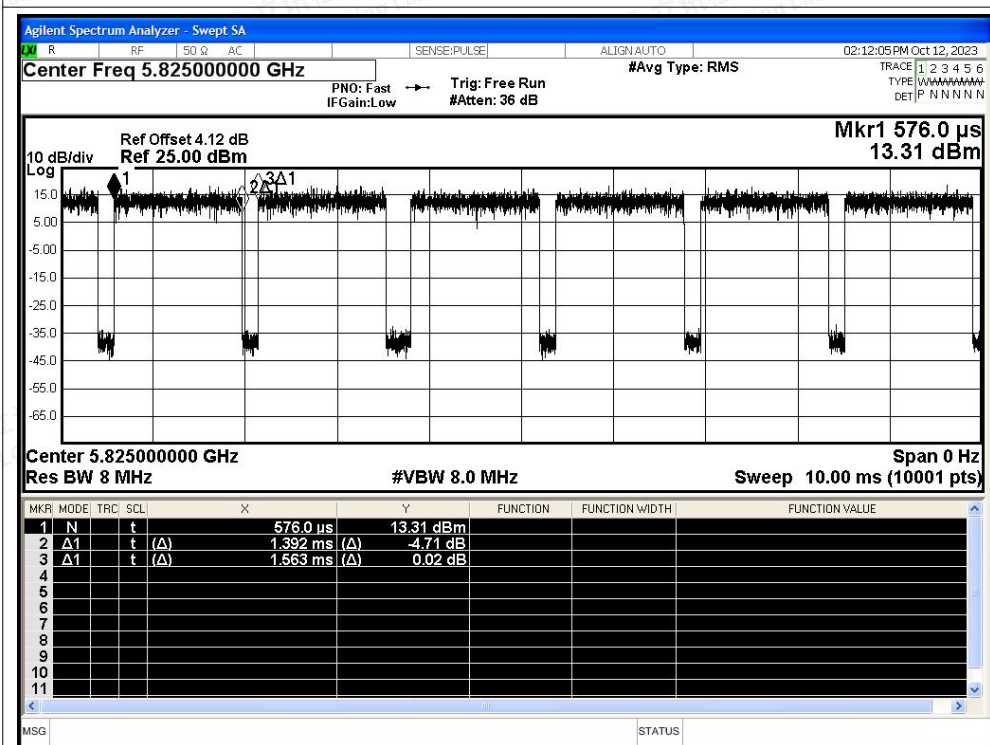


Duty Cycle NVNT n20 5745MHz Ant1

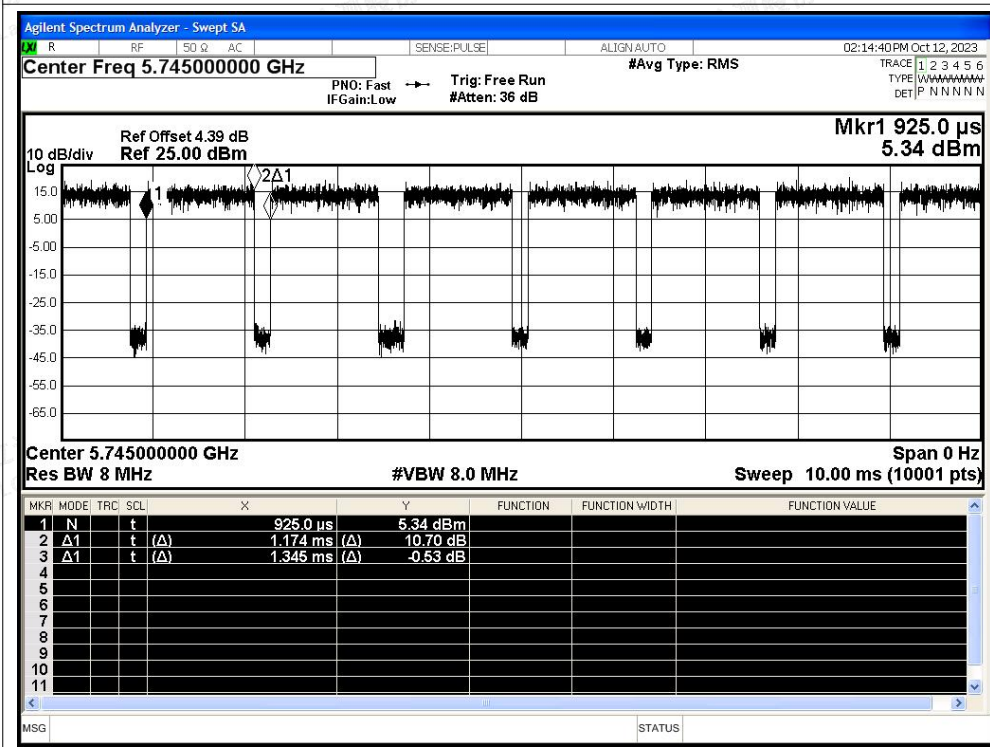




Duty Cycle NVNT n20 5785MHz Ant1

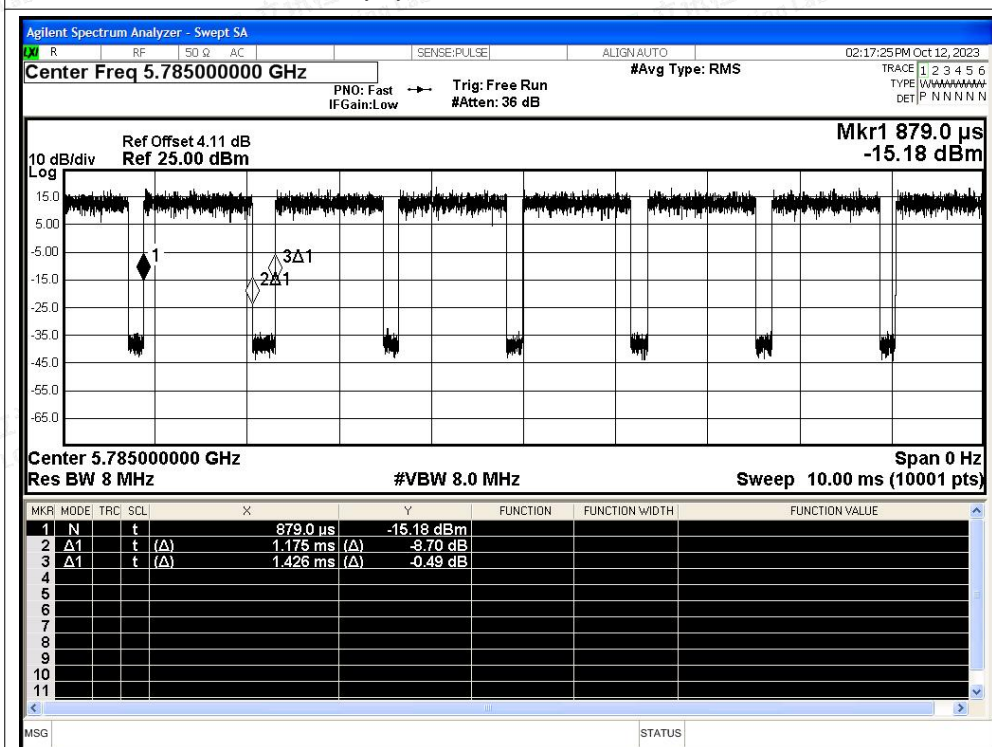


Duty Cycle NVNT n20 5825MHz Ant1

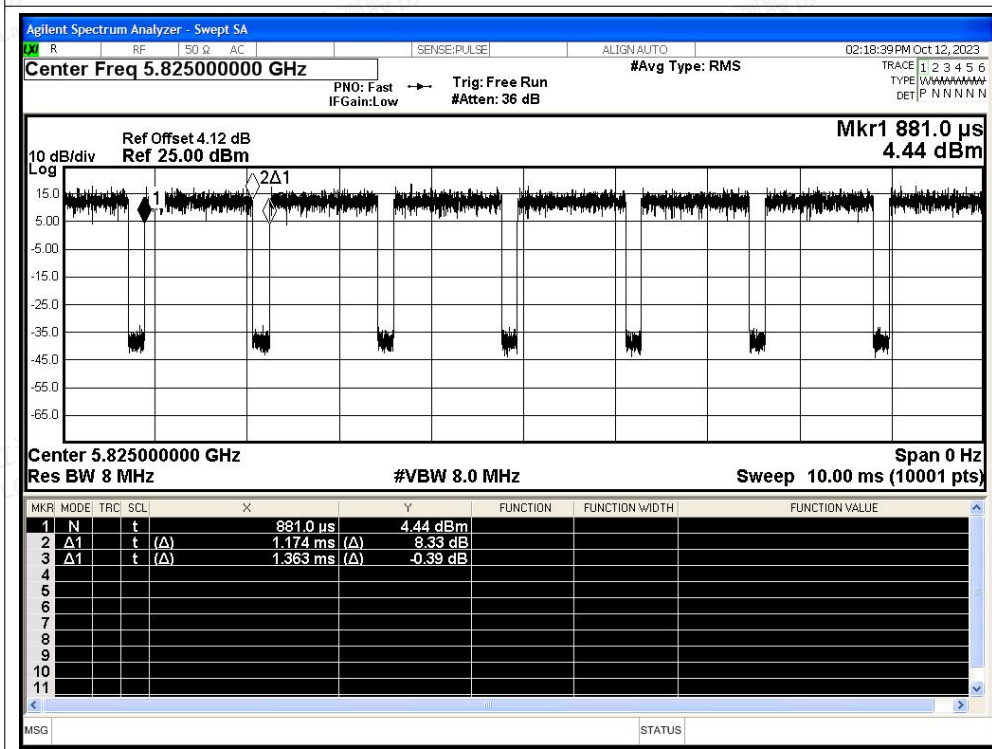




Duty Cycle NVNT n40 5755MHz Ant1

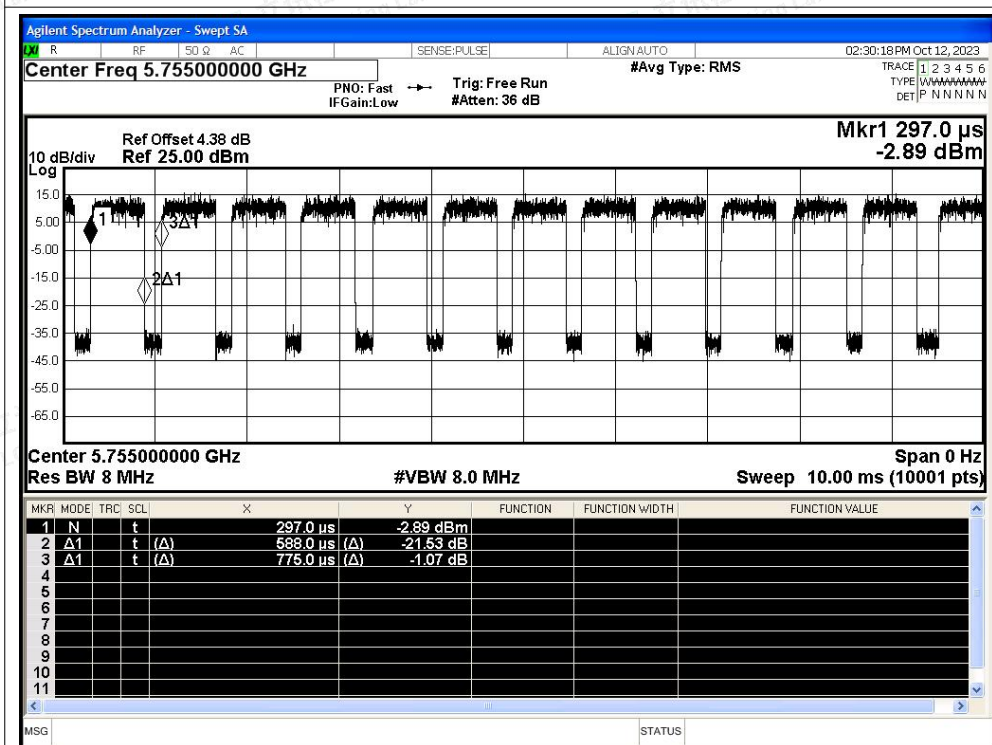


Duty Cycle NVNT n40 5795MHz Ant1

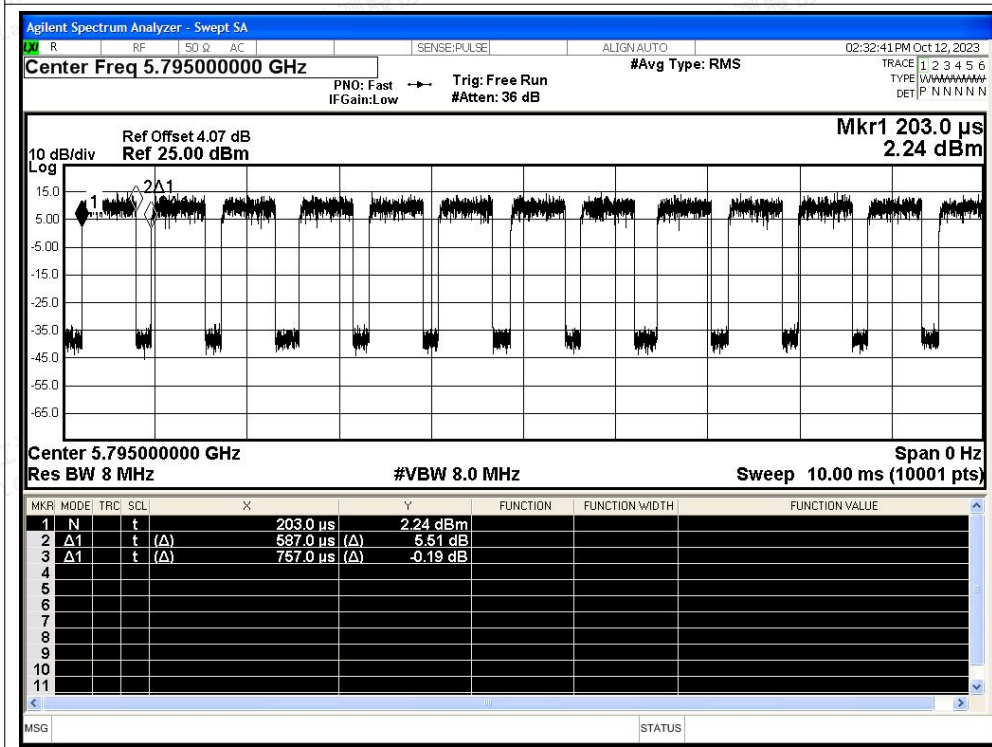




Duty Cycle NVNT ac20 5745MHz Ant1

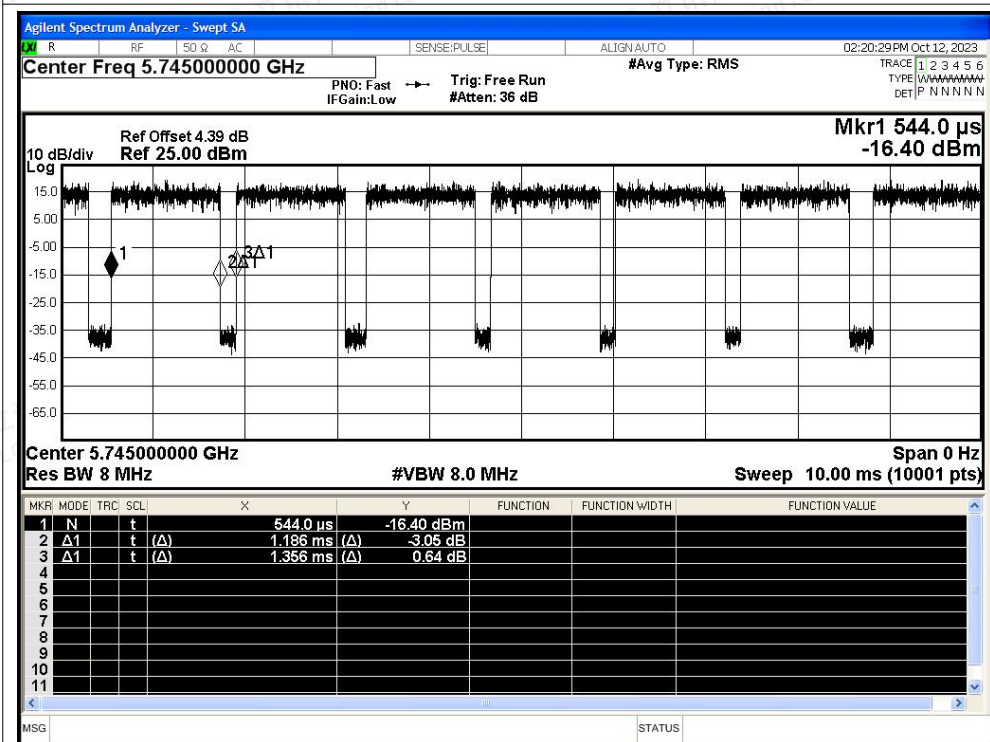


Duty Cycle NVNT ac20 5785MHz Ant1

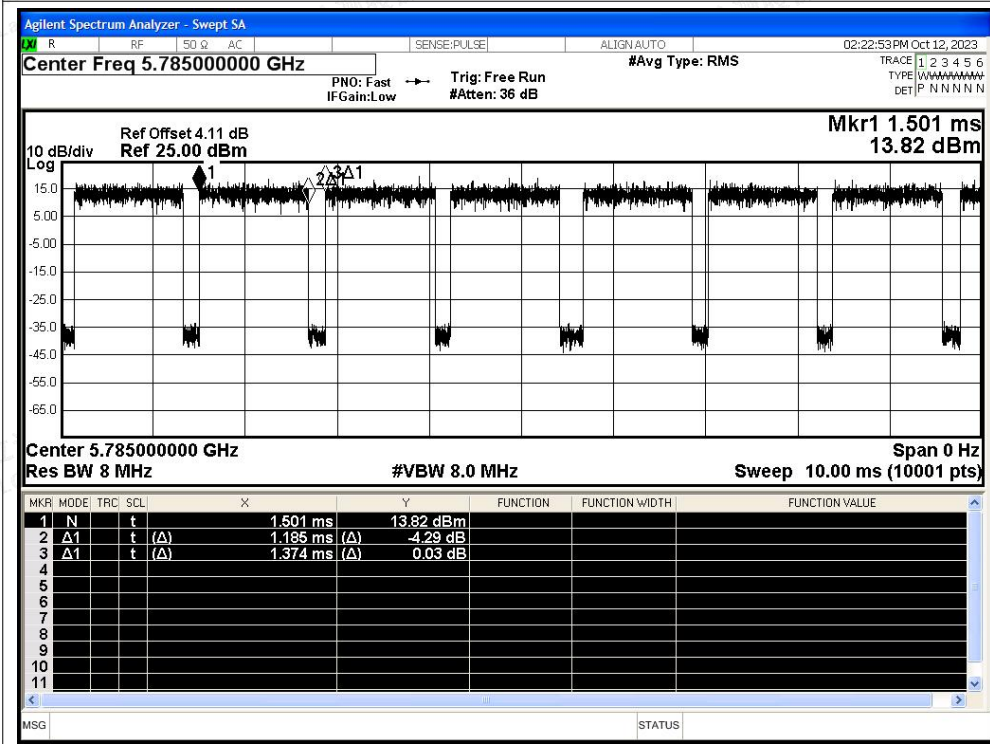



Duty Cycle NVNT ac20 5825MHz Ant1

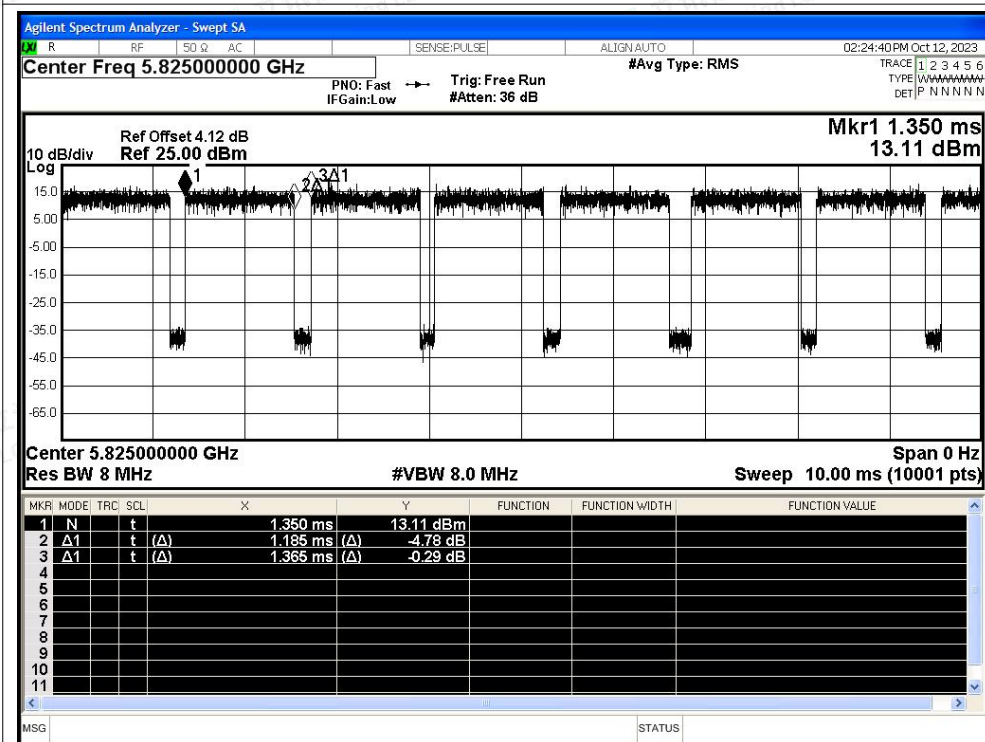

Duty Cycle NVNT ac40 5755MHz Ant1

