
# SM-LF-BBM-BM01-V1 成品尺寸:70\*100mm 材质:封面105g哑粉,内页85g哑粉纸,彩色双面印刷,胶装

SN			
1-⊥F-BBM-B	Letsfit®	English Version	Deutsche Version
M01-v	Letsint	Package Contents1	Lieferumfang2
Ě.	BM01 Baby Monitor	At a Glance 2	Überblick
	User Manual	Menu Options6	Menüoptionen
		Set Up Your Baby Unit8	Einrichtung
		Charging the Parent Unit10	Aufladen der Elterneinheit
		Power On/Off 10	Ein/Ausschalten
		Pairing & Connectivity 11	Pairing & Verbindungsaufbau
		Using Your Baby Monitor13	Zur Verwendung des Babyfons
		Specifications19	Spezifikationen
		FAQS 22	Fehlerbehebung
		SAFETY AND WARRANTY 25	SICHERHEITS- UND GARANTIEHINWEISE
	Thank you for purchasing our products. This manual		
	addresses the safety guidelines, warranty and operating instructions. Please review this manual thoroughly before		
EU REP Business name: AMZLAB GmbH Business address: Laubenhof 23,45326 Essen	operating your device.		
			-
[			
Using Your Baby Monitor Please note:	Warning Volume Adjustment This controls the volume of the alarm you have set or the volume of an audio beep sound from the parent unit to alert	<ol> <li>Press the brightness +/- button to select the music you want to play. A    <sup>I</sup> icon will be displayed on the screen.</li> </ol>	Please note: There are six kinds of night lights, including warm white light (3 levels of brightness to choose from), blue light, purple light and gradient light for you to choose.
<ul> <li>You can adjust the camera angle manually within the specified range (50° up and down, 45° left and right).</li> </ul>	you when the unit is out of range or in low battery.	<ol> <li>3) Press the volume -/+ button to adjust the volume of</li> </ol>	Standby Mode (Video Off with Audio On)
specified range (so up and down, $43$ left and right).	<ol> <li>Press the menu/</li></ol>	the music (5 levels for you choose).	<ol> <li>Press the power on/off/standby button to turn the LCD screen off while keeping the audio on.</li> </ol>
45° ~ (MAX)	2) Press the volume +/- button until the () icon is highlighted.	<ul><li>4) Press the OK button to confirm.</li><li>5) Press and hold the music playing button to exit music</li></ul>	2) Press the power on/off/standby button again to turn the
		mode.	screen on. Please note:
		<i>Tip:</i> Press and hold the music playing button for quick access to music mode.	When you press the power on/off/standby button to enter
		Please note:	into standby mode manually, the baby unit will not be awakened and you can only hear the sound. Please exit
	<ol> <li>Press the brightness +/- button to choose the warning volume (3 levels for you choose).</li> </ol>	<ul> <li>There are eight kinds of music, including bird, ocean, dream, stream, twinkle, summer, brown noise and</li> </ul>	the standby mode manually to view images on the screen.
<ul> <li>Do not place the baby unit within the baby's reach. If there is interference with the picture or sound, try</li> </ul>	4) Press the OK button to confirm.	white noise for you to choose.	When you set an alarm, the parent unit can be awakened
moving the units to different locations, and ensure they are not close to other electrical equipment	5) Press the menu/ ④ zoom button to exit the menu bar.	<ul> <li>The music will be played continuously for an hour and then will turn off automatically.</li> </ul>	in standby mode.
including TVs, computers, mobile phones, fluorescent lights or dimmer switches.	Talk Mode Press and hold the talk button on the parent unit to talk to	Night Light Mode	Digital Zoom 1) Long press the menu/  button on the parent unit to
Volume Adjustment	your baby through the baby unit's speaker. When you are	Method 1:	enter 2x zoom mode. A 🍳 icon will be displayed on the
Press the volume +/- button to adjust the volume of the speaker on the parent unit (8 levels to choose).	talking, a 🔮 icon will be displayed on the screen of the parent unit.	<ol> <li>Tap the night light touch button on the baby unit to select the kind of night light you want to use.</li> </ol>	screen.
	Music Mode	<ol> <li>Tap and hold the night light button to exit the night light mode.</li> </ol>	<ol> <li>Press the Brightness +/- to move the image up or down, press the volume -/+ button to move the image left or</li> </ol>
	1) Press the music playing button	Method 2:	right.
Brightness Adjustment Press the brightness +/- button to adjust the screen	bar will pop up.	<ol> <li>Press the night light button on the parent unit to select a kind of night light you want.</li> </ol>	<ol> <li>Long press the menu/  button again to exit the digita zoom mode.</li> </ol>
brightness of the baby unit (8 levels to choose).	twinkle	2) Press and hold the night light button to exit night light	Alarm Settings
	brown noise 41111	mode.	<ol> <li>Press the menu/          button on the parent unit and the menu bar will pop up.</li> </ol>
-13-	-14-	-15-	-16-



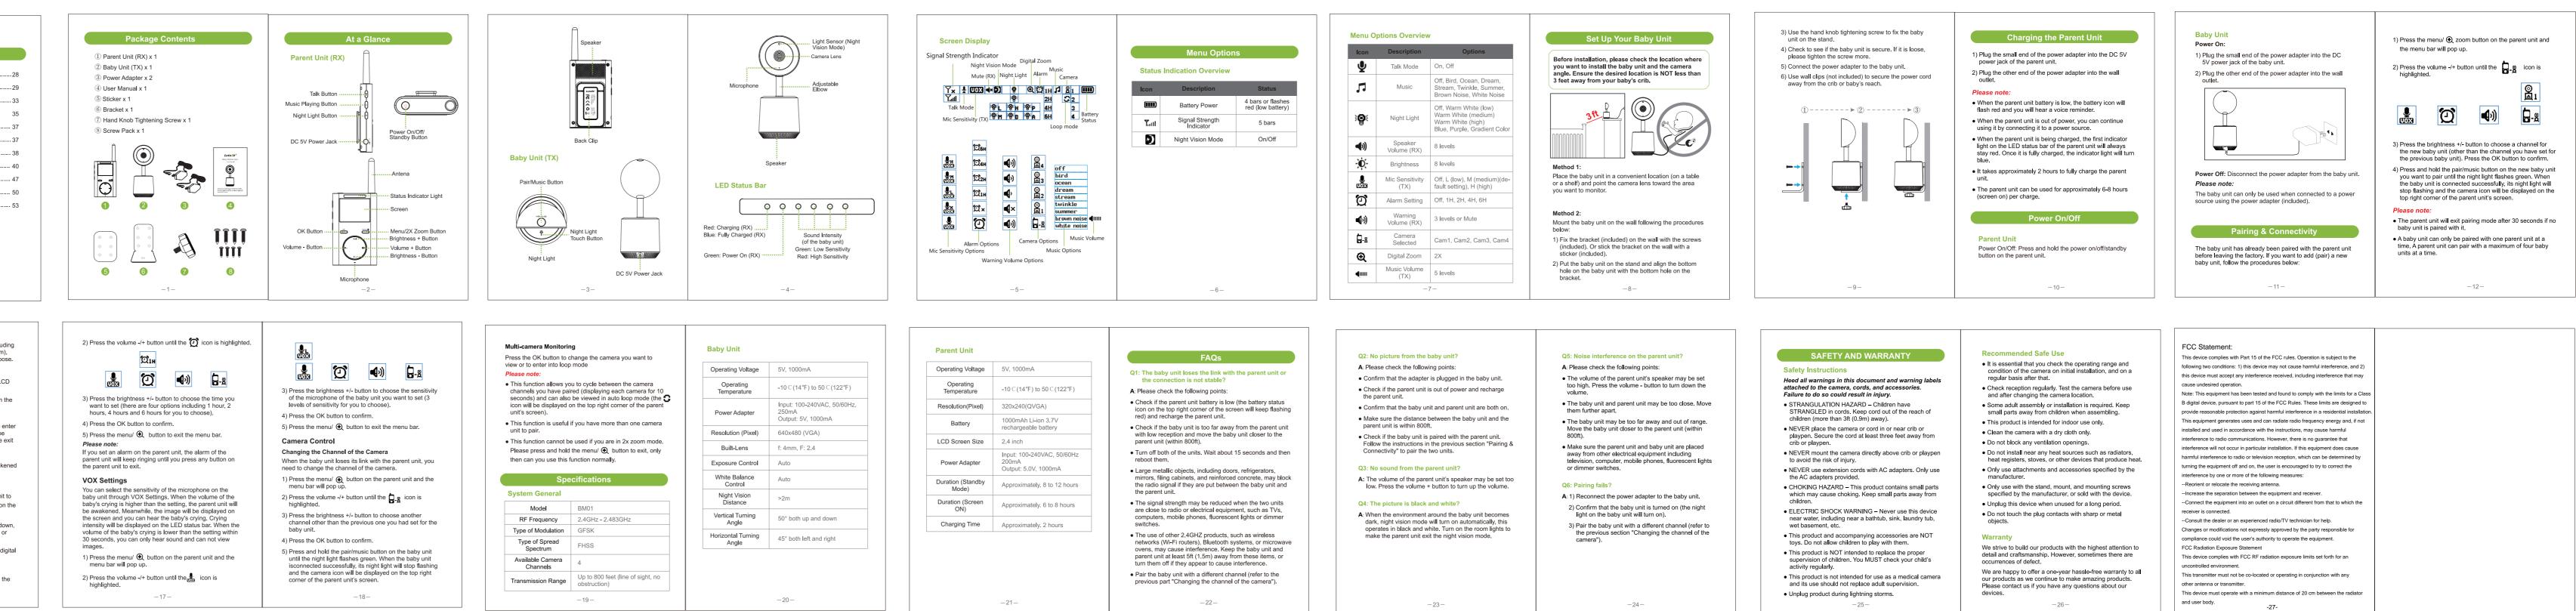

Operating Voltage	5V, 1000mA
Operating Temperature	-10 C (14°F) to 50 C (122°F)
Resolution(Pixel)	320x240(QVGA)
Battery	1000mAh Li-ion 3.7V rechargeable battery
LCD Screen Size	2.4 inch
Power Adapter	Input: 100-240VAC, 50/60Hz 200mA Output: 5.0V, 1000mA
Duration (Standby Mode)	Approximately. 8 to 12 hours
Duration (Screen ON)	Approximately. 6 to 8 hours
Charging Time	Approximately. 2 hours

	FAQs
Q	I: The baby unit loses the link with the parent unit o the connection is not stable?
A:	Please check the following points:
i	Check if the parent unit battery is low (the battery status con on the top right corner of the screen will keep flashi red) and recharge the parent unit.
1	Check if the baby unit is too far away from the parent ur with low reception and move the baby unit closer to the parent unit (within 800ft).
	Turn off both of the units. Wait about 15 seconds and th reboot them.
•	Large metallic objects, including doors, refrigerators,