





OBW NVNT a 5260MHz Ant1



OBW NVNT a 5300MHz Ant1



OBW NVNT a 5320MHz Ant1





OBW NVNT a 5500MHz Ant1



OBW NVNT a 5580MHz Ant1



OBW NVNT a 5700MHz Ant1





OBW NVNT a 5745MHz Ant1



OBW NVNT a 5785MHz Ant1



OBW NVNT a 5825MHz Ant1





OBW NVNT a 5180MHz Ant2



OBW NVNT a 5200MHz Ant2



OBW NVNT a 5240MHz Ant2





OBW NVNT a 5260MHz Ant2



OBW NVNT a 5300MHz Ant2



OBW NVNT a 5320MHz Ant2





OBW NVNT a 5500MHz Ant2



OBW NVNT a 5580MHz Ant2



OBW NVNT a 5700MHz Ant2





OBW NVNT a 5745MHz Ant2




OBW NVNT a 5785MHz Ant2



OBW NVNT a 5825MHz Ant2






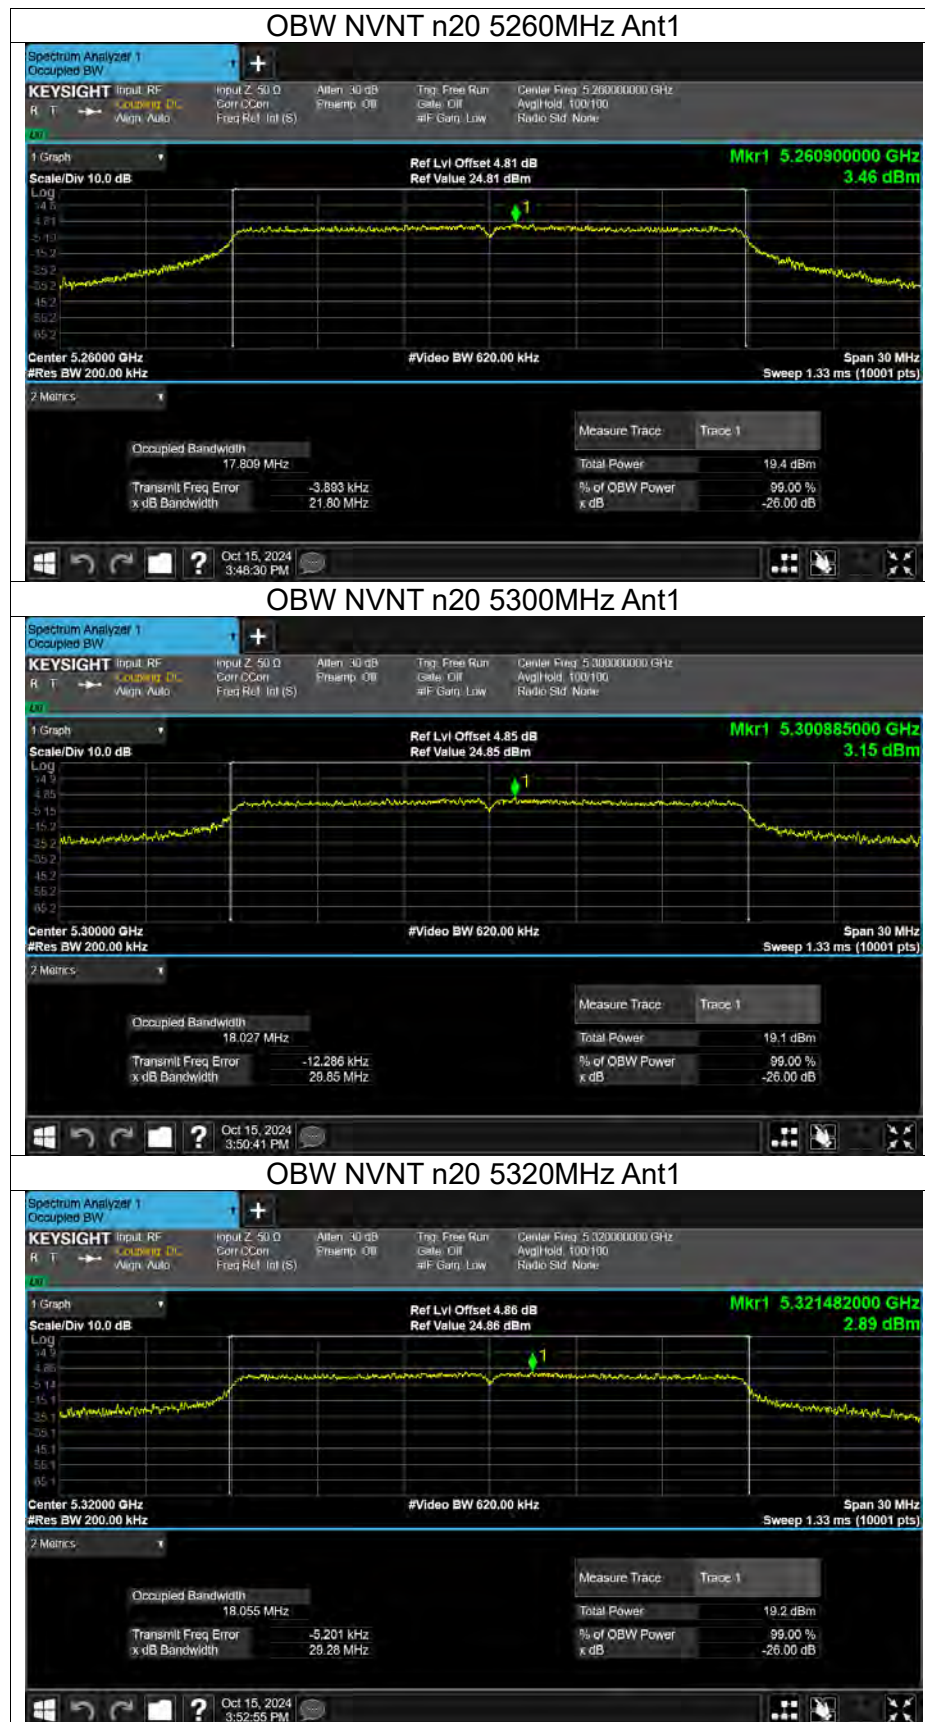







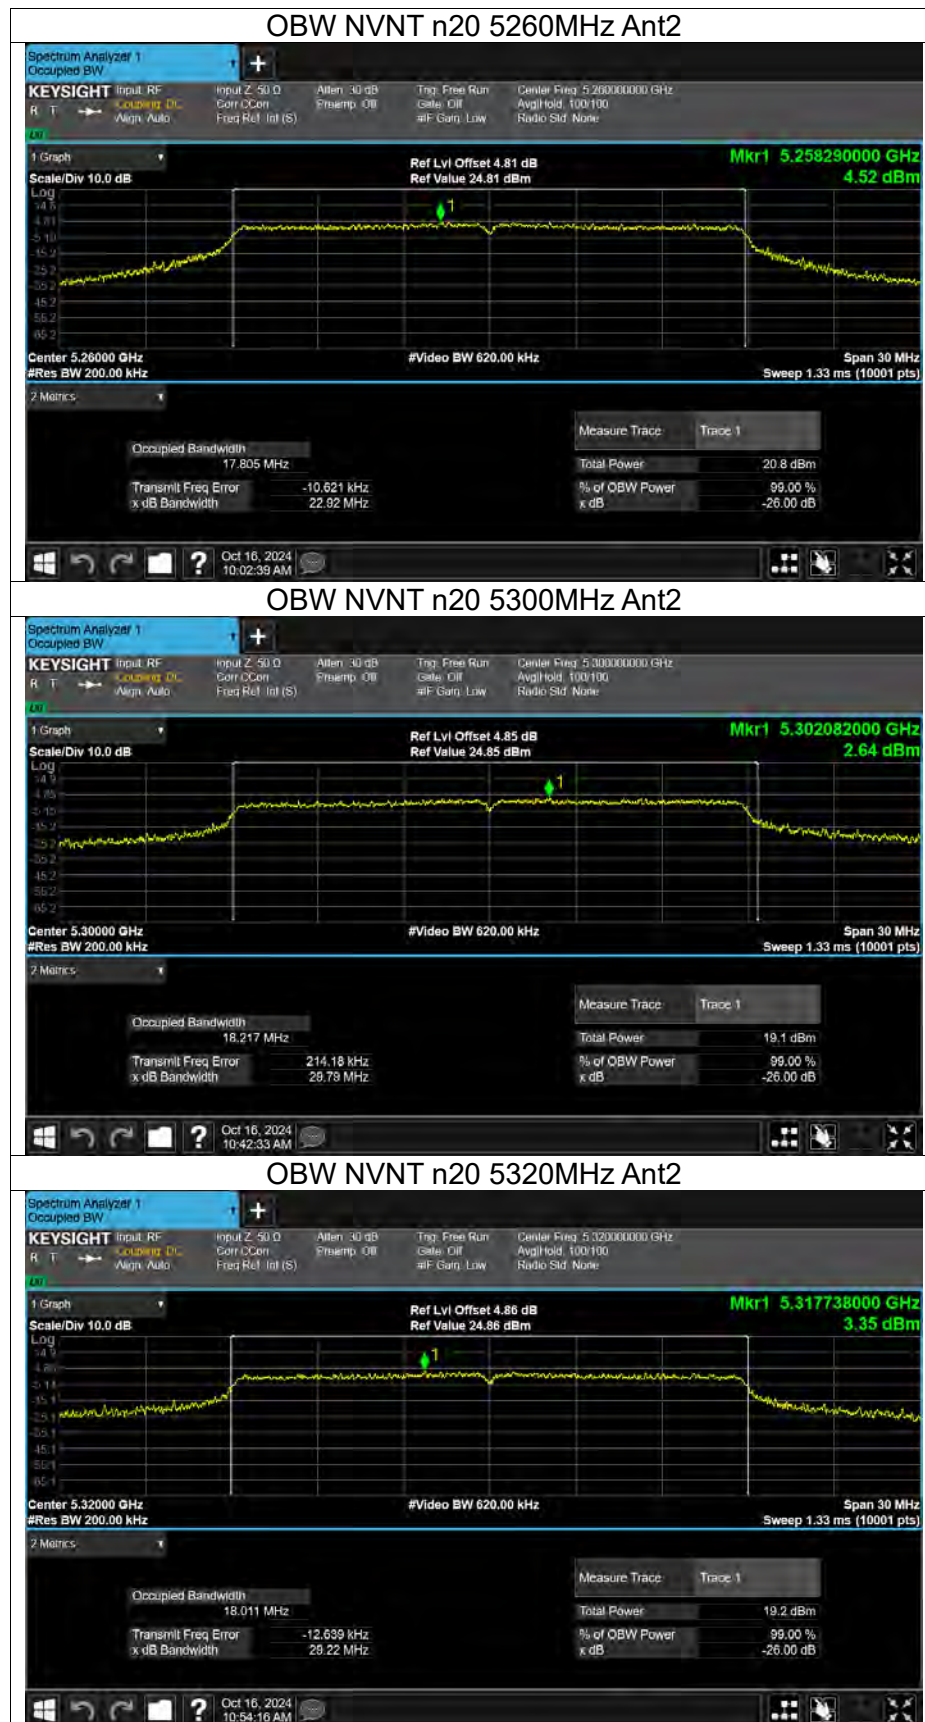

OBW NVNT n20 5500MHz Ant2







OBW NVNT n20 5580MHz Ant2



OBW NVNT n20 5700MHz Ant2




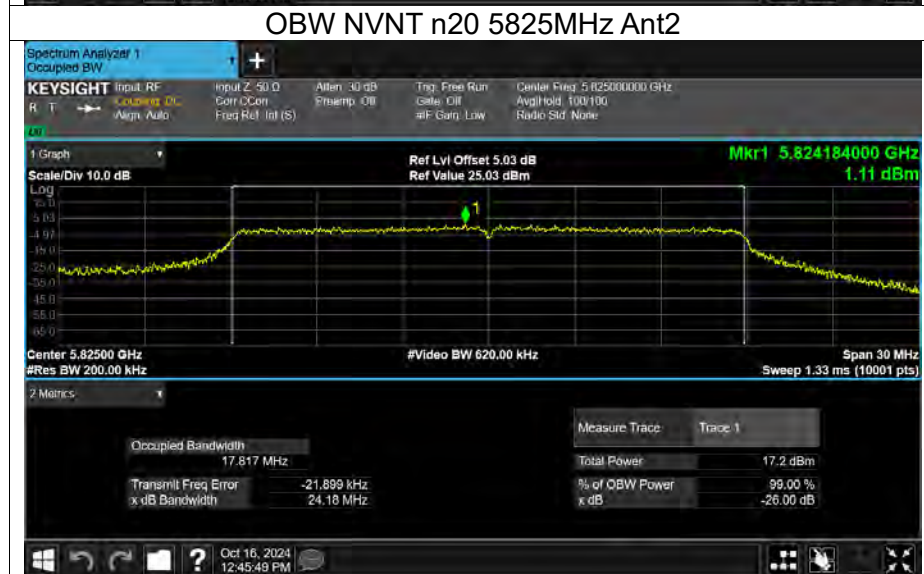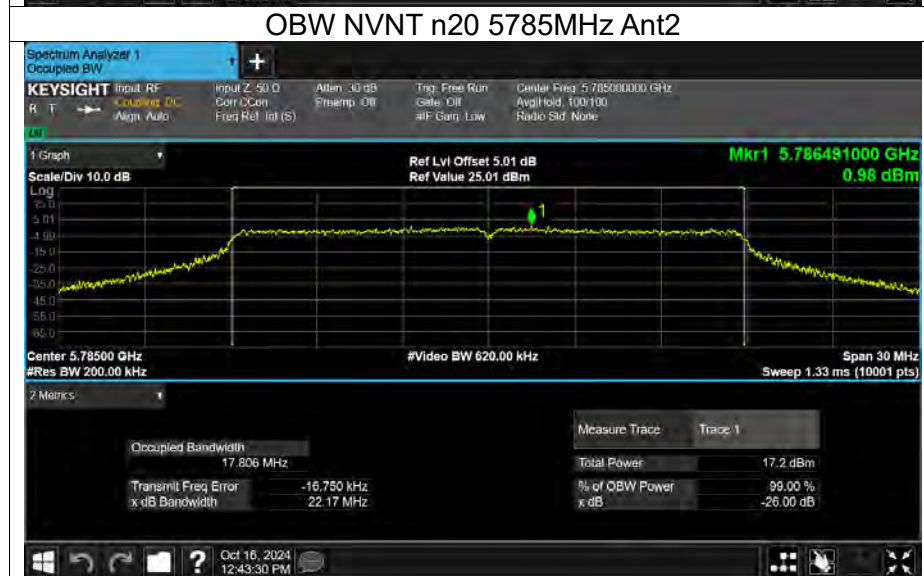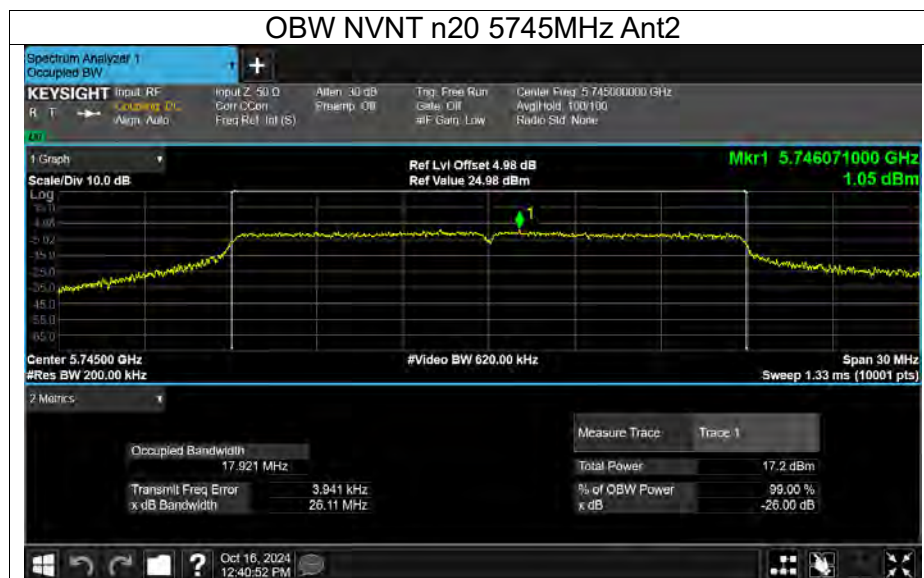


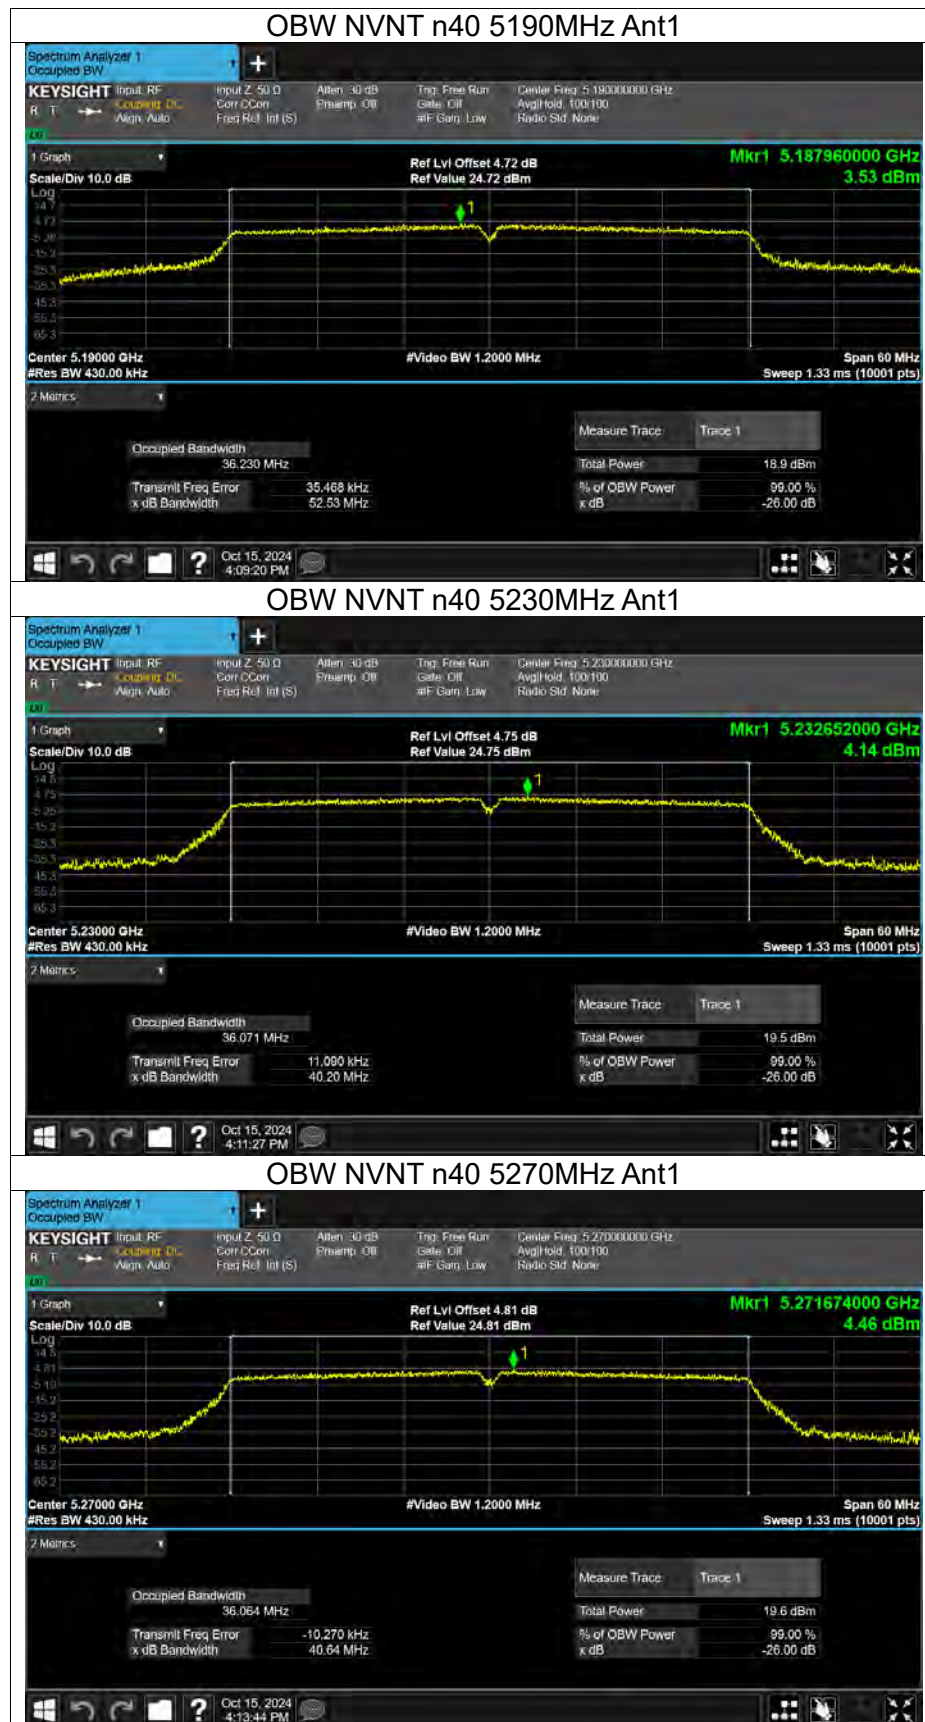







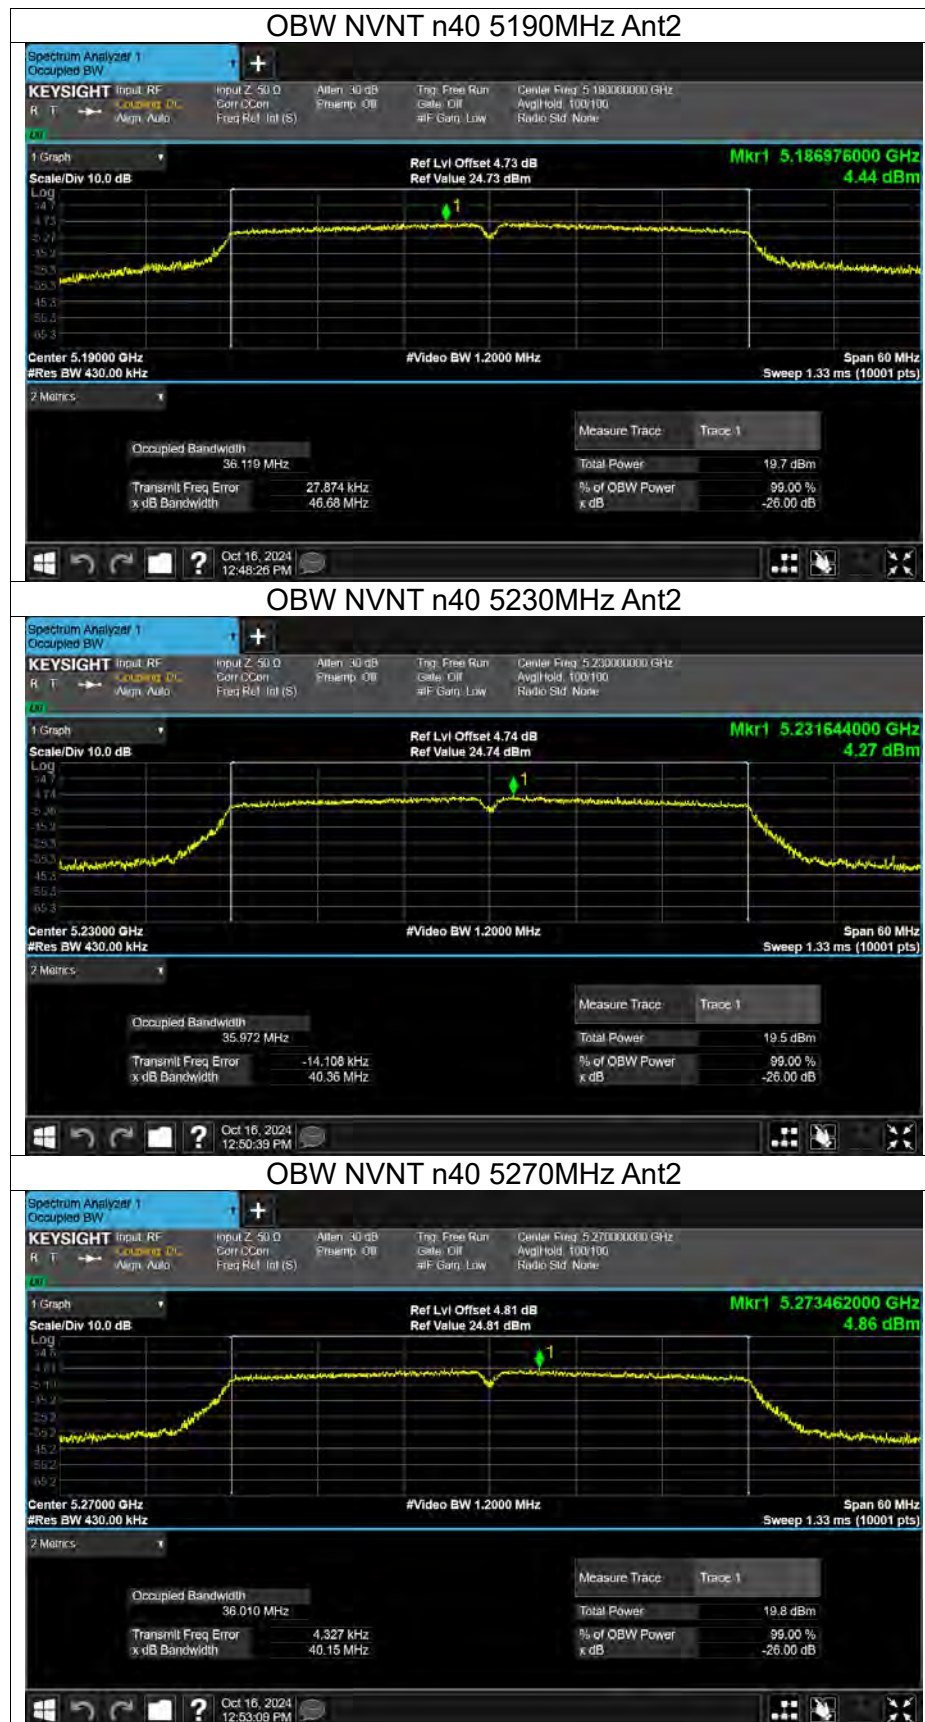

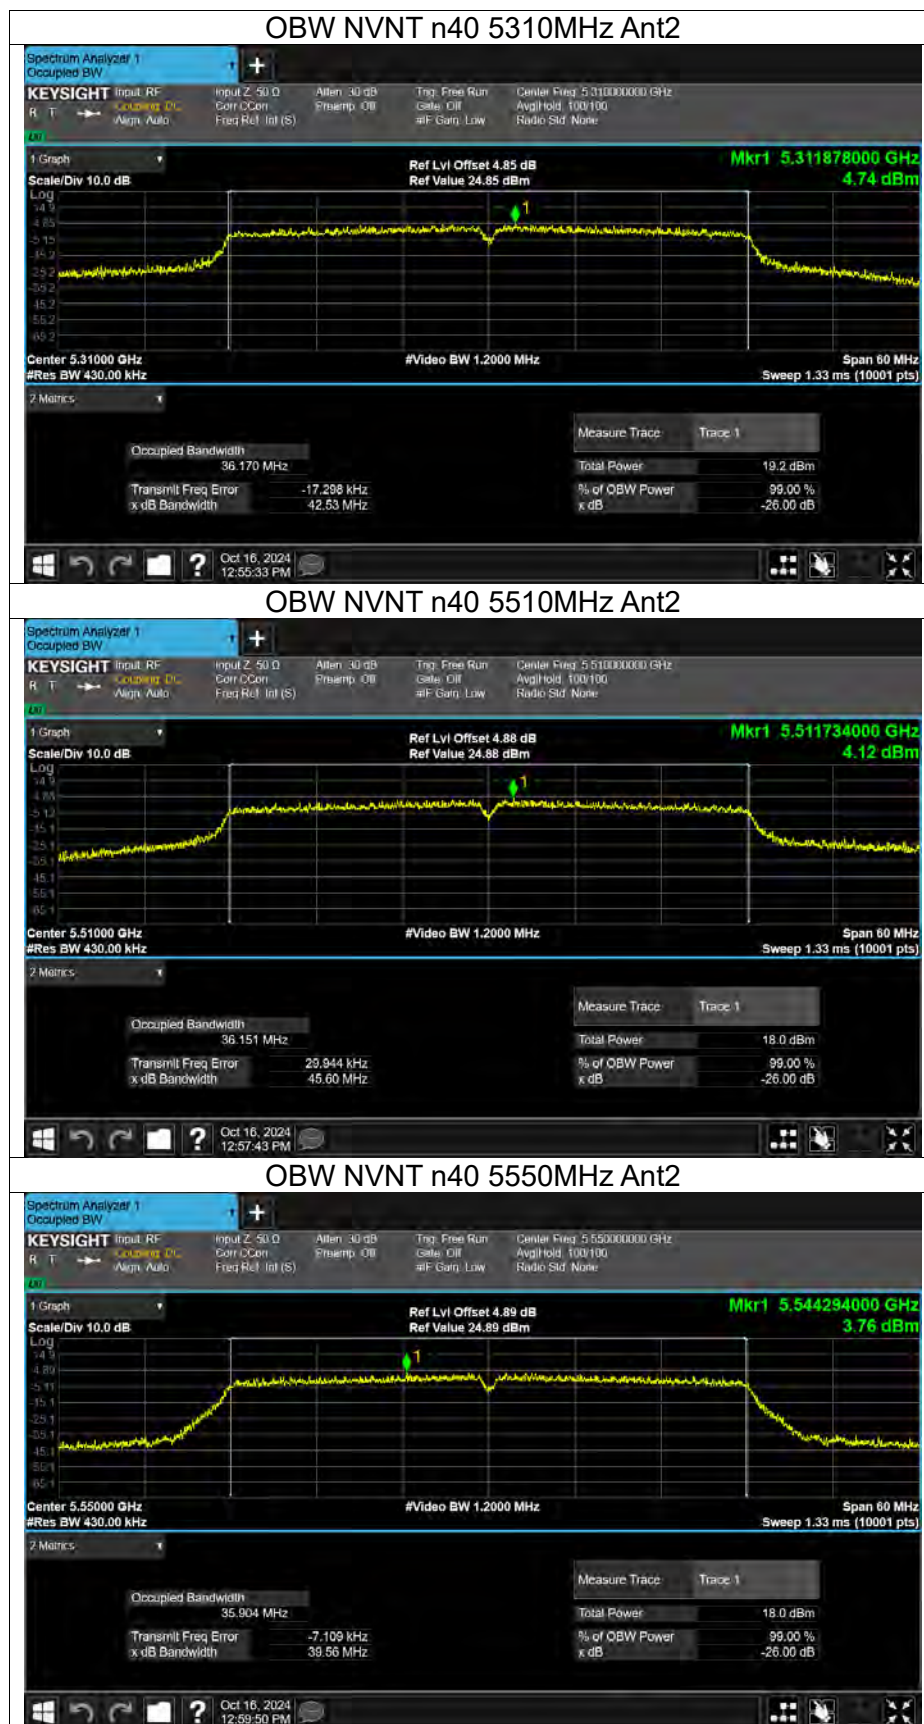

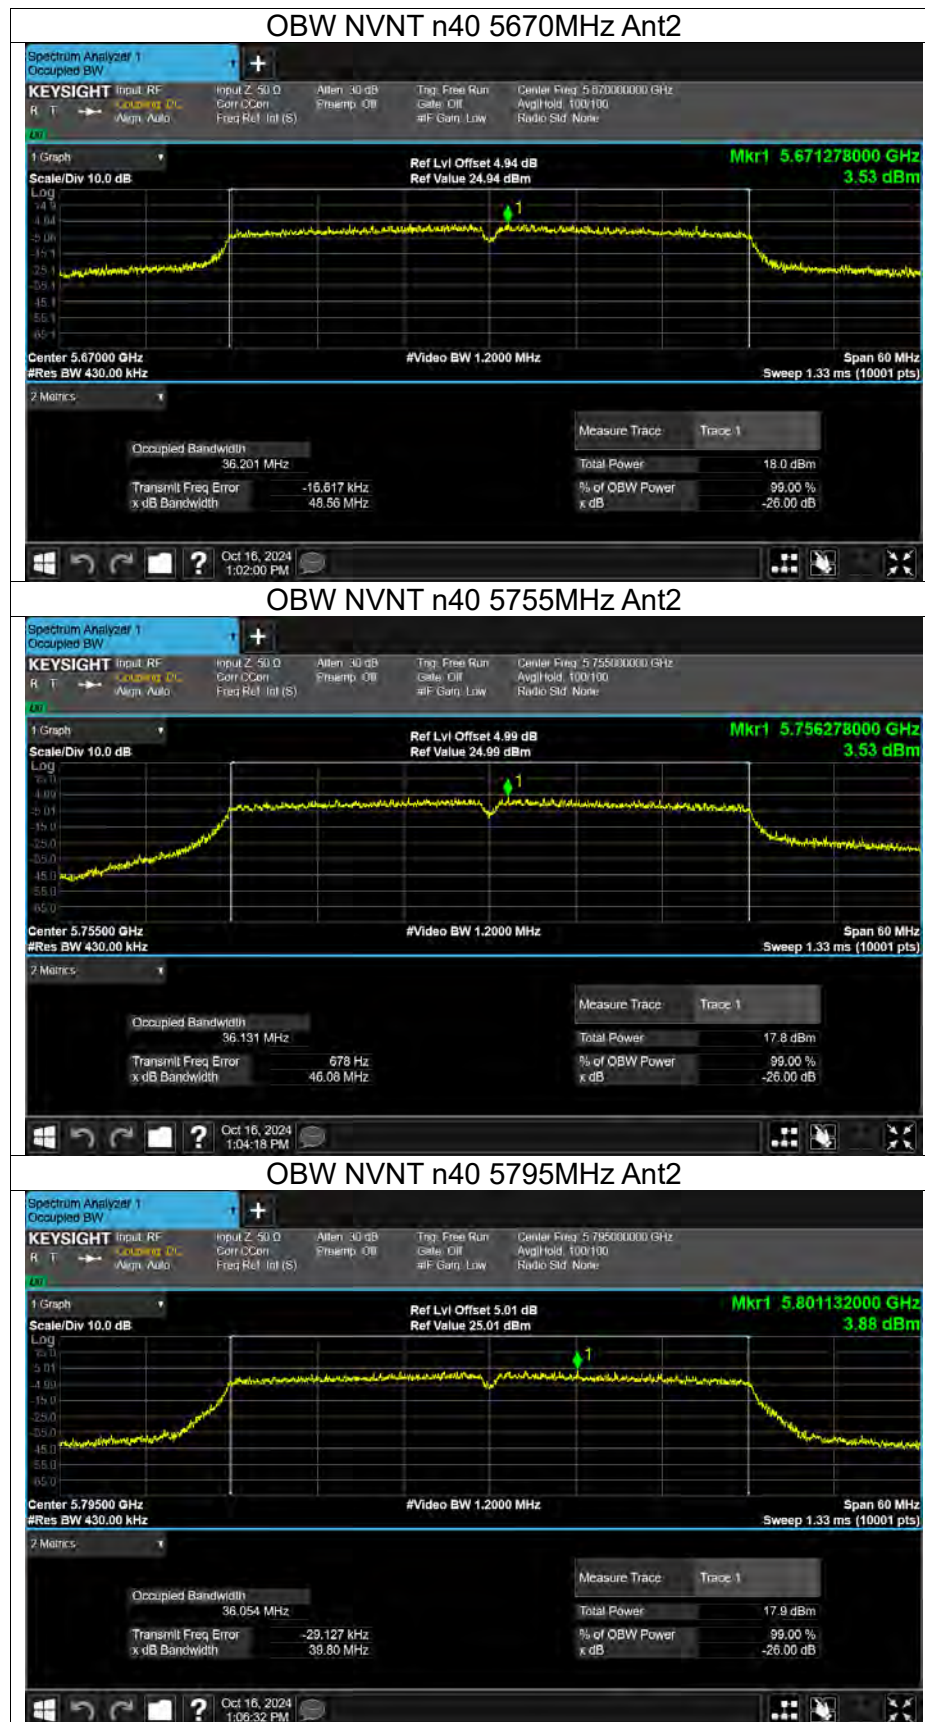


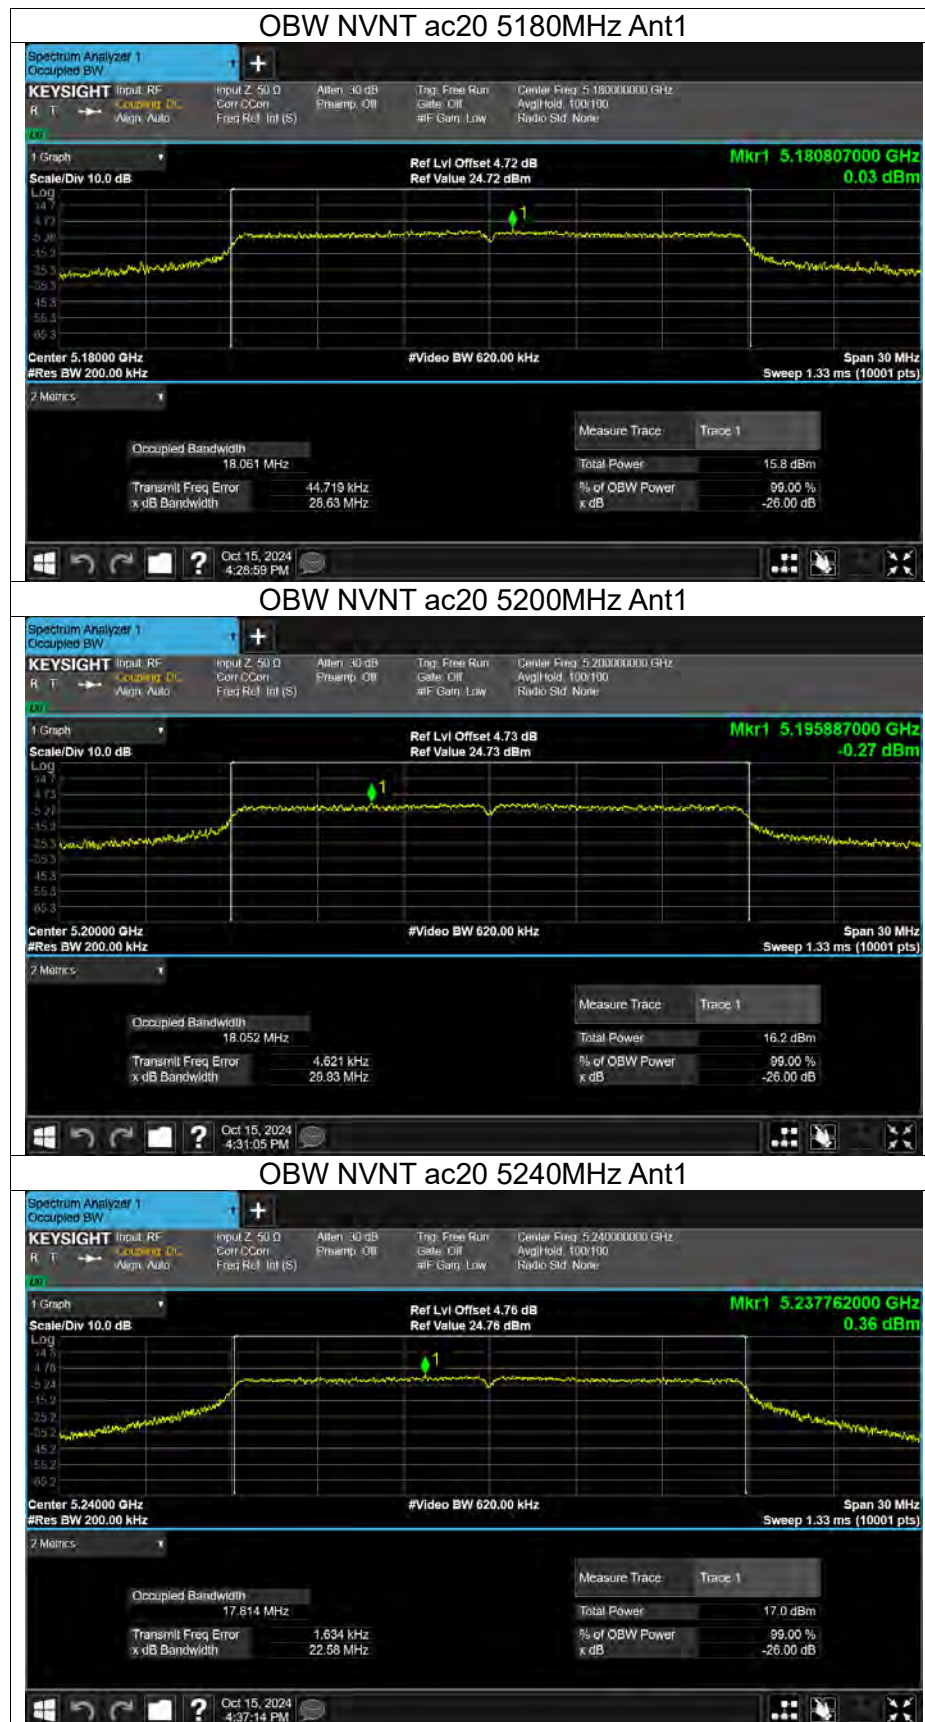











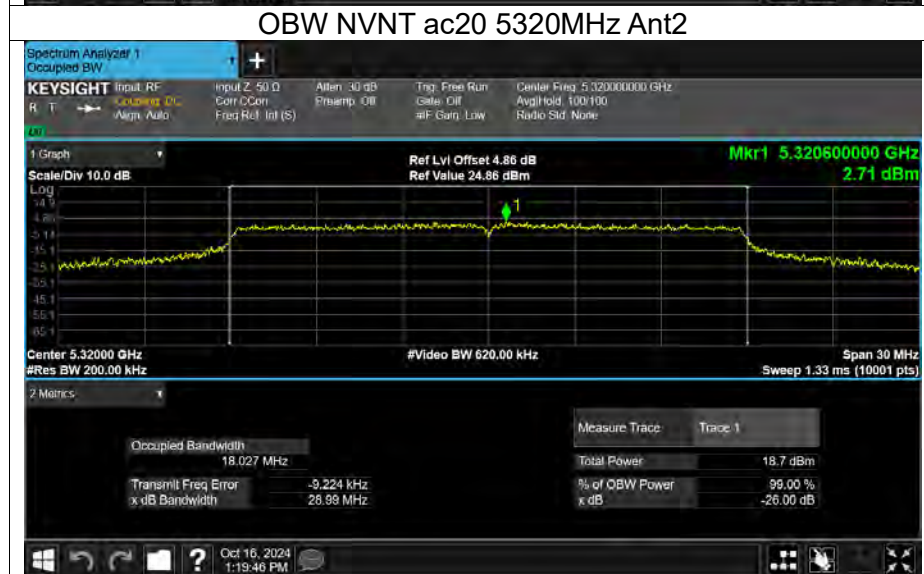
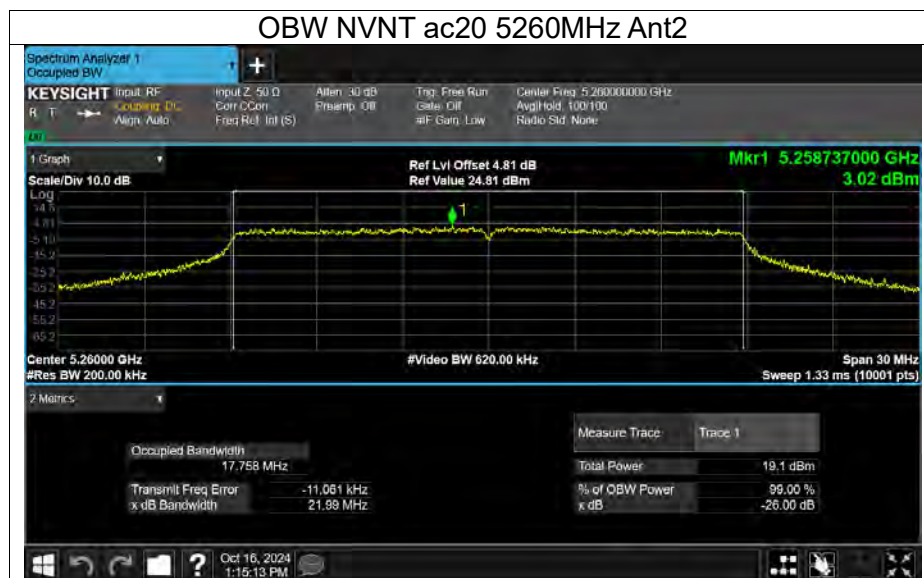









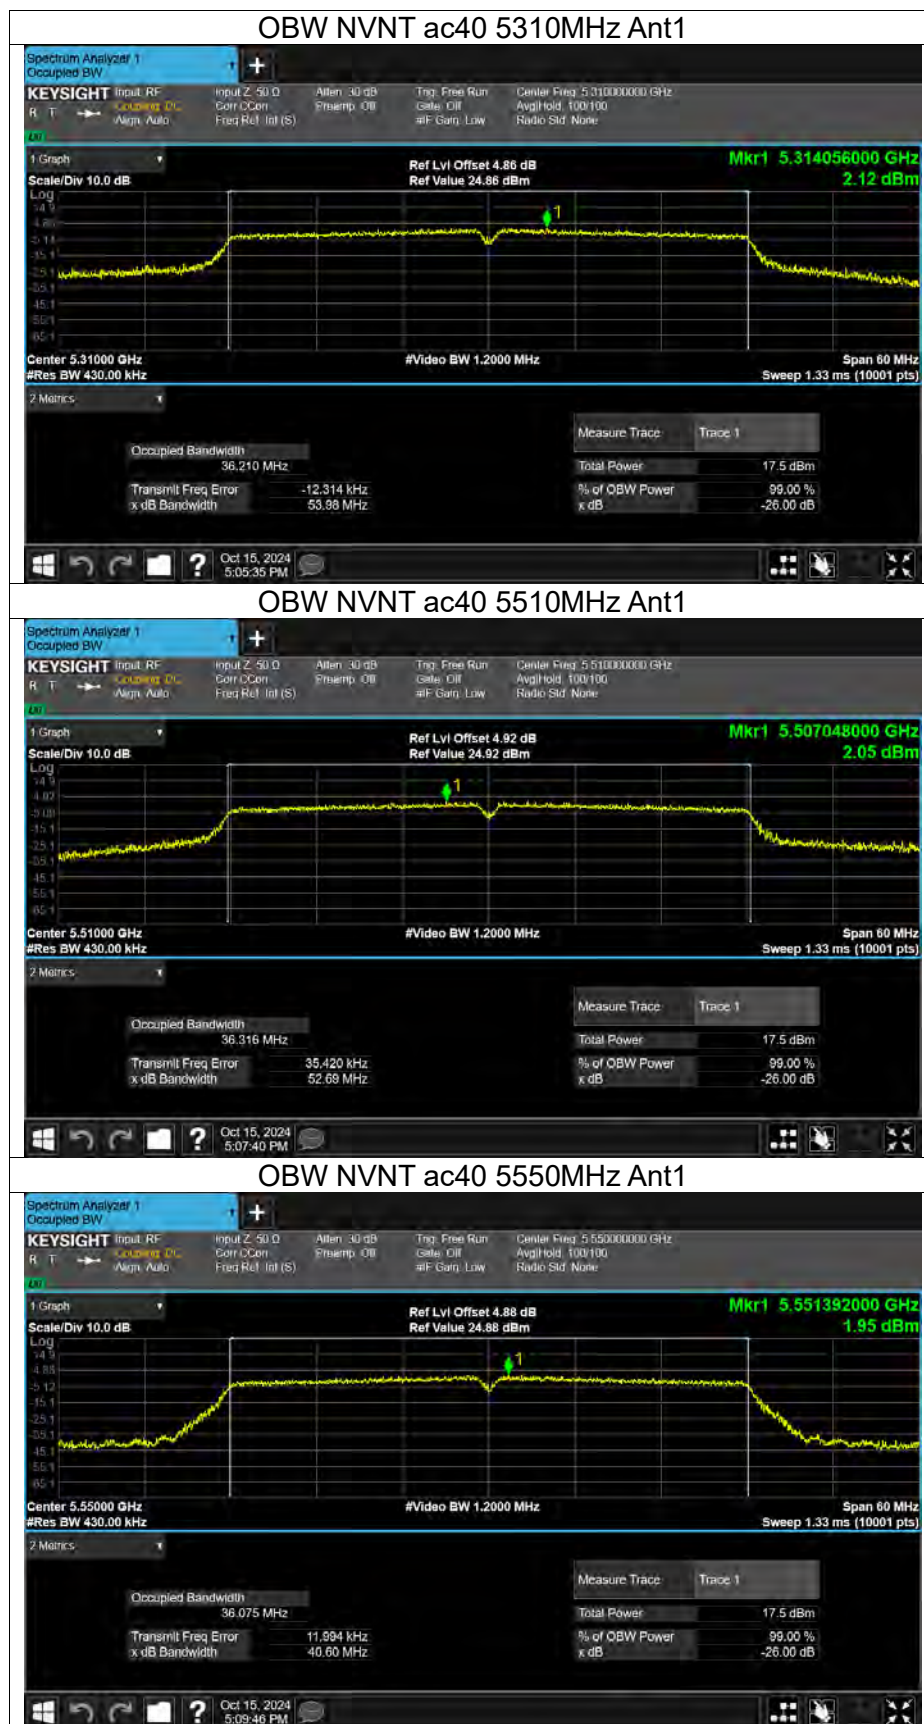

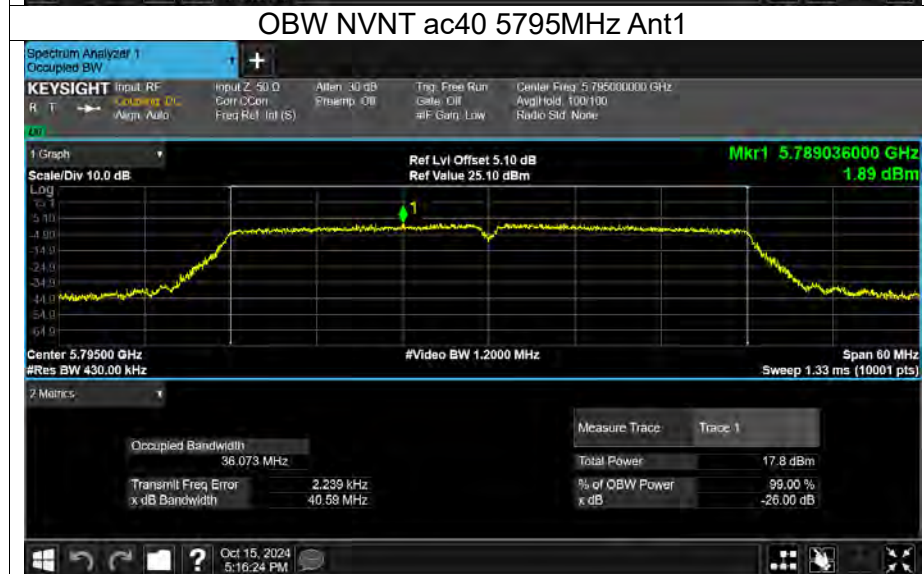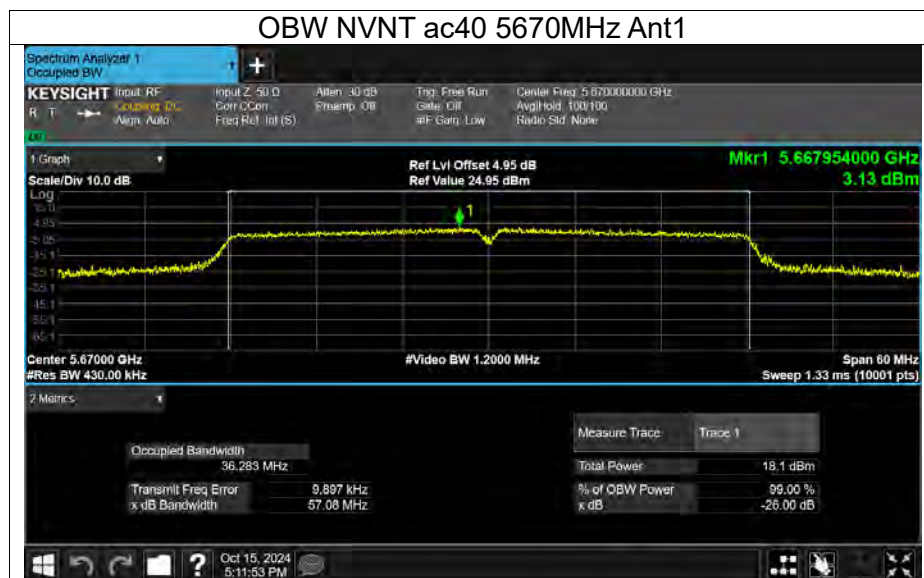



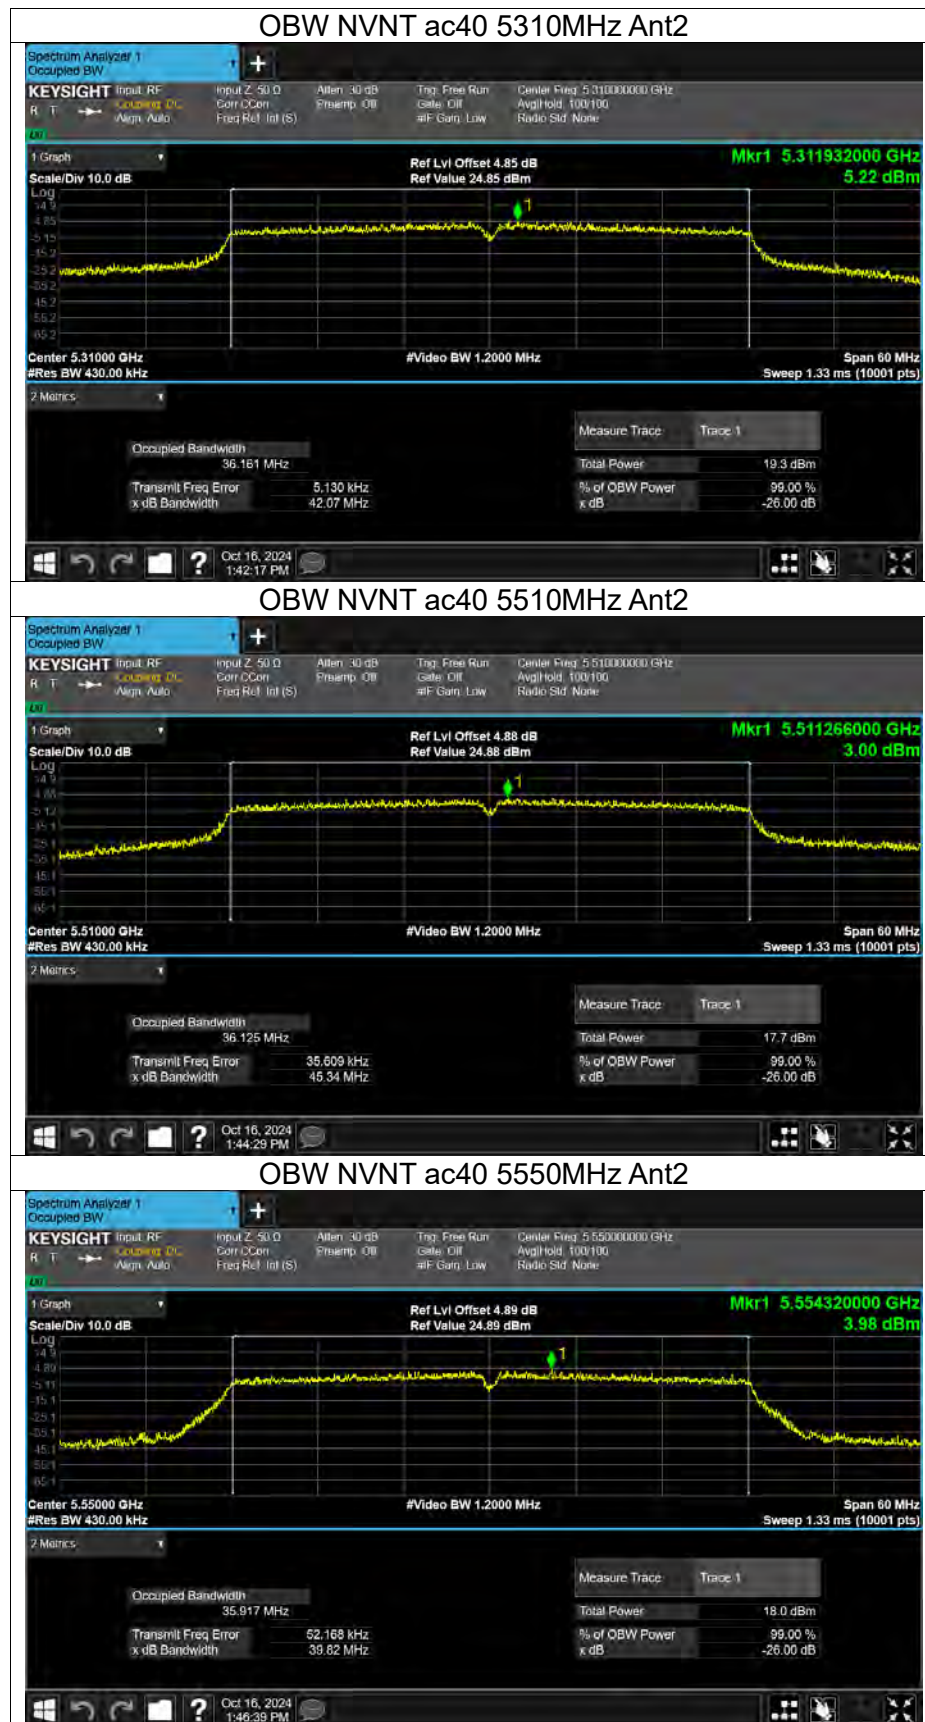



OBW NVNT ac40 5670MHz Ant2




OBW NVNT ac40 5755MHz Ant2




OBW NVNT ac40 5795MHz Ant2








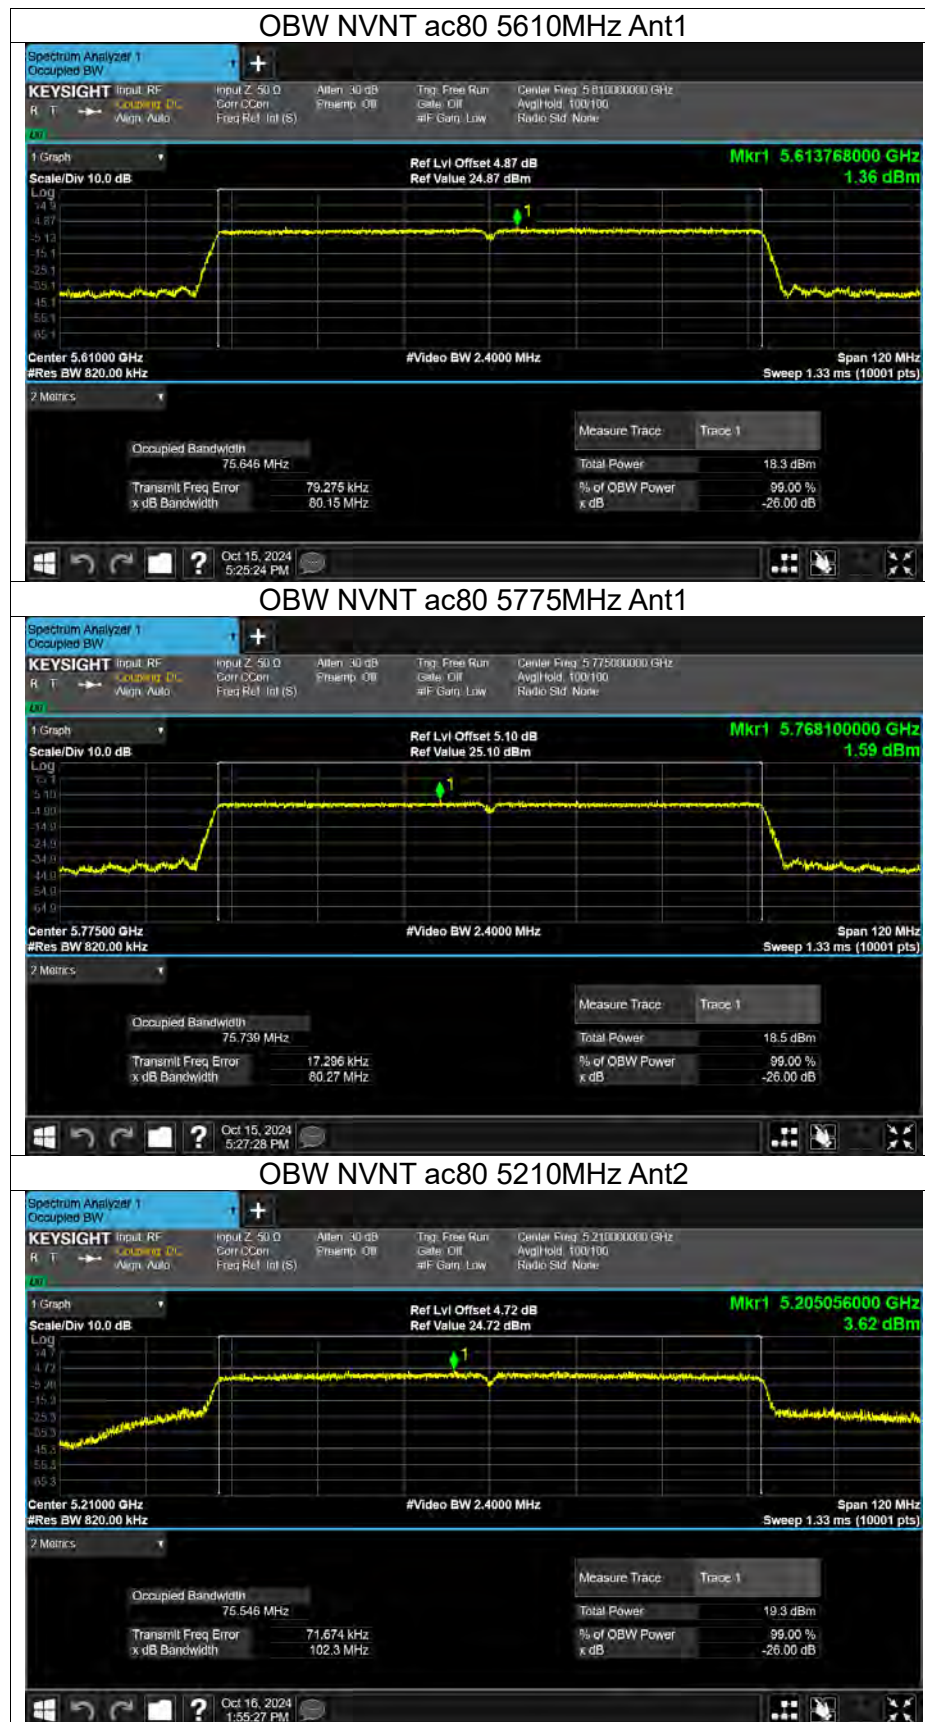



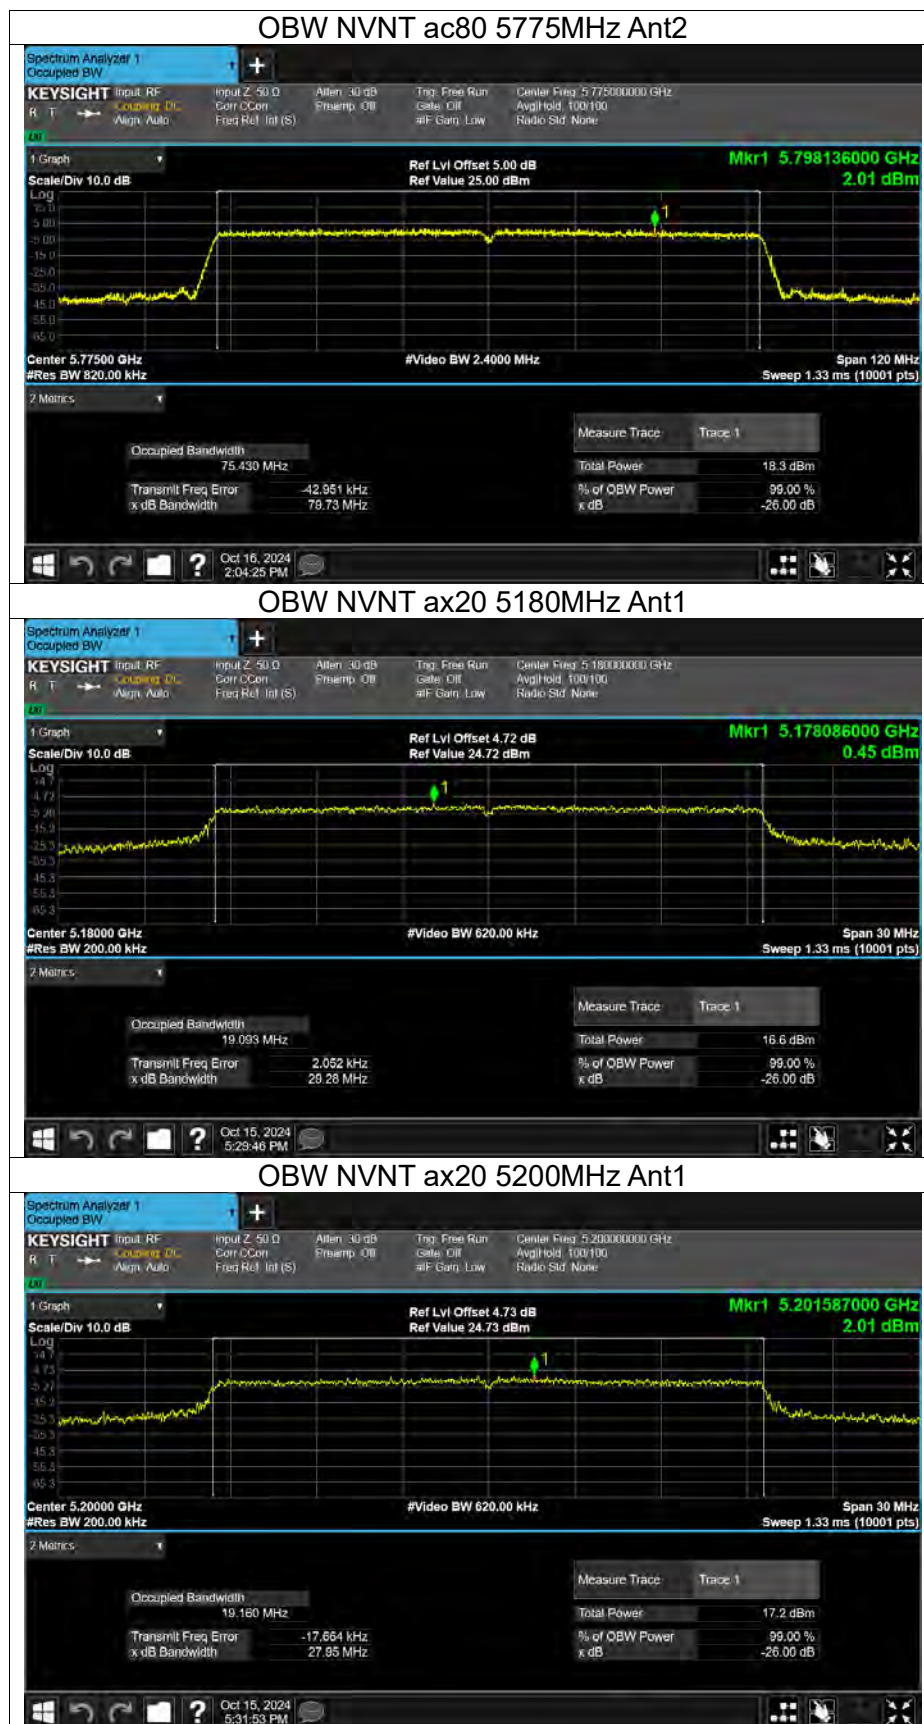

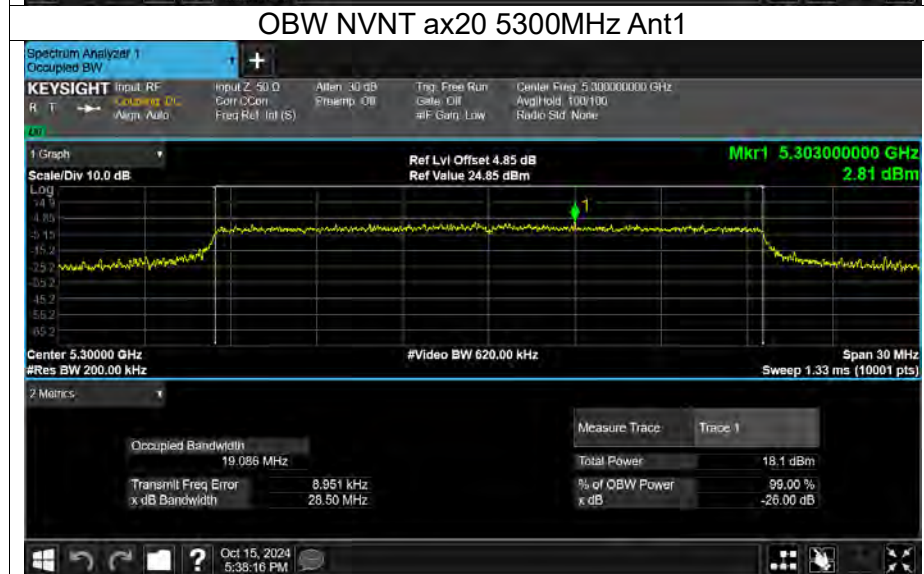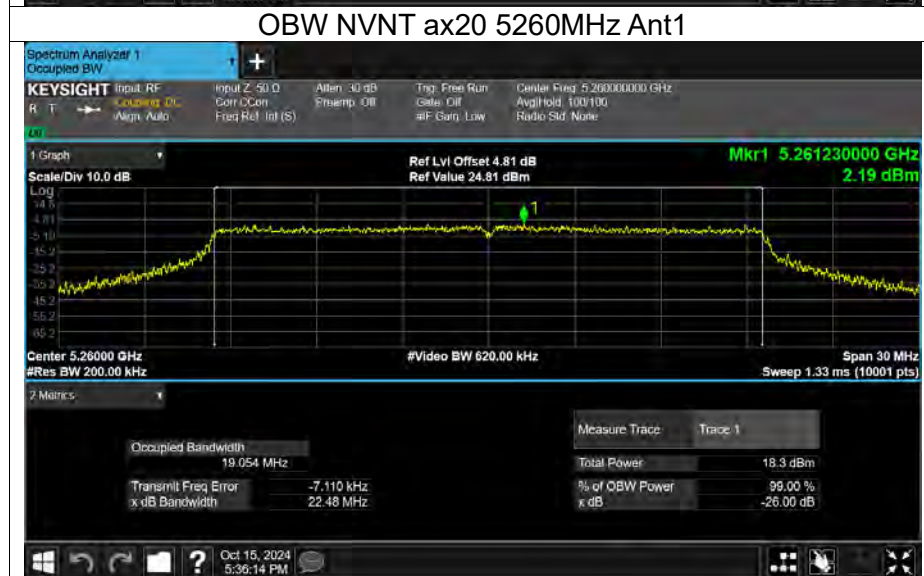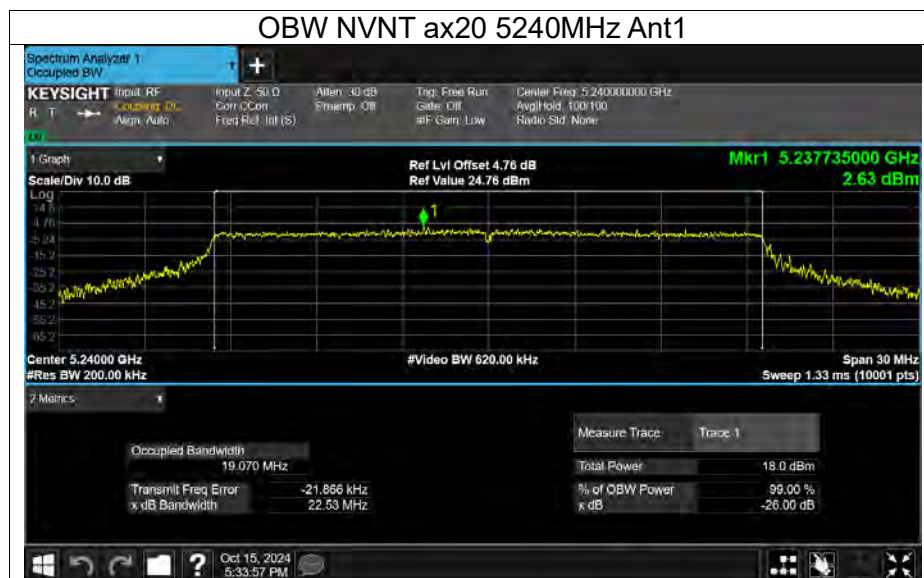



OBW NVNT ax20 5320MHz Ant1



OBW NVNT ax20 5500MHz Ant1






OBW NVNT ax20 5580MHz Ant1









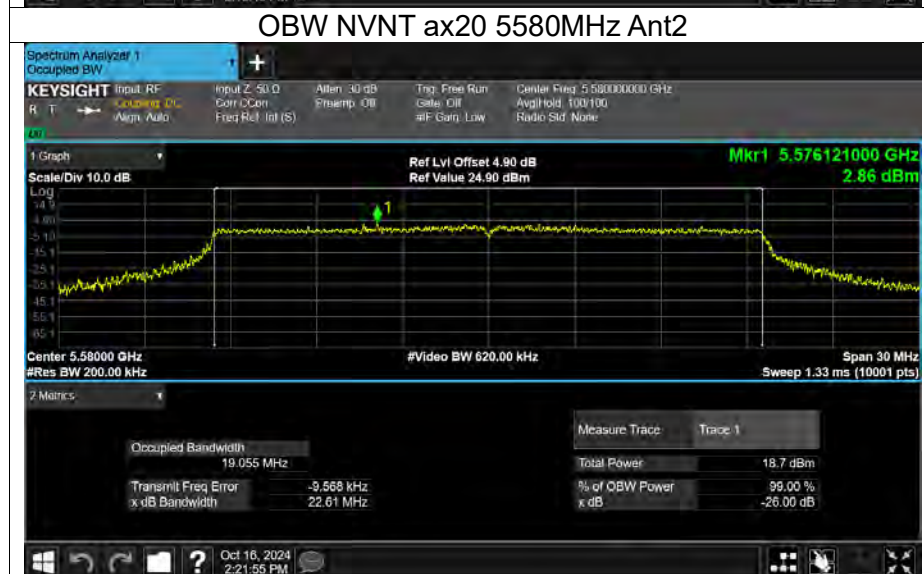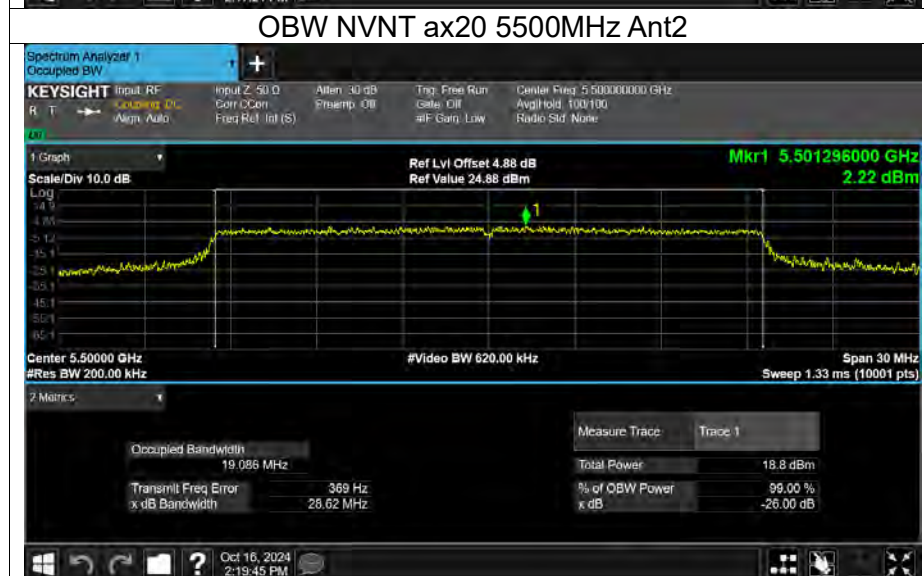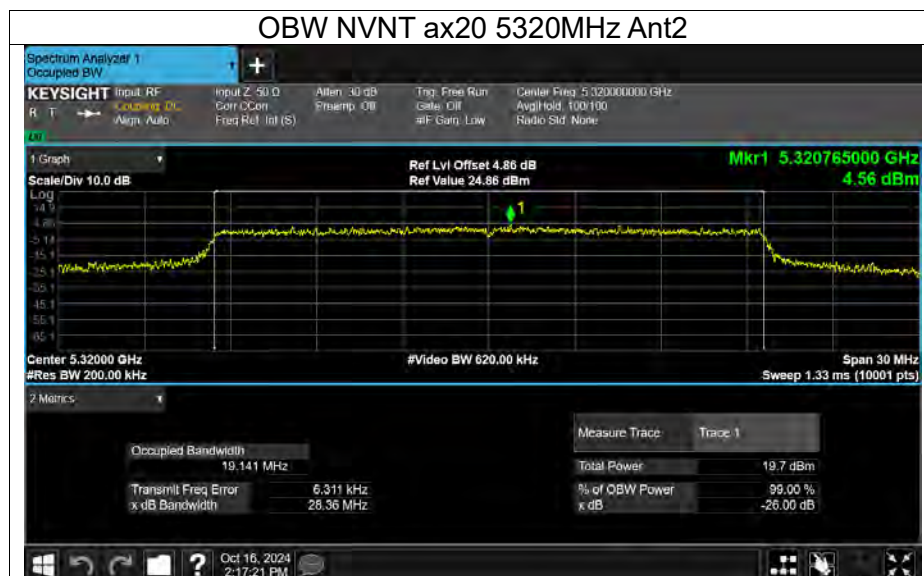



OBW NVNT ax20 5700MHz Ant2



OBW NVNT ax20 5745MHz Ant2



OBW NVNT ax20 5785MHz Ant2





OBW NVNT ax20 5825MHz Ant2





OBW NVNT ax40 5190MHz Ant1



OBW NVNT ax40 5230MHz Ant1



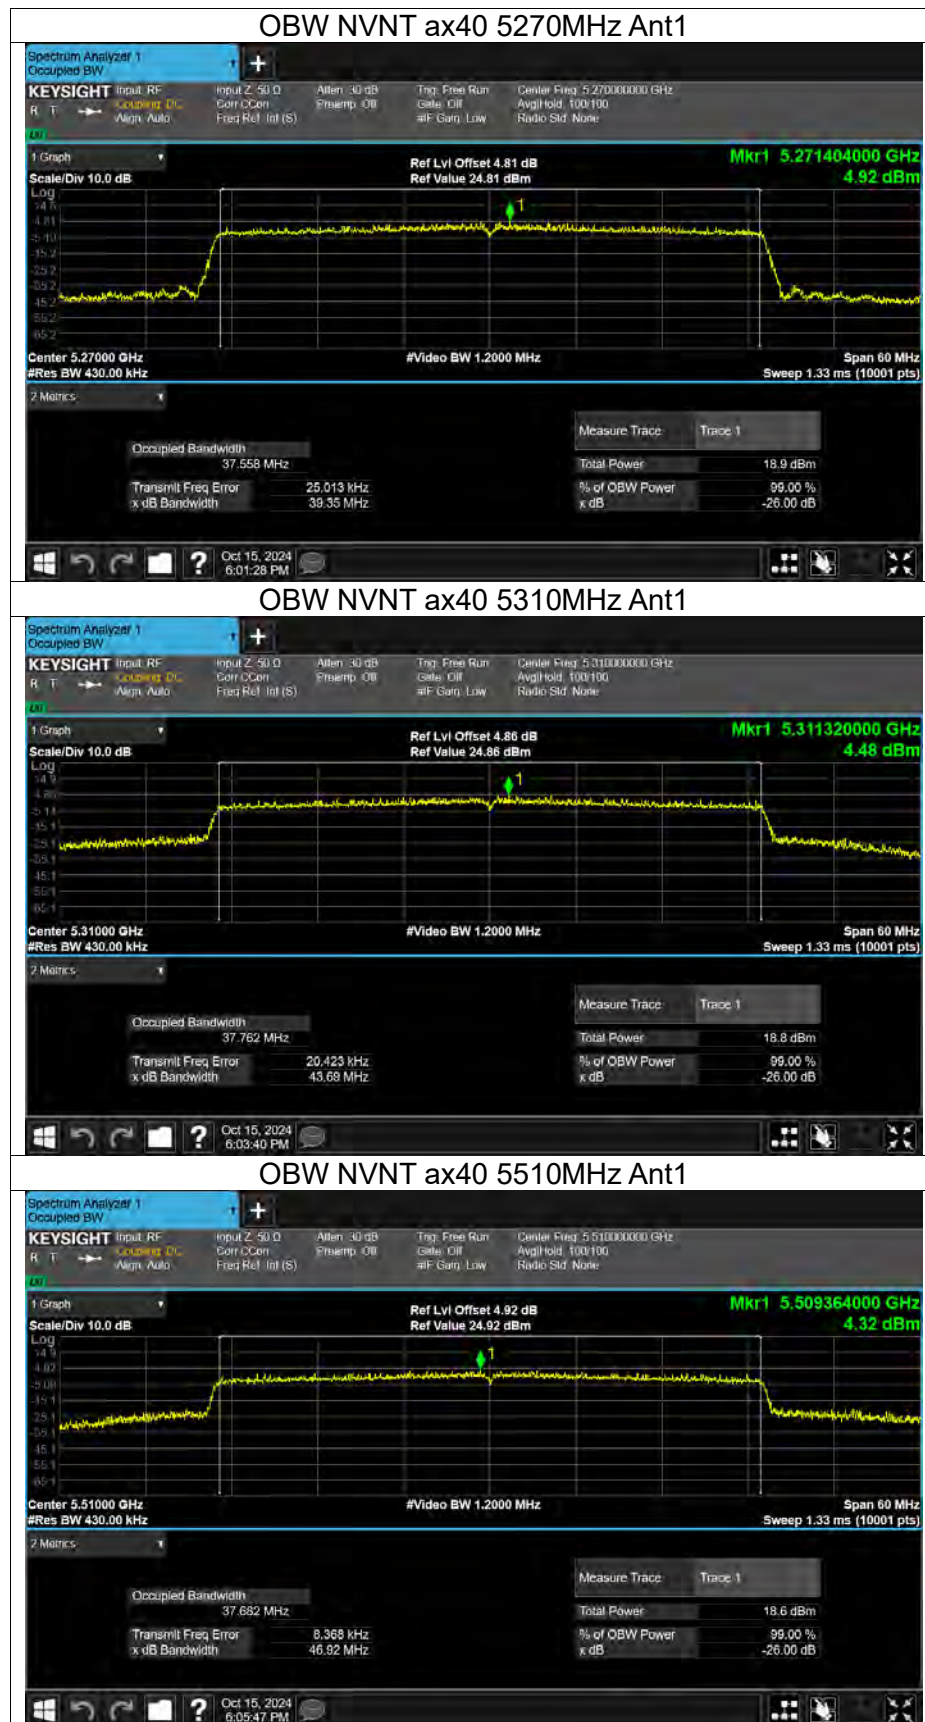

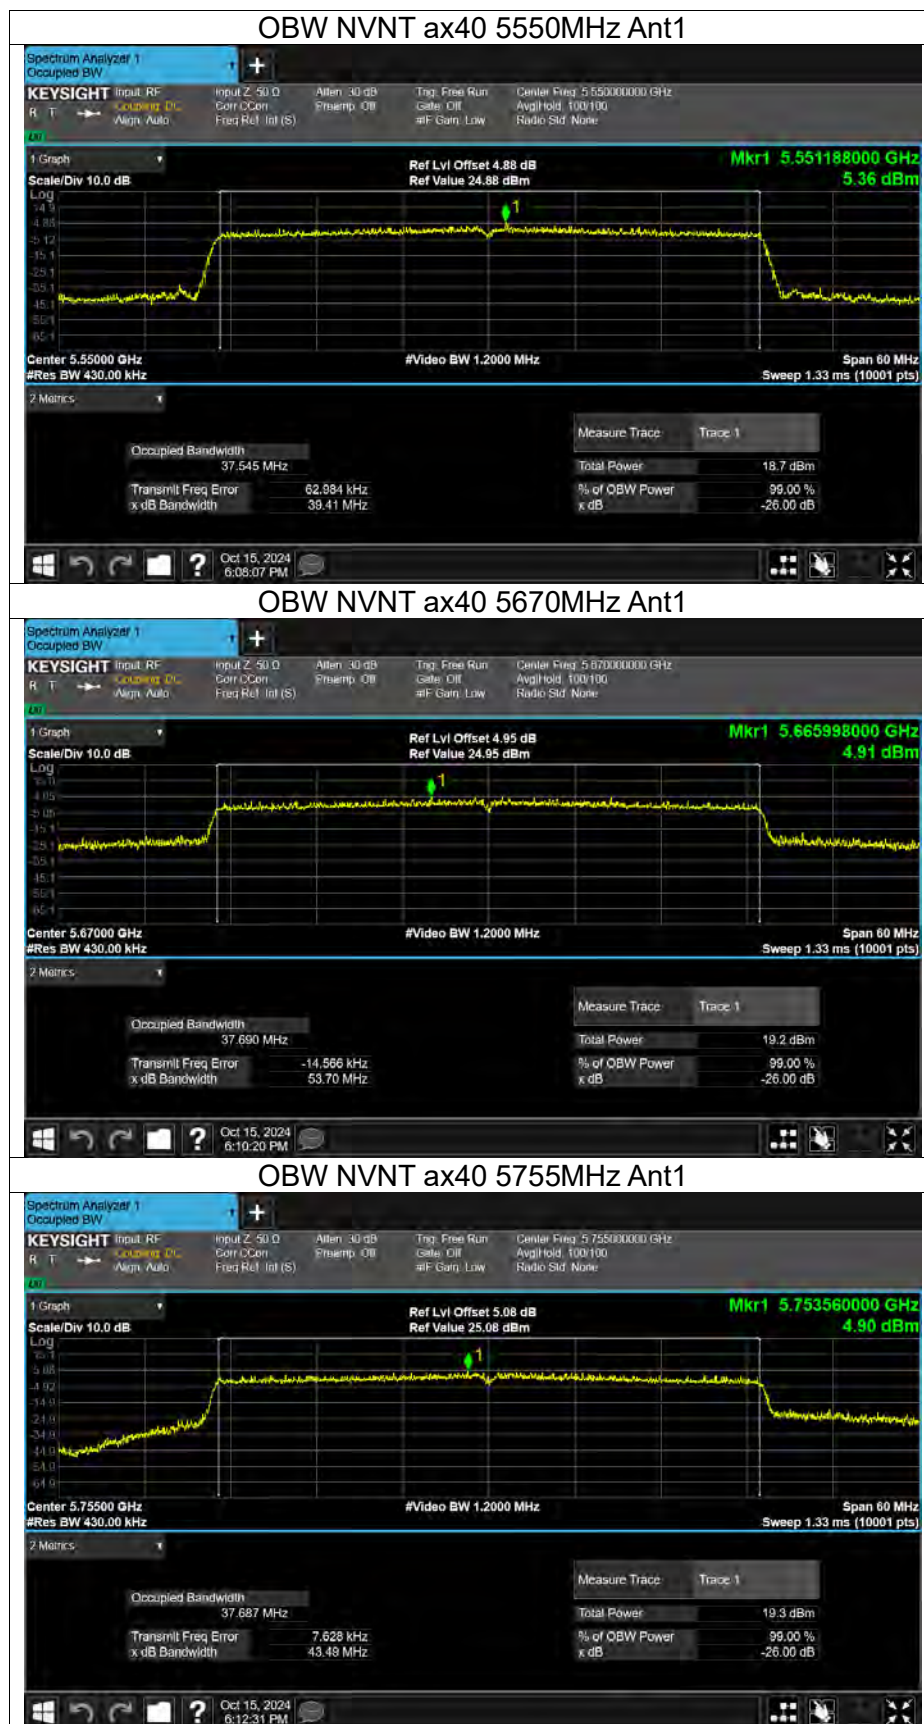



OBW NVNT ax40 5795MHz Ant1




OBW NVNT ax40 5190MHz Ant2



OBW NVNT ax40 5230MHz Ant2



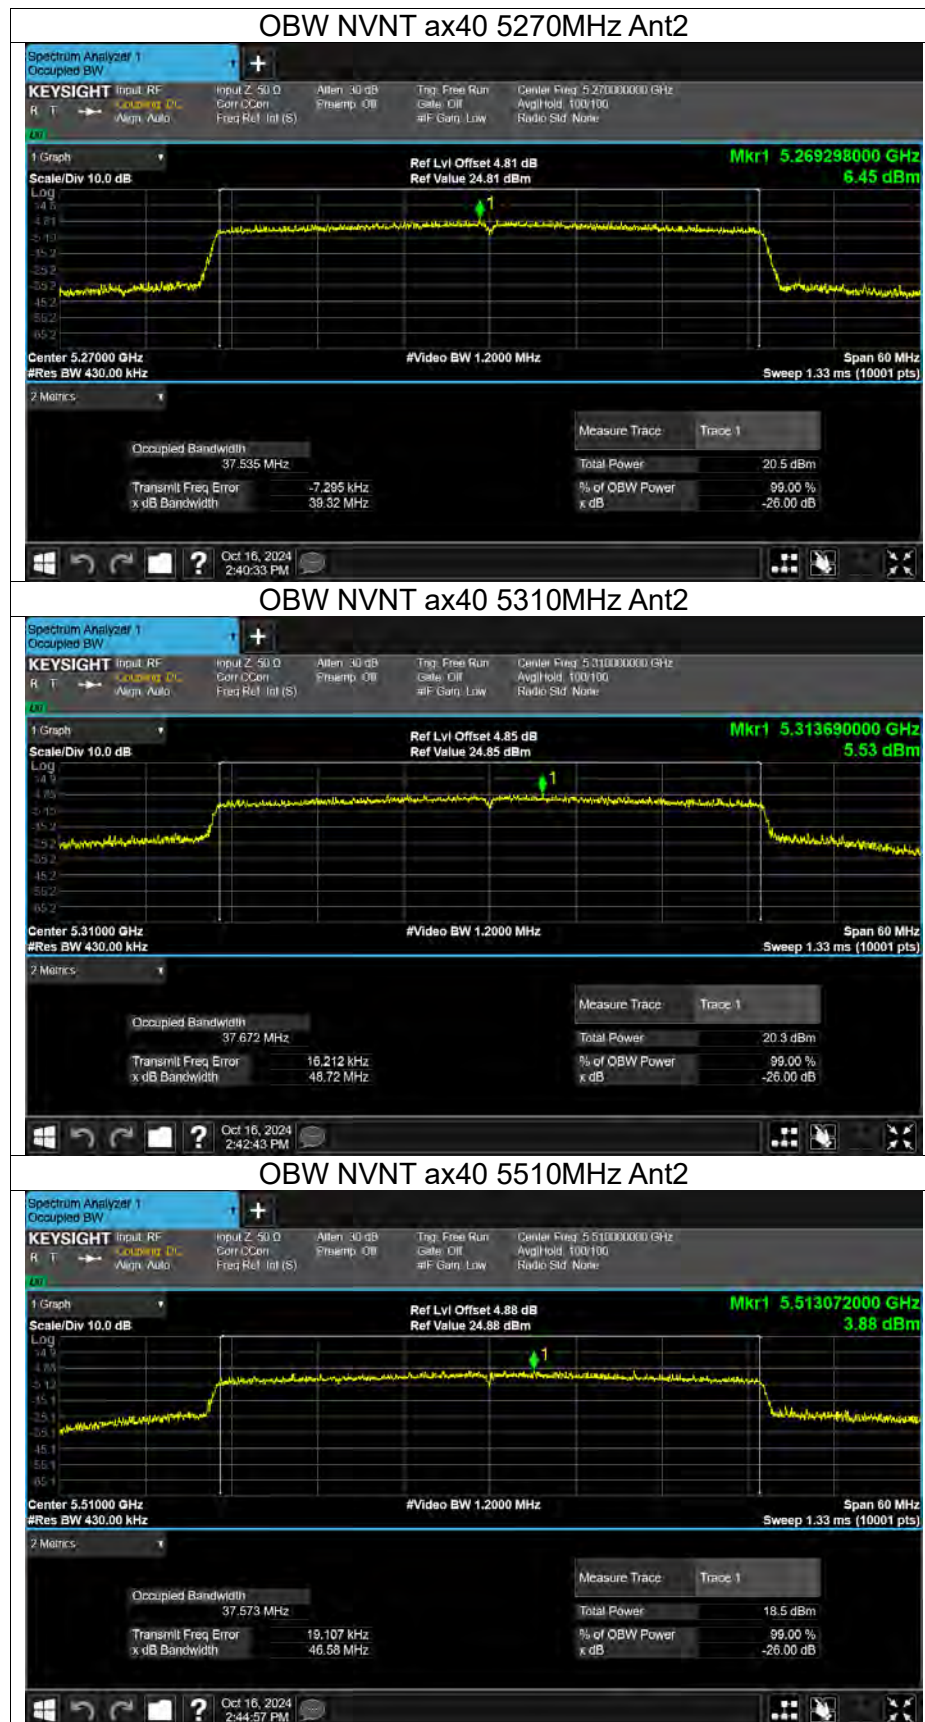



OBW NVNT ax40 5550MHz Ant2



OBW NVNT ax40 5670MHz Ant2



OBW NVNT ax40 5755MHz Ant2





OBW NVNT ax40 5795MHz Ant2




OBW NVNT ax80 5210MHz Ant1




OBW NVNT ax80 5290MHz Ant1



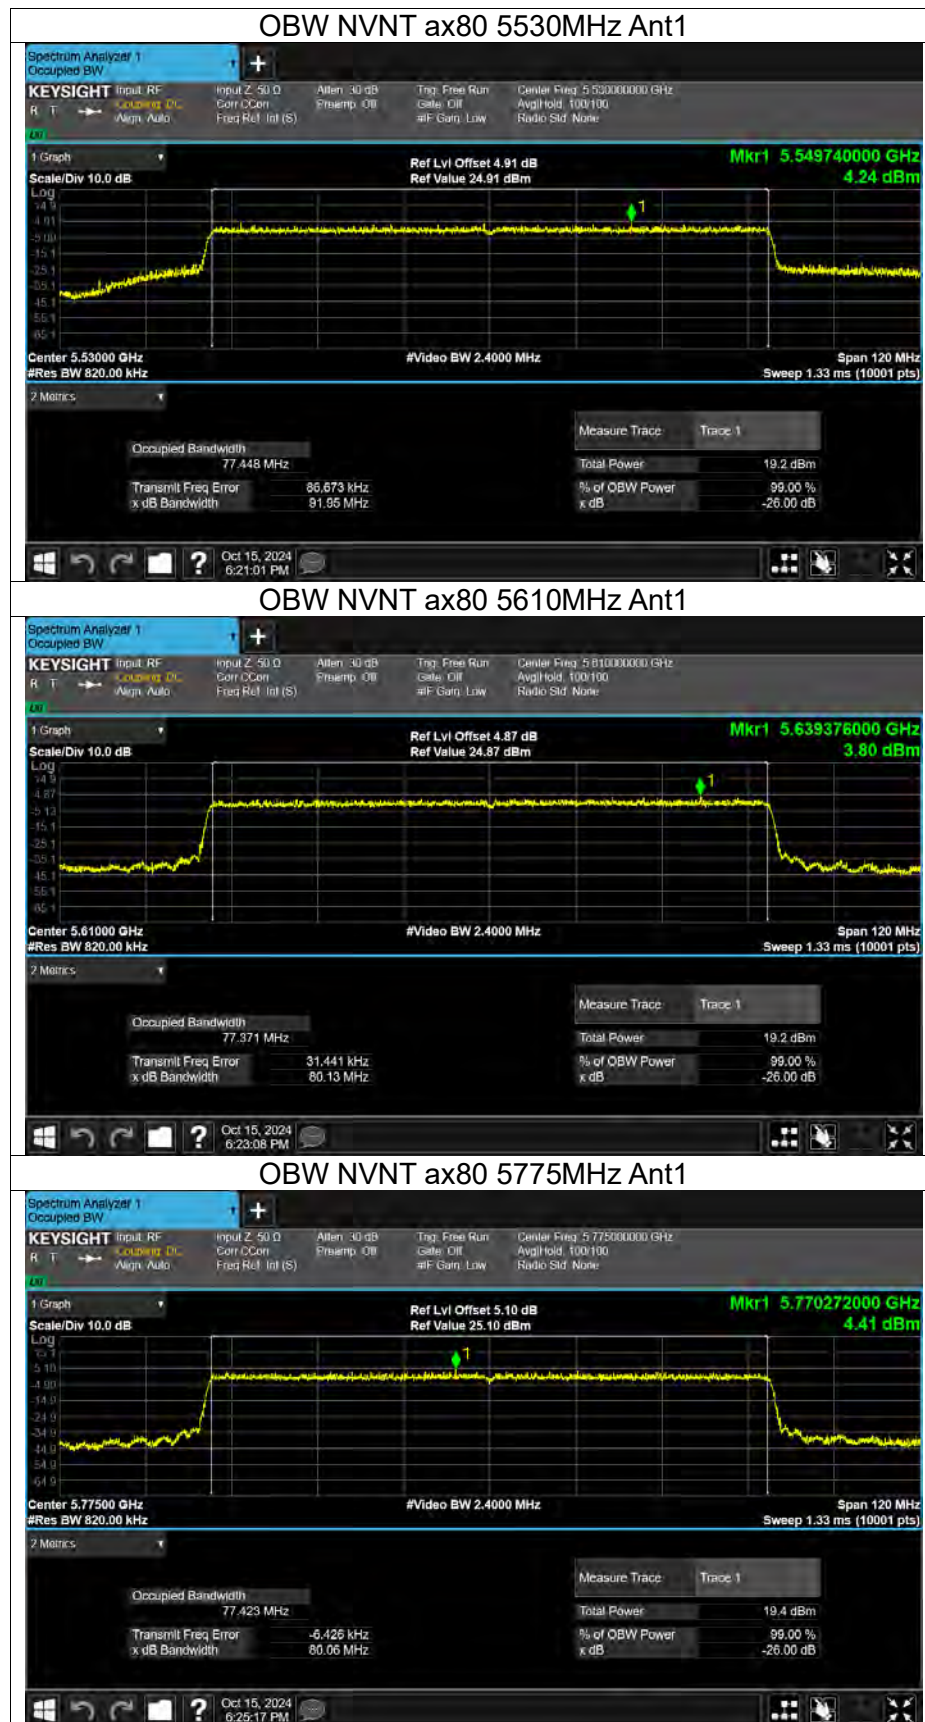



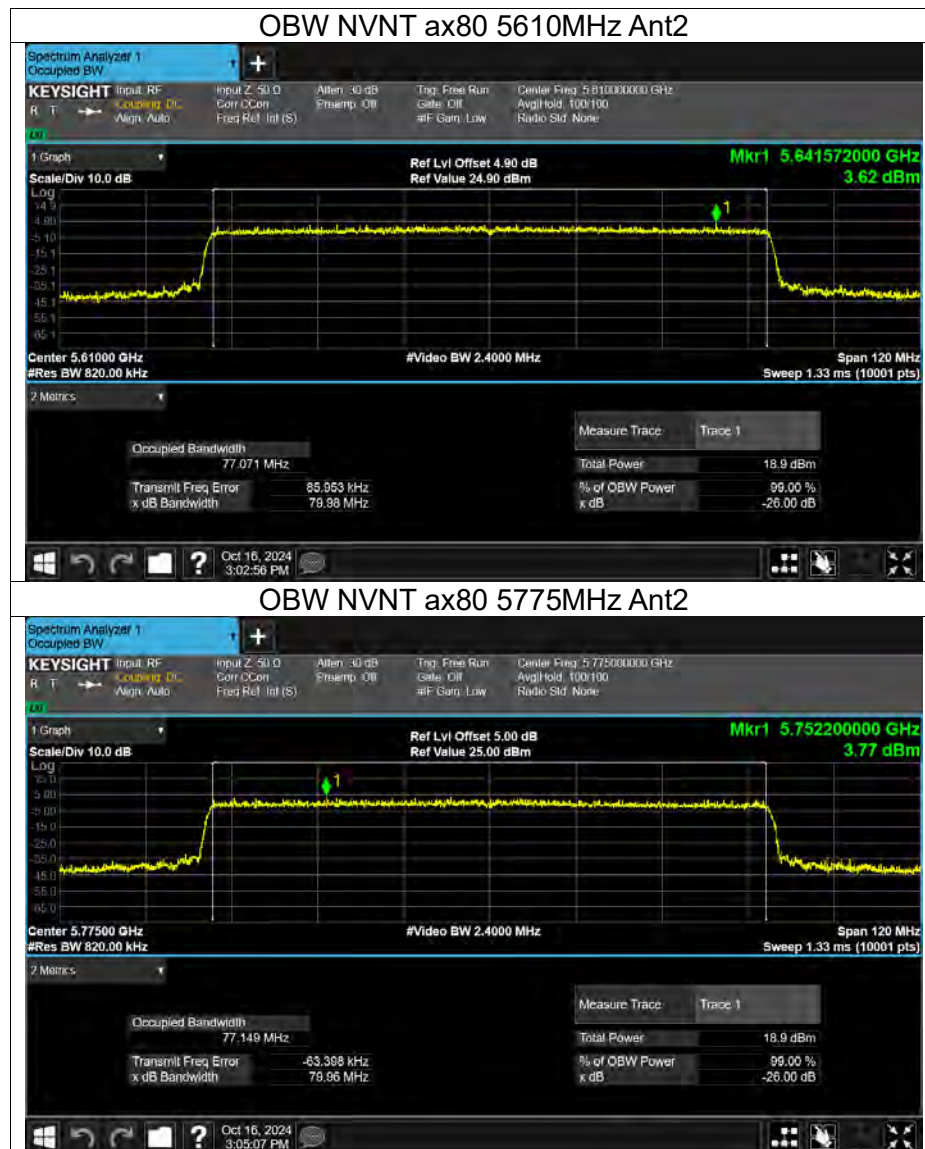



Maximum Power Spectral Density Level

Condition	Mode	Frequency (MHz)	Antenna	Conducted PSD (dBm/MHz)	Duty Factor (dB)	Total PSD (dBm/MHz)	Limit (dBm/MHz)	Verdict
NVNT	a	5180	Ant1	2.48	0	2.48	11	Pass
NVNT	a	5200	Ant1	3.34	0	3.34	11	Pass
NVNT	a	5240	Ant1	4	0	4	11	Pass
NVNT	a	5260	Ant1	2.34	0	2.34	11	Pass
NVNT	a	5300	Ant1	3.22	0	3.22	11	Pass
NVNT	a	5320	Ant1	3.14	0	3.14	11	Pass
NVNT	a	5500	Ant1	3.89	0	3.89	11	Pass
NVNT	a	5580	Ant1	3.71	0	3.71	11	Pass
NVNT	a	5700	Ant1	4.14	0	4.14	11	Pass
NVNT	a	5180	Ant2	-2.46	0	-2.46	11	Pass
NVNT	a	5200	Ant2	4.33	0	4.33	11	Pass
NVNT	a	5240	Ant2	4.53	0	4.53	11	Pass
NVNT	a	5260	Ant2	6.04	0	6.04	11	Pass
NVNT	a	5300	Ant2	4.35	0	4.35	11	Pass
NVNT	a	5320	Ant2	5.86	0	5.86	11	Pass
NVNT	a	5500	Ant2	5.99	0	5.99	11	Pass
NVNT	a	5580	Ant2	4.61	0	4.61	11	Pass
NVNT	a	5700	Ant2	3.78	0	3.78	11	Pass
NVNT	n20	5180	Ant1	-0.11	0	-0.11	11	Pass
NVNT	n20	5200	Ant1	0.7	0	0.7	11	Pass
NVNT	n20	5240	Ant1	1.11	0	1.11	11	Pass
NVNT	n20	5260	Ant1	1.87	0	1.87	11	Pass
NVNT	n20	5300	Ant1	1.14	0	1.14	11	Pass
NVNT	n20	5320	Ant1	1.27	0	1.27	11	Pass
NVNT	n20	5500	Ant1	3.14	0	3.14	11	Pass
NVNT	n20	5580	Ant1	1.18	0	1.18	11	Pass
NVNT	n20	5700	Ant1	0.74	0	0.74	11	Pass
NVNT	n20	5180	Ant2	3.16	0	3.16	11	Pass
NVNT	n20	5200	Ant2	3.15	0	3.15	11	Pass
NVNT	n20	5240	Ant2	3.6	0	3.6	11	Pass
NVNT	n20	5260	Ant2	4.34	0	4.34	11	Pass
NVNT	n20	5300	Ant2	1.96	0	1.96	11	Pass
NVNT	n20	5320	Ant2	2.23	0	2.23	11	Pass
NVNT	n20	5500	Ant2	1.43	0	1.43	11	Pass
NVNT	n20	5580	Ant2	0.97	0	0.97	11	Pass
NVNT	n20	5700	Ant2	0.23	0	0.23	11	Pass
NVNT	n20	5180	Ant1	-6.59	0	-6.59	11	Pass
NVNT	n20	5180	Ant2	-0.88	0	-0.88	11	Pass
NVNT	n20	5180	Sum	0.15	0	0.15	11	Pass
NVNT	n20	5200	Ant1	-3.53	0	-3.53	11	Pass
NVNT	n20	5200	Ant2	-1.2	0	-1.2	11	Pass
NVNT	n20	5200	Sum	0.8	0	0.8	11	Pass
NVNT	n20	5240	Ant1	-2.77	0	-2.77	11	Pass
NVNT	n20	5240	Ant2	0.27	0	0.27	11	Pass
NVNT	n20	5240	Sum	2.02	0	2.02	11	Pass
NVNT	n20	5260	Ant1	0.02	0	0.02	11	Pass
NVNT	n20	5260	Ant2	-0.4	0	-0.4	11	Pass
NVNT	n20	5260	Sum	2.83	0	2.83	11	Pass
NVNT	n20	5300	Ant1	-5.01	0	-5.01	11	Pass
NVNT	n20	5300	Ant2	-1.03	0	-1.03	11	Pass



NVNT	n20	5300	Sum	0.43	0	0.43	11	Pass
NVNT	n20	5320	Ant1	-2.19	0	-2.19	11	Pass
NVNT	n20	5320	Ant2	-0.35	0	-0.35	11	Pass
NVNT	n20	5320	Sum	1.84	0	1.84	11	Pass
NVNT	n20	5500	Ant1	-0.71	0	-0.71	11	Pass
NVNT	n20	5500	Ant2	-2.13	0	-2.13	11	Pass
NVNT	n20	5500	Sum	1.65	0	1.65	11	Pass
NVNT	n20	5580	Ant1	1	0	1	11	Pass
NVNT	n20	5580	Ant2	-2.29	0	-2.29	11	Pass
NVNT	n20	5580	Sum	2.67	0	2.67	11	Pass
NVNT	n20	5700	Ant1	0.37	0	0.37	11	Pass
NVNT	n20	5700	Ant2	-2.16	0	-2.16	11	Pass
NVNT	n20	5700	Sum	2.3	0	2.3	11	Pass
NVNT	n40	5190	Ant1	-1.6	0	-1.6	11	Pass
NVNT	n40	5230	Ant1	-2.23	0	-2.23	11	Pass
NVNT	n40	5270	Ant1	-1.09	0	-1.09	11	Pass
NVNT	n40	5310	Ant1	-1.12	0	-1.12	11	Pass
NVNT	n40	5510	Ant1	-0.2	0	-0.2	11	Pass
NVNT	n40	5550	Ant1	0.07	0	0.07	11	Pass
NVNT	n40	5670	Ant1	0.54	0	0.54	11	Pass
NVNT	n40	5190	Ant2	0.09	0	0.09	11	Pass
NVNT	n40	5230	Ant2	-0.22	0	-0.22	11	Pass
NVNT	n40	5270	Ant2	0.56	0	0.56	11	Pass
NVNT	n40	5310	Ant2	-0.94	0	-0.94	11	Pass
NVNT	n40	5510	Ant2	-2.34	0	-2.34	11	Pass
NVNT	n40	5550	Ant2	-2.09	0	-2.09	11	Pass
NVNT	n40	5670	Ant2	-1.96	0	-1.96	11	Pass
NVNT	n40	5190	Ant1	-6.63	0	-6.63	11	Pass
NVNT	n40	5190	Ant2	-3.06	0	-3.06	11	Pass
NVNT	n40	5190	Sum	-1.48	0	-1.48	11	Pass
NVNT	n40	5230	Ant1	-3.06	0	-3.06	11	Pass
NVNT	n40	5230	Ant2	-3.32	0	-3.32	11	Pass
NVNT	n40	5230	Sum	-0.18	0	-0.18	11	Pass
NVNT	n40	5270	Ant1	-3.54	0	-3.54	11	Pass
NVNT	n40	5270	Ant2	-3.29	0	-3.29	11	Pass
NVNT	n40	5270	Sum	-0.4	0	-0.4	11	Pass
NVNT	n40	5310	Ant1	-5.78	0	-5.78	11	Pass
NVNT	n40	5310	Ant2	-3.04	0	-3.04	11	Pass
NVNT	n40	5310	Sum	-1.19	0	-1.19	11	Pass
NVNT	n40	5510	Ant1	-5.23	0	-5.23	11	Pass
NVNT	n40	5510	Ant2	-5.23	0	-5.23	11	Pass
NVNT	n40	5510	Sum	-2.22	0	-2.22	11	Pass
NVNT	n40	5550	Ant1	-4.57	0	-4.57	11	Pass
NVNT	n40	5550	Ant2	-5.22	0	-5.22	11	Pass
NVNT	n40	5550	Sum	-1.87	0	-1.87	11	Pass
NVNT	n40	5670	Ant1	-3.9	0	-3.9	11	Pass
NVNT	n40	5670	Ant2	-5.08	0	-5.08	11	Pass
NVNT	n40	5670	Sum	-1.44	0	-1.44	11	Pass
NVNT	ac20	5180	Ant1	-0.64	0	-0.64	11	Pass
NVNT	ac20	5200	Ant1	-0.65	0	-0.65	11	Pass
NVNT	ac20	5240	Ant1	0.08	0	0.08	11	Pass
NVNT	ac20	5260	Ant1	0.4	0	0.4	11	Pass
NVNT	ac20	5300	Ant1	0.44	0	0.44	11	Pass
NVNT	ac20	5320	Ant1	0.62	0	0.62	11	Pass
NVNT	ac20	5500	Ant1	1.06	0	1.06	11	Pass
NVNT	ac20	5580	Ant1	1.22	0	1.22	11	Pass



NVNT	ac20	5700	Ant1	0.71	0	0.71	11	Pass
NVNT	ac20	5180	Ant2	1.11	0	1.11	11	Pass
NVNT	ac20	5200	Ant2	1.89	0	1.89	11	Pass
NVNT	ac20	5240	Ant2	1.95	0	1.95	11	Pass
NVNT	ac20	5260	Ant2	2.02	0	2.02	11	Pass
NVNT	ac20	5300	Ant2	1.94	0	1.94	11	Pass
NVNT	ac20	5320	Ant2	1.77	0	1.77	11	Pass
NVNT	ac20	5500	Ant2	1.12	0	1.12	11	Pass
NVNT	ac20	5580	Ant2	0.98	0	0.98	11	Pass
NVNT	ac20	5700	Ant2	-0.05	0	-0.05	11	Pass
NVNT	ac20	5180	Ant1	-6.73	0	-6.73	11	Pass
NVNT	ac20	5180	Ant2	-1.41	0	-1.41	11	Pass
NVNT	ac20	5180	Sum	-0.29	0	-0.29	11	Pass
NVNT	ac20	5200	Ant1	-7.09	0	-7.09	11	Pass
NVNT	ac20	5200	Ant2	-1.5	0	-1.5	11	Pass
NVNT	ac20	5200	Sum	-0.44	0	-0.44	11	Pass
NVNT	ac20	5240	Ant1	-2.65	0	-2.65	11	Pass
NVNT	ac20	5240	Ant2	-1.22	0	-1.22	11	Pass
NVNT	ac20	5240	Sum	1.13	0	1.13	11	Pass
NVNT	ac20	5260	Ant1	-1.18	0	-1.18	11	Pass
NVNT	ac20	5260	Ant2	-1	0	-1	11	Pass
NVNT	ac20	5260	Sum	1.92	0	1.92	11	Pass
NVNT	ac20	5300	Ant1	-4.9	0	-4.9	11	Pass
NVNT	ac20	5300	Ant2	-1.24	0	-1.24	11	Pass
NVNT	ac20	5300	Sum	0.31	0	0.31	11	Pass
NVNT	ac20	5320	Ant1	-5.73	0	-5.73	11	Pass
NVNT	ac20	5320	Ant2	-1.45	0	-1.45	11	Pass
NVNT	ac20	5320	Sum	-0.07	0	-0.07	11	Pass
NVNT	ac20	5500	Ant1	-1.93	0	-1.93	11	Pass
NVNT	ac20	5500	Ant2	-2.37	0	-2.37	11	Pass
NVNT	ac20	5500	Sum	0.87	0	0.87	11	Pass
NVNT	ac20	5580	Ant1	-2.84	0	-2.84	11	Pass
NVNT	ac20	5580	Ant2	-2.14	0	-2.14	11	Pass
NVNT	ac20	5580	Sum	0.53	0	0.53	11	Pass
NVNT	ac20	5700	Ant1	-2.64	0	-2.64	11	Pass
NVNT	ac20	5700	Ant2	-3.22	0	-3.22	11	Pass
NVNT	ac20	5700	Sum	0.09	0	0.09	11	Pass
NVNT	ac40	5190	Ant1	-2.77	0	-2.77	11	Pass
NVNT	ac40	5230	Ant1	-2.08	0	-2.08	11	Pass
NVNT	ac40	5270	Ant1	-1.82	0	-1.82	11	Pass
NVNT	ac40	5310	Ant1	-2.21	0	-2.21	11	Pass
NVNT	ac40	5510	Ant1	-2.43	0	-2.43	11	Pass
NVNT	ac40	5550	Ant1	-2.11	0	-2.11	11	Pass
NVNT	ac40	5670	Ant1	-1.7	0	-1.7	11	Pass
NVNT	ac40	5190	Ant2	-0.14	0	-0.14	11	Pass
NVNT	ac40	5230	Ant2	-0.27	0	-0.27	11	Pass
NVNT	ac40	5270	Ant2	-0.06	0	-0.06	11	Pass
NVNT	ac40	5310	Ant2	-0.53	0	-0.53	11	Pass
NVNT	ac40	5510	Ant2	-2.37	0	-2.37	11	Pass
NVNT	ac40	5550	Ant2	-1.97	0	-1.97	11	Pass
NVNT	ac40	5670	Ant2	-2.13	0	-2.13	11	Pass
NVNT	ac40	5190	Ant1	-6.36	0	-6.36	11	Pass
NVNT	ac40	5190	Ant2	-3.13	0	-3.13	11	Pass
NVNT	ac40	5190	Sum	-1.44	0	-1.44	11	Pass
NVNT	ac40	5230	Ant1	-3.18	0	-3.18	11	Pass
NVNT	ac40	5230	Ant2	-3.28	0	-3.28	11	Pass



NVNT	ac40	5230	Sum	-0.22	0	-0.22	11	Pass
NVNT	ac40	5270	Ant1	-3.59	0	-3.59	11	Pass
NVNT	ac40	5270	Ant2	-1.08	0	-1.08	11	Pass
NVNT	ac40	5270	Sum	0.85	0	0.85	11	Pass
NVNT	ac40	5310	Ant1	-5.38	0	-5.38	11	Pass
NVNT	ac40	5310	Ant2	-3.21	0	-3.21	11	Pass
NVNT	ac40	5310	Sum	-1.15	0	-1.15	11	Pass
NVNT	ac40	5510	Ant1	-5.05	0	-5.05	11	Pass
NVNT	ac40	5510	Ant2	-5.5	0	-5.5	11	Pass
NVNT	ac40	5510	Sum	-2.26	0	-2.26	11	Pass
NVNT	ac40	5550	Ant1	-5.02	0	-5.02	11	Pass
NVNT	ac40	5550	Ant2	-5.08	0	-5.08	11	Pass
NVNT	ac40	5550	Sum	-2.04	0	-2.04	11	Pass
NVNT	ac40	5670	Ant1	-7.17	0	-7.17	11	Pass
NVNT	ac40	5670	Ant2	-5.56	0	-5.56	11	Pass
NVNT	ac40	5670	Sum	-3.28	0	-3.28	11	Pass
NVNT	ac80	5210	Ant1	-7.35	0	-7.35	11	Pass
NVNT	ac80	5290	Ant1	-6.79	0	-6.79	11	Pass
NVNT	ac80	5530	Ant1	-6.66	0	-6.66	11	Pass
NVNT	ac80	5610	Ant1	-5.83	0	-5.83	11	Pass
NVNT	ac80	5210	Ant2	-5.49	0	-5.49	11	Pass
NVNT	ac80	5290	Ant2	-5.5	0	-5.5	11	Pass
NVNT	ac80	5530	Ant2	-6.47	0	-6.47	11	Pass
NVNT	ac80	5610	Ant2	-6.31	0	-6.31	11	Pass
NVNT	ac80	5210	Ant1	-8.36	0	-8.36	11	Pass
NVNT	ac80	5210	Ant2	-8.25	0	-8.25	11	Pass
NVNT	ac80	5210	Sum	-5.29	0	-5.29	11	Pass
NVNT	ac80	5290	Ant1	-8.24	0	-8.24	11	Pass
NVNT	ac80	5290	Ant2	-7.54	0	-7.54	11	Pass
NVNT	ac80	5290	Sum	-4.87	0	-4.87	11	Pass
NVNT	ac80	5530	Ant1	-8.39	0	-8.39	11	Pass
NVNT	ac80	5530	Ant2	-9.45	0	-9.45	11	Pass
NVNT	ac80	5530	Sum	-5.88	0	-5.88	11	Pass
NVNT	ac80	5610	Ant1	-6.9	0	-6.9	11	Pass
NVNT	ac80	5610	Ant2	-9.39	0	-9.39	11	Pass
NVNT	ac80	5610	Sum	-4.96	0	-4.96	11	Pass
NVNT	ax20	5180	Ant1	-1.36	0	-1.36	11	Pass
NVNT	ax20	5200	Ant1	-1.12	0	-1.12	11	Pass
NVNT	ax20	5240	Ant1	-0.61	0	-0.61	11	Pass
NVNT	ax20	5260	Ant1	0.4	0	0.4	11	Pass
NVNT	ax20	5300	Ant1	-0.14	0	-0.14	11	Pass
NVNT	ax20	5320	Ant1	-0.11	0	-0.11	11	Pass
NVNT	ax20	5500	Ant1	0.49	0	0.49	11	Pass
NVNT	ax20	5580	Ant1	0.55	0	0.55	11	Pass
NVNT	ax20	5700	Ant1	-0.04	0	-0.04	11	Pass
NVNT	ax20	5180	Ant2	0.95	0	0.95	11	Pass
NVNT	ax20	5200	Ant2	1.35	0	1.35	11	Pass
NVNT	ax20	5240	Ant2	1.43	0	1.43	11	Pass
NVNT	ax20	5260	Ant2	2.07	0	2.07	11	Pass
NVNT	ax20	5300	Ant2	1.95	0	1.95	11	Pass
NVNT	ax20	5320	Ant2	1.47	0	1.47	11	Pass
NVNT	ax20	5500	Ant2	0.82	0	0.82	11	Pass
NVNT	ax20	5580	Ant2	0.61	0	0.61	11	Pass
NVNT	ax20	5700	Ant2	0.38	0	0.38	11	Pass
NVNT	ax20	5180	Ant1	-6.61	0	-6.61	11	Pass
NVNT	ax20	5180	Ant2	-1.46	0	-1.46	11	Pass



NVNT	ax20	5180	Sum	-0.3	0	-0.3	11	Pass
NVNT	ax20	5200	Ant1	-6.89	0	-6.89	11	Pass
NVNT	ax20	5200	Ant2	-1.65	0	-1.65	11	Pass
NVNT	ax20	5200	Sum	-0.51	0	-0.51	11	Pass
NVNT	ax20	5240	Ant1	-2.52	0	-2.52	11	Pass
NVNT	ax20	5240	Ant2	-1.45	0	-1.45	11	Pass
NVNT	ax20	5240	Sum	1.06	0	1.06	11	Pass
NVNT	ax20	5260	Ant1	-2.08	0	-2.08	11	Pass
NVNT	ax20	5260	Ant2	-0.85	0	-0.85	11	Pass
NVNT	ax20	5260	Sum	1.59	0	1.59	11	Pass
NVNT	ax20	5300	Ant1	-4.83	0	-4.83	11	Pass
NVNT	ax20	5300	Ant2	-1.16	0	-1.16	11	Pass
NVNT	ax20	5300	Sum	0.39	0	0.39	11	Pass
NVNT	ax20	5320	Ant1	-6.65	0	-6.65	11	Pass
NVNT	ax20	5320	Ant2	-0.46	0	-0.46	11	Pass
NVNT	ax20	5320	Sum	0.48	0	0.48	11	Pass
NVNT	ax20	5500	Ant1	-1.79	0	-1.79	11	Pass
NVNT	ax20	5500	Ant2	-2.29	0	-2.29	11	Pass
NVNT	ax20	5500	Sum	0.98	0	0.98	11	Pass
NVNT	ax20	5580	Ant1	-3.41	0	-3.41	11	Pass
NVNT	ax20	5580	Ant2	-2.11	0	-2.11	11	Pass
NVNT	ax20	5580	Sum	0.3	0	0.3	11	Pass
NVNT	ax20	5700	Ant1	-2.87	0	-2.87	11	Pass
NVNT	ax20	5700	Ant2	-2.9	0	-2.9	11	Pass
NVNT	ax20	5700	Sum	0.13	0	0.13	11	Pass
NVNT	ax40	5190	Ant1	-2.2	0	-2.2	11	Pass
NVNT	ax40	5230	Ant1	-1.89	0	-1.89	11	Pass
NVNT	ax40	5270	Ant1	-1.74	0	-1.74	11	Pass
NVNT	ax40	5310	Ant1	-1.98	0	-1.98	11	Pass
NVNT	ax40	5510	Ant1	-2.12	0	-2.12	11	Pass
NVNT	ax40	5550	Ant1	-2.29	0	-2.29	11	Pass
NVNT	ax40	5670	Ant1	-2.51	0	-2.51	11	Pass
NVNT	ax40	5190	Ant2	-0.25	0	-0.25	11	Pass
NVNT	ax40	5230	Ant2	-0.31	0	-0.31	11	Pass
NVNT	ax40	5270	Ant2	-0.33	0	-0.33	11	Pass
NVNT	ax40	5310	Ant2	-0.38	0	-0.38	11	Pass
NVNT	ax40	5510	Ant2	-2.03	0	-2.03	11	Pass
NVNT	ax40	5550	Ant2	-2.16	0	-2.16	11	Pass
NVNT	ax40	5670	Ant2	-2.19	0	-2.19	11	Pass
NVNT	ax40	5190	Ant1	-8.47	0	-8.47	11	Pass
NVNT	ax40	5190	Ant2	-3.8	0	-3.8	11	Pass
NVNT	ax40	5190	Sum	-2.53	0	-2.53	11	Pass
NVNT	ax40	5230	Ant1	-6.42	0	-6.42	11	Pass
NVNT	ax40	5230	Ant2	-3.18	0	-3.18	11	Pass
NVNT	ax40	5230	Sum	-1.49	0	-1.49	11	Pass
NVNT	ax40	5270	Ant1	-4.85	0	-4.85	11	Pass
NVNT	ax40	5270	Ant2	-3.32	0	-3.32	11	Pass
NVNT	ax40	5270	Sum	-1.01	0	-1.01	11	Pass
NVNT	ax40	5310	Ant1	-7.99	0	-7.99	11	Pass
NVNT	ax40	5310	Ant2	-3.57	0	-3.57	11	Pass
NVNT	ax40	5310	Sum	-2.23	0	-2.23	11	Pass
NVNT	ax40	5510	Ant1	-4.89	0	-4.89	11	Pass
NVNT	ax40	5510	Ant2	-5.41	0	-5.41	11	Pass
NVNT	ax40	5510	Sum	-2.13	0	-2.13	11	Pass
NVNT	ax40	5550	Ant1	-8.93	0	-8.93	11	Pass
NVNT	ax40	5550	Ant2	-5.11	0	-5.11	11	Pass




NVNT	ax40	5550	Sum	-3.6	0	-3.6	11	Pass
NVNT	ax40	5670	Ant1	-6.85	0	-6.85	11	Pass
NVNT	ax40	5670	Ant2	-5.45	0	-5.45	11	Pass
NVNT	ax40	5670	Sum	-3.08	0	-3.08	11	Pass
NVNT	ax80	5210	Ant1	-6.97	0	-6.97	11	Pass
NVNT	ax80	5290	Ant1	-6.87	0	-6.87	11	Pass
NVNT	ax80	5530	Ant1	-6.65	0	-6.65	11	Pass
NVNT	ax80	5610	Ant1	-6.07	0	-6.07	11	Pass
NVNT	ax80	5210	Ant2	-5.12	0	-5.12	11	Pass
NVNT	ax80	5290	Ant2	-4.77	0	-4.77	11	Pass
NVNT	ax80	5530	Ant2	-6.11	0	-6.11	11	Pass
NVNT	ax80	5610	Ant2	-6.54	0	-6.54	11	Pass
NVNT	ax80	5210	Ant1	-8.45	0	-8.45	11	Pass
NVNT	ax80	5210	Ant2	-7.86	0	-7.86	11	Pass
NVNT	ax80	5210	Sum	-5.13	0	-5.13	11	Pass
NVNT	ax80	5290	Ant1	-7.89	0	-7.89	11	Pass
NVNT	ax80	5290	Ant2	-7.52	0	-7.52	11	Pass
NVNT	ax80	5290	Sum	-4.69	0	-4.69	11	Pass
NVNT	ax80	5530	Ant1	-8.06	0	-8.06	11	Pass
NVNT	ax80	5530	Ant2	-9.44	0	-9.44	11	Pass
NVNT	ax80	5530	Sum	-5.69	0	-5.69	11	Pass
NVNT	ax80	5610	Ant1	-7.18	0	-7.18	11	Pass
NVNT	ax80	5610	Ant2	-9.11	0	-9.11	11	Pass
NVNT	ax80	5610	Sum	-5.03	0	-5.03	11	Pass
Condi tion	Mod e	Frequen cy (MHz)	Anten na	Conduct ed PSD (dBm/50 0kHz)	Duty Factor (dB)	Total PSD (dBm/500kHz)	Limit (dBm/500k Hz)	Verdi ct
NVNT	a	5745	Ant1	0.54	0	0.54	30	Pass
NVNT	a	5785	Ant1	0.3	0	0.3	30	Pass
NVNT	a	5825	Ant1	0.04	0	0.04	30	Pass
NVNT	a	5745	Ant2	0.36	0	0.36	30	Pass
NVNT	a	5785	Ant2	0.36	0	0.36	30	Pass
NVNT	a	5825	Ant2	0.87	0	0.87	30	Pass
NVNT	n20	5745	Ant1	-2.7	0	-2.7	30	Pass
NVNT	n20	5785	Ant1	-2.63	0	-2.63	30	Pass
NVNT	n20	5825	Ant1	-0.47	0	-0.47	30	Pass
NVNT	n20	5745	Ant2	-2.71	0	-2.71	30	Pass
NVNT	n20	5785	Ant2	-2.95	0	-2.95	30	Pass
NVNT	n20	5825	Ant2	-2.53	0	-2.53	30	Pass
NVNT	n20	5745	Ant1	-6.26	0	-6.26	30	Pass
NVNT	n20	5745	Ant2	-5.7	0	-5.7	30	Pass
NVNT	n20	5745	Sum	-2.96	0	-2.96	30	Pass
NVNT	n20	5785	Ant1	-5.07	0	-5.07	30	Pass
NVNT	n20	5785	Ant2	-5.6	0	-5.6	30	Pass
NVNT	n20	5785	Sum	-2.32	0	-2.32	30	Pass
NVNT	n20	5825	Ant1	-3.83	0	-3.83	30	Pass
NVNT	n20	5825	Ant2	-5.67	0	-5.67	30	Pass
NVNT	n20	5825	Sum	-1.64	0	-1.64	30	Pass
NVNT	n40	5755	Ant1	-2.92	0	-2.92	30	Pass
NVNT	n40	5795	Ant1	-3.08	0	-3.08	30	Pass
NVNT	n40	5755	Ant2	-5.18	0	-5.18	30	Pass
NVNT	n40	5795	Ant2	-5.39	0	-5.39	30	Pass
NVNT	n40	5755	Ant1	-9.82	0	-9.82	30	Pass
NVNT	n40	5755	Ant2	-8.55	0	-8.55	30	Pass
NVNT	n40	5755	Sum	-6.13	0	-6.13	30	Pass



NVNT	n40	5795	Ant1	-5.94	0	-5.94	30	Pass
NVNT	n40	5795	Ant2	-8.41	0	-8.41	30	Pass
NVNT	n40	5795	Sum	-3.99	0	-3.99	30	Pass
NVNT	ac20	5745	Ant1	-2.63	0	-2.63	30	Pass
NVNT	ac20	5785	Ant1	-2.64	0	-2.64	30	Pass
NVNT	ac20	5825	Ant1	-3.08	0	-3.08	30	Pass
NVNT	ac20	5745	Ant2	-3.3	0	-3.3	30	Pass
NVNT	ac20	5785	Ant2	-3.04	0	-3.04	30	Pass
NVNT	ac20	5825	Ant2	-2.73	0	-2.73	30	Pass
NVNT	ac20	5745	Ant1	-3.26	0	-3.26	30	Pass
NVNT	ac20	5745	Ant2	-6.36	0	-6.36	30	Pass
NVNT	ac20	5745	Sum	-1.53	0	-1.53	30	Pass
NVNT	ac20	5785	Ant1	-7.44	0	-7.44	30	Pass
NVNT	ac20	5785	Ant2	-6.28	0	-6.28	30	Pass
NVNT	ac20	5785	Sum	-3.81	0	-3.81	30	Pass
NVNT	ac20	5825	Ant1	-4.23	0	-4.23	30	Pass
NVNT	ac20	5825	Ant2	-6.26	0	-6.26	30	Pass
NVNT	ac20	5825	Sum	-2.12	0	-2.12	30	Pass
NVNT	ac40	5755	Ant1	-4.8	0	-4.8	30	Pass
NVNT	ac40	5795	Ant1	-5.57	0	-5.57	30	Pass
NVNT	ac40	5755	Ant2	-5.27	0	-5.27	30	Pass
NVNT	ac40	5795	Ant2	-5.3	0	-5.3	30	Pass
NVNT	ac40	5755	Ant1	-6.08	0	-6.08	30	Pass
NVNT	ac40	5755	Ant2	-8.64	0	-8.64	30	Pass
NVNT	ac40	5755	Sum	-4.16	0	-4.16	30	Pass
NVNT	ac40	5795	Ant1	-10.35	0	-10.35	30	Pass
NVNT	ac40	5795	Ant2	-8.75	0	-8.75	30	Pass
NVNT	ac40	5795	Sum	-6.47	0	-6.47	30	Pass
NVNT	ac80	5775	Ant1	-8.95	0	-8.95	30	Pass
NVNT	ac80	5775	Ant2	-9.46	0	-9.46	30	Pass
NVNT	ac80	5775	Ant1	-10.53	0	-10.53	30	Pass
NVNT	ac80	5775	Ant2	-12.67	0	-12.67	30	Pass
NVNT	ac80	5775	Sum	-8.46	0	-8.46	30	Pass
NVNT	ax20	5745	Ant1	-3.06	0	-3.06	30	Pass
NVNT	ax20	5785	Ant1	-3.07	0	-3.07	30	Pass
NVNT	ax20	5825	Ant1	-3.27	0	-3.27	30	Pass
NVNT	ax20	5745	Ant2	-3.53	0	-3.53	30	Pass
NVNT	ax20	5785	Ant2	-3.32	0	-3.32	30	Pass
NVNT	ax20	5825	Ant2	-3.17	0	-3.17	30	Pass
NVNT	ax20	5745	Ant1	-3.19	0	-3.19	30	Pass
NVNT	ax20	5745	Ant2	-6.94	0	-6.94	30	Pass
NVNT	ax20	5745	Sum	-1.66	0	-1.66	30	Pass
NVNT	ax20	5785	Ant1	-7.87	0	-7.87	30	Pass
NVNT	ax20	5785	Ant2	-6.53	0	-6.53	30	Pass
NVNT	ax20	5785	Sum	-4.14	0	-4.14	30	Pass
NVNT	ax20	5825	Ant1	-5.33	0	-5.33	30	Pass
NVNT	ax20	5825	Ant2	-6.1	0	-6.1	30	Pass
NVNT	ax20	5825	Sum	-2.69	0	-2.69	30	Pass
NVNT	ax40	5755	Ant1	-4.91	0	-4.91	30	Pass
NVNT	ax40	5795	Ant1	-5.14	0	-5.14	30	Pass
NVNT	ax40	5755	Ant2	-5.15	0	-5.15	30	Pass
NVNT	ax40	5795	Ant2	-4.98	0	-4.98	30	Pass
NVNT	ax40	5755	Ant1	-5.95	0	-5.95	30	Pass
NVNT	ax40	5755	Ant2	-8.72	0	-8.72	30	Pass
NVNT	ax40	5755	Sum	-4.11	0	-4.11	30	Pass
NVNT	ax40	5795	Ant1	-9.94	0	-9.94	30	Pass



NVNT	ax40	5795	Ant2	-8.58	0	-8.58	30	Pass
NVNT	ax40	5795	Sum	-6.2	0	-6.2	30	Pass
NVNT	ax80	5775	Ant1	-9.63	0	-9.63	30	Pass
NVNT	ax80	5775	Ant2	-9.65	0	-9.65	30	Pass
NVNT	ax80	5775	Ant1	-10.5	0	-10.5	30	Pass
NVNT	ax80	5775	Ant2	-12.55	0	-12.55	30	Pass
NVNT	ax80	5775	Sum	-8.39	0	-8.39	30	Pass

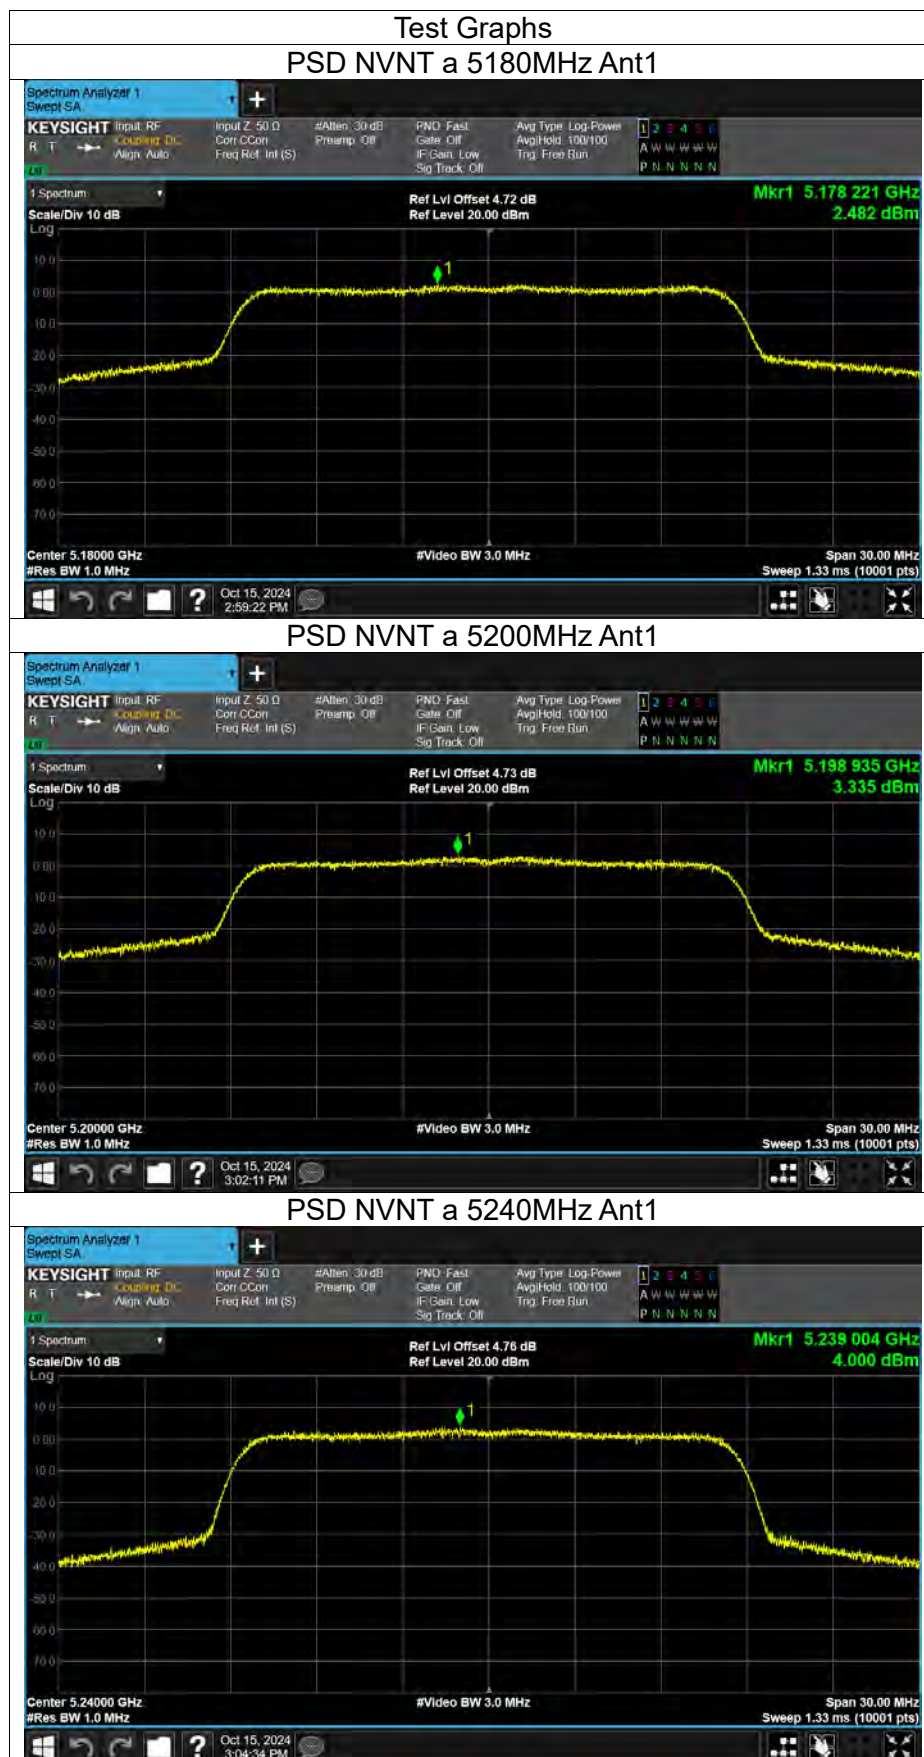



PSD NVNT a 5260MHz Ant1



PSD NVNT a 5300MHz Ant1



PSD NVNT a 5320MHz Ant1





PSD NVNT a 5500MHz Ant1



PSD NVNT a 5580MHz Ant1



PSD NVNT a 5700MHz Ant1





PSD NVNT a 5180MHz Ant2



PSD NVNT a 5200MHz Ant2



PSD NVNT a 5240MHz Ant2





PSD NVNT a 5260MHz Ant2



PSD NVNT a 5300MHz Ant2



PSD NVNT a 5320MHz Ant2





PSD NVNT a 5500MHz Ant2



PSD NVNT a 5580MHz Ant2



PSD NVNT a 5700MHz Ant2



