


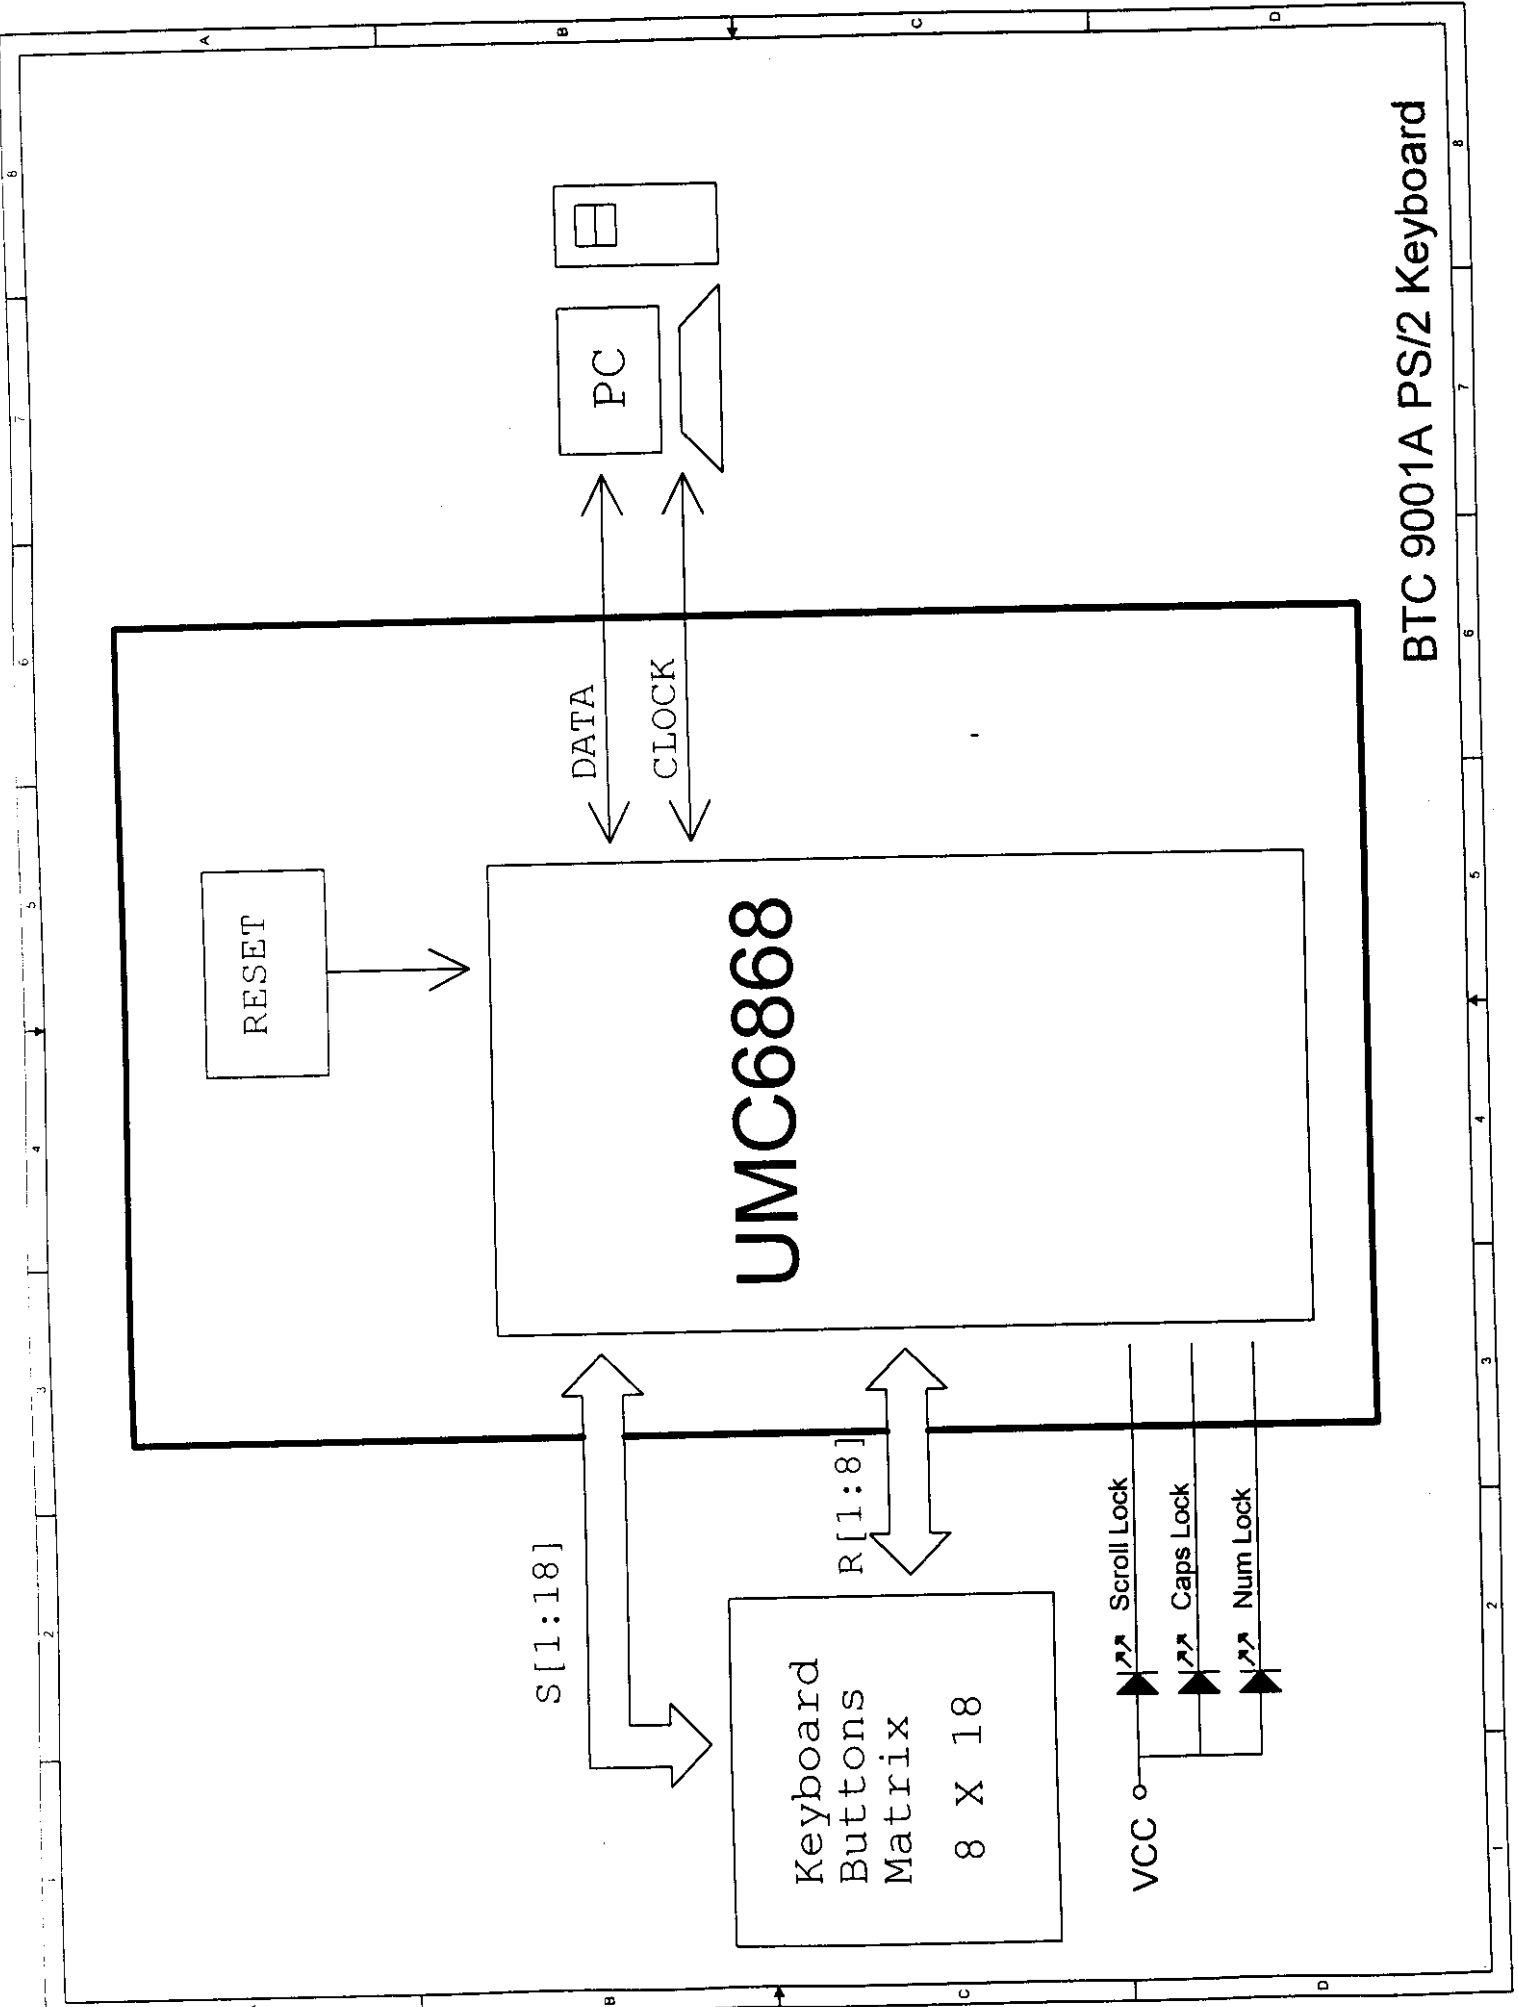

BTC 9001A PS/2 Keyboard

90000/90002 /9001A

12/17/98

BTC	S0	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	S13	S14	S15	S16	S17	S18
R0	121	F10							45 102 KEY			77 Left	67 Japan	65 Japan	130				
R1	35	G	37	33	32	47	76	46	81 End	86 Page DN				60 Alt Left		92 4 ←	97 5		107 Brazil
R2	8	& 7	123	124	13	15	115	116	80 Home	85 Page UP	56 Japan		78 Right	14 Japan	66 Japan	91 7 Home	96 8 ↑	82 F2	113
R3	9	* 8	6	5	4	3	125	114	1 ~ ,	126 Pause					58 Ctrl Left	89 →	84 ↓	79 ←	110 Esc
R4	25	O	26	122	27	31	75	28	42 (\ (UK)	43 Enter	57 Shift Right				143 Power	105 -	106 +	83 ↑	112 F1
R5	10	(9	120	38	39	40	41	52	51 N	29 \				62 Alt Right	144 Sleep	100 *	95 /	90 Num Lock	101 9 Pg Up
R6	11	) 0	118	117	50	49	53	54	55 ? /	61 Space Bar				63 Korea Right	64 Ctrl Right	103 3 Pg Dn	98 2 ↓	93 1 End	102 6 →
R7	23	U	21	20	19	18	17	48	16 Tab	30 Caps Lock	44 Shift Left			59 Korea Left	145 Wake up,	99 0 Ins	104 Del	108 Enter (Pad)	2 !

● from S10 – S14 only NO.14,56,66 have no phantom key others have phantom state

● In Japanese keys(NO.14,56,65,66,67) just NO.14,56 must test 3 keys combination