



TC3600 VHF Schematic Diagram (APRO Unit)


	R898
136-175MHz	22K
136-162MHz	12K
145-175MHz	12K

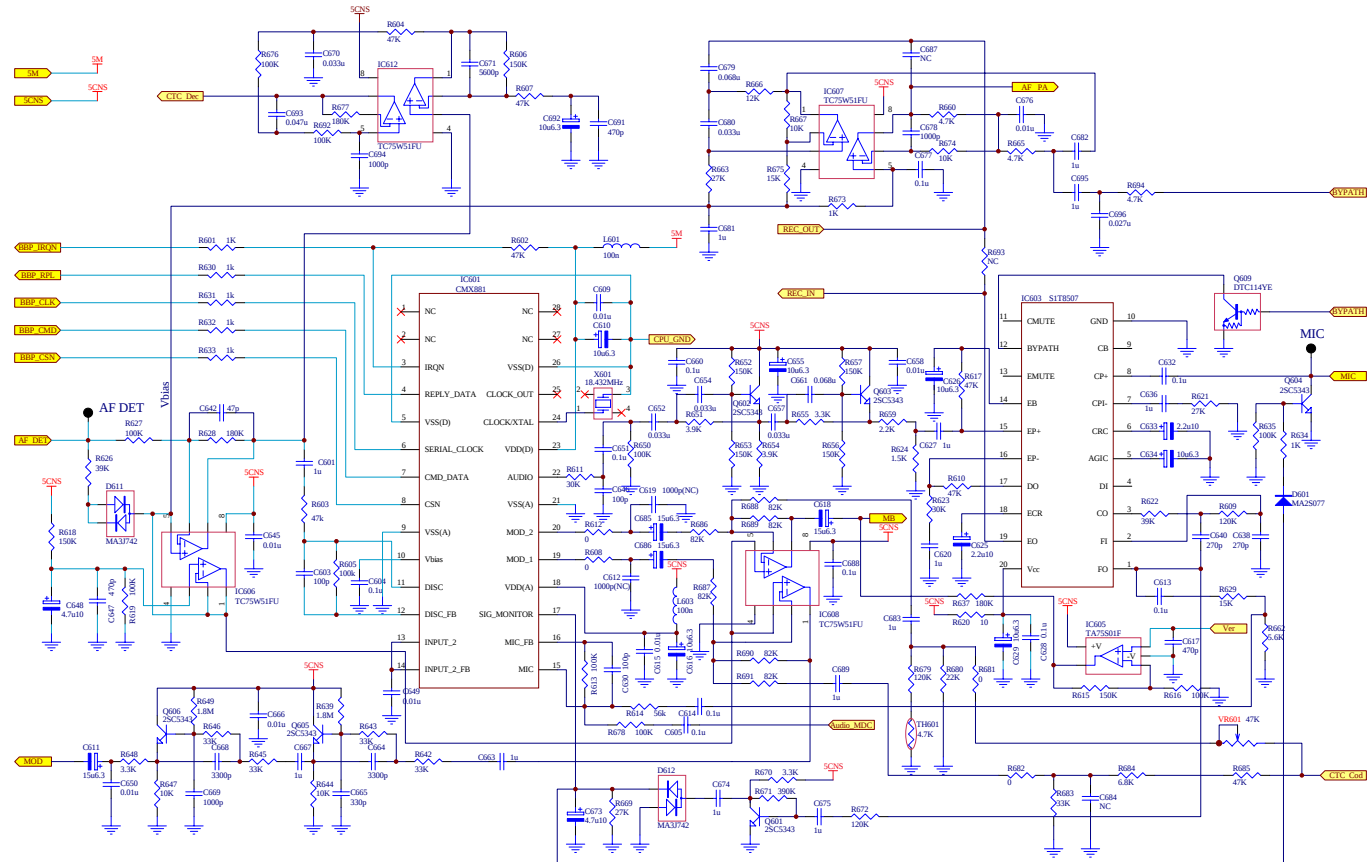


TC3600 VHF Schematic Diagram (RECORDER)

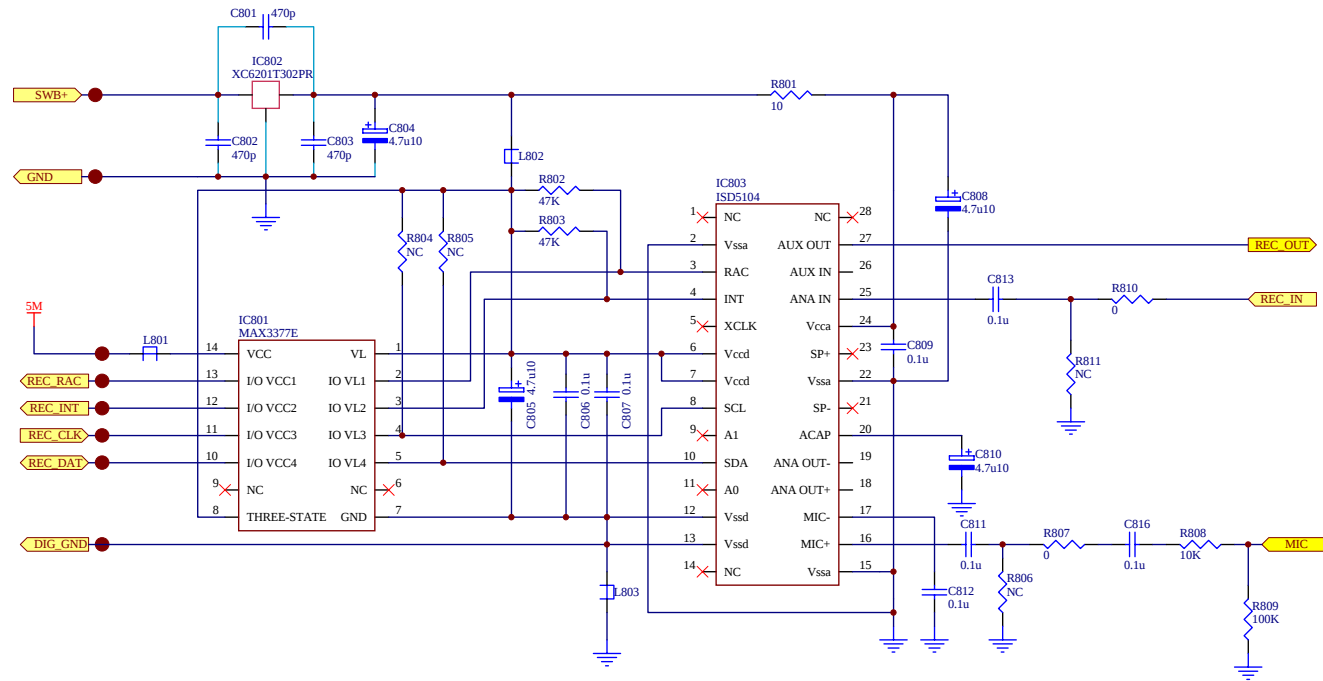


TC3600 VHF Schematic Diagram (PwrS)

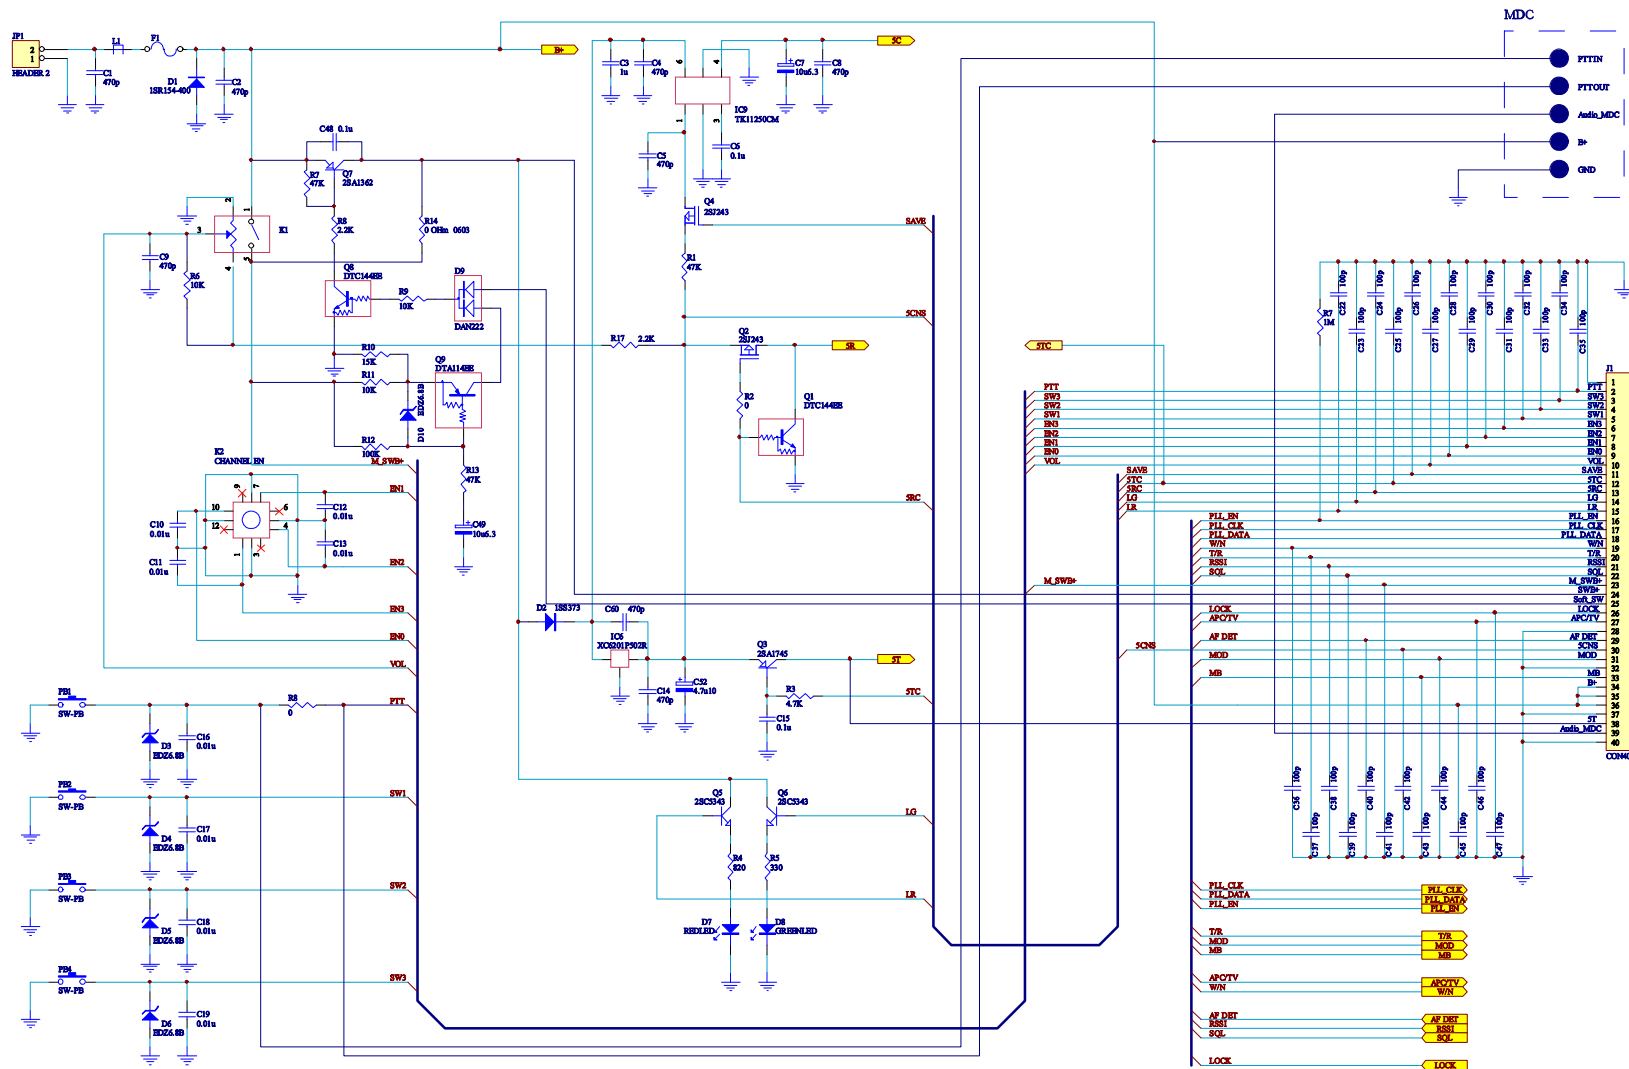


TC3600 VHF Schematic Diagram (PLL)

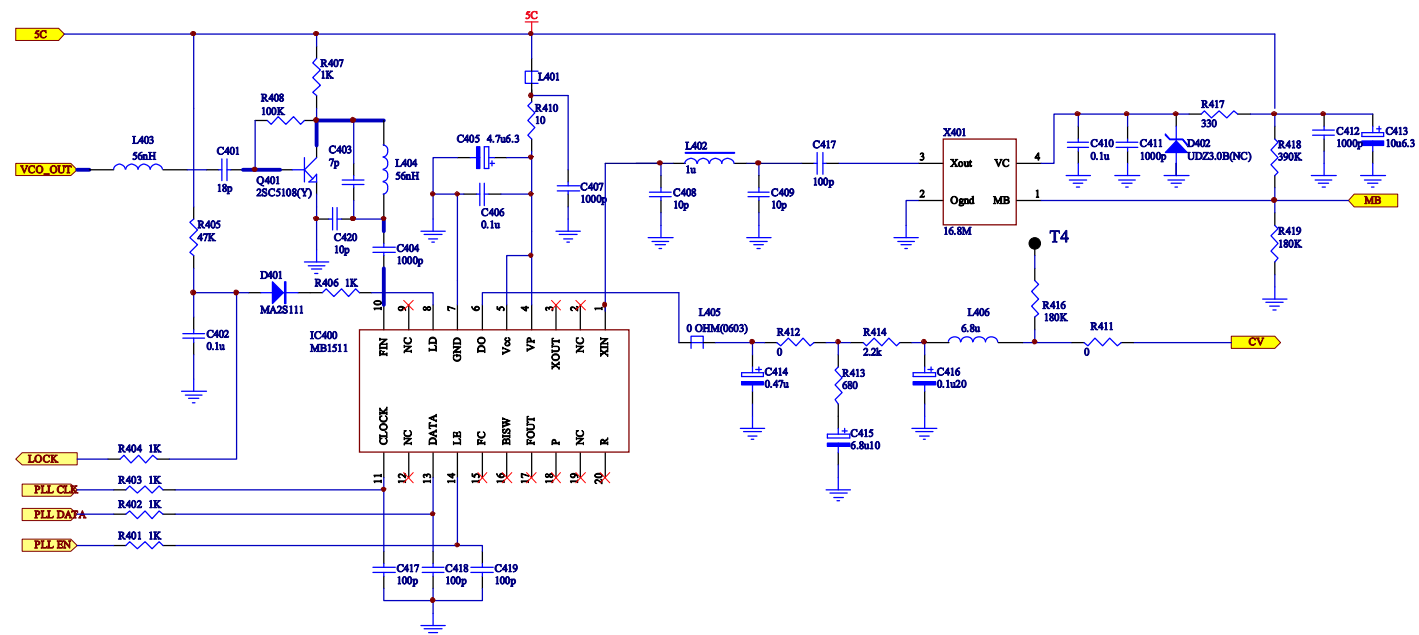


TC3600 VHF Schematic Diagram (EXT)

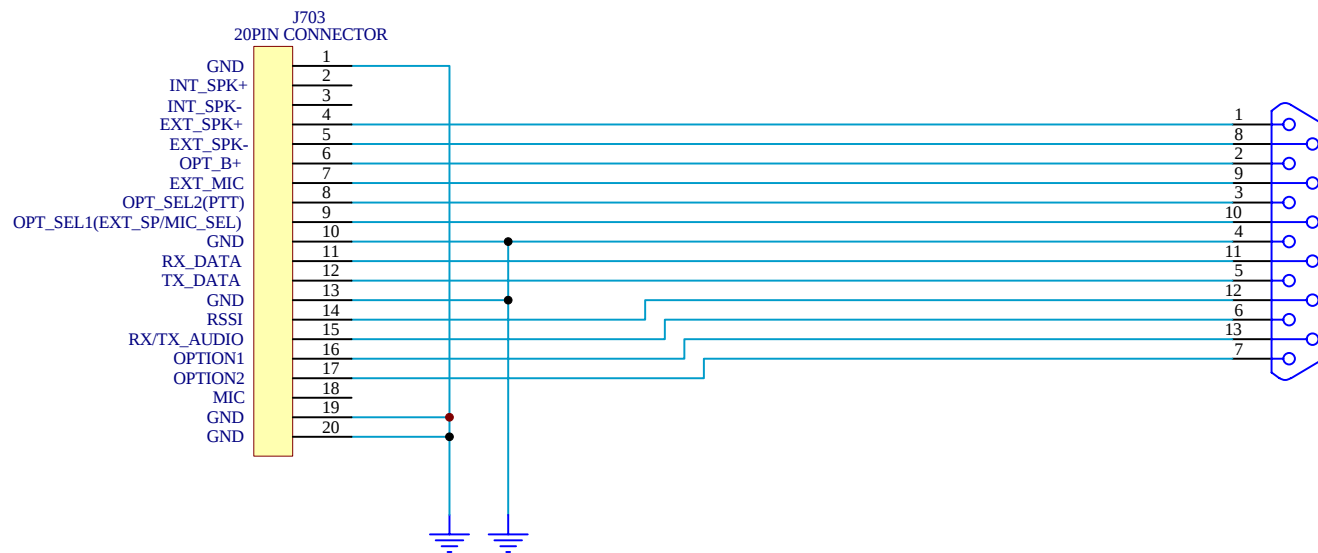


TC3600 VHF Schematic Diagram (DISP)

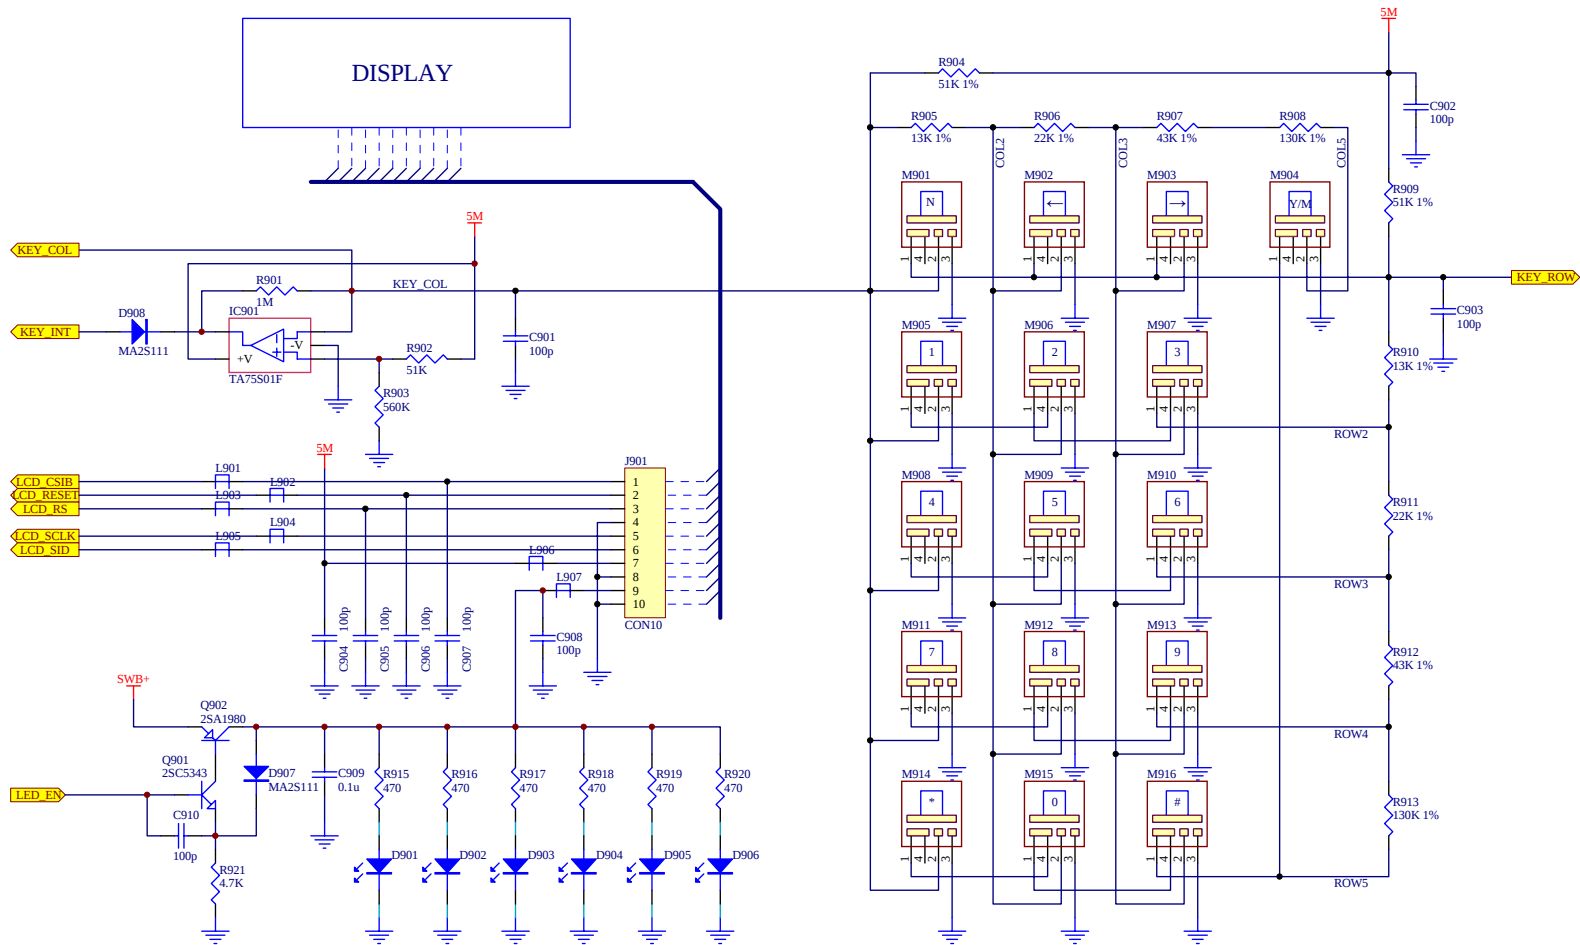


TC3600 VHF Schematic Diagram (CPU)

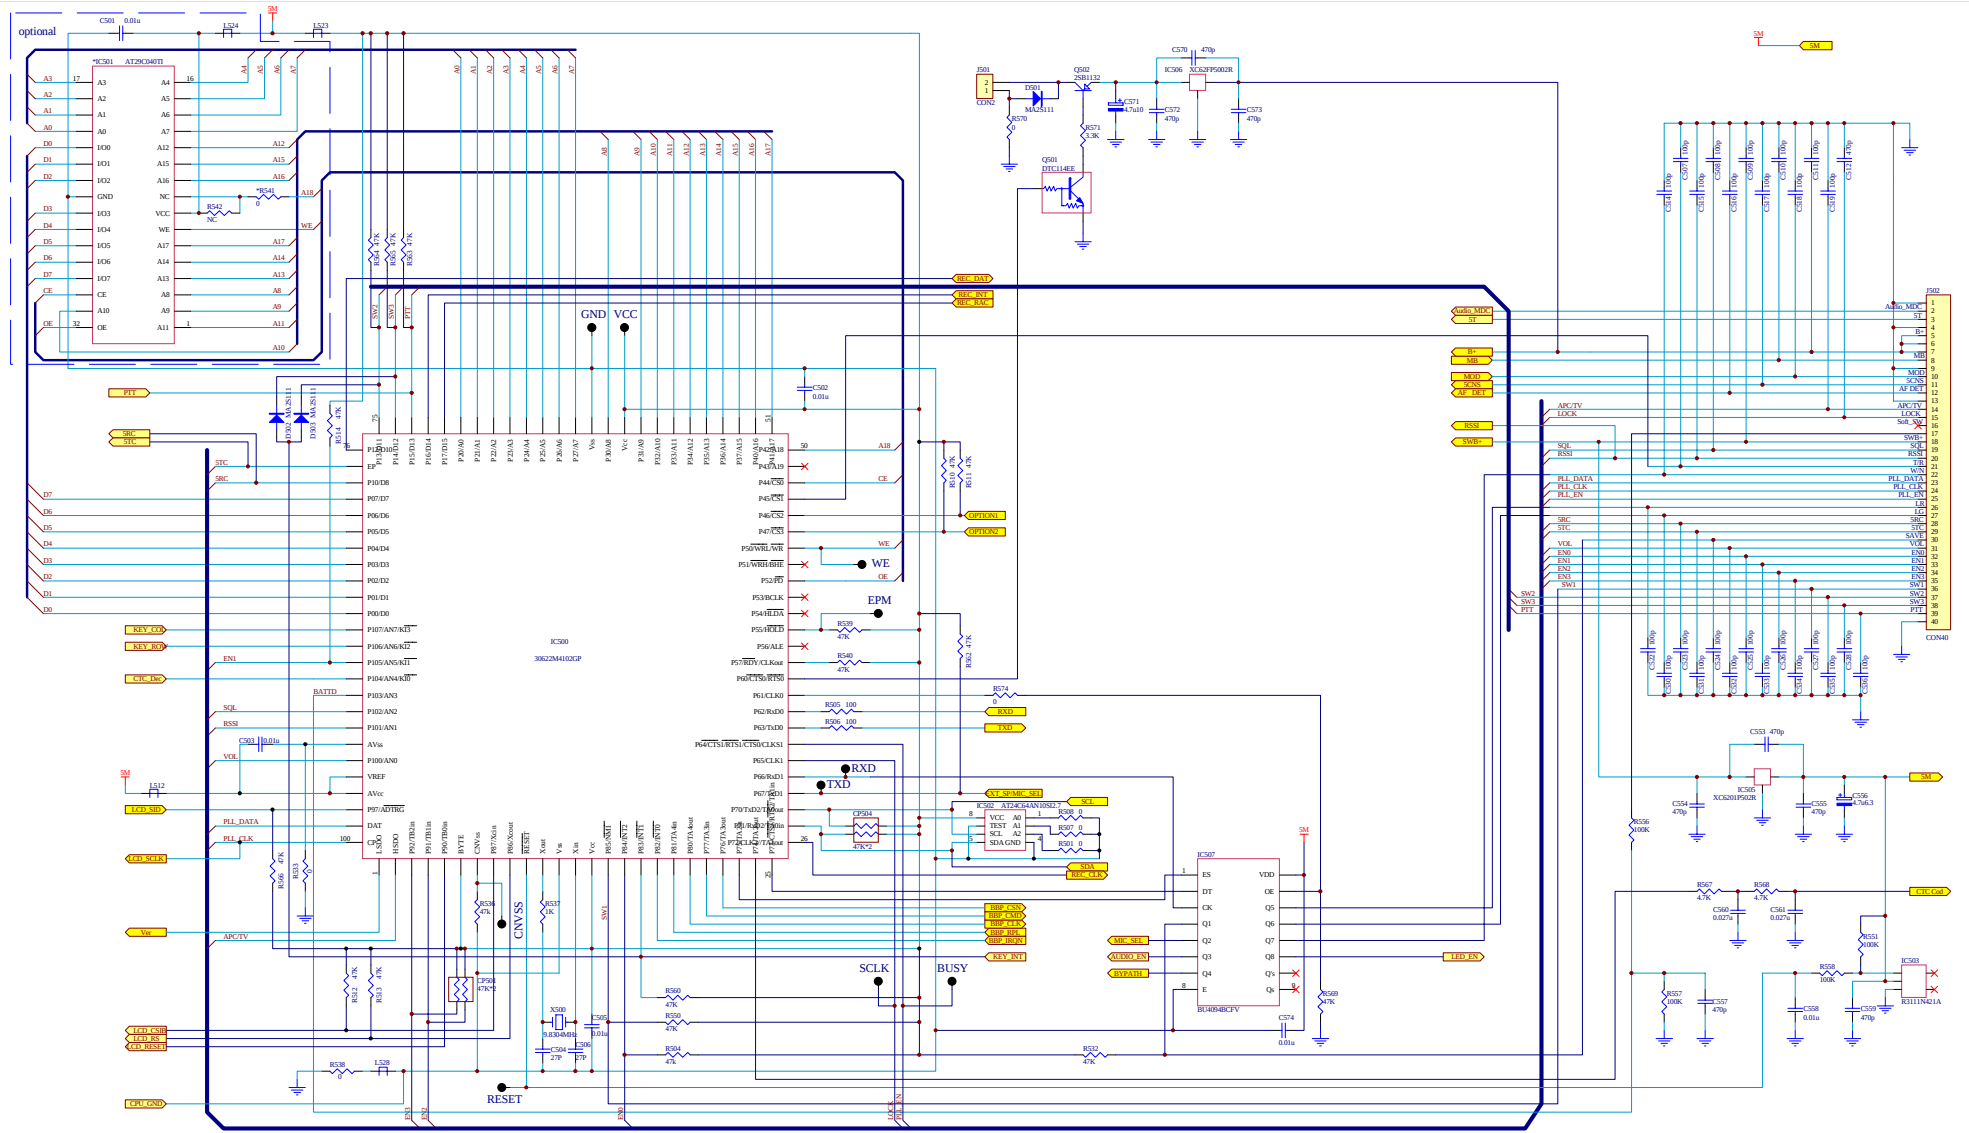

TC3600 VHF Schematic Diagram (APWR)

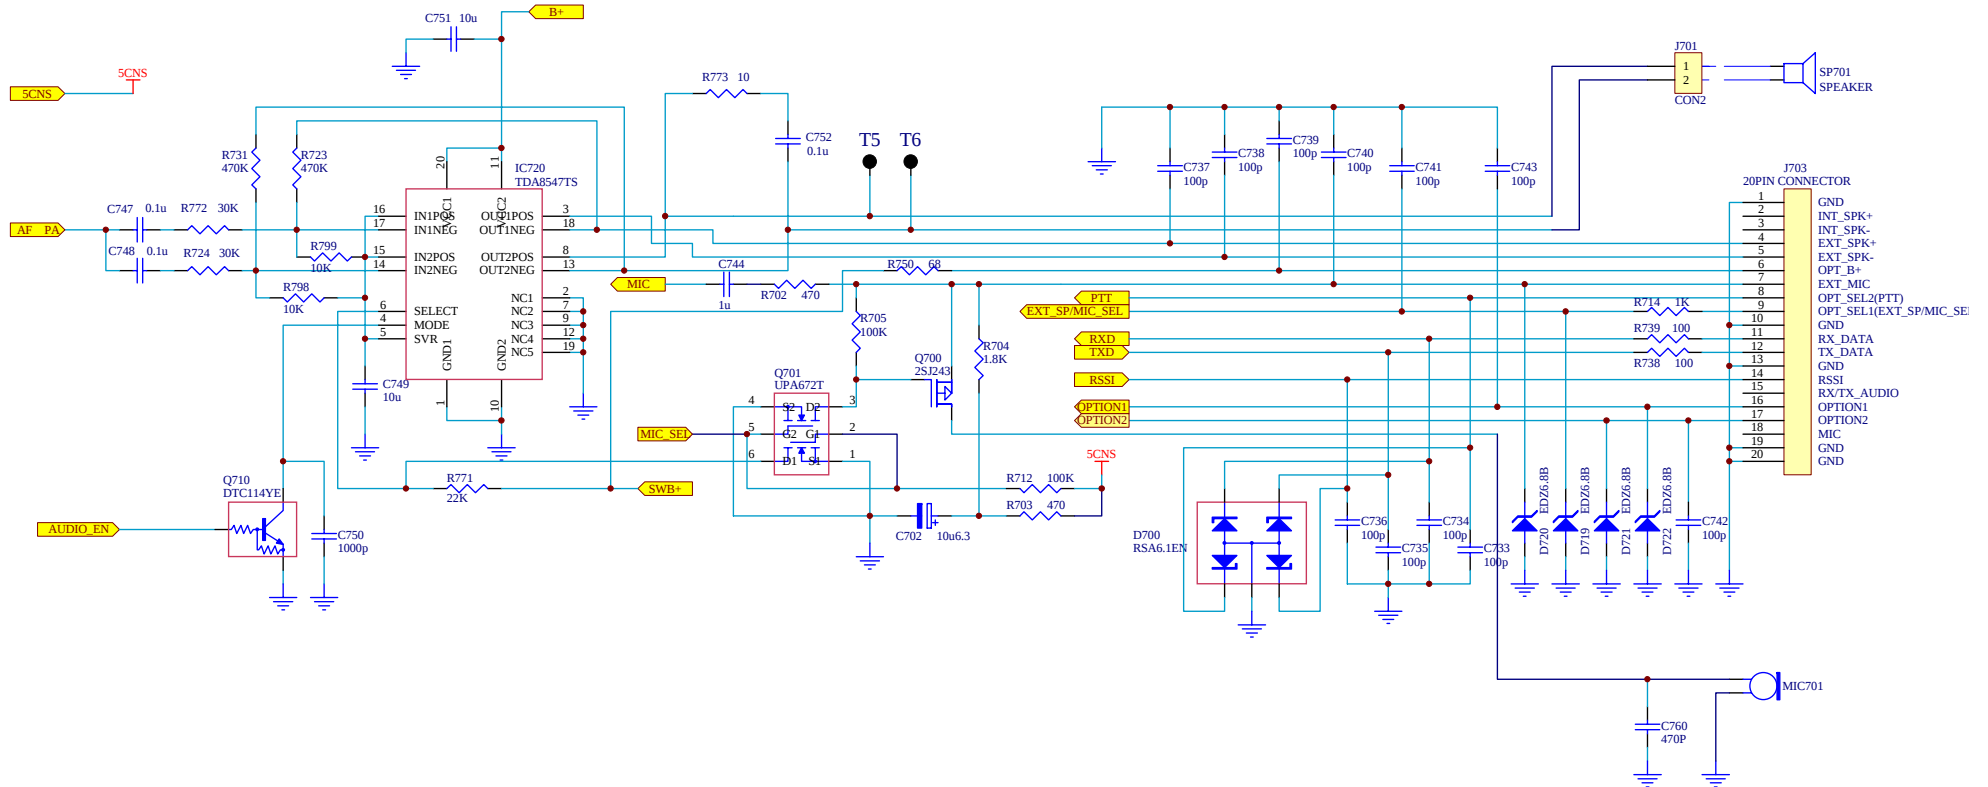


TC3600 VHF Schematic Diagram (APRO)

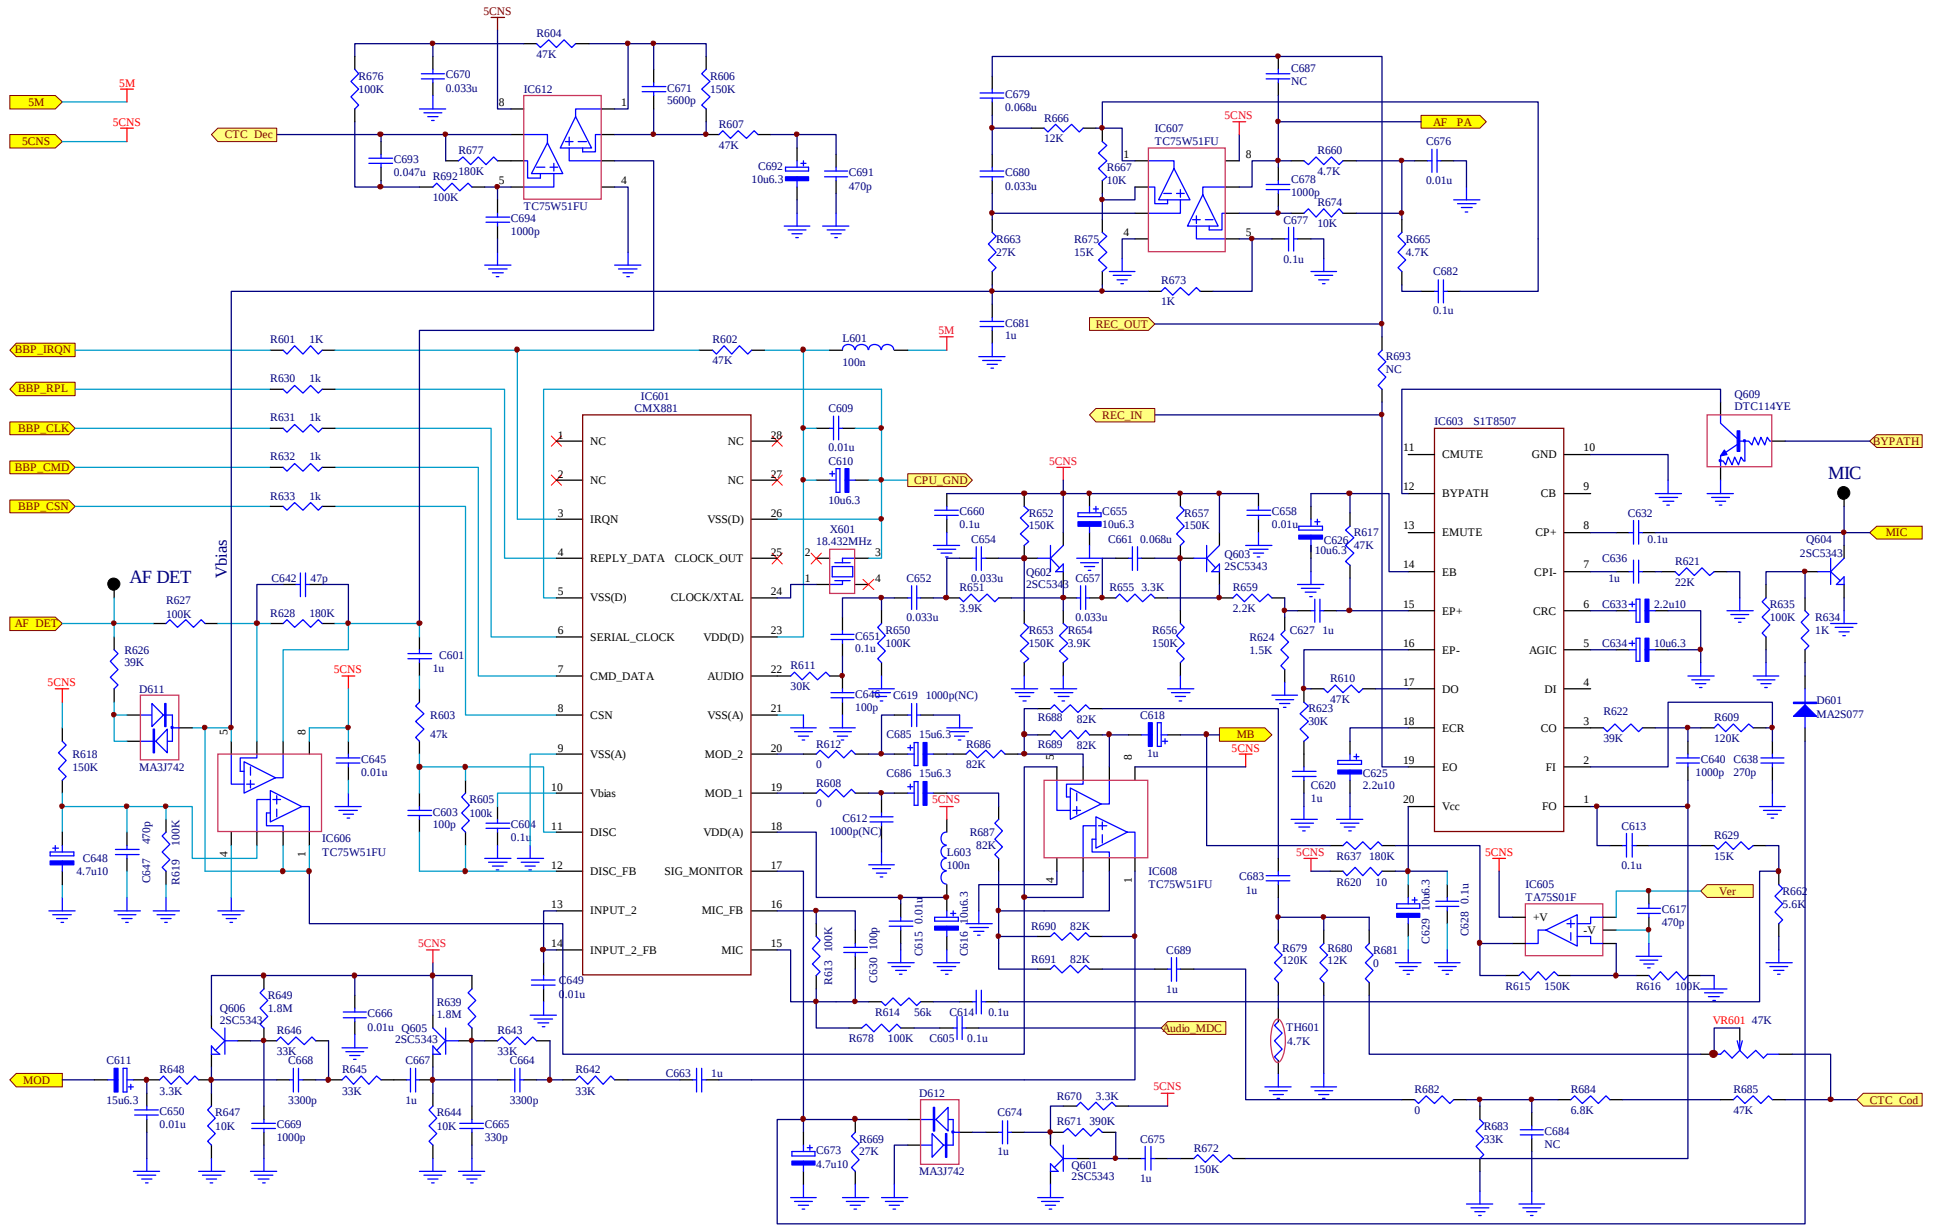

TC3600 VHF Schematic Diagram (VCO Unit)

	*L352	*L356	*C353	*C354
130-162MHz	39N	27N	22p	5p
145-175MHz	33N	22N	22p	5p
136-174MHz	39N	27N	15p	6p

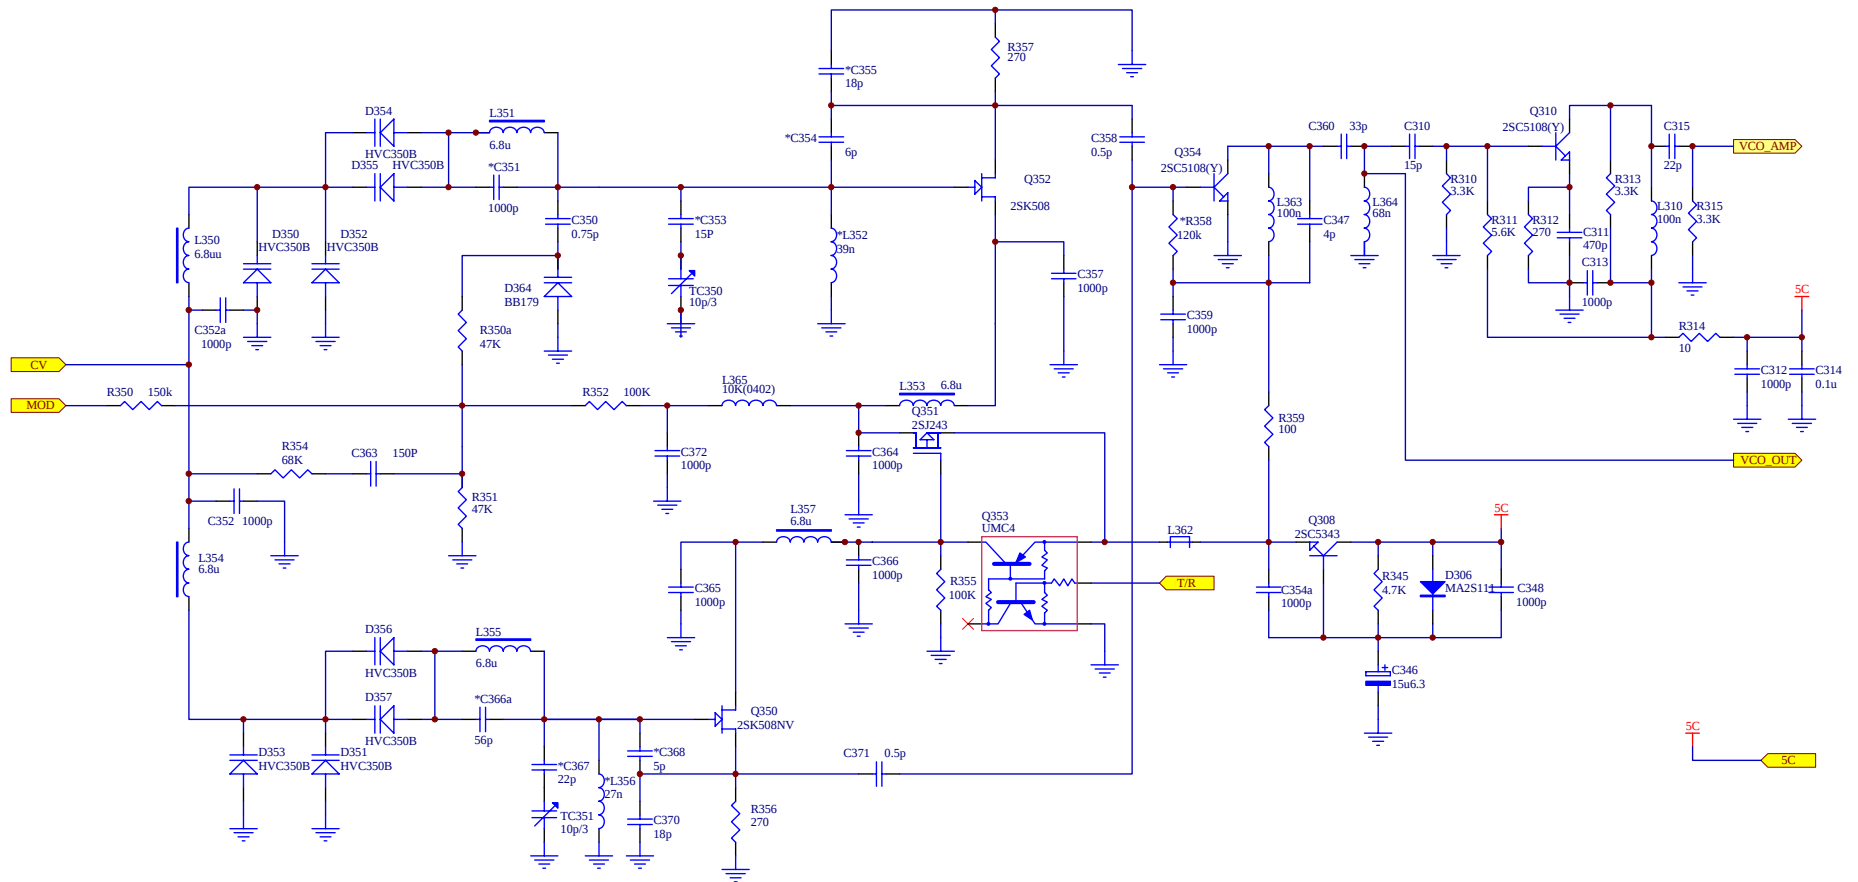

TC3600 VHF Schematic Diagram (TR Unit)

