


#### 4.1.1 Test Result

Mode	Frequency (MHz)	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
a	5180	5179.96	-40000	-7.72	25	Pass
a	5240	5239.94	-60000	-11.45	25	Pass
a	5260	5259.96	-40000	-7.6	25	Pass
a	5320	5319.94	-60000	-11.28	25	Pass
a	5500	5499.94	-60000	-10.91	25	Pass
a	5700	5699.96	-40000	-7.02	25	Pass
a	5745	5744.96	-40000	-6.96	25	Pass
a	5825	5824.96	-40000	-6.87	25	Pass
n20	5180	5179.94	-60000	-11.58	25	Pass
n20	5240	5239.98	-20000	-3.82	25	Pass
n20	5260	5259.98	-20000	-3.8	25	Pass
n20	5320	5319.94	-60000	-11.28	25	Pass
n20	5500	5499.96	-40000	-7.27	25	Pass
n20	5700	5699.96	-40000	-7.02	25	Pass
n20	5745	5744.94	-60000	-10.44	25	Pass
n20	5825	5824.98	-20000	-3.43	25	Pass
n40	5190	5190	0	0	25	Pass
n40	5230	5229.96	-40000	-7.65	25	Pass
n40	5270	5269.92	-80000	-15.18	25	Pass
n40	5310	5309.96	-40000	-7.53	25	Pass
n40	5510	5509.92	-80000	-14.52	25	Pass
n40	5670	5669.96	-40000	-7.05	25	Pass
n40	5755	5754.96	-40000	-6.95	25	Pass
n40	5795	5794.96	-40000	-6.9	25	Pass
ac20	5180	5180	0	0	25	Pass
ac20	5240	5239.96	-40000	-7.63	25	Pass
ac20	5260	5259.98	-20000	-3.8	25	Pass
ac20	5320	5319.94	-60000	-11.28	25	Pass
ac20	5500	5499.94	-60000	-10.91	25	Pass
ac20	5700	5699.94	-60000	-10.53	25	Pass
ac20	5745	5744.96	-40000	-6.96	25	Pass
ac20	5825	5824.96	-40000	-6.87	25	Pass
ac40	5190	5189.96	-40000	-7.71	25	Pass
ac40	5230	5230	0	0	25	Pass
ac40	5270	5270	0	0	25	Pass
ac40	5310	5309.96	-40000	-7.53	25	Pass
ac40	5510	5509.96	-40000	-7.26	25	Pass
ac40	5670	5669.92	-80000	-14.11	25	Pass
ac40	5755	5754.92	-80000	-13.9	25	Pass
ac40	5795	5794.96	-40000	-6.9	25	Pass
ac80	5210	5209.92	-80000	-15.36	25	Pass
ac80	5290	5290	0	0	25	Pass
ac80	5530	5529.92	-80000	-14.47	25	Pass
ac80	5610	5609.92	-80000	-14.26	25	Pass
ac80	5775	5774.92	-80000	-13.85	25	Pass
ax160	5250	5250.16	0	0	25	Pass
ax160	5570	5570	160000	0	25	Pass
ax20	5180	5179.96	-40000	-7.72	25	Pass
ax20	5240	5239.98	-20000	-3.82	25	Pass
ax20	5260	5260	0	0	25	Pass
ax20	5320	5319.98	-20000	-3.76	25	Pass
ax20	5500	5500	0	0	25	Pass
ax20	5700	5699.96	-40000	-7.02	25	Pass
ax20	5745	5744.96	-40000	-6.96	25	Pass


ax20	5825	5824.96	-40000	-6.87	25	Pass
ax40	5190	5189.96	-40000	-7.71	25	Pass
ax40	5230	5229.96	-40000	-7.65	25	Pass
ax40	5270	5269.96	-40000	-7.59	25	Pass
ax40	5310	5310	0	0	25	Pass
ax40	5510	5509.96	-40000	-7.26	25	Pass
ax40	5670	5670	0	0	25	Pass
ax40	5755	5754.96	-40000	-6.95	25	Pass
ax40	5795	5794.96	-40000	-6.9	25	Pass
ax80	5210	5210.08	80000	15.36	25	Pass
ax80	5290	5290	0	0	25	Pass
ax80	5530	5529.92	-80000	-14.47	25	Pass
ax80	5610	5610.08	80000	14.26	25	Pass
ax80	5775	5775	0	0	25	Pass

#### 4.1.2 Test Graph


Test Graphs
Freq. Stability NVNT a 5180MHz Ant1

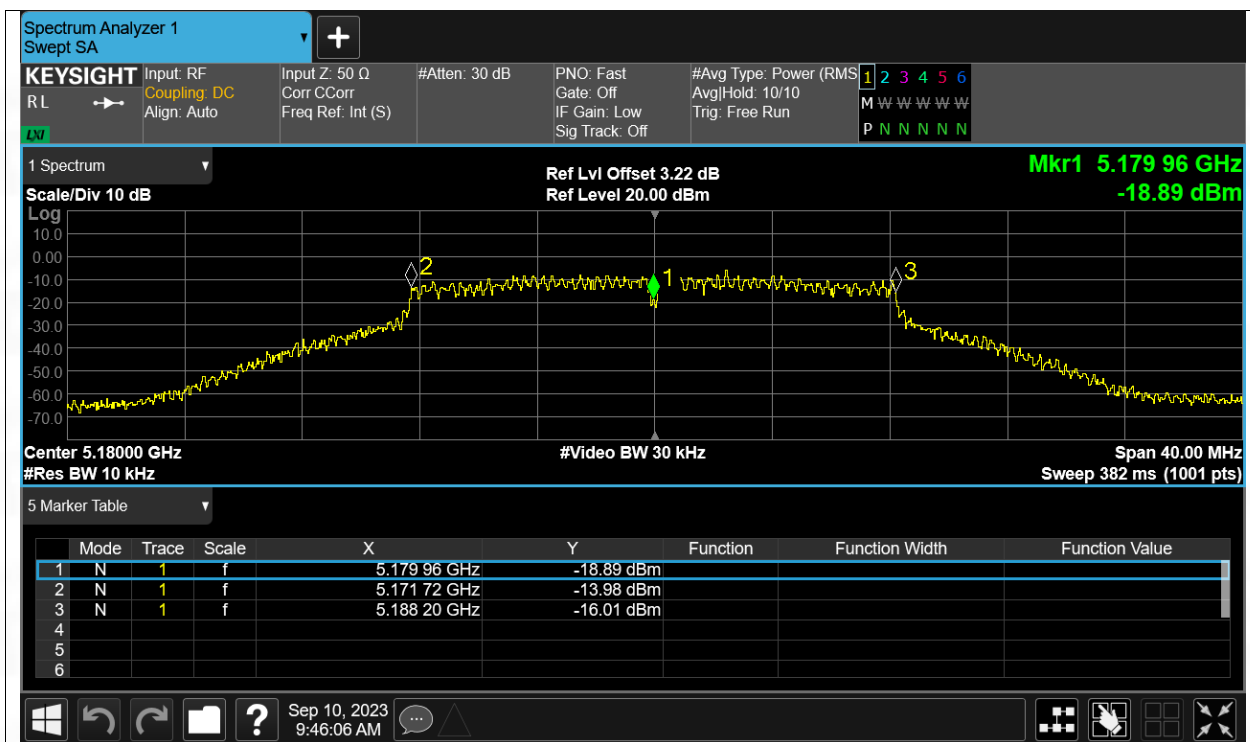


### Freq. Stability NVNT a 5240MHz Ant1

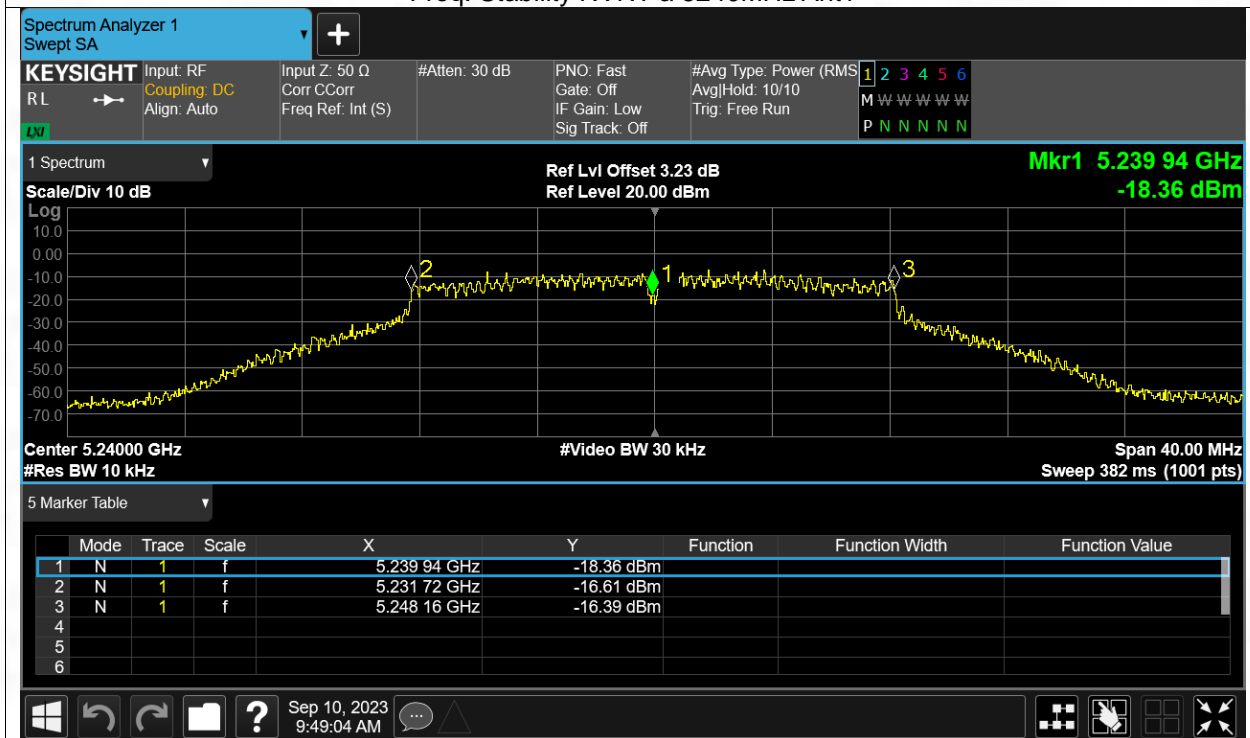


# Freq. Stability NVNT a 5260MHz Ant1

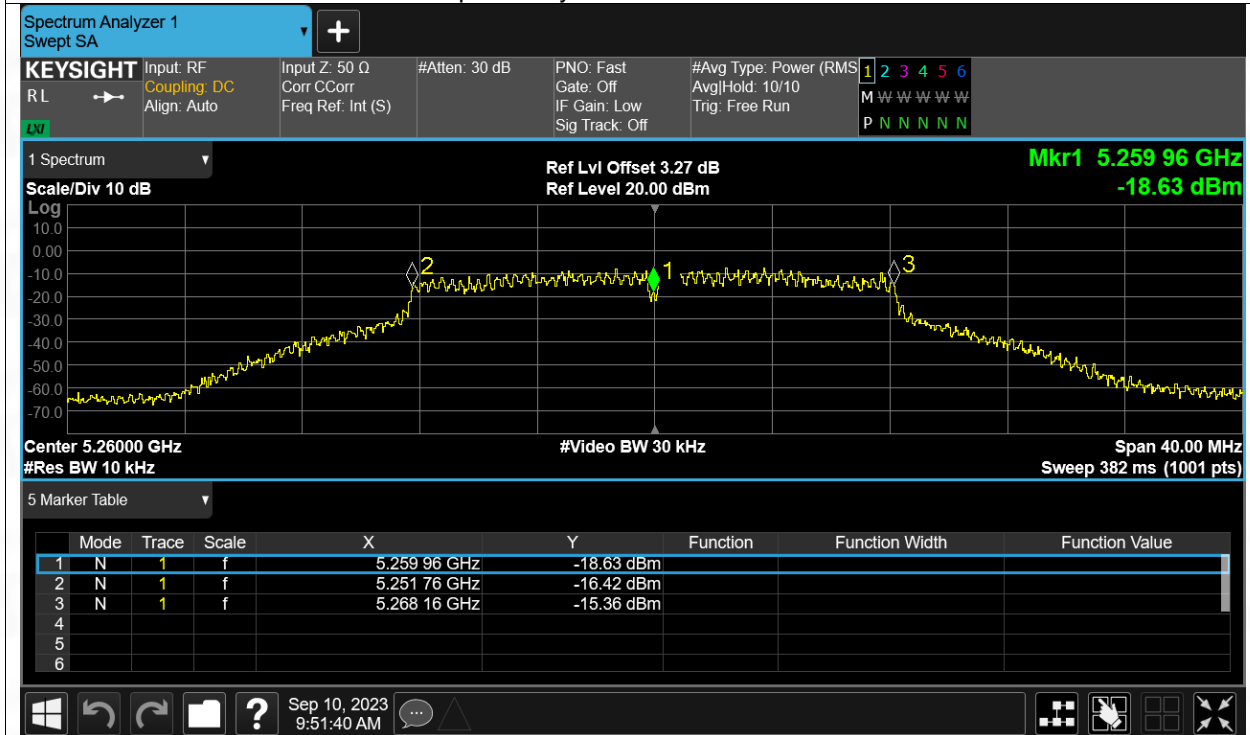

# Freq. Stability NVNT a 5320MHz Ant1

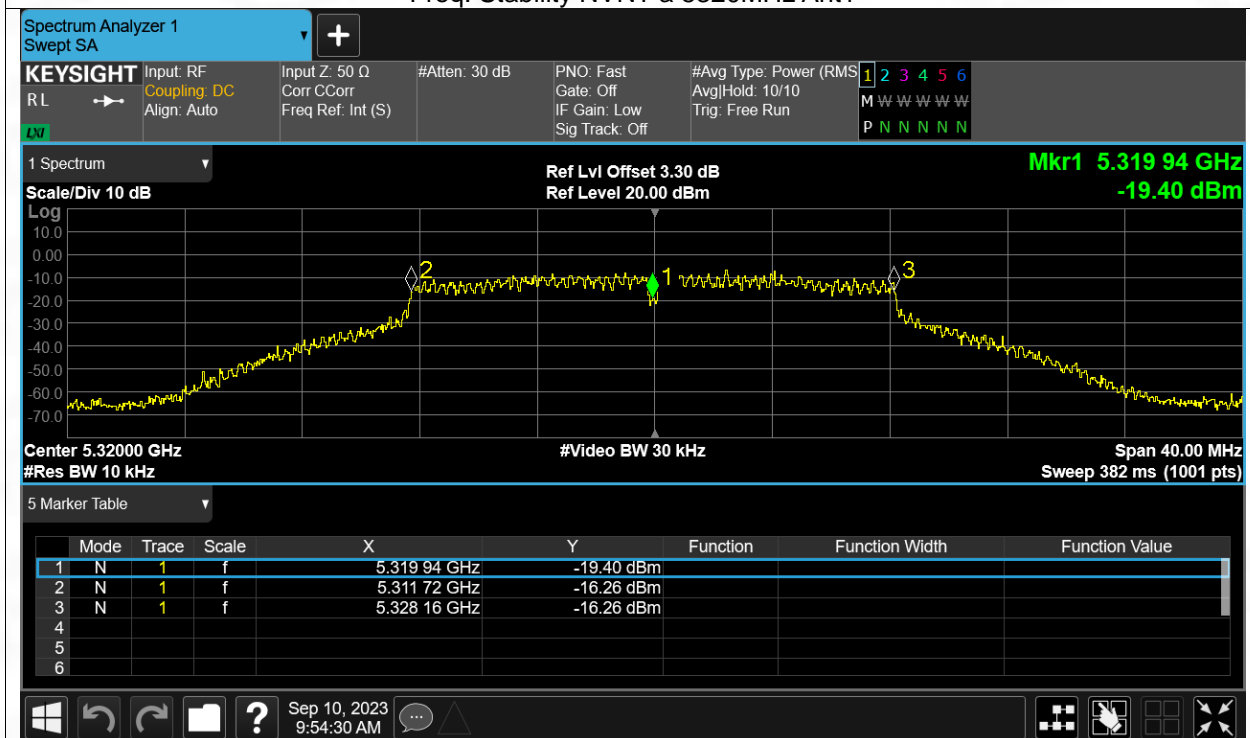


# Freq. Stability NVNT a 5500MHz Ant1

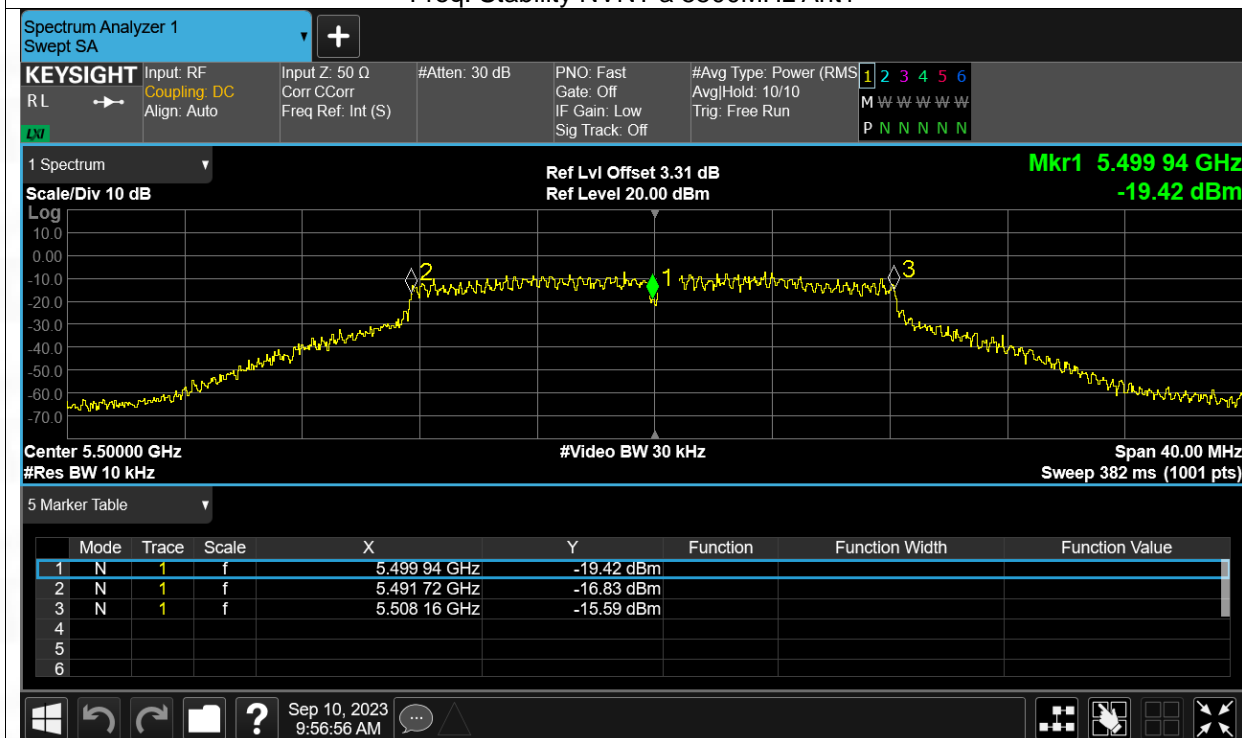


# Freq. Stability NVNT a 5700MHz Ant1




# Freq. Stability NVNT a 5745MHz Ant1

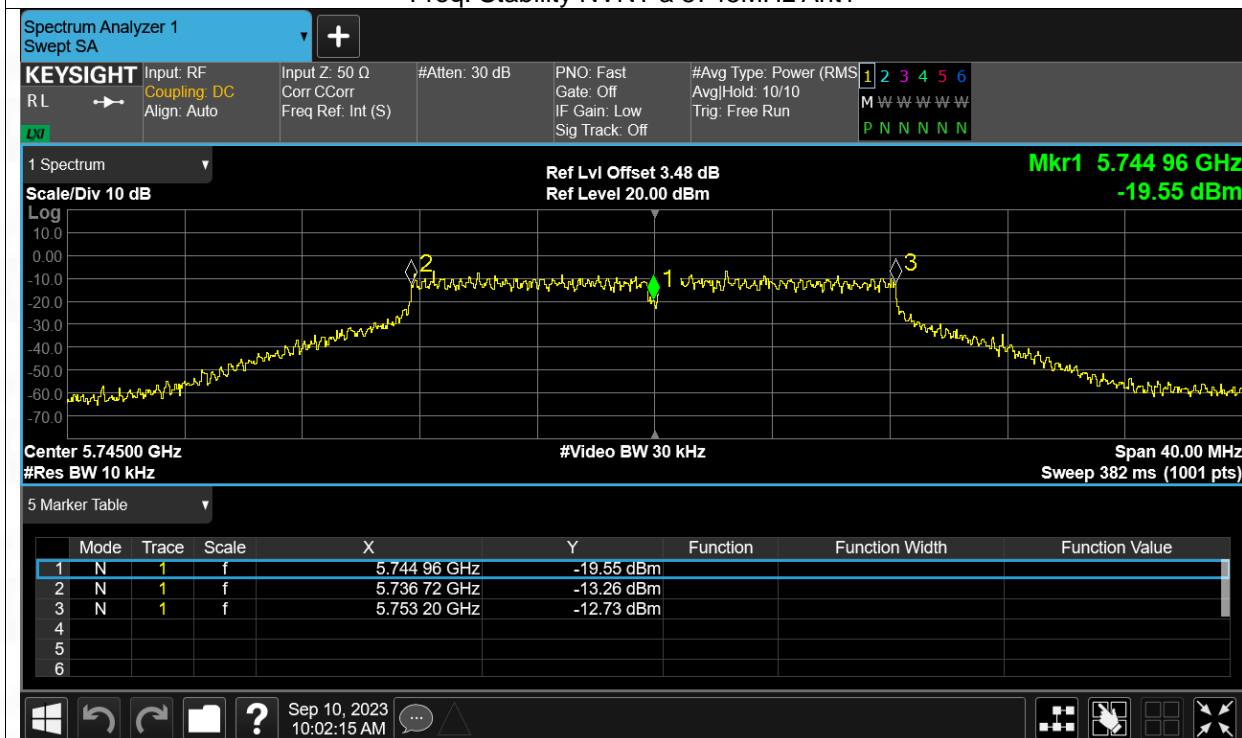


# Freq. Stability NVNT a 5825MHz Ant1

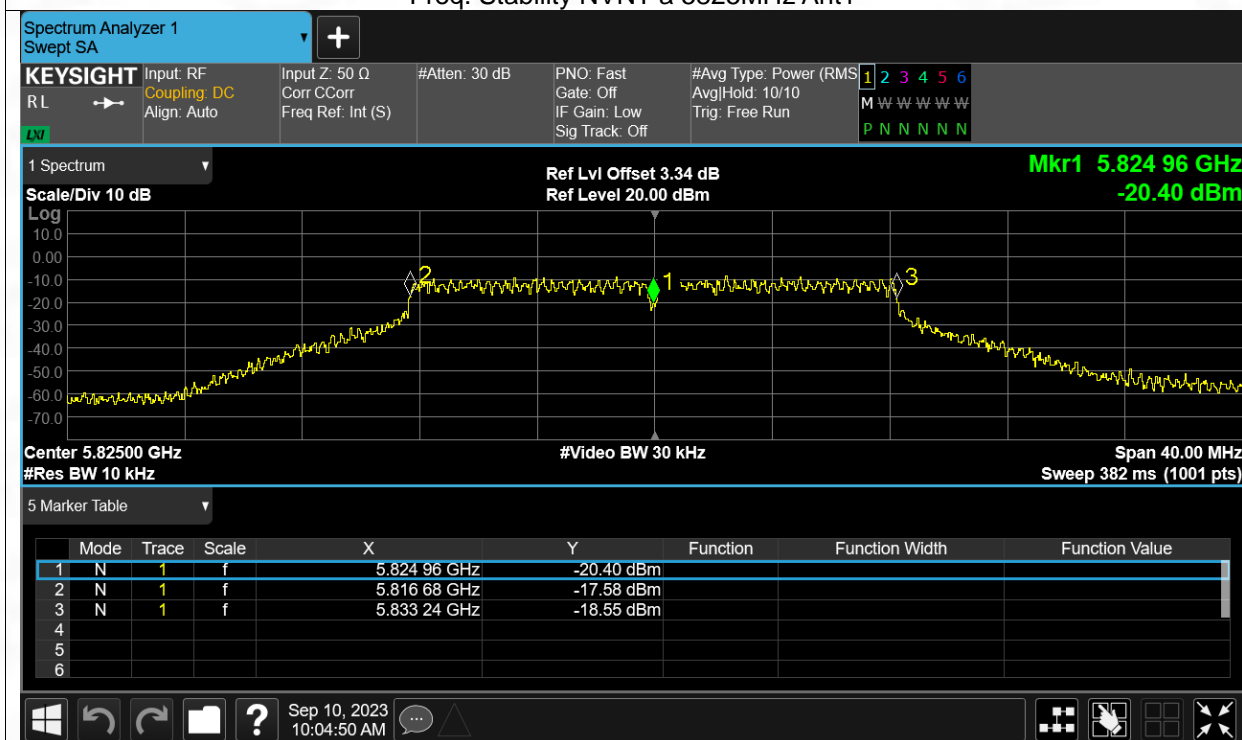


# Freq. Stability NVNT n20 5180MHz Ant1

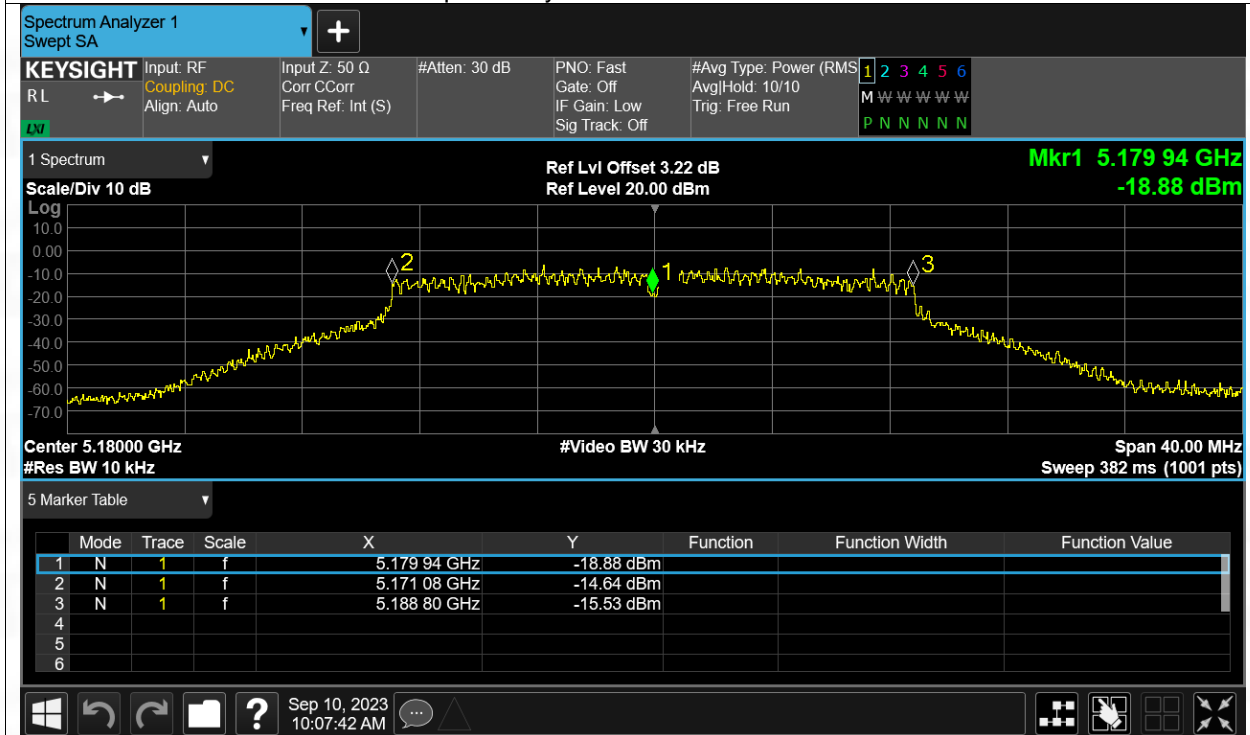

# Freq. Stability NVNT n20 5240MHz Ant1

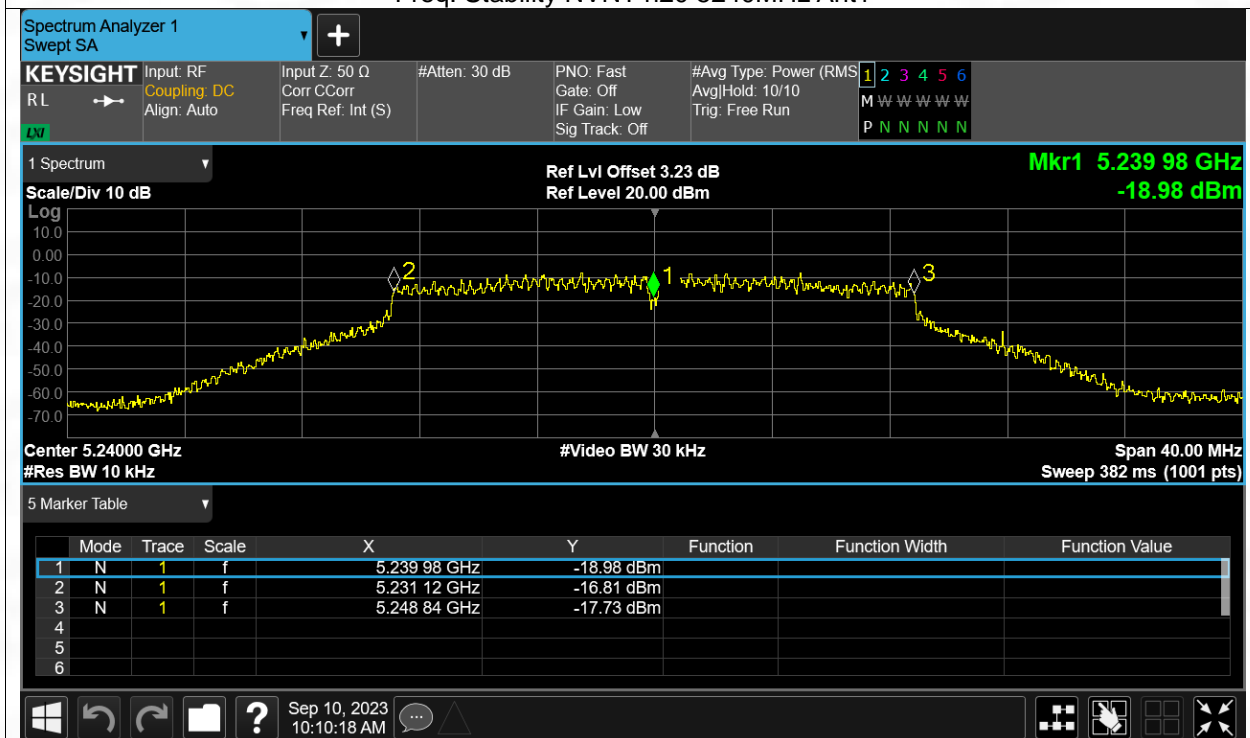

# Freq. Stability NVNT n20 5260MHz Ant1

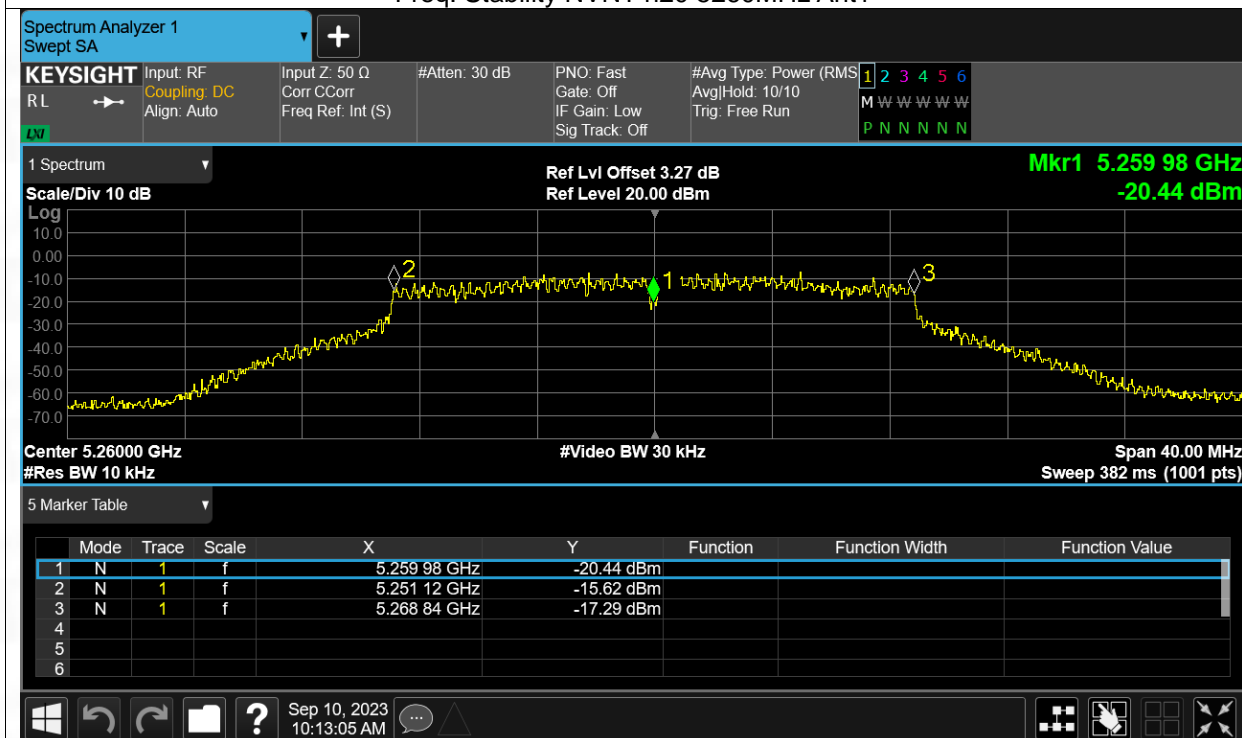


# Freq. Stability NVNT n20 5320MHz Ant1







# Freq. Stability NVNT n20 5500MHz Ant1

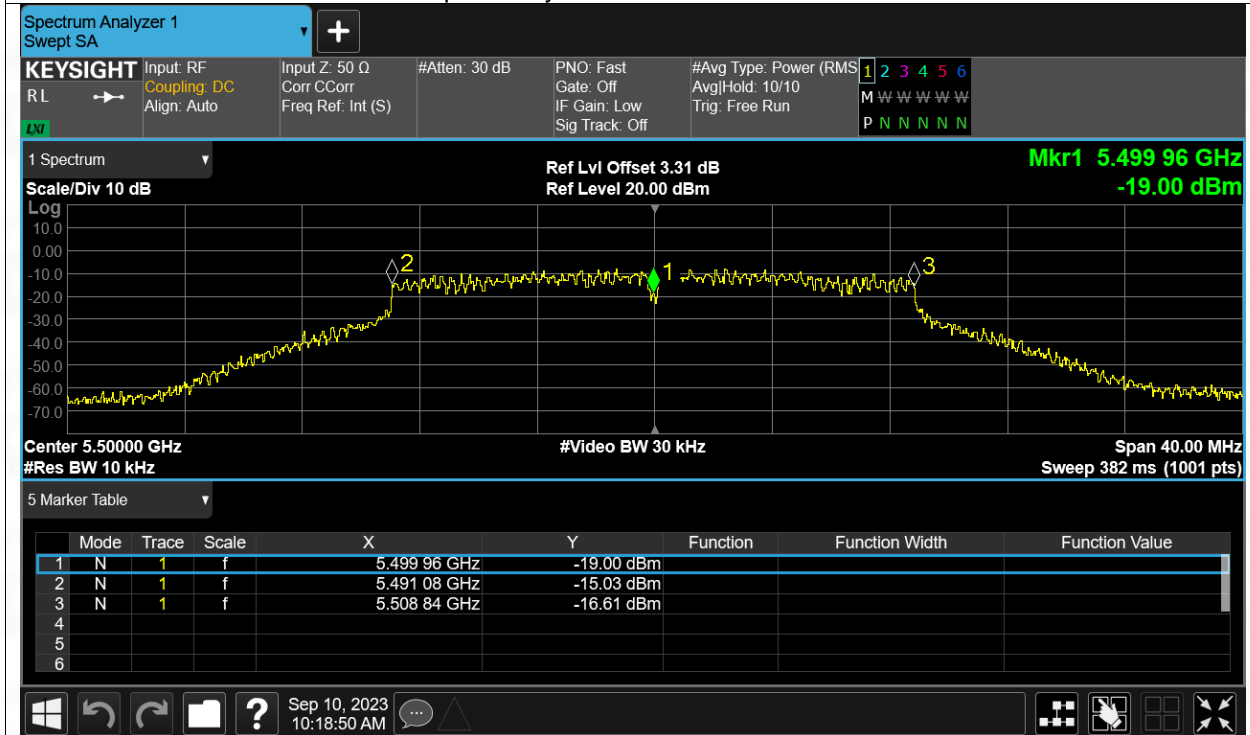


# Freq. Stability NVNT n20 5700MHz Ant1

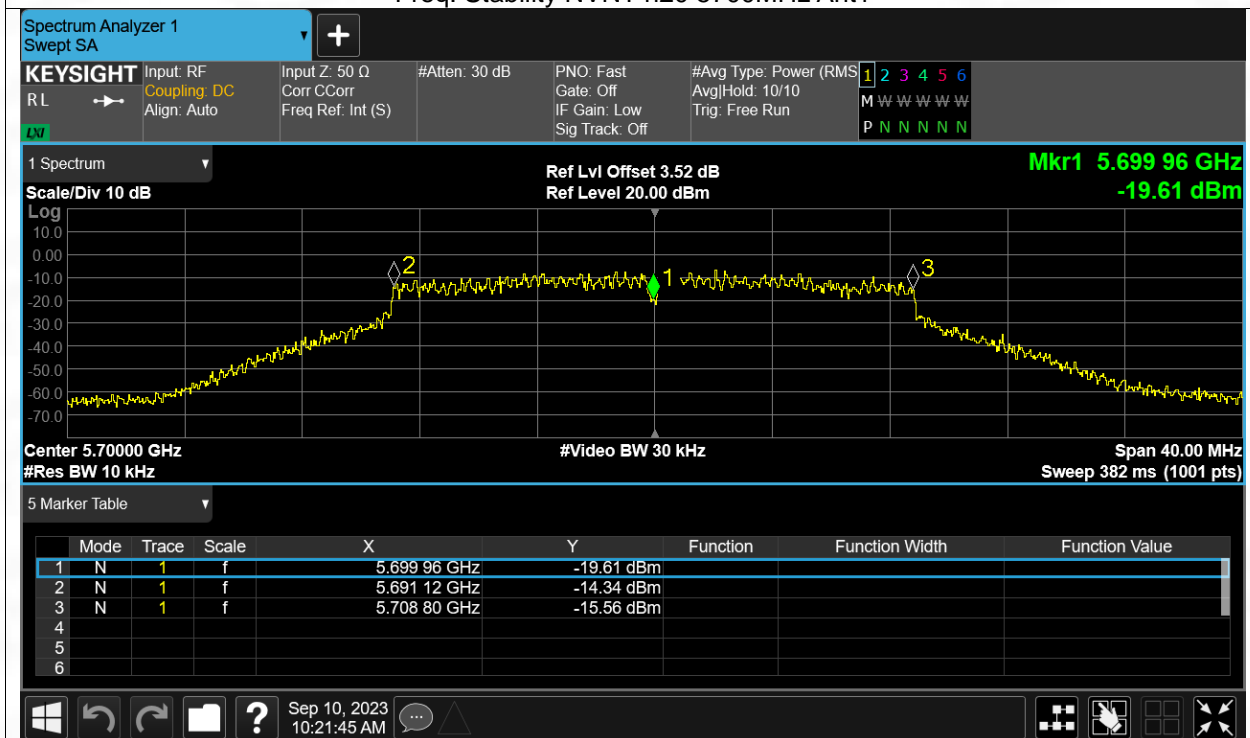


# Freq. Stability NVNT n20 5745MHz Ant1

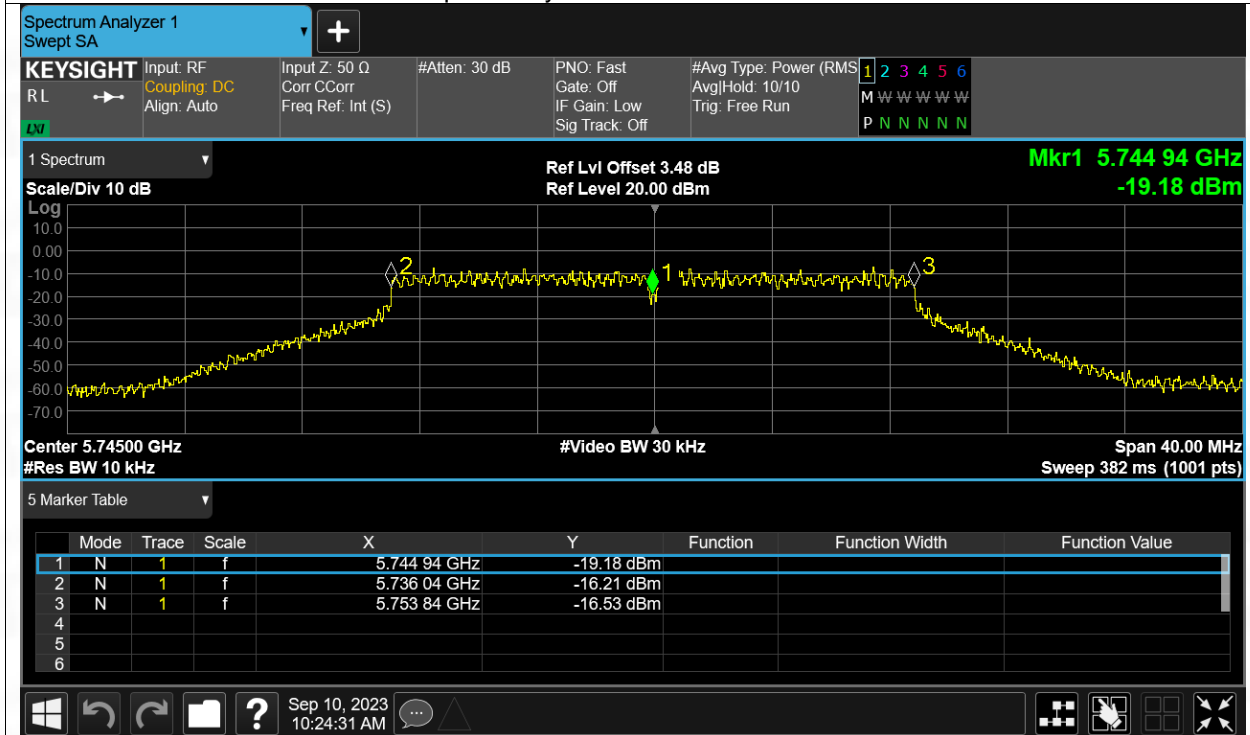

# Freq. Stability NVNT n20 5825MHz Ant1

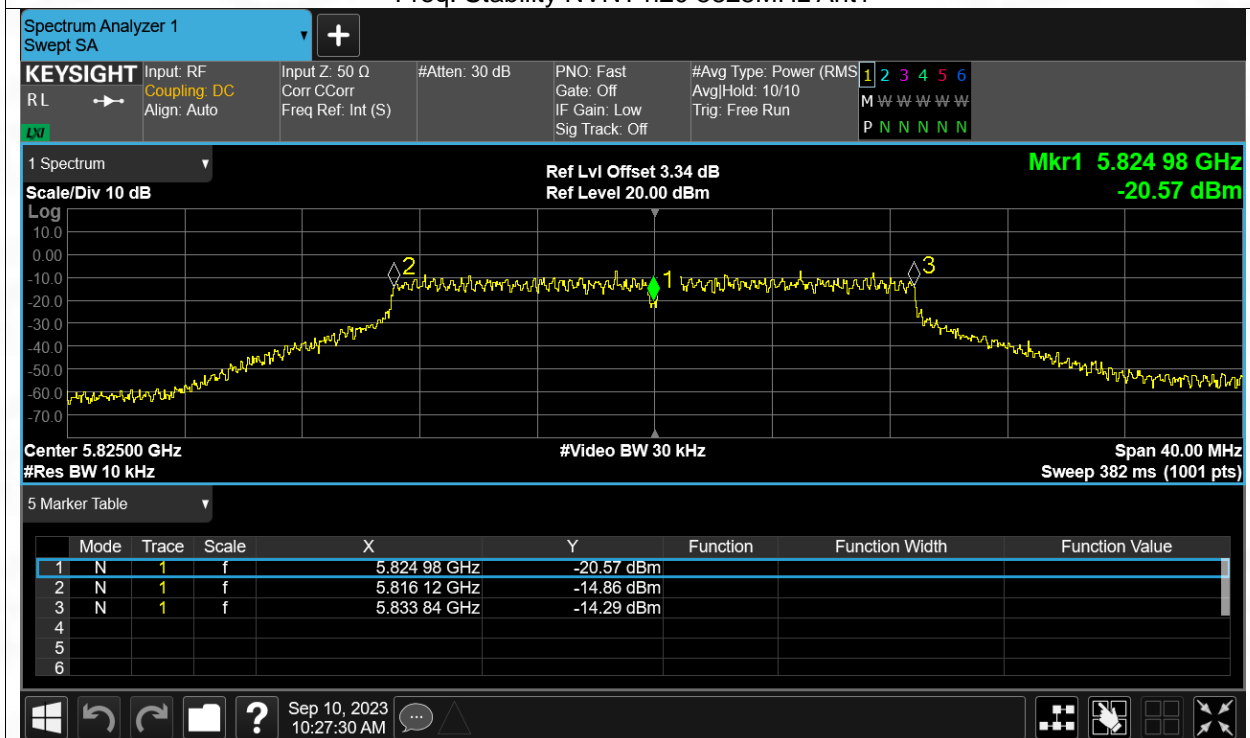



# Freq. Stability NVNT n40 5190MHz Ant1

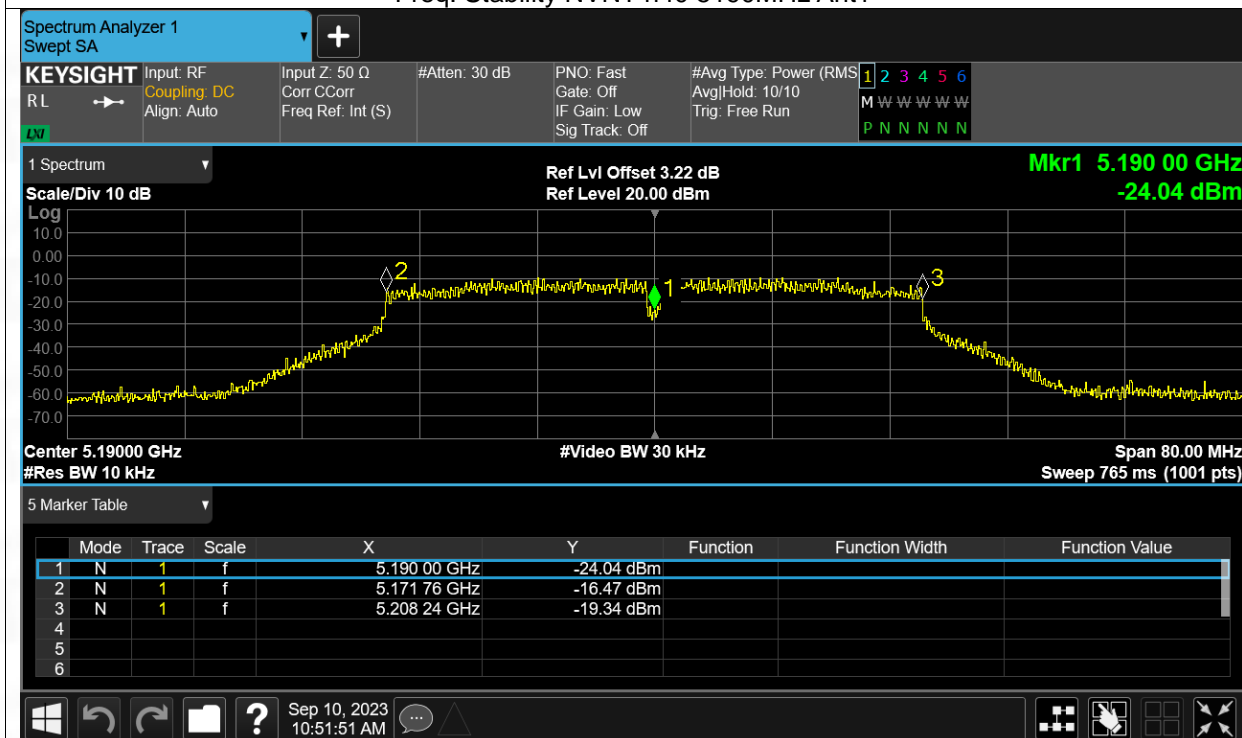


# Freq. Stability NVNT n40 5230MHz Ant1



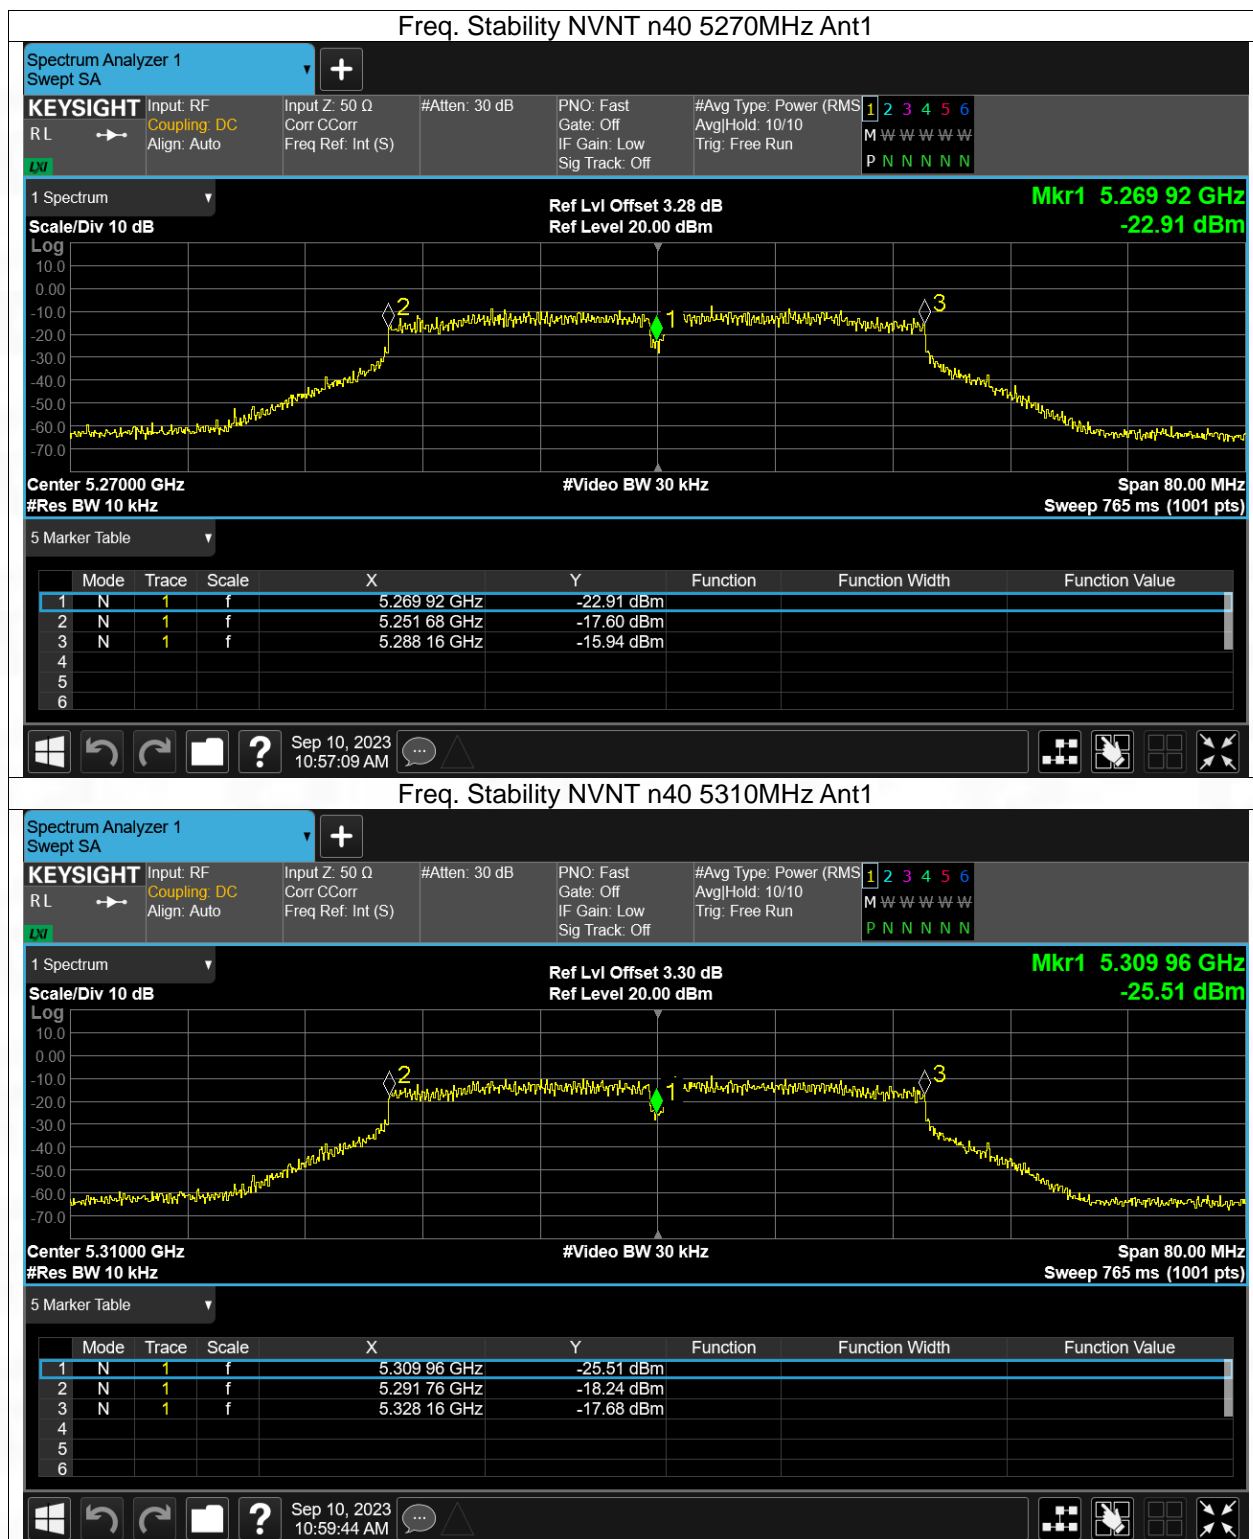


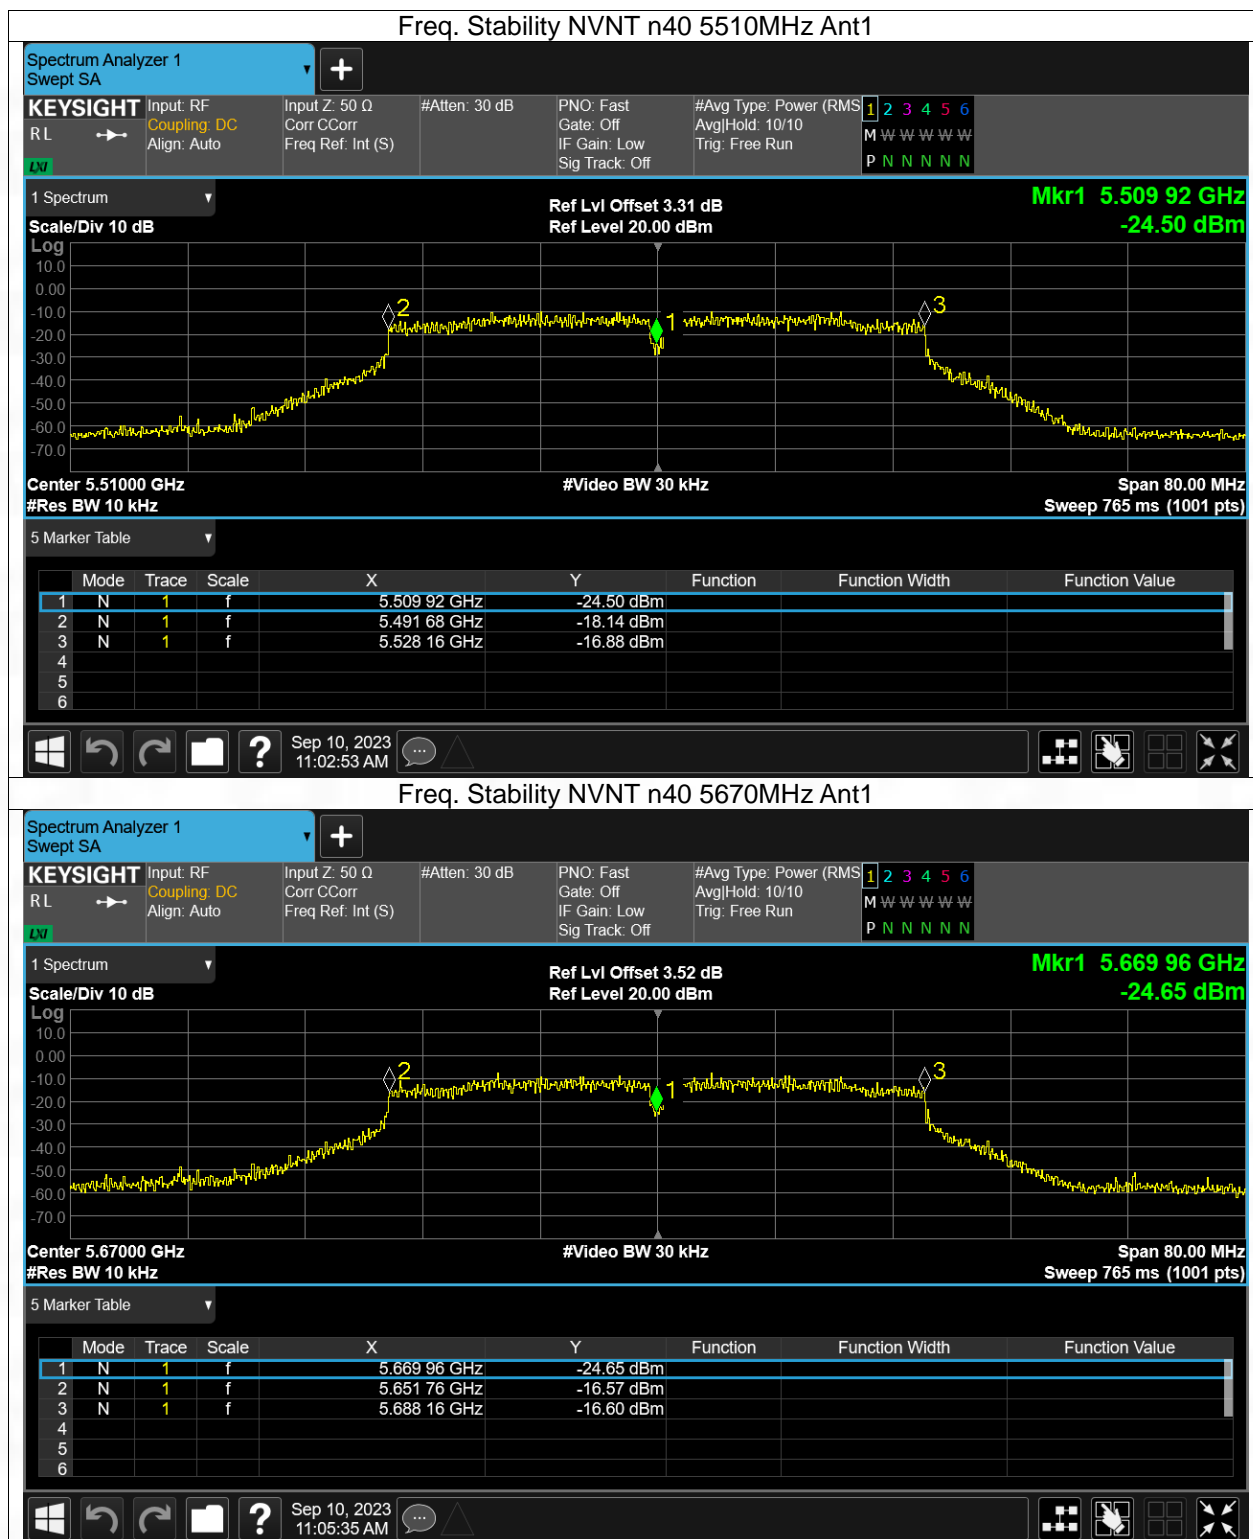


# Freq. Stability NVNT n40 5755MHz Ant1

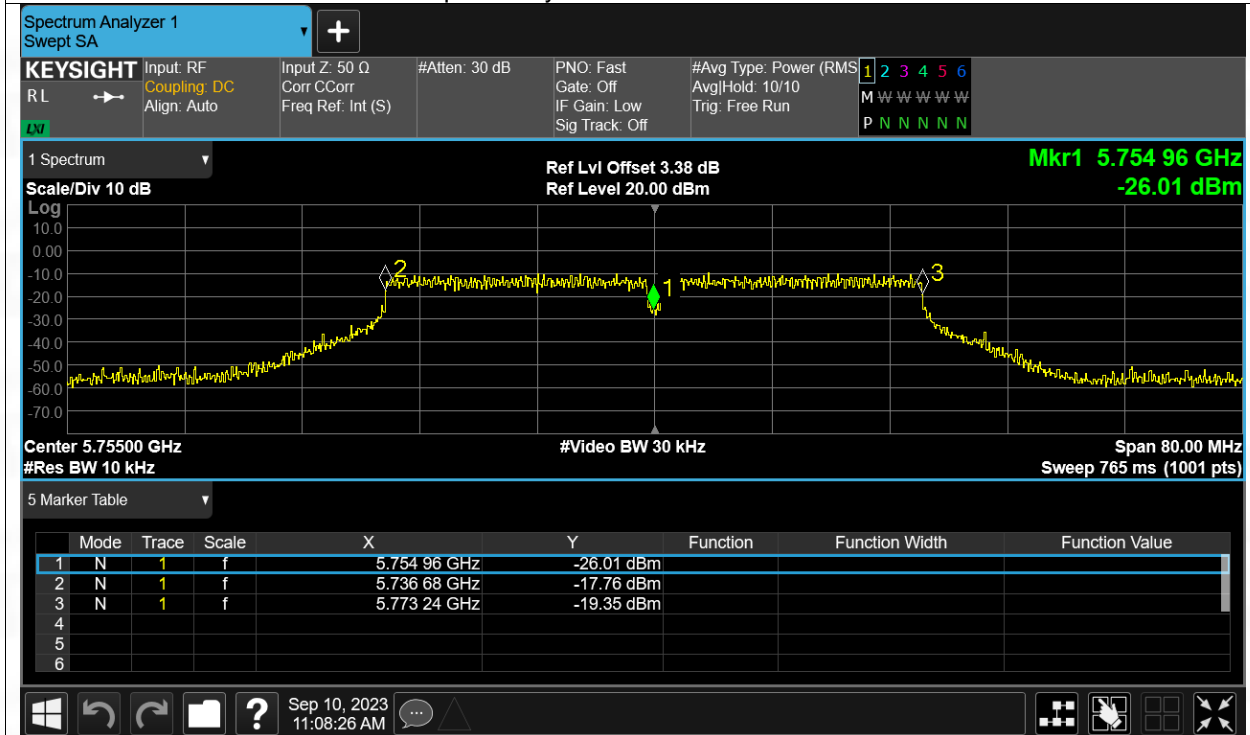


# Freq. Stability NVNT n40 5795MHz Ant1

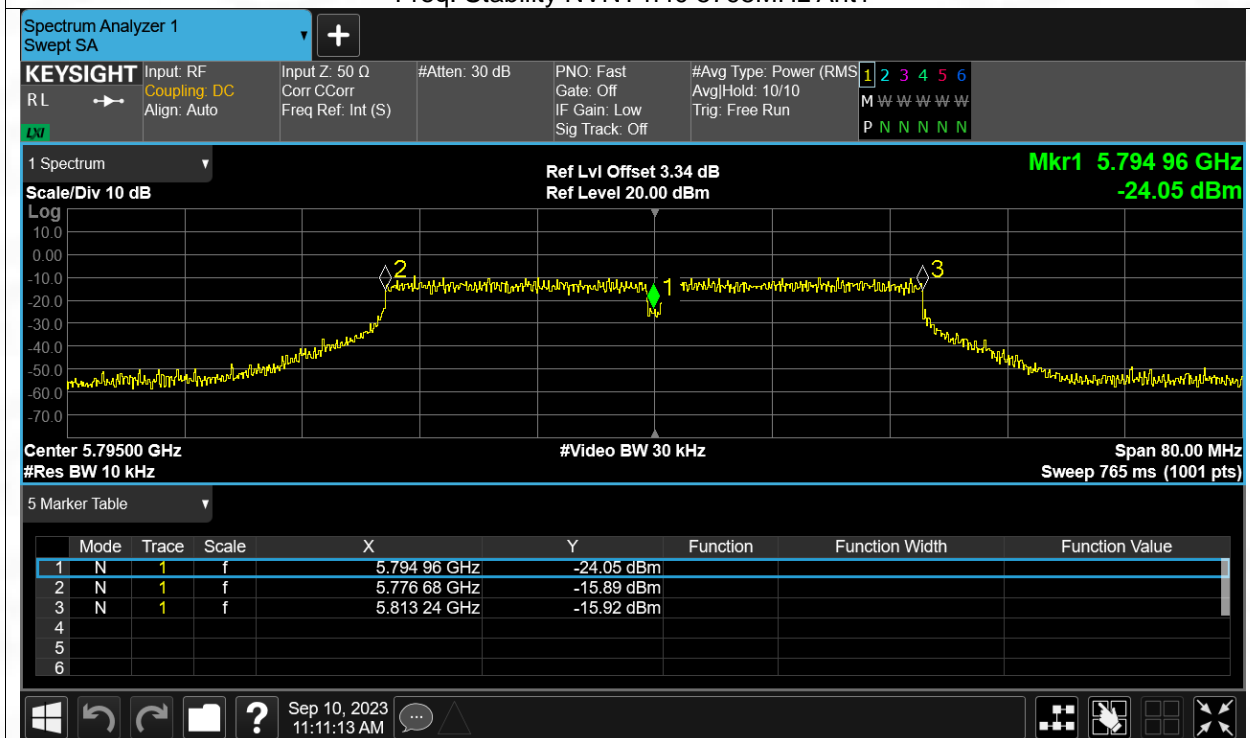


# Freq. Stability NVNT ac20 5180MHz Ant1

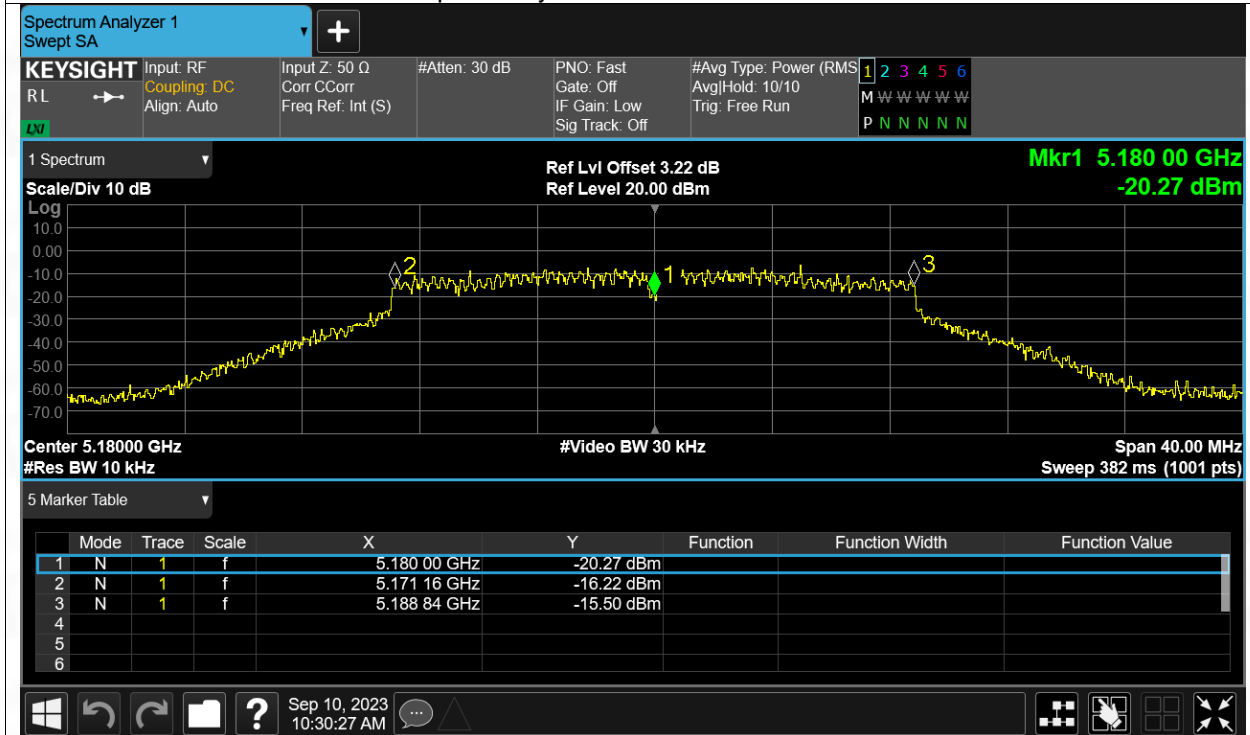


# Freq. Stability NVNT ac20 5240MHz Ant1

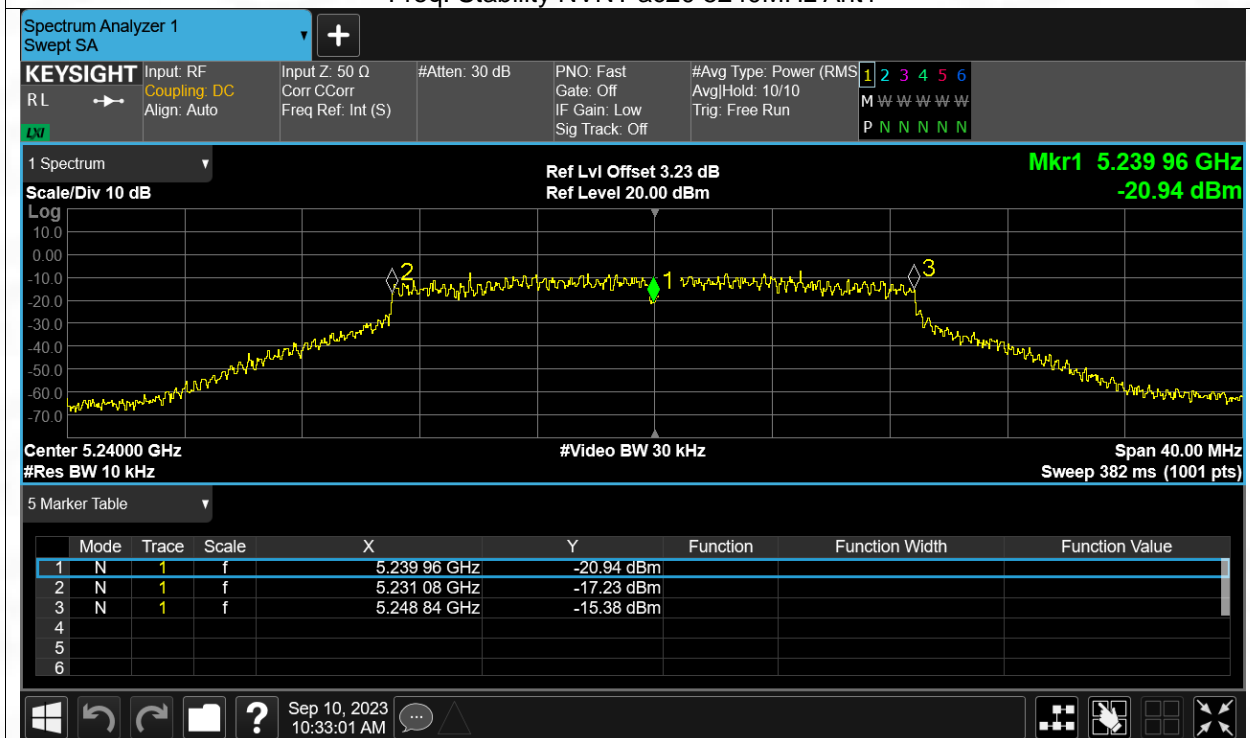

# Freq. Stability NVNT ac20 5260MHz Ant1

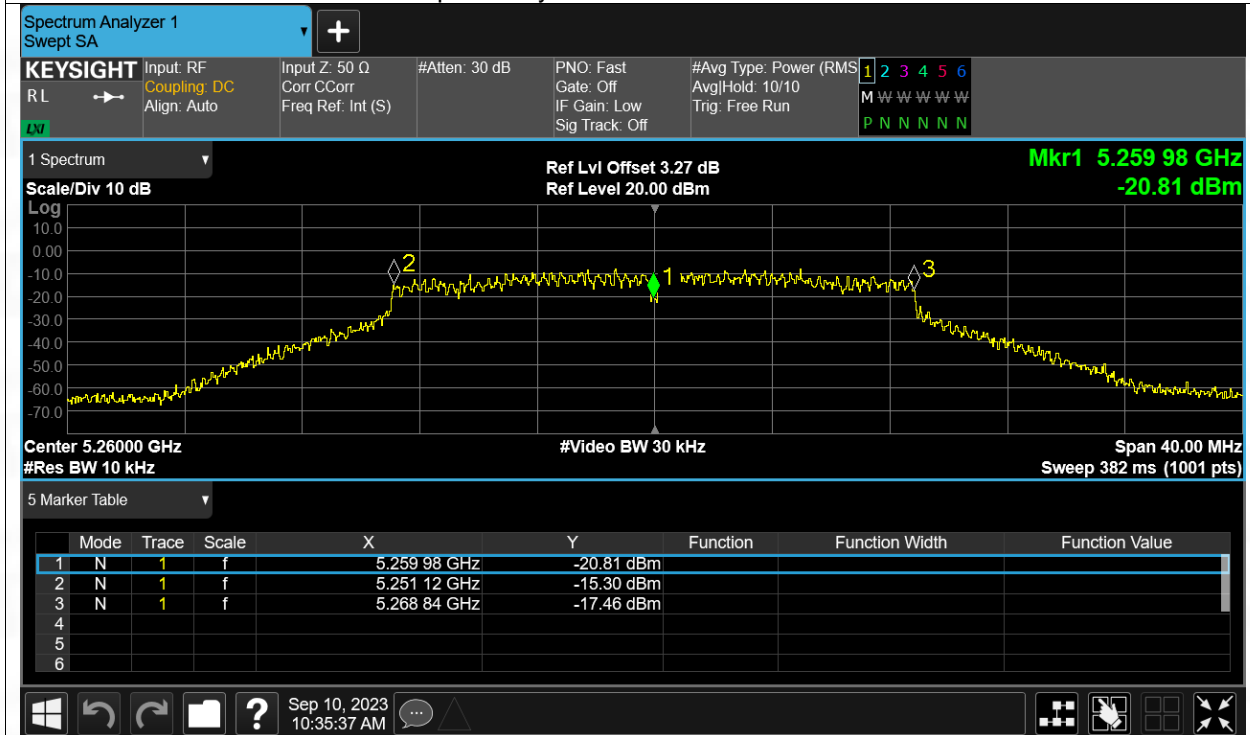


# Freq. Stability NVNT ac20 5320MHz Ant1

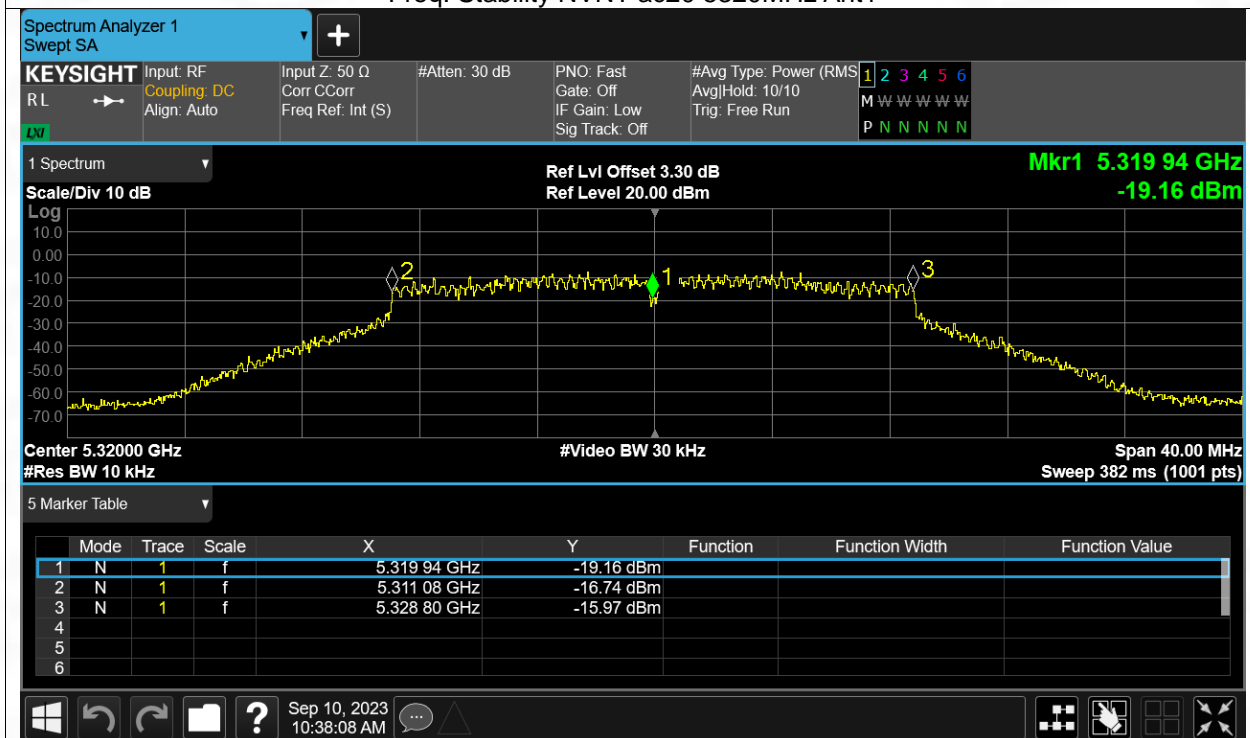





# Freq. Stability NVNT ac20 5500MHz Ant1

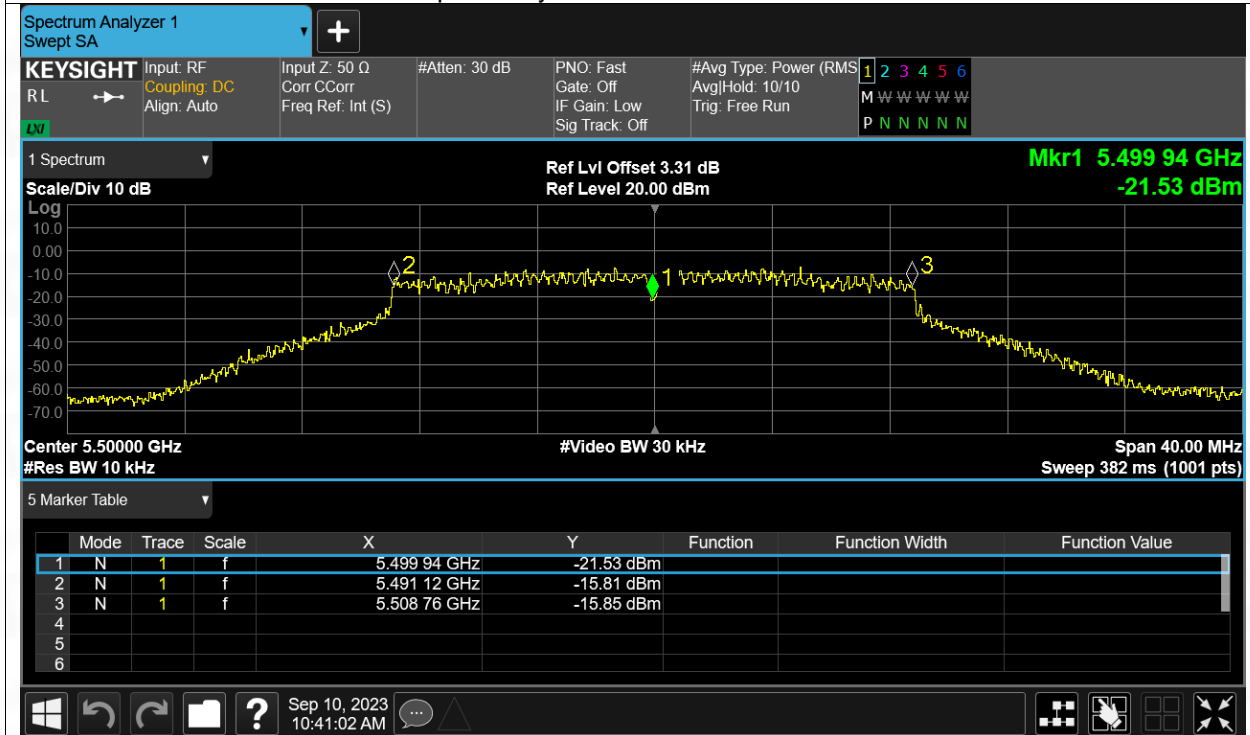


# Freq. Stability NVNT ac20 5700MHz Ant1

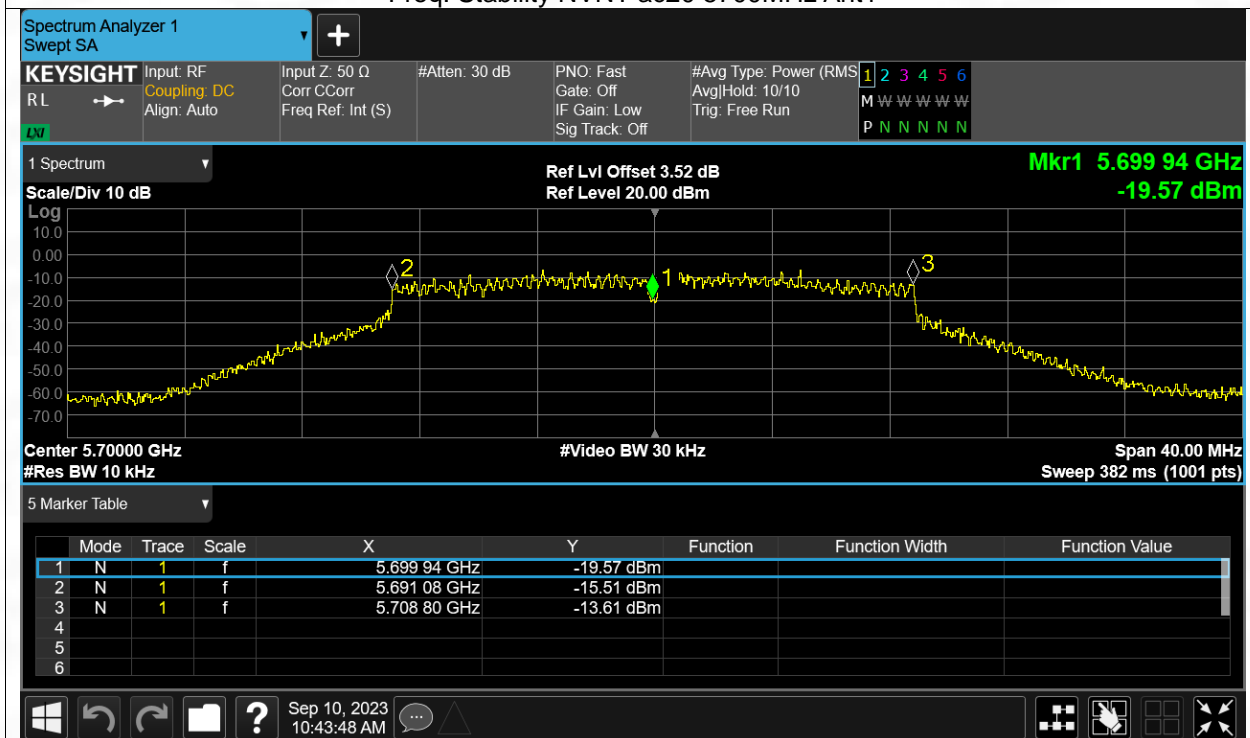


# Freq. Stability NVNT ac20 5745MHz Ant1

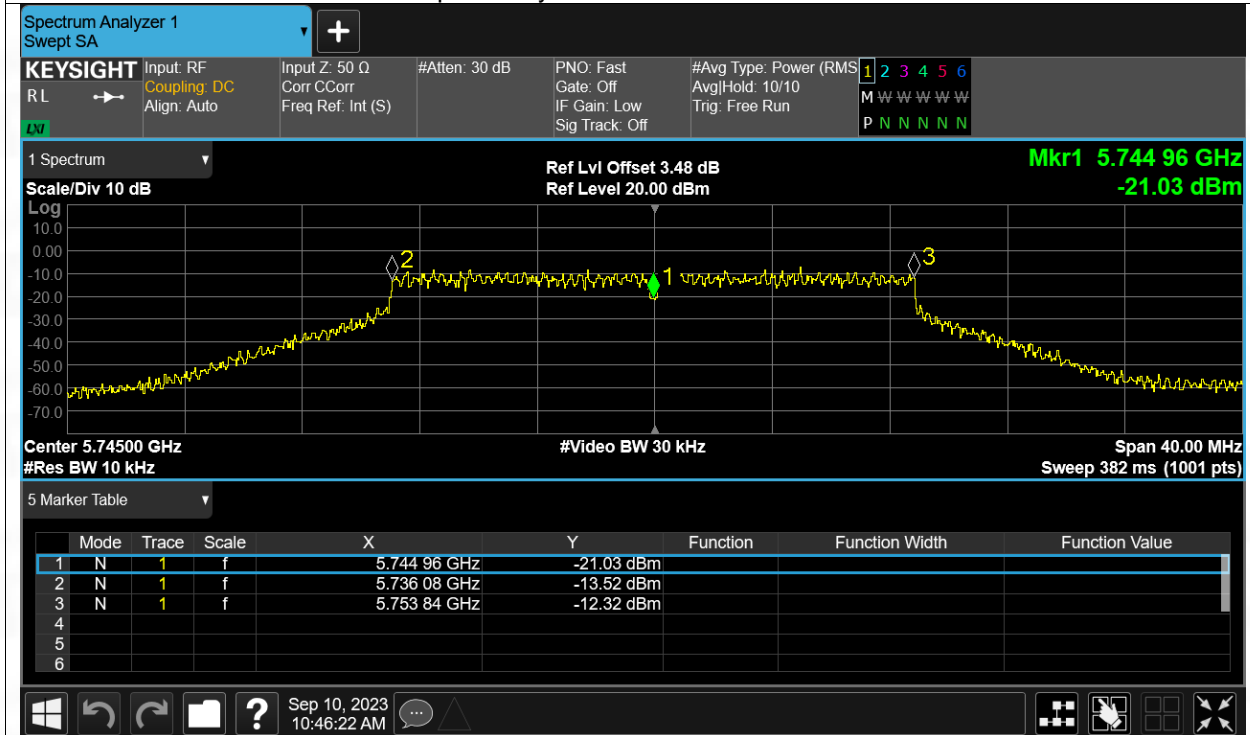


# Freq. Stability NVNT ac20 5825MHz Ant1

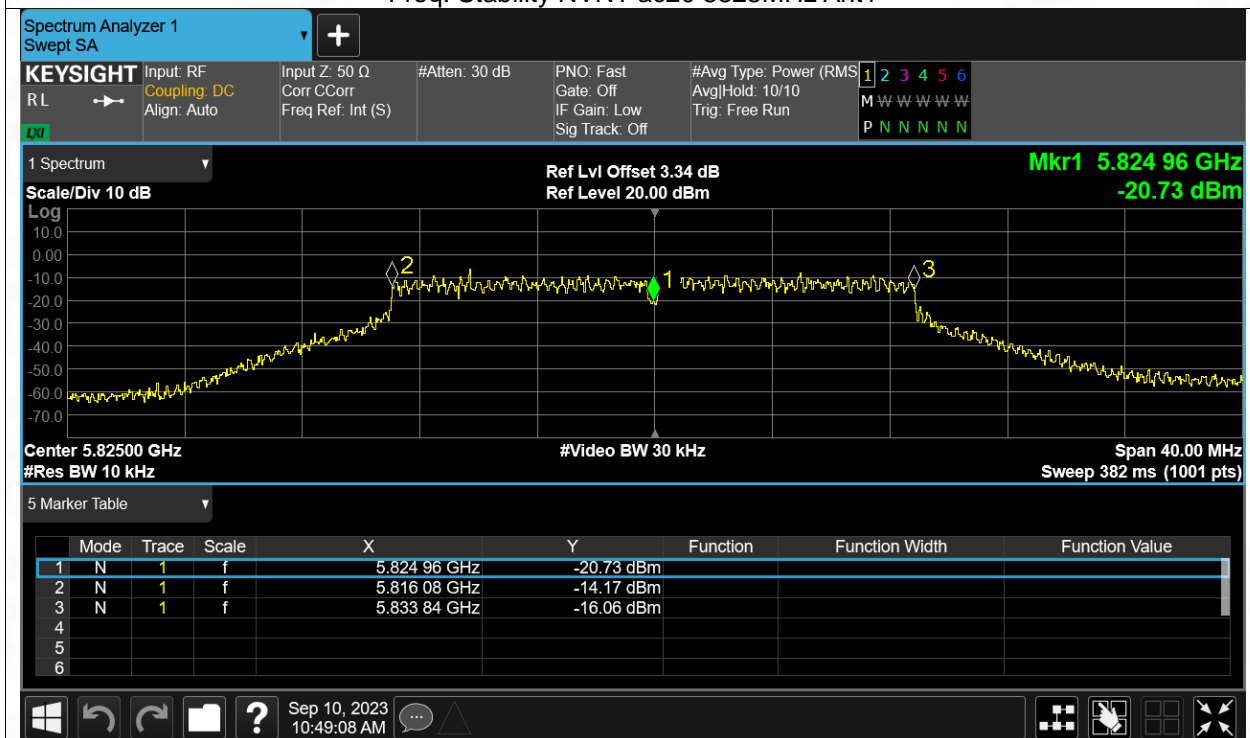


# Freq. Stability NVNT ac40 5190MHz Ant1

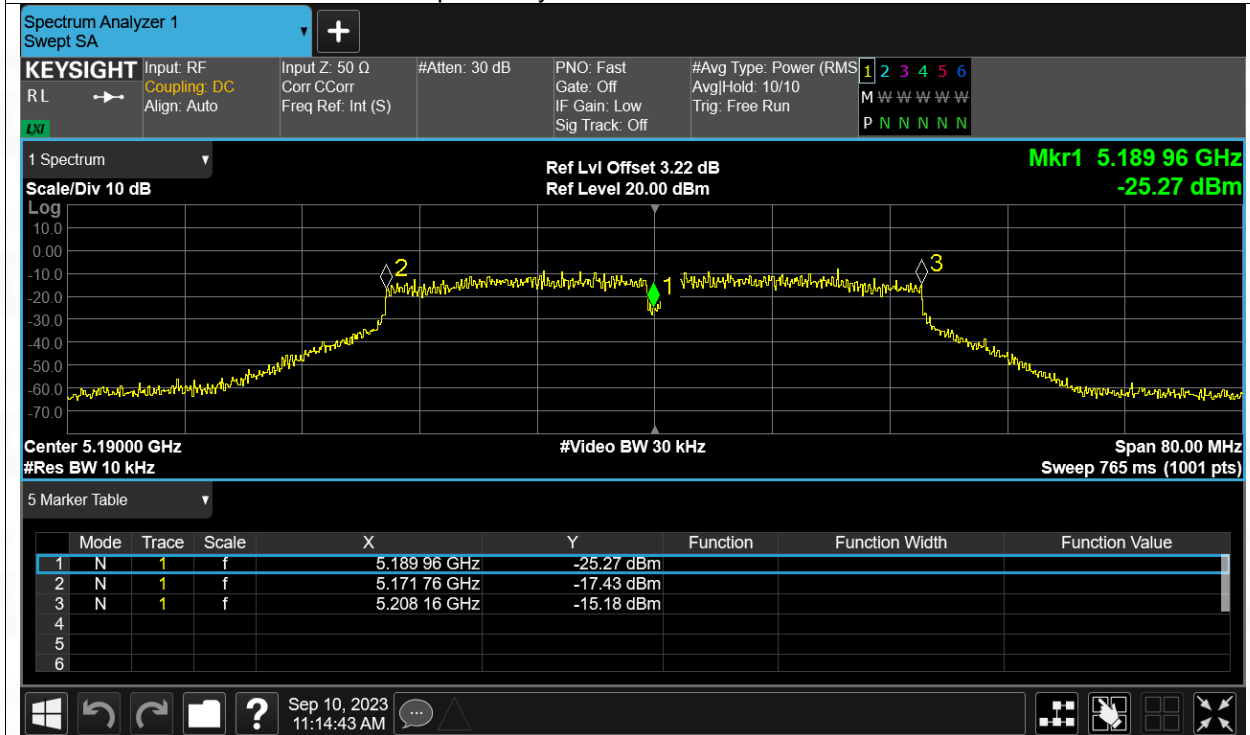


# Freq. Stability NVNT ac40 5230MHz Ant1

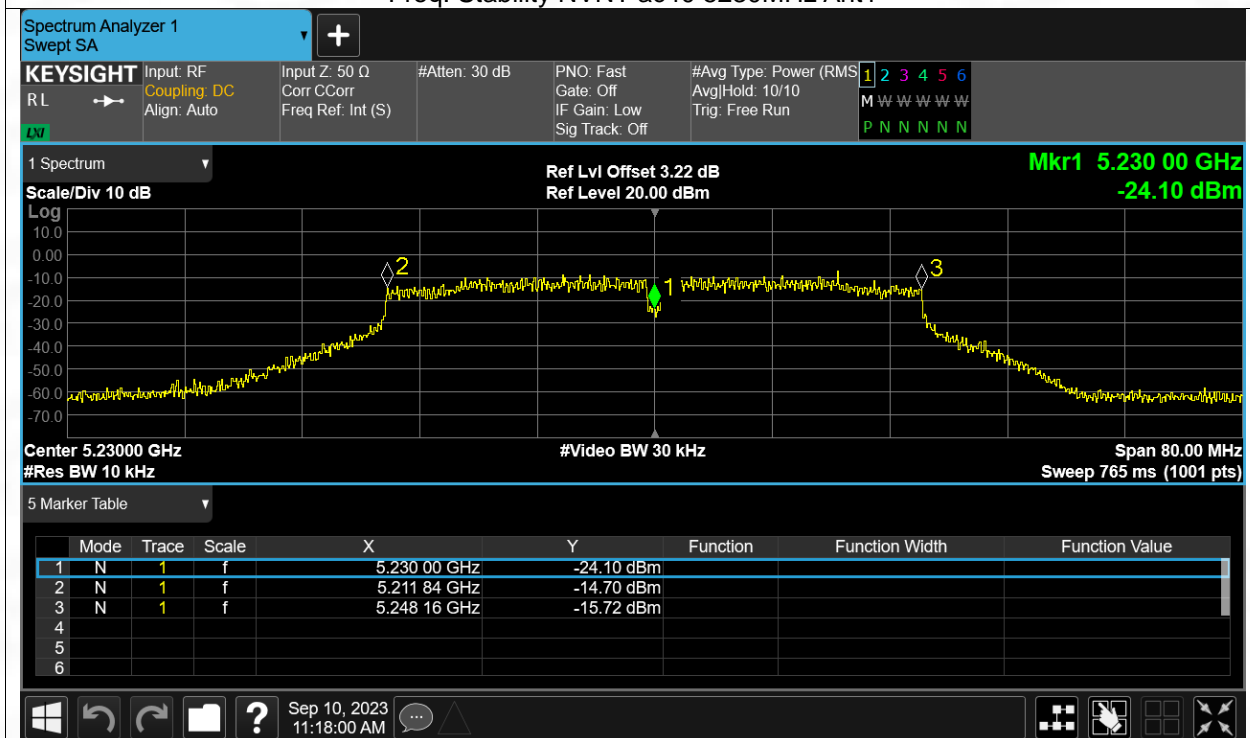



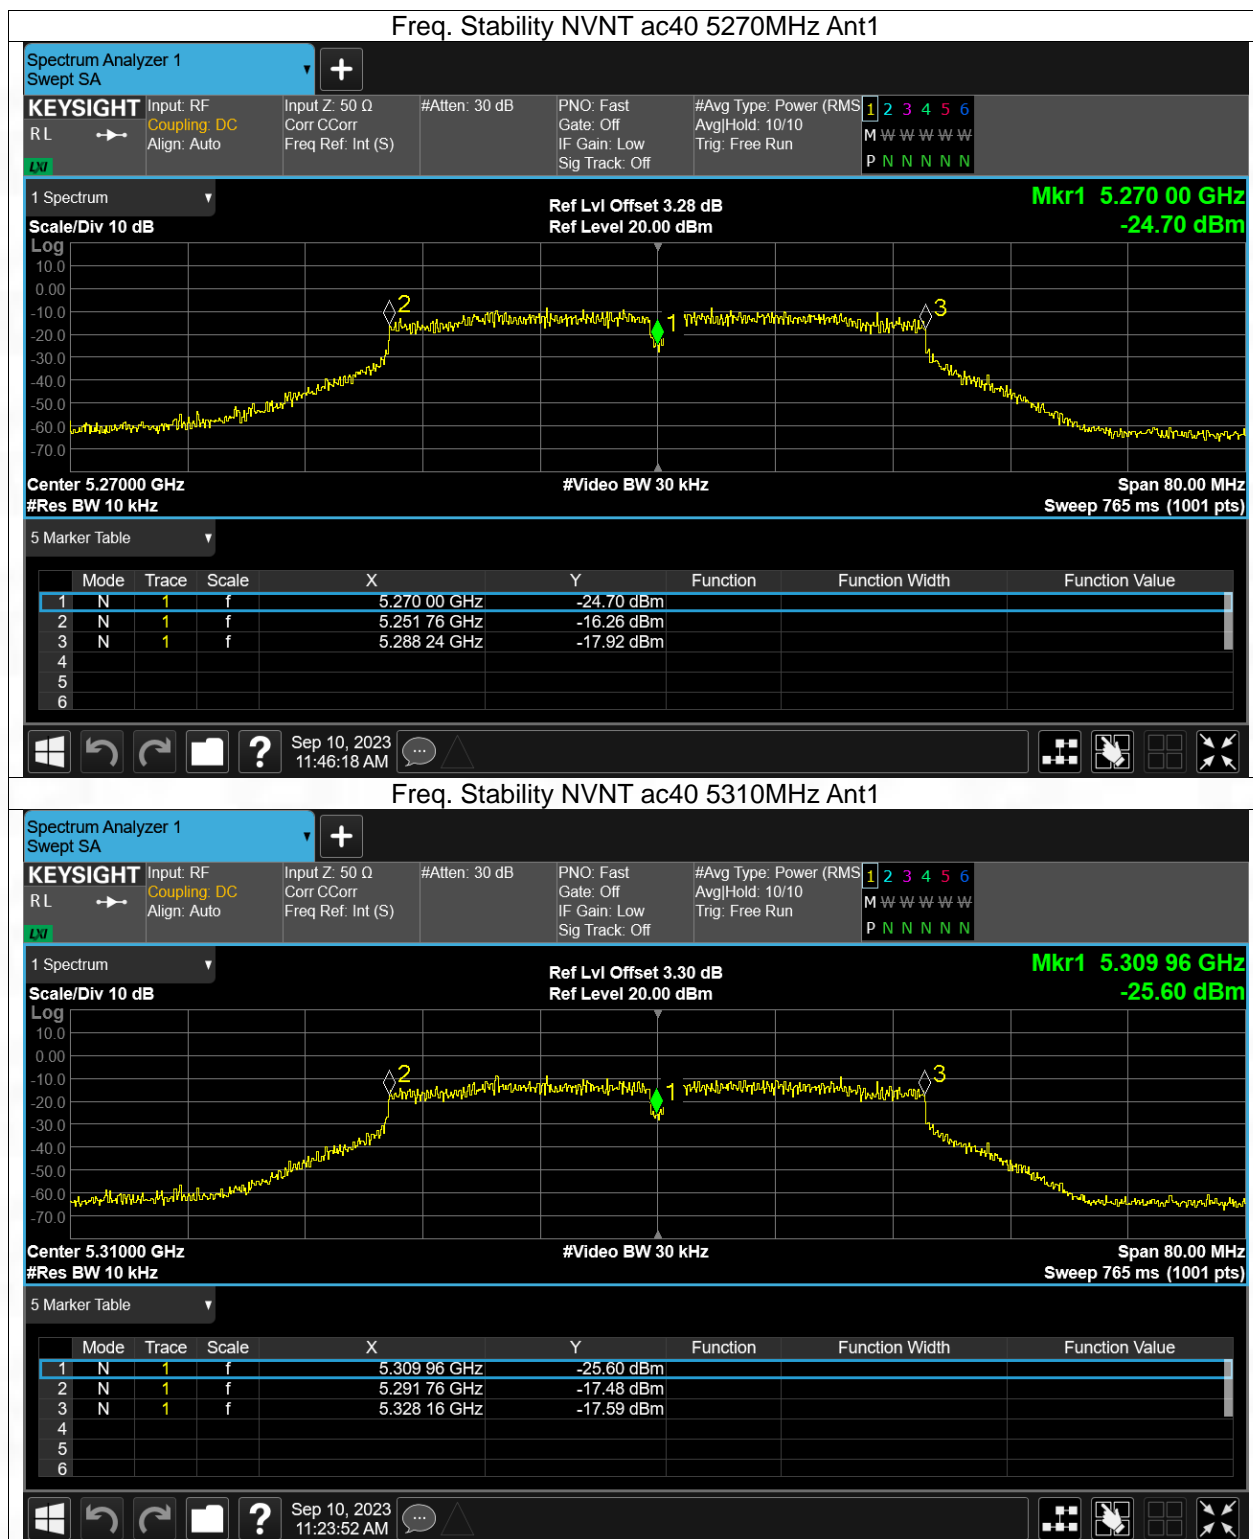



# Freq. Stability NVNT ac40 5510MHz Ant1

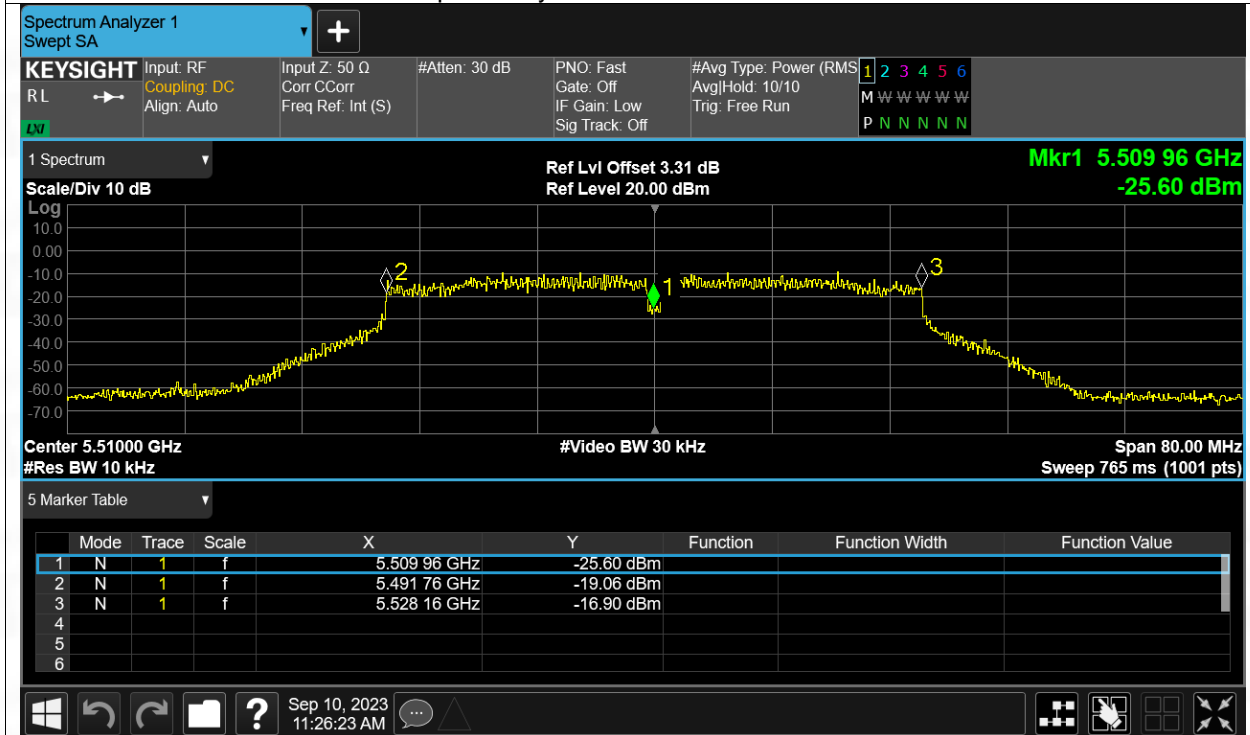


# Freq. Stability NVNT ac40 5670MHz Ant1

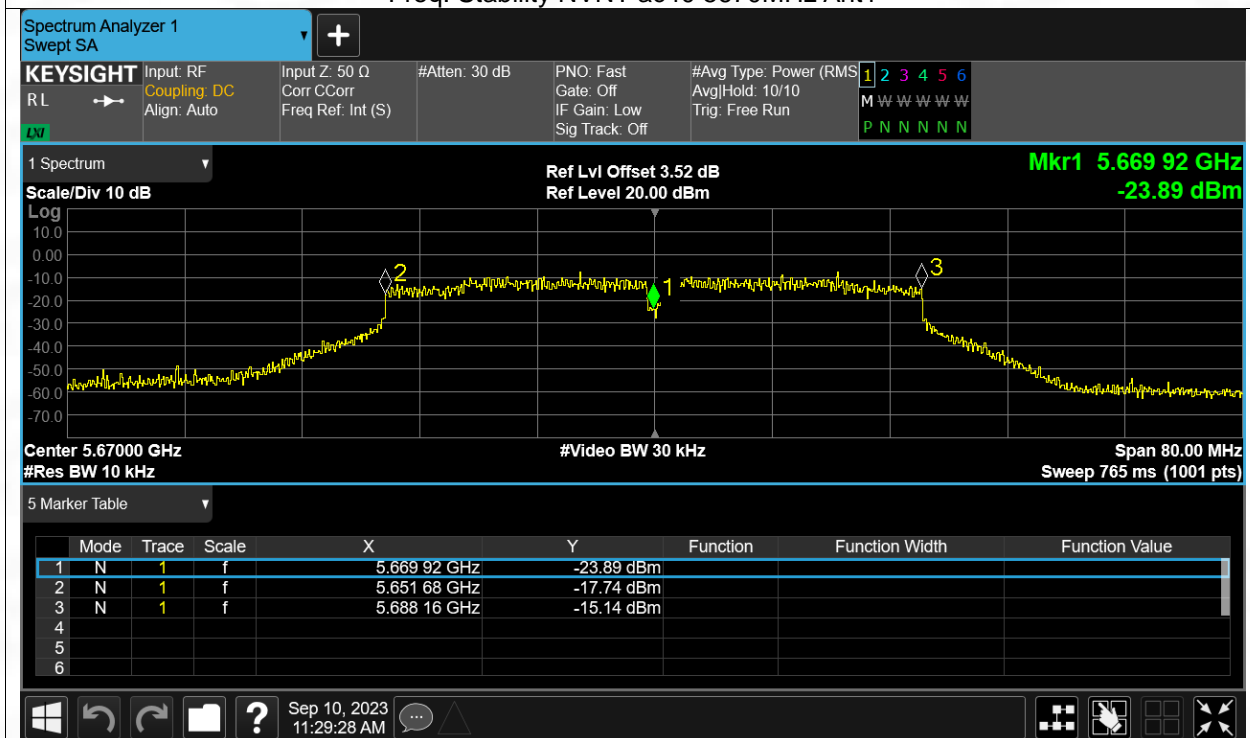

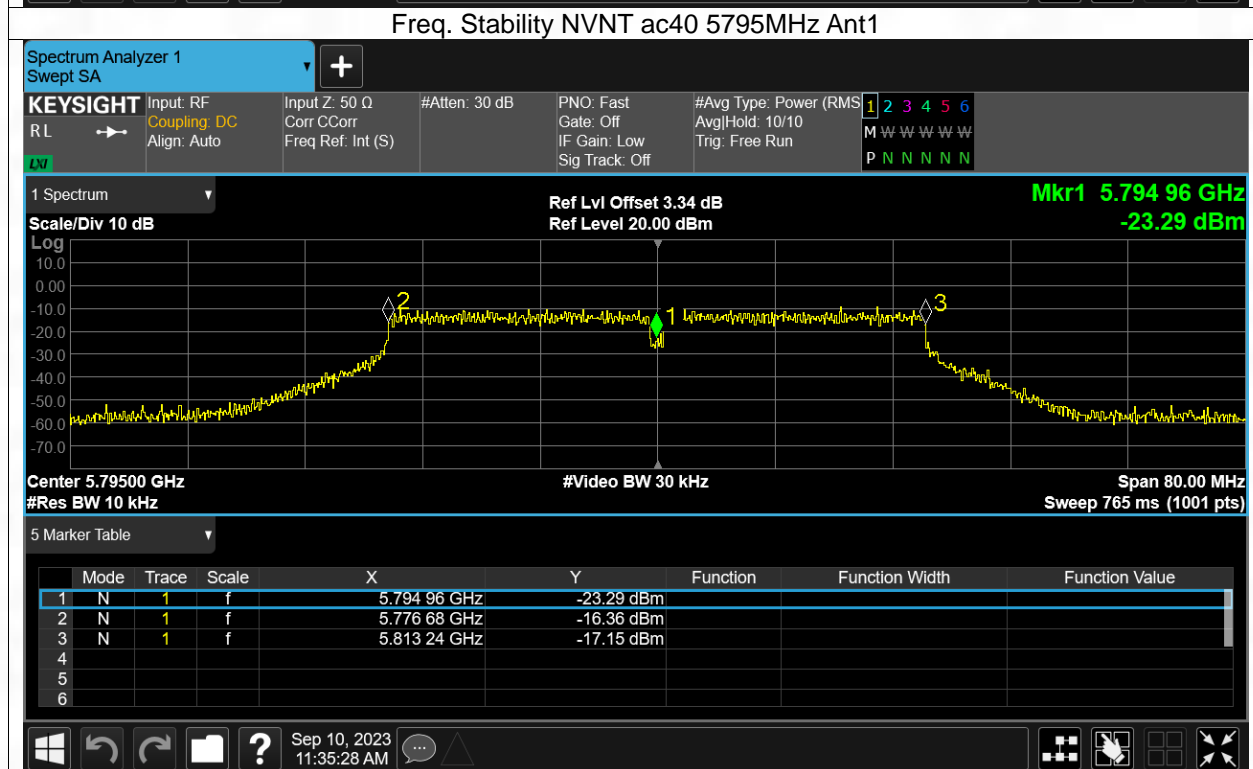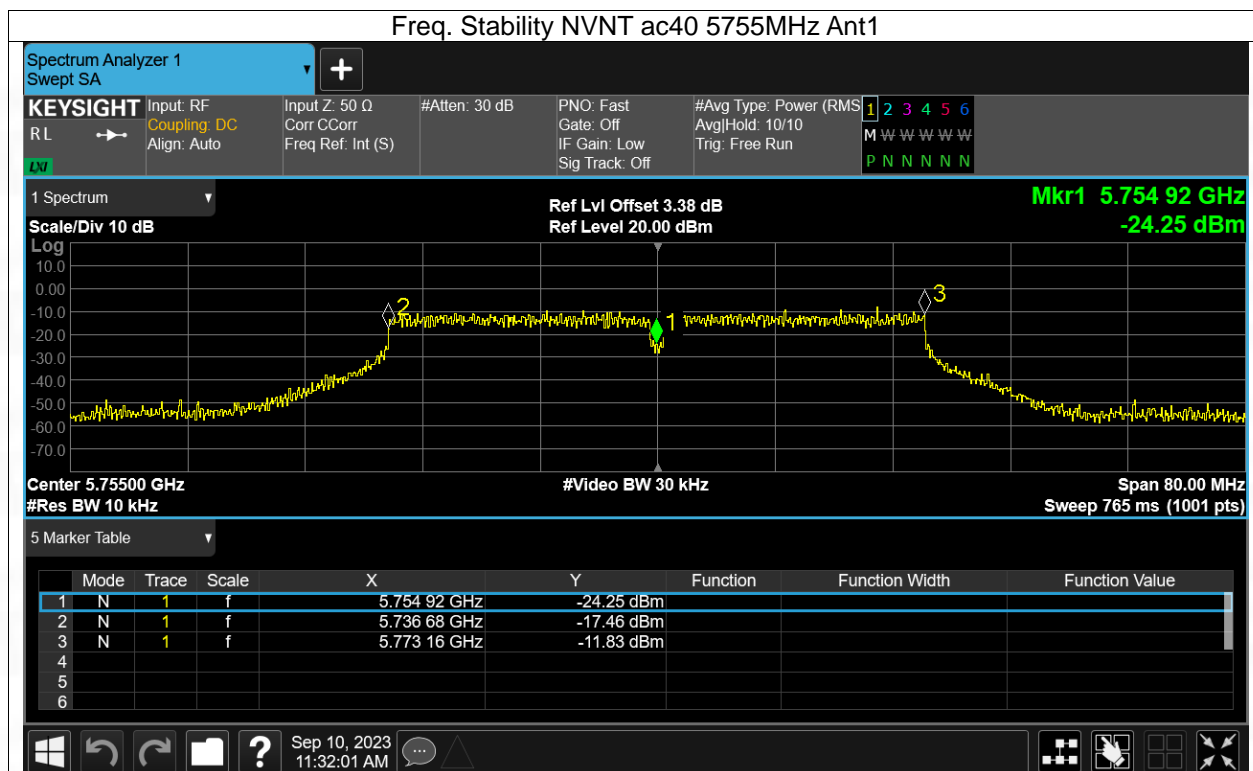


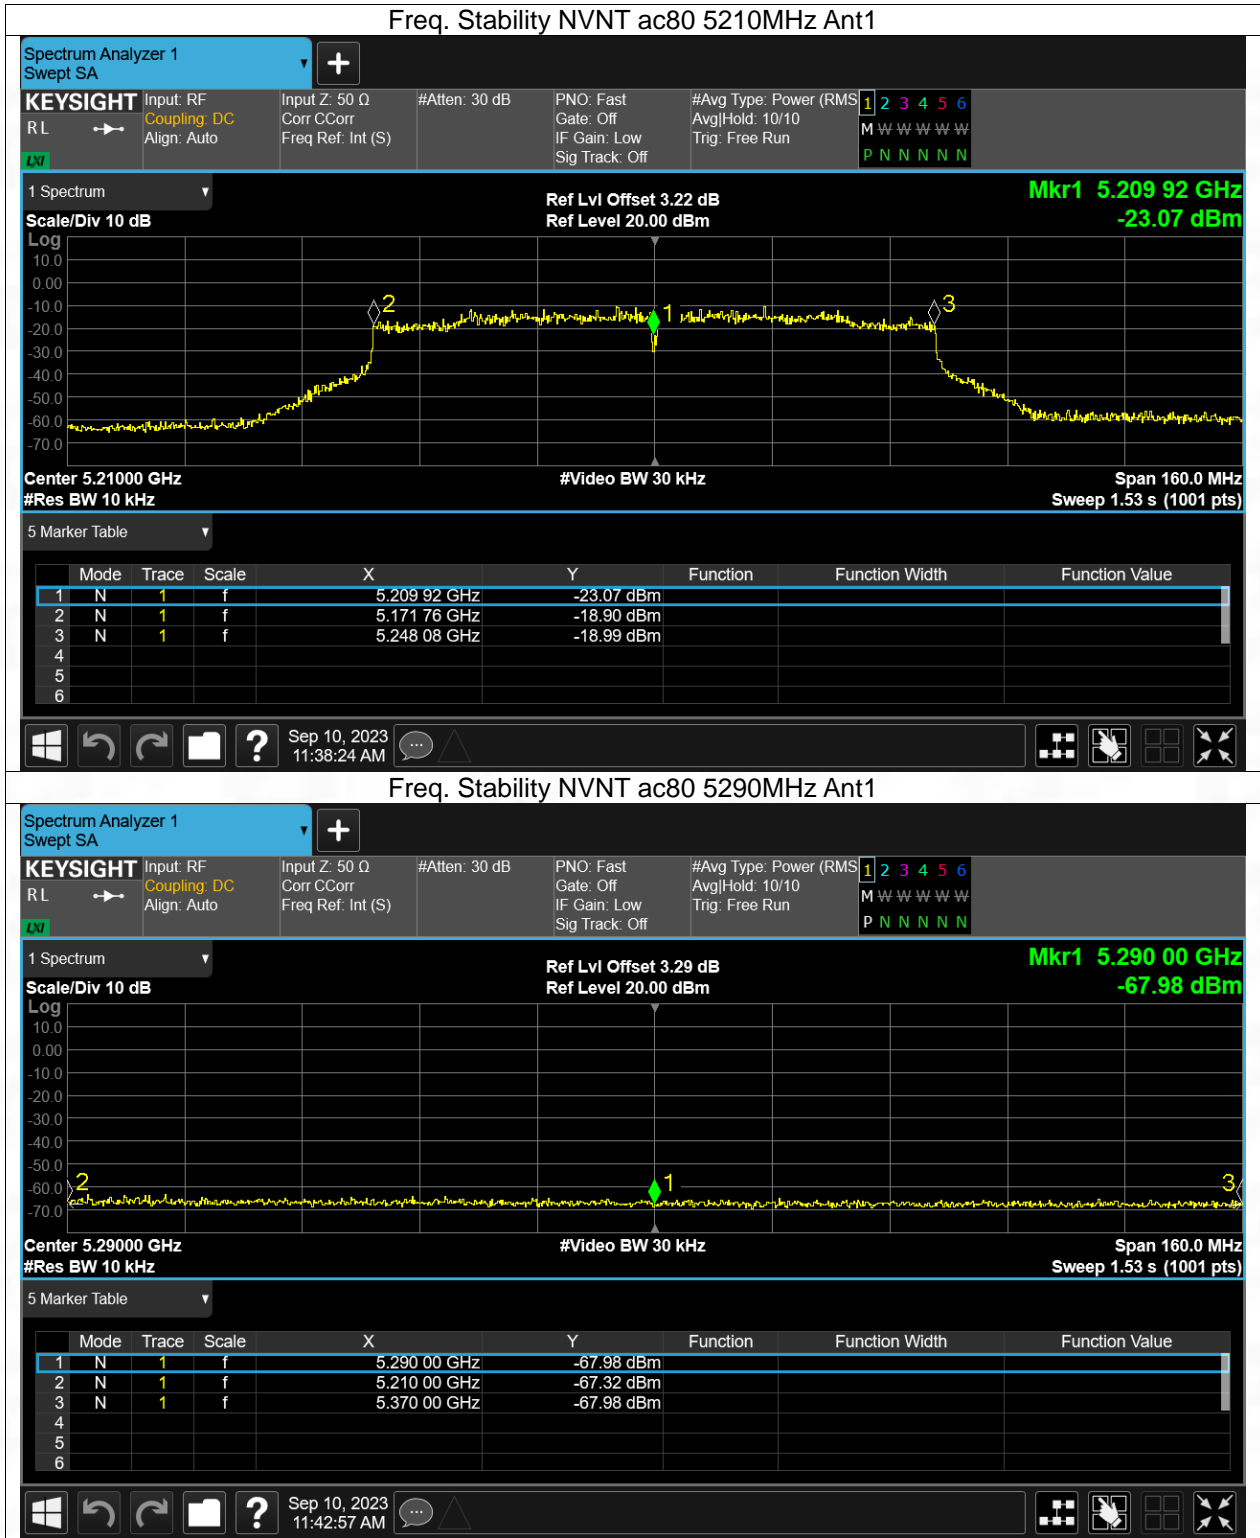

# Freq. Stability NVNT ac80 5530MHz Ant1

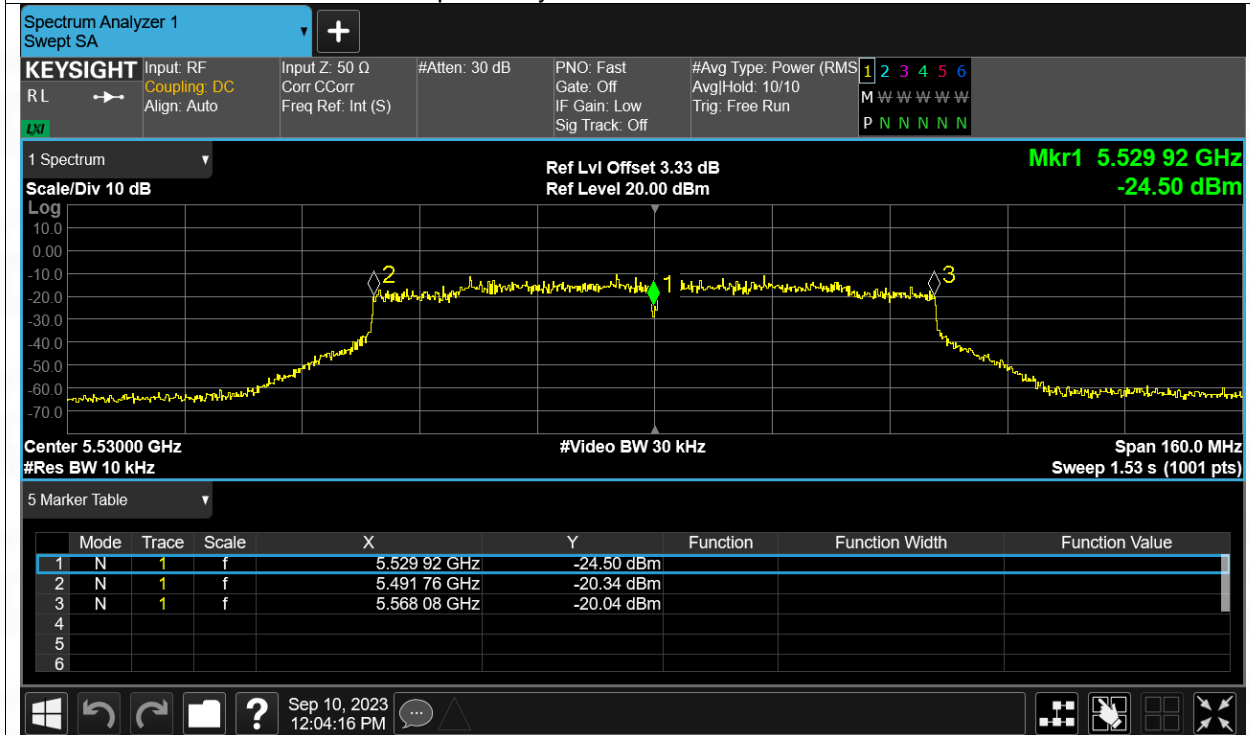


# Freq. Stability NVNT ac80 5610MHz Ant1

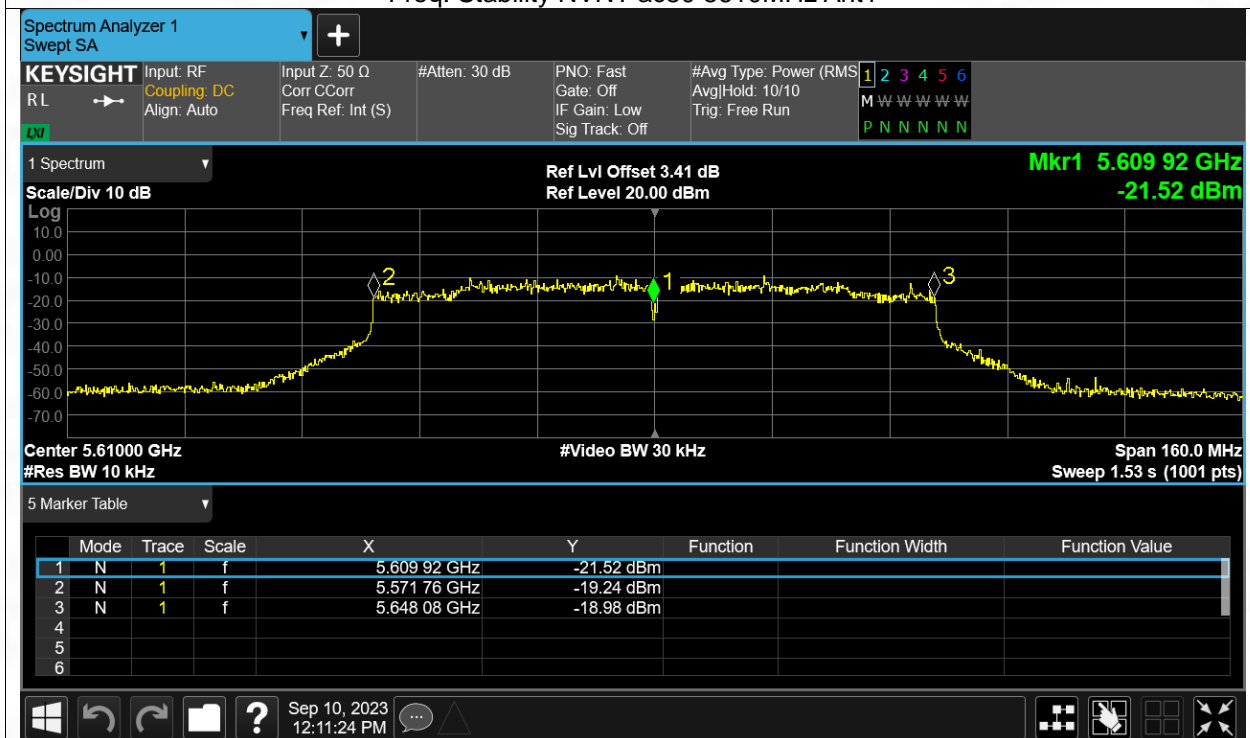




# Freq. Stability NVNT ac80 5775MHz Ant1

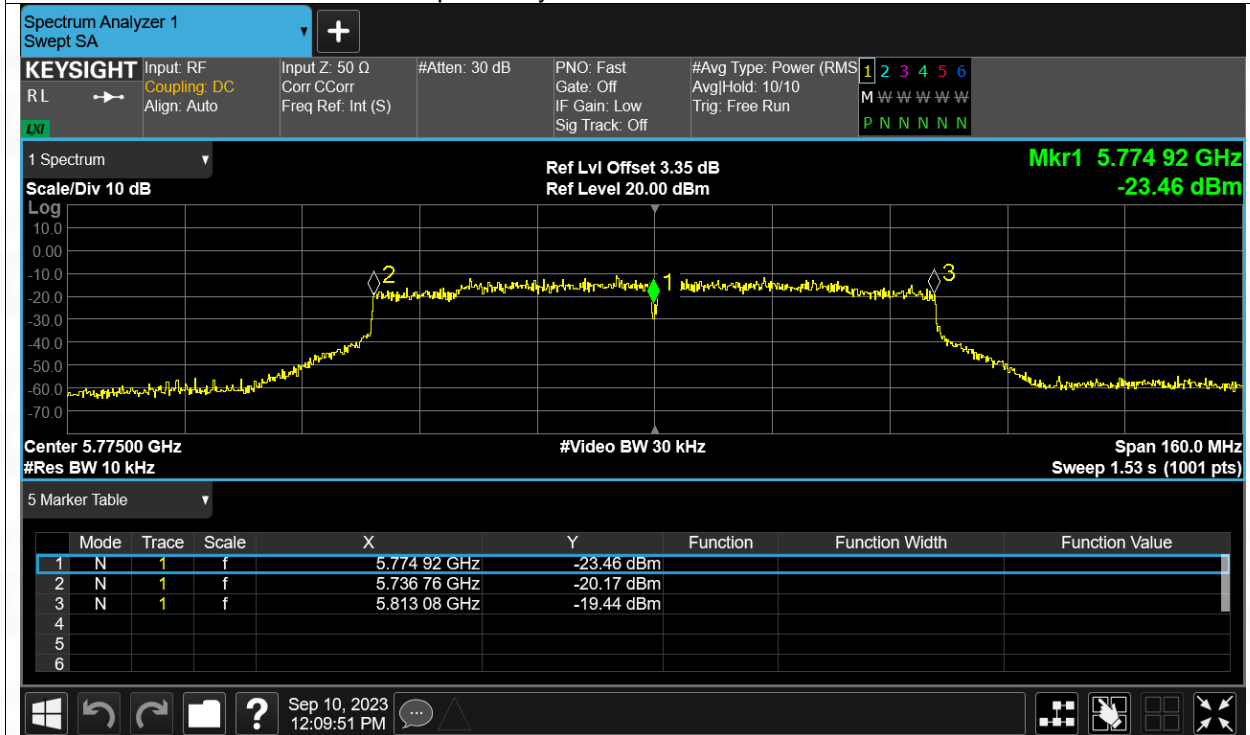


# Freq. Stability NVNT ax160 5250MHz Ant1

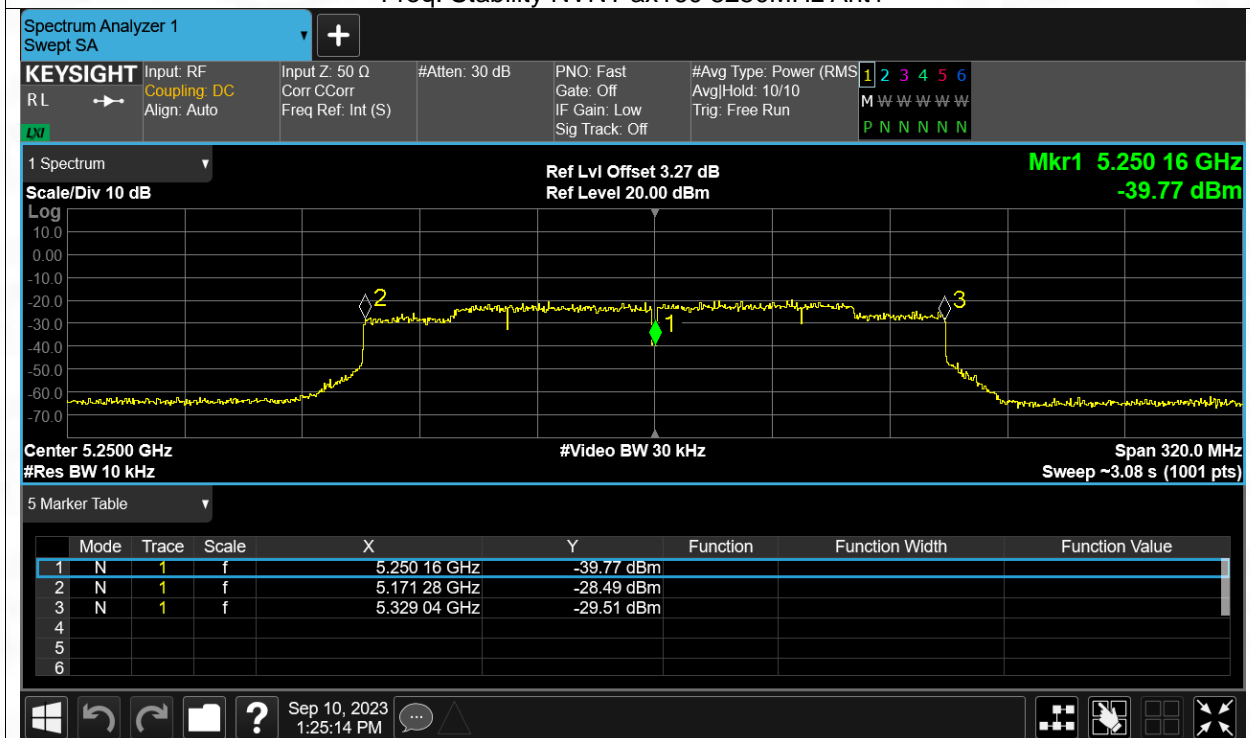


# Freq. Stability NVNT ax160 5570MHz Ant1




# Freq. Stability NVNT ax20 5180MHz Ant1

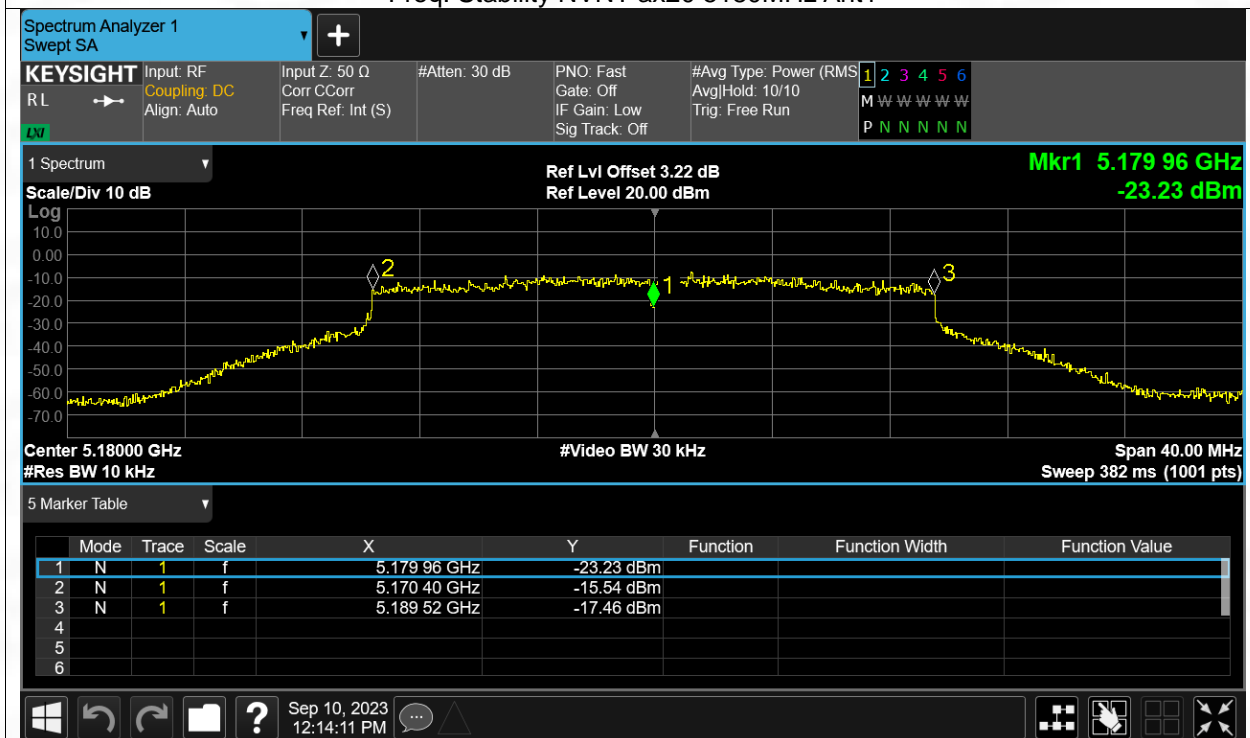


# Freq. Stability NVNT ax20 5240MHz Ant1

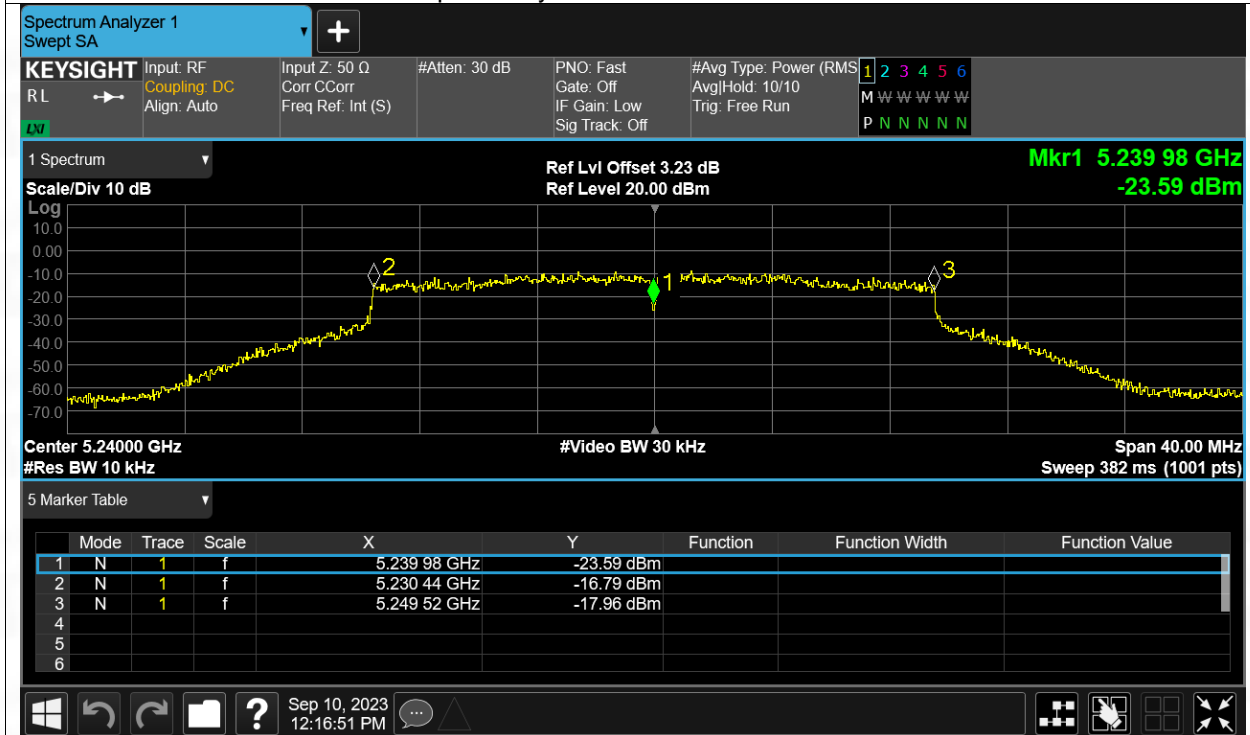


# Freq. Stability NVNT ax20 5260MHz Ant1

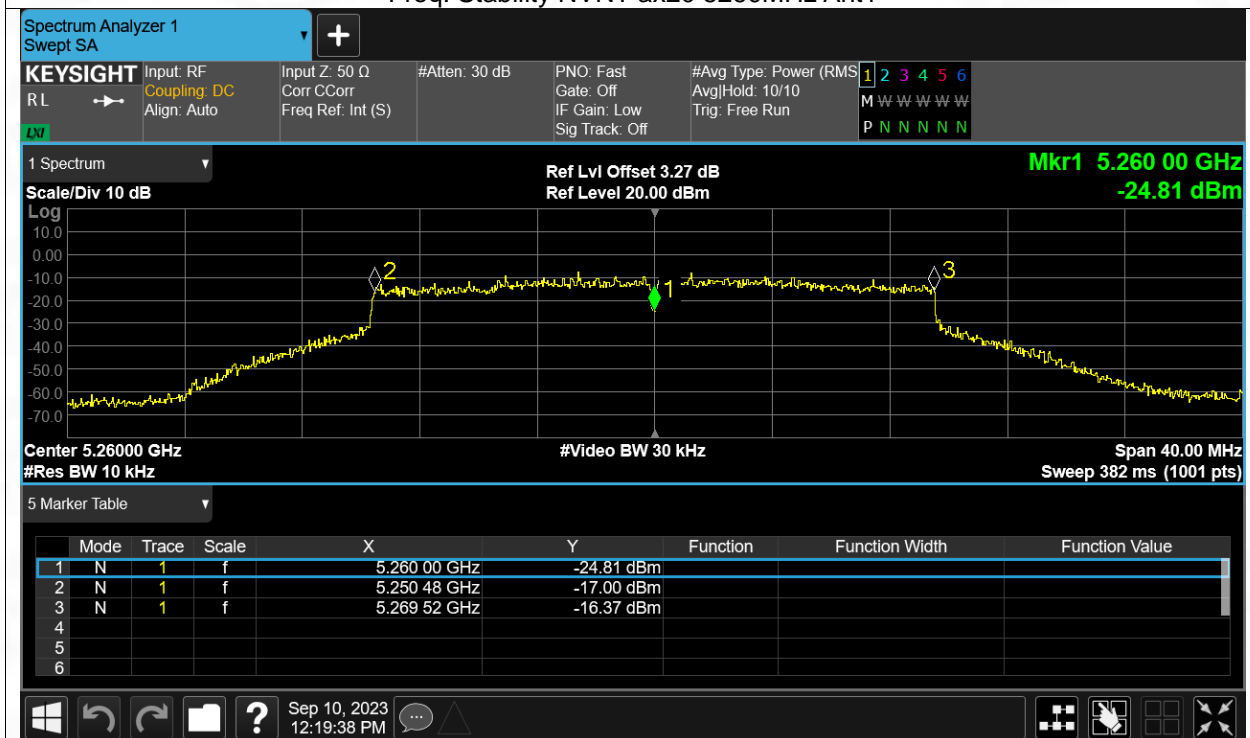


# Freq. Stability NVNT ax20 5320MHz Ant1

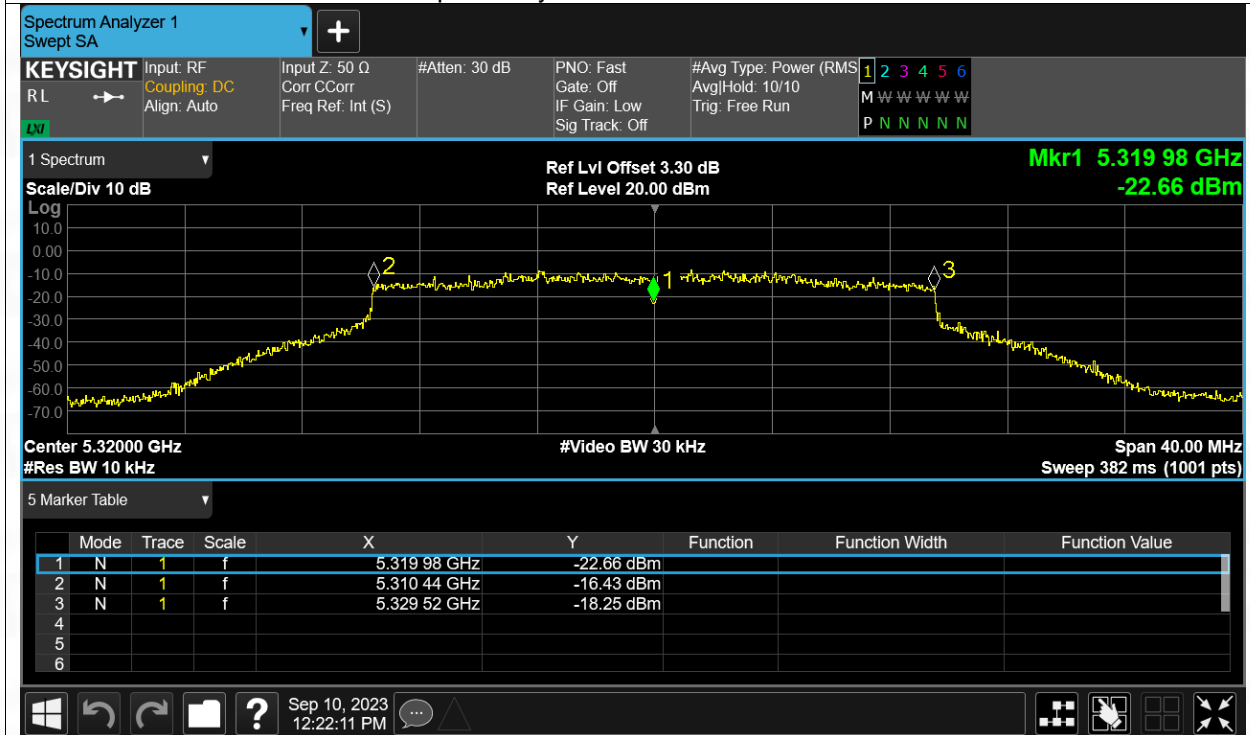


# Freq. Stability NVNT ax20 5500MHz Ant1

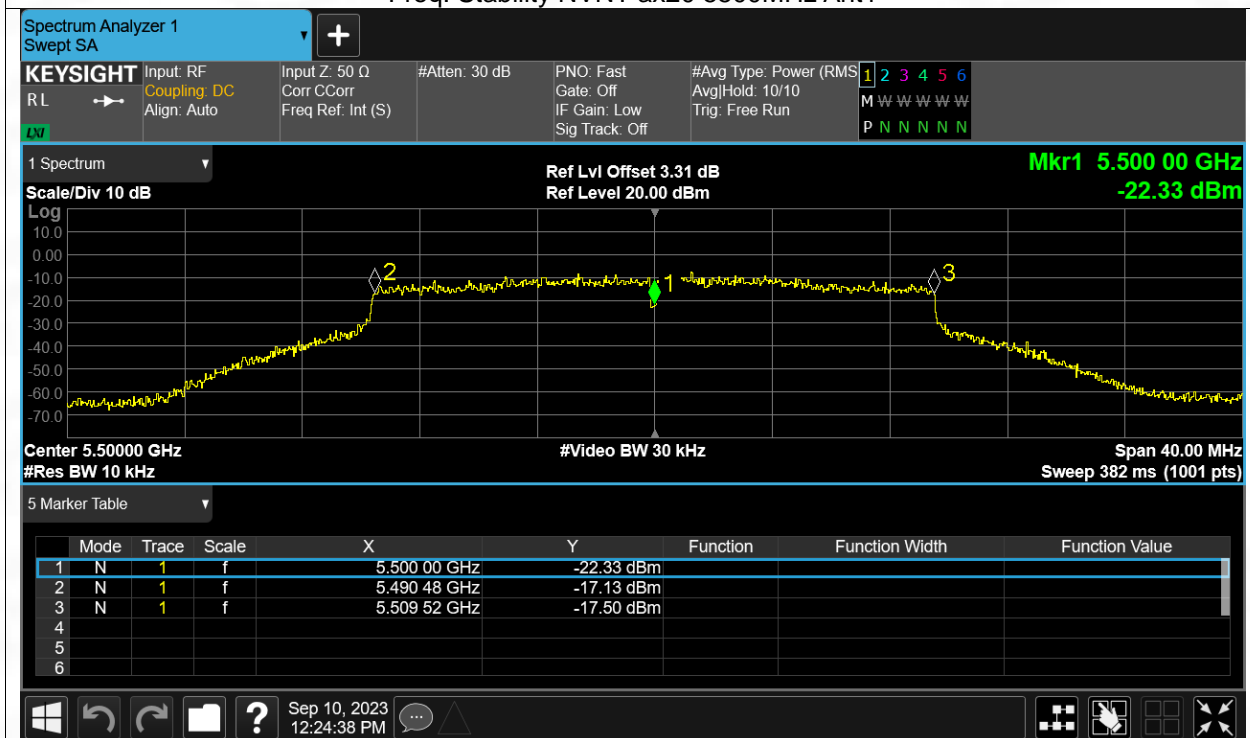


# Freq. Stability NVNT ax20 5700MHz Ant1

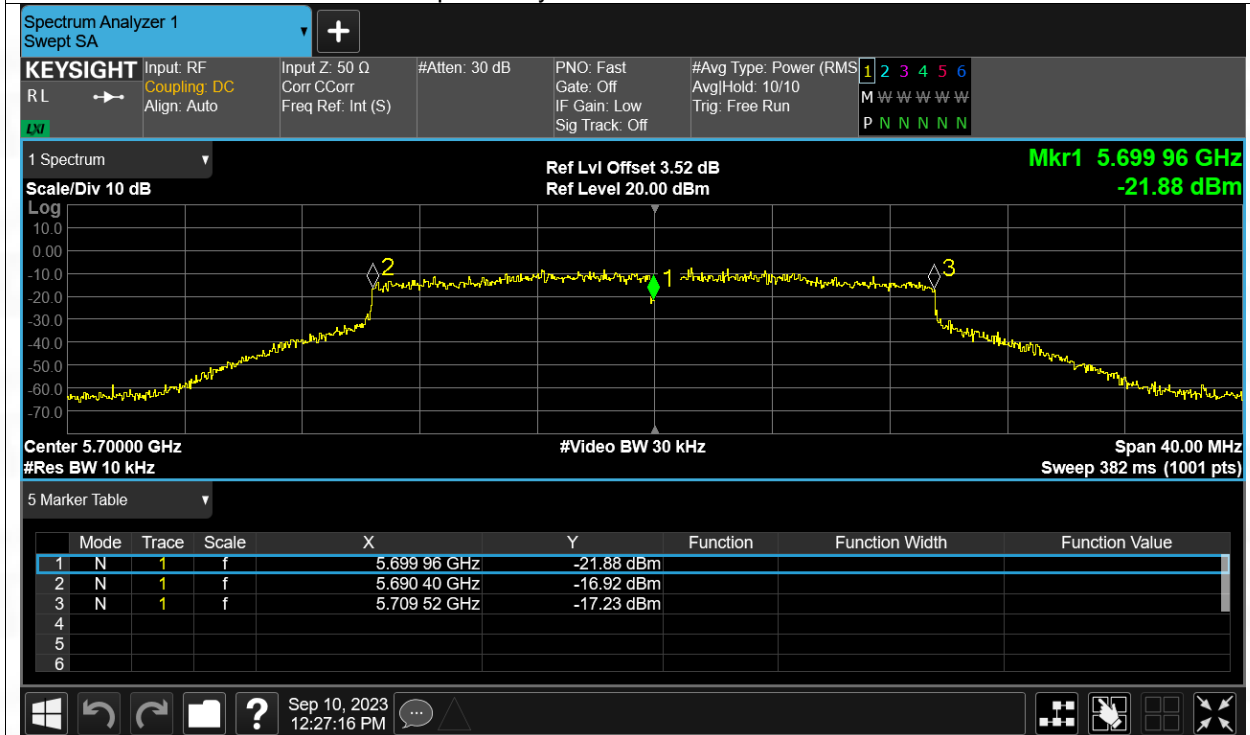


# Freq. Stability NVNT ax20 5745MHz Ant1

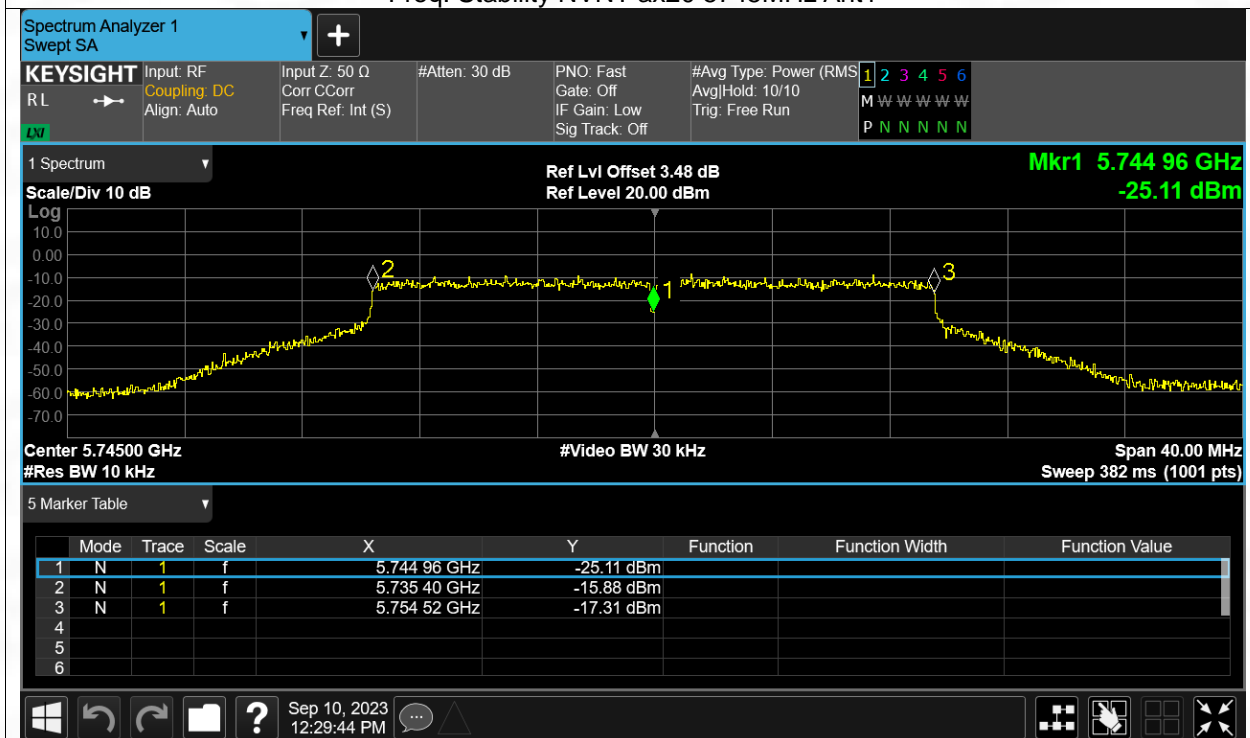

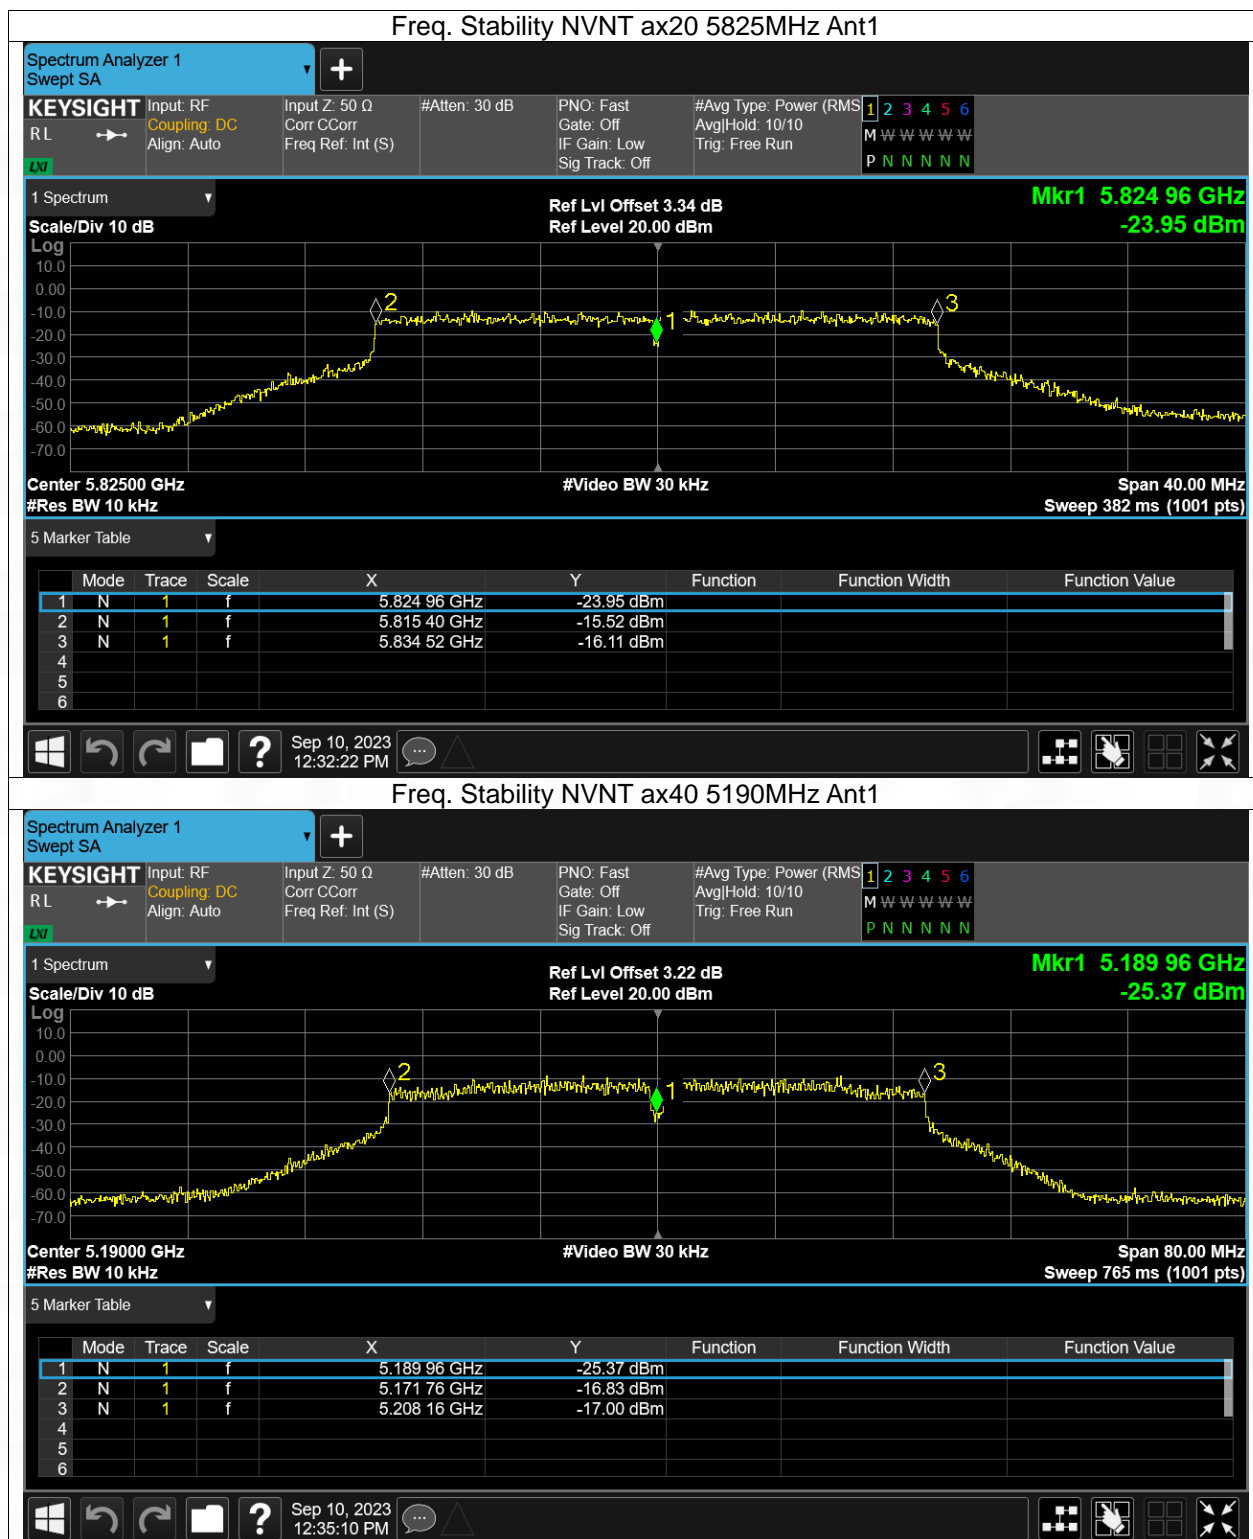





# Freq. Stability NVNT ax40 5310MHz Ant1

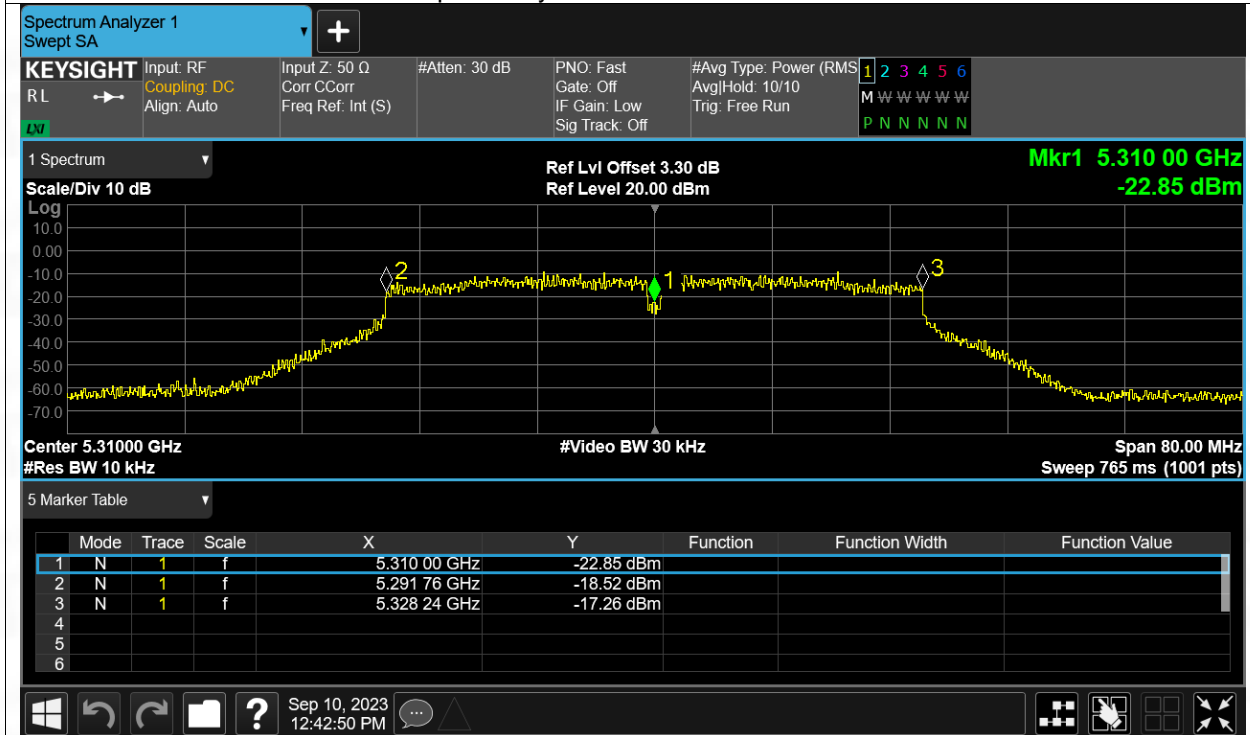


# Freq. Stability NVNT ax40 5510MHz Ant1

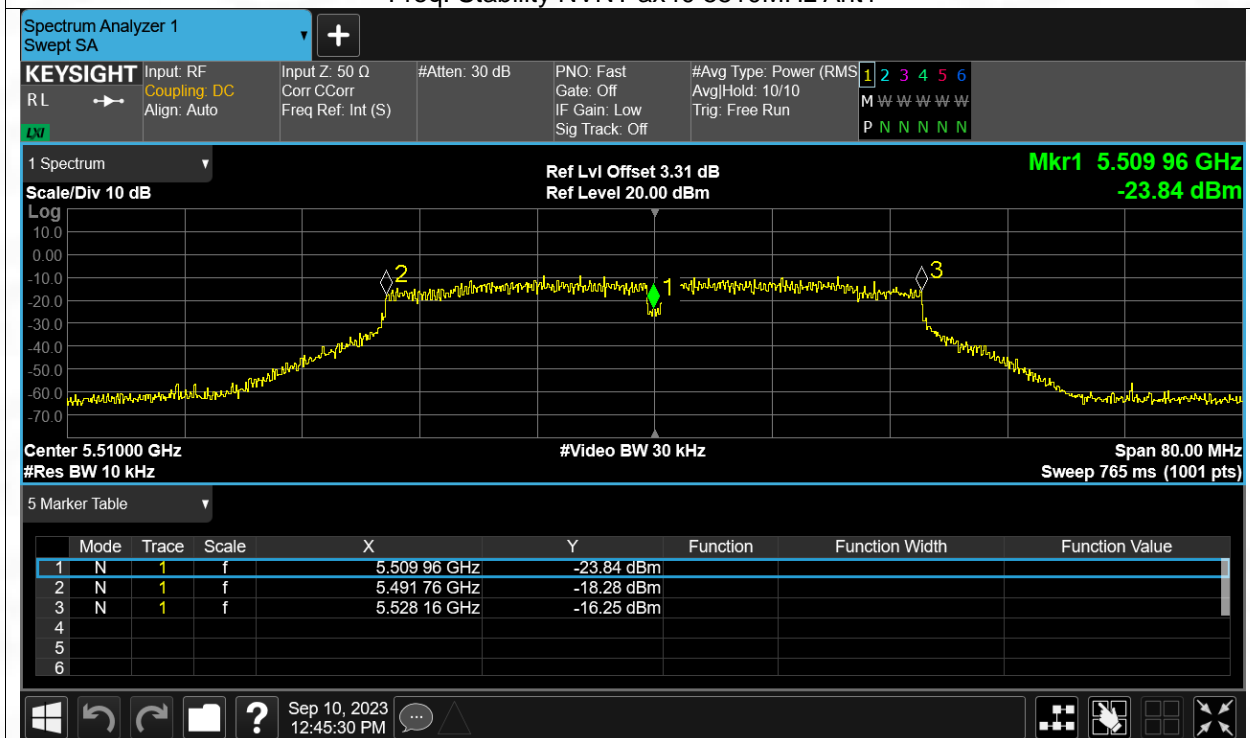




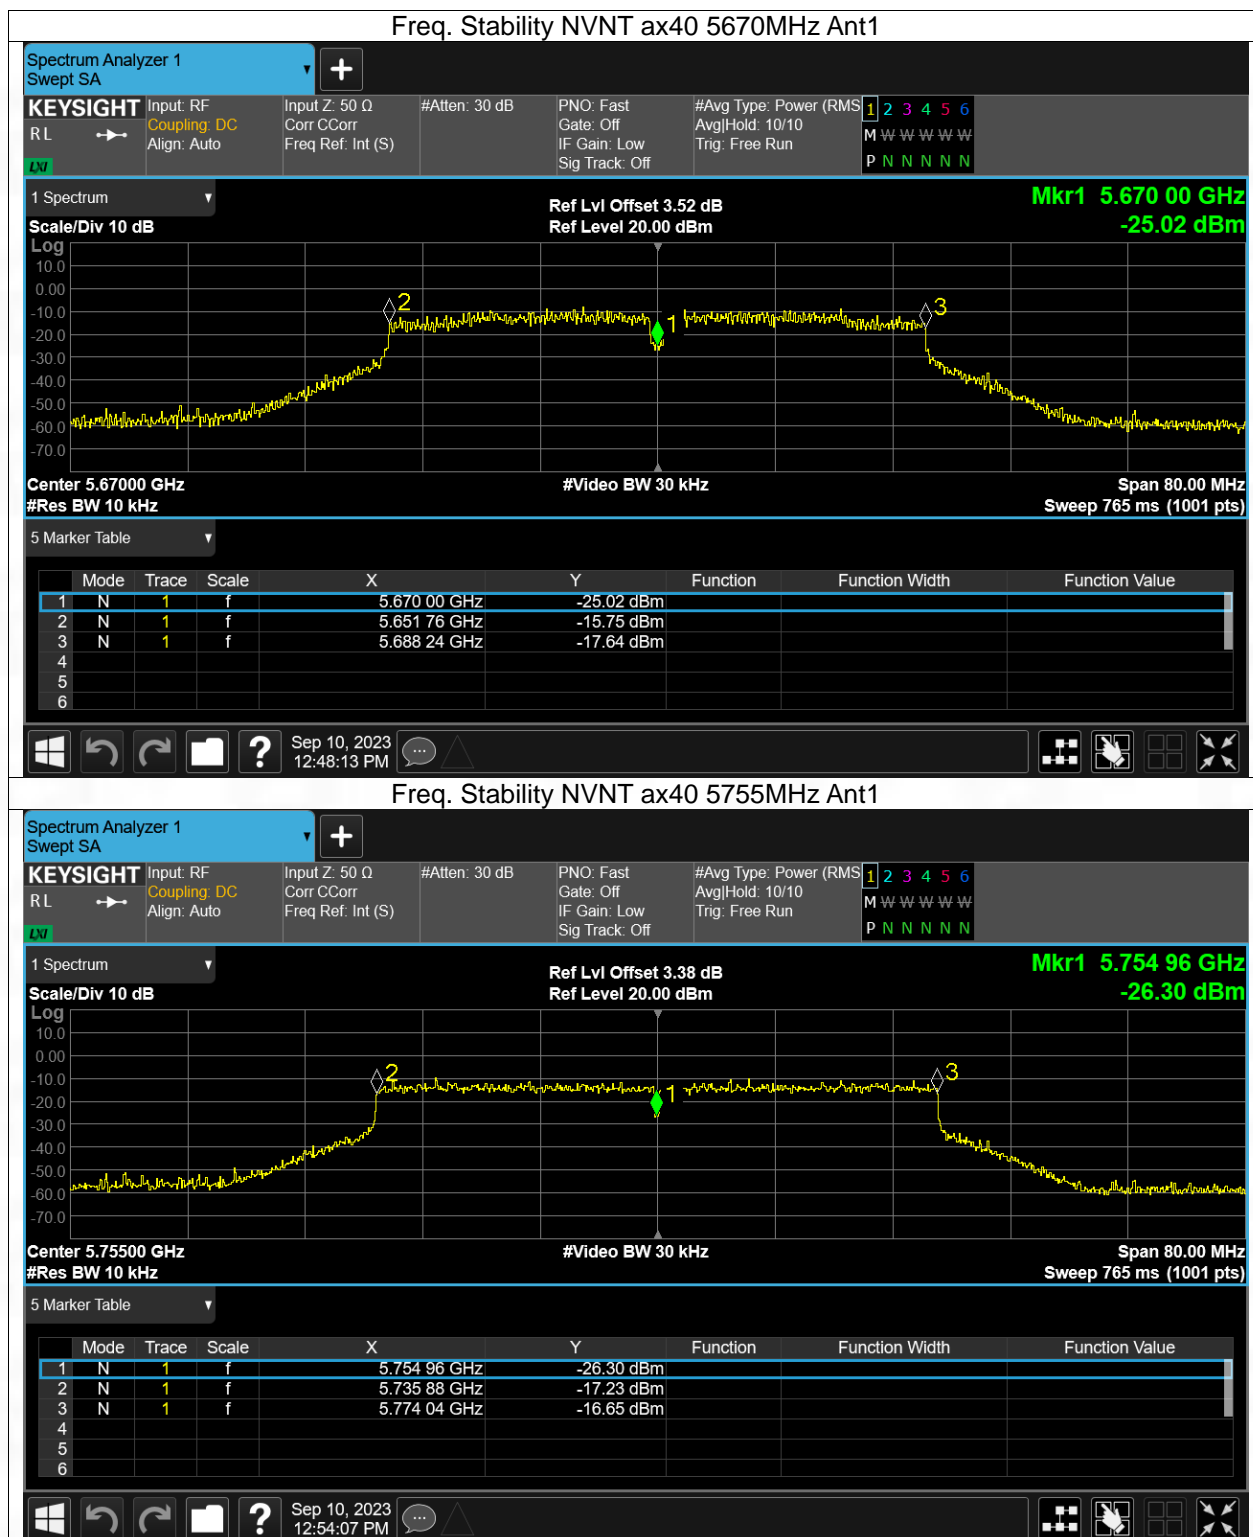


# Freq. Stability NVNT ax40 5795MHz Ant1

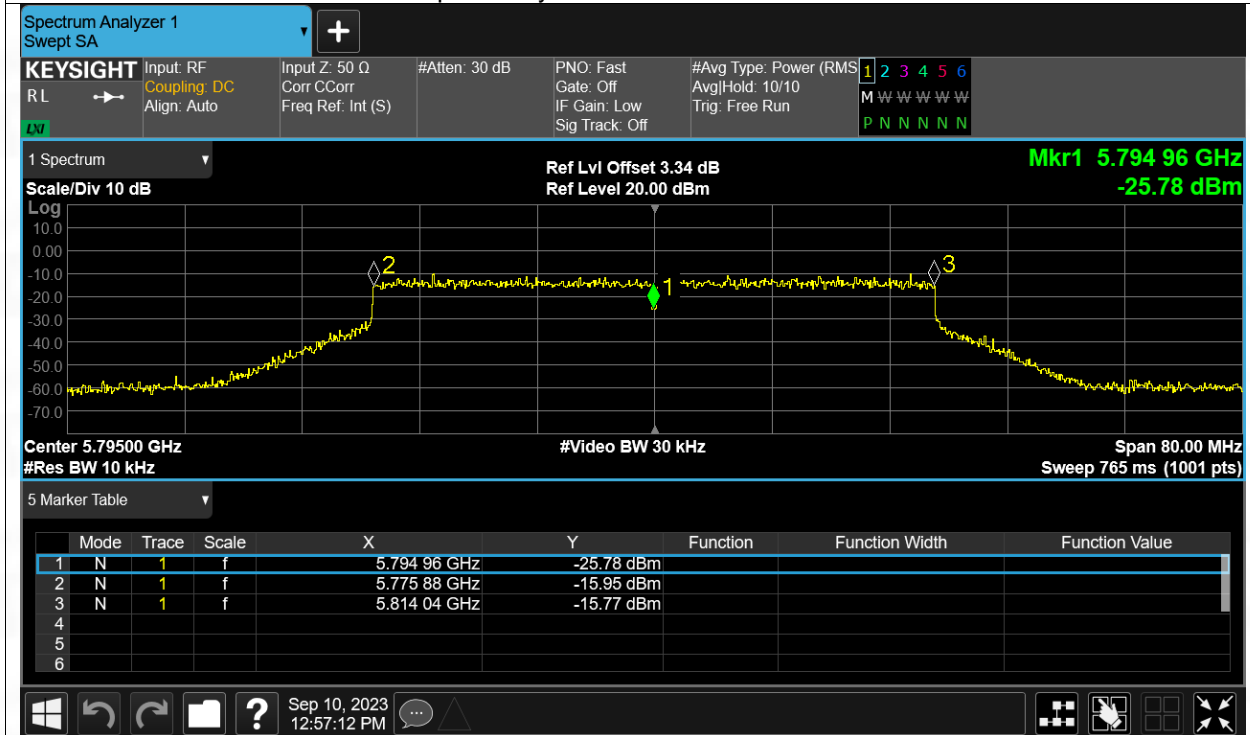


# Freq. Stability NVNT ax80 5210MHz Ant1

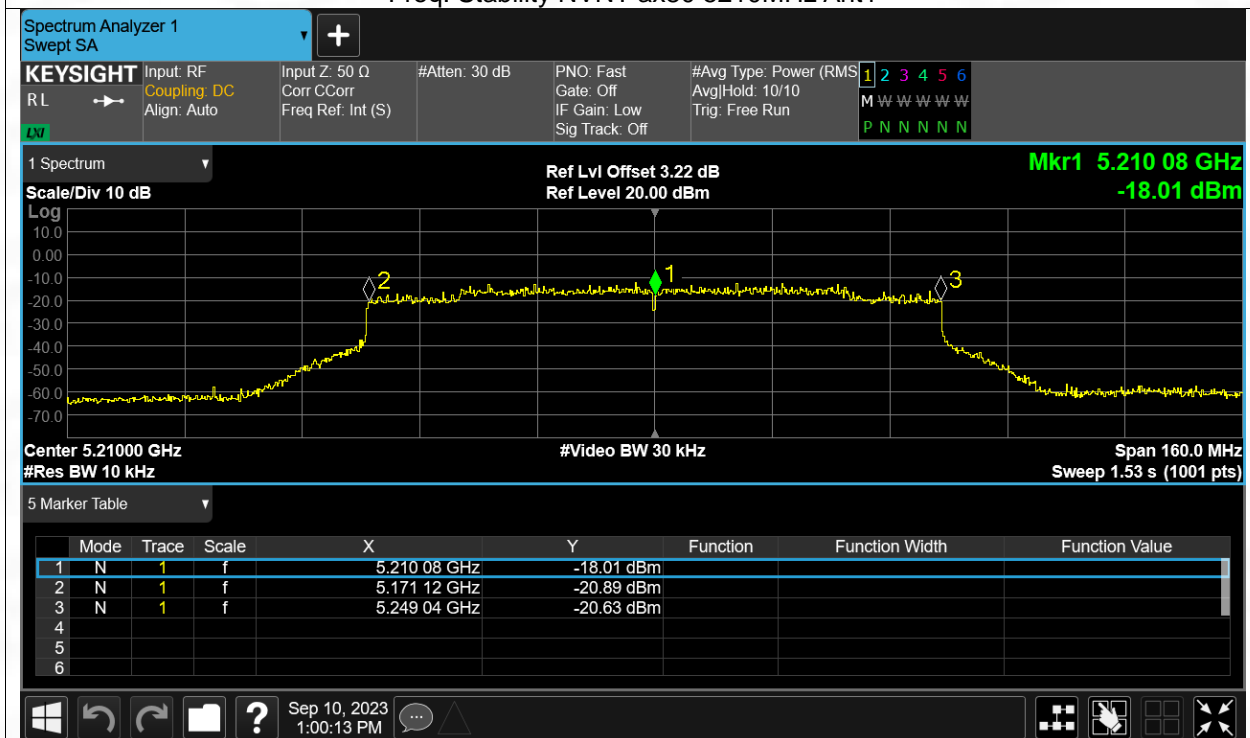


# Freq. Stability NVNT ax80 5290MHz Ant1

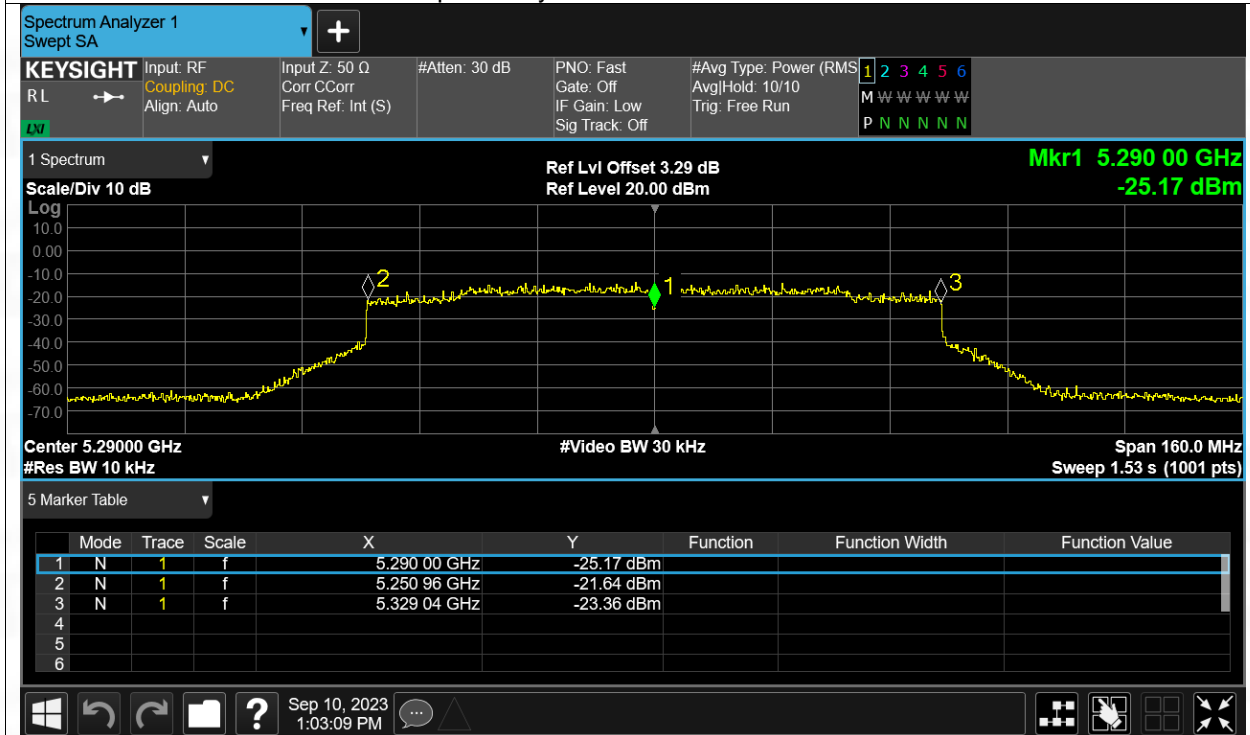

# Freq. Stability NVNT ax80 5530MHz Ant1

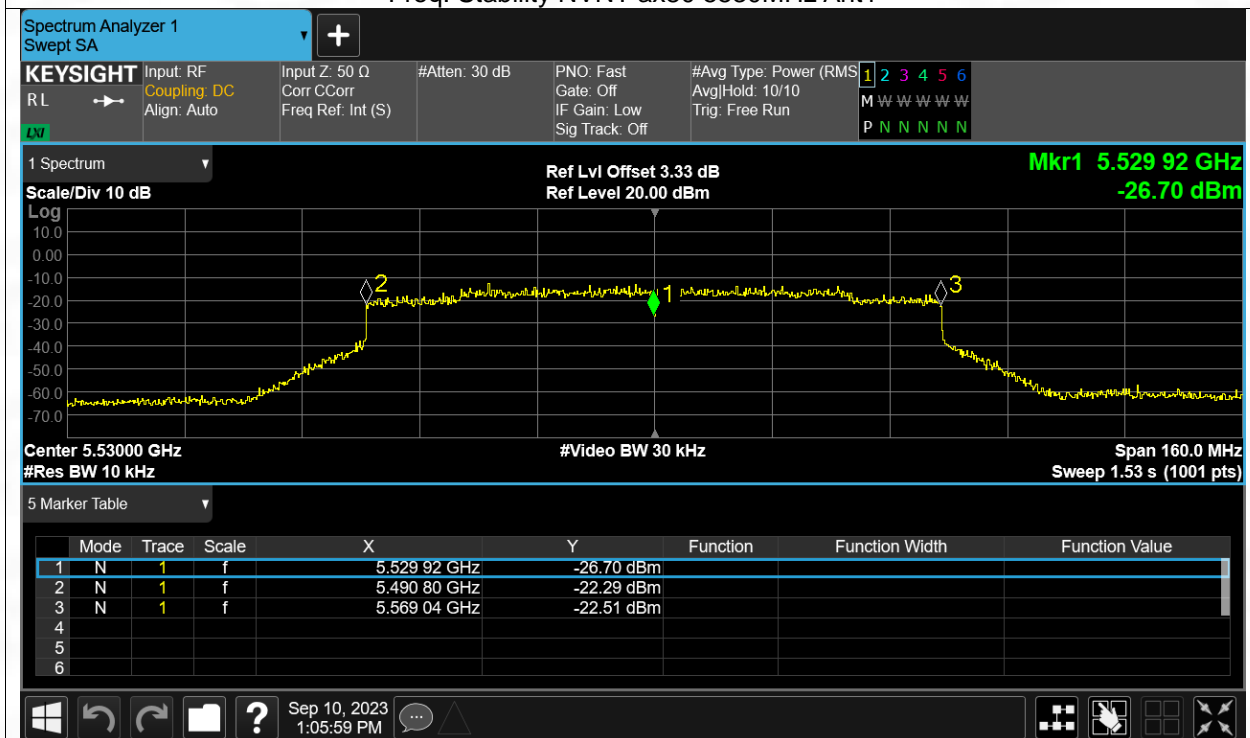

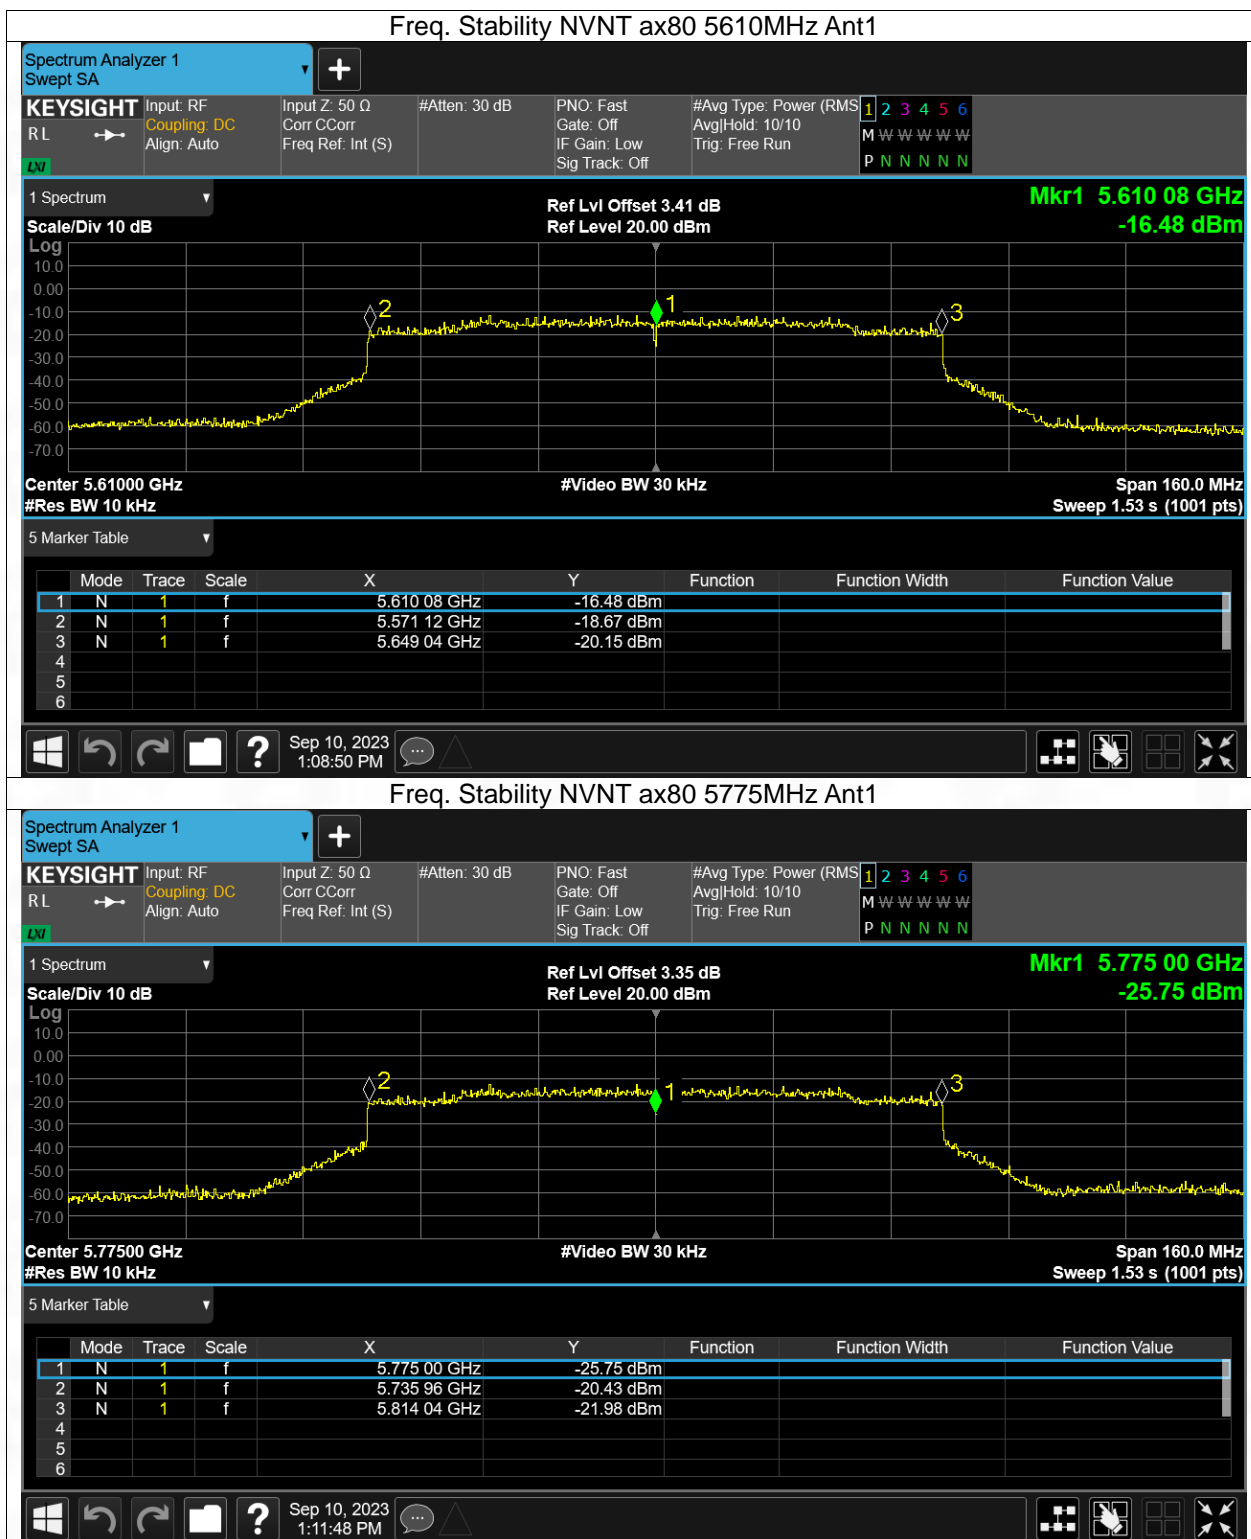

BTF Testing Lab (Shenzhen) Co., Ltd.

F101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street,  
Bao'an District, Shenzhen, China

[www.btf-lab.com](http://www.btf-lab.com)

**-- END OF REPORT --**