

USER MANUAL

使用说明书

EHW08 BT Earpiece

EHW08 蓝牙耳机



5202010063627A

Preface


Thank you for purchasing this product. To derive optimum performance from the product, please carefully read this manual before use.


This manual is applicable to the following product:

EHW08 BT Earpiece

Icon Conventions

The following icons are available through this manual:

 **NOTE**: Indicates references that can further describe the related topics.

 **CAUTION**: Indicates situations that could cause data loss or equipment damage.

Precautions

For Safety

- Do not drop or crash the product. Otherwise, the product may malfunction.
- Do not place the product near fire or under direct sunlight for a long time. Otherwise, it may cause fire and other faults.
- While driving, do not use the product. Otherwise, it may lead to traffic accidents, and the Company shall not be responsible for such accidents.
- Do not disassemble or refit the product. Otherwise, it will cause product damage, electric shock, fire, and other accidents.
- Do not put the product in the mouth or the place easy to be touched by children to avoid injuries.
- Use the product in the temperature from -15°C to +60°C. If the temperature is beyond this range, the product may not be

normally used.

- Use the accessories of the Company. The accessories of other companies may be incompatible with the product.

For Charging

- Use the USB cable attached with the product. Otherwise, it may cause fire.
- If the product is not used for a long time, charge it at least once every three months to avoid battery damage caused by excessive discharge.
- Charge the product by power adapter or connecting to the PC through the USB data cable at room temperature. Avoid charging near the fire or under high temperature.
- After charging is completed, disconnect the product from the power adapter or the PC. Otherwise, it may cause fire.
- If you smell something burned, feel the product is hot, or find other abnormal atmospheres, stop charging the product. Otherwise, it may cause fire.

Packing List

Please unpack carefully and check that you have received the following items. If any item is missing or damaged, contact your local dealer.

Item	Quantity (PCS)	Item	Quantity (PCS)
EHW08 BT Earpiece	1	USB Cable	1
Silicone Earmuffs	2	User Manual	1

NOTE


Pictures in this manual are only for reference.

Product Overview

Introduction

EHW08 BT earpiece is an accessory that allows you to speak through the **PTT** key and control the volume. The product is compact and light, and comfortable to wear.

Product Layout

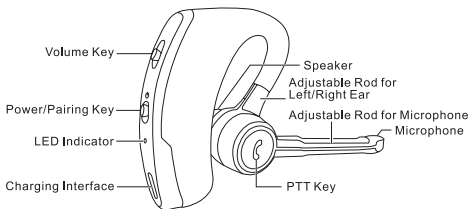

LED Indicator

LED Indicator	Description
Flashing blue once every three seconds	The product is running or in standby.
Flashing red and blue once every two seconds	The battery power is low.
Flashing red once every second	The product is being charged.

LED Indicator	Description
Glowing red	The product is fully charged.
Flashing red and blue alternatively	The product is switching to the pairing mode.

Alert Tone

Alert Tone	Description
Seven tones with pitch increasing	The product is being turned on.
Three tones with pitch decreasing	The product is being turned off.
Two tones with pitch increasing	The product is switching to the pairing mode.
A tick and a beep	The product is connected with a BT device.
Two beeps	The product is disconnected from a BT device.
Five tones with pitch decreasing every minute	The battery power is low.

Before Use

Charging the Battery



CAUTION

If the product is not charged for a long time, the battery service life will be reduced. Charge the product at least once every three months.

Before use, charge the product for two hours.

When the LED indicator flashes red once every second, the product

is being charged. When the LED indicator glows red, the product is fully charged.



Pairing

Before use, pair the product with the terminal. After the initial BT pairing, the BT connection will be established automatically in future use.

1. Turn off the product.
2. Push and hold the **Power/Pairing** key toward the power icon for ten seconds.

When the LED indicator flashes red and blue alternatively, the product has switched to the pairing mode.

3. Pair with the product on the terminal. For details, refer to the user manual of the terminal.

When the LED indicator flashes blue once every three seconds, the product has been paired with the terminal.


Wearing the Product

You can wear the product on the left or right ear.


1. Adjust the **Adjustable Rod for Microphone** and **Adjustable Rod for Left/Right Ear** as shown in the following figure.

CAUTION


Do not rotate the adjustable rod by force. Otherwise, the product may malfunction.

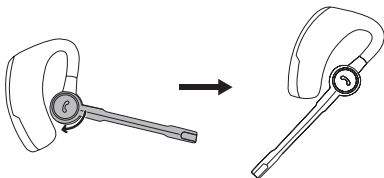

2. Rotate the **Adjustable Rod for Left/Right Ear** counterclockwise or clockwise to a proper position for left or right ear.

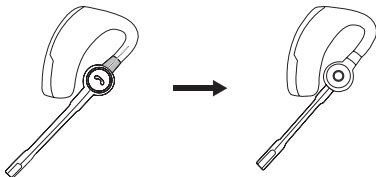

3. Adjust the **Adjustable Rod for Microphone** near the mouth.

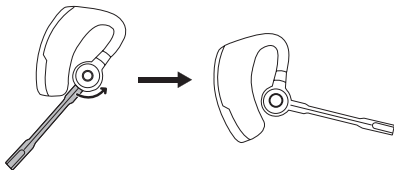

4. Hang the product on the ear, and then insert the silicone earmuff into your ears.

Basic Features

Turning on the Product

Push and hold the **Power/Pairing** key toward the power icon for three seconds.

The LED indicator flashes blue.

Turn off the Product

Push and hold the **Power/Pairing** key toward the power icon for six seconds.

The LED indicator flashes red quickly.

Transmitting and Receiving

After the product is connected with the terminal, you can communicate with other users through the product.

TX

1. Press and hold the **PTT** key, and then speak.
2. After speaking, release the **PTT** key.

RX

If someone speaks during a call, you can hear the voice from the speaker without any operation.

Adjusting the Volume

Increasing the Volume

Push and hold the **Volume** key toward the + icon.

Reducing the Volume

Push and hold the **Volume** key toward the - icon.

Care and Cleaning

To guarantee optimum performance as well as a long service life of

the product, please follow the tips below.

Product Care

- Do not pierce or scrape the product.
- Keep the product away from substances that can corrode the circuitry.

Product Cleaning



CAUTION

- Before cleaning, remove all cables first.
 - Make sure the product is completely dry before use.
- Clean up the dust and fine particles on the product surface and charging interface with a clean and dry lint-free cloth or a brush regularly.
 - Use neutral cleanser and a non-woven fabric to clean the surface and keys. Do not use chemical preparations such as stain removers, alcohol, sprays, or oil preparations, so as to avoid the surface and shell damage.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

European Union Directive Conformance

Hereby, the Company declares that the radio equipment type BT earpiece is compliance with Directive 2014/53/EU.



Operating Frequency Range(s): 2402–2480 MHz

The maximum RF Output Power: -10.34 dBm

Importer Information

Importer: Hytera Mobilfunk GmbH

Address: Fritz-Hahne-Str. 7 31848 Bad Münster Germany

Website: www.hytera-mobilfunk.com

Importer: HYTERA COMMUNICATIONS (UK) CO., LTD

Address: Hytera Houwe, 939 Yeovil Road, Slough Trading Estate,
Slough, Berkshire SL1 4NH, United Kingdom

Website: www.hytera.co.uk

致用户


非常感谢您对我们产品的青睐！为了确保您最大限度地享用本产品所带来的各项便利，请于使用前详细阅读本手册。


本手册适用于以下产品：

EHW08 蓝牙耳机

图标说明

本手册中会使用以下图标，各图标含义如下：

 **备注**：表示对正文内容的补充、说明和强调。

 **注意**：表示可能导致设备损坏或数据丢失的事项。

注意事项

安全注意事项

- 禁止跌落以及冲击等有害本产品的行为，否则可能会造成本产品故障。
- 请勿长时间将本产品放置在近火或阳光直射的地方，否则可能会引起火灾。
- 禁止在骑乘摩托车的同时，进行本产品的设定变更、通话等操作，以免引起交通事故。因骑乘过程中操作本产品或不当使用本产品而产生的任何伤害，本公司概不负责，敬请谅解。
- 避免骑乘中的通话行为，养成在路边安全停车之后再行通话的习惯。
- 请勿拆卸、改装本产品，否则可能会造成产品破损、触电或发生火灾等事故。
- 请勿将本产品放入口中，避免发生伤害事故。
- 本产品可在 -15℃～60℃ 的温度环境中使用，超过此温度范围，本公司无法保证产品可以正常使用。
- 本公司产品所附配件均经过认证检验，如使用非本公司认证

的配件可能影响产品正常使用。

充电注意事项

- 请务必使用本公司附带的USB线充电，否则可能会引起火灾。
- 如长时间不使用本产品时，至少三个月充电一次，以免过度放电而导致电池损坏。
- 充电请使用PC的USB口或者附带USB口输出的电源适配器，并在常温下进行。请避免在近火处进行充电，以免引起火灾。
- 充电完成后，请不要使其长时间处于充电状态，以免引起火灾。
- 充电过程中，如果发生异臭、发烫等异常时，请立即切断电源停止充电，以免引起火灾。

包装清单

包装盒内含有以下物品，如有任何物品丢失或损坏，请与您所购产品的经销商或我司联系。

物品	数量	物品	数量
蓝牙耳机	1	USB线	1
硅胶耳套	2	说明书	1



备注


本手册中的图片仅供参考，请以实物为准。

熟悉产品

产品介绍

EHW08 是一款集 PTT（Push-to-Talk，按住通话）和音量控制功能于一体的蓝牙耳机。本产品具有小巧轻便、佩戴舒适等特点。

部件介绍

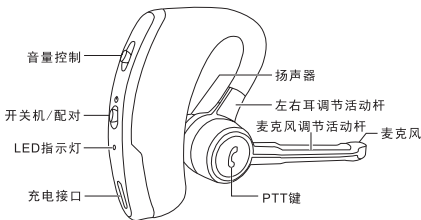

LED 指示灯

指示灯		含义
工作/待机指示	蓝色每3秒闪烁1次	工作/待机
低电指示	红蓝色每2秒闪烁1次	电量低
充电指示	红色每1秒闪烁1次	正在充电
	红色常亮	充电完成
配对指示	红蓝交替闪烁	进入配对模式

提示音

提示音	含义
嘟嘟嘟嘟嘟嘟登（升调）	开机提示
登嘟嘟（降调）	关机提示
嘟..督（升调）	进入配对模式
嘀嘟	建立蓝牙连接
嘟嘟	断开蓝牙连接
嘟嘟嘟嘟嘟（降调，每分钟响1次）	电量低

用前准备

充电

注意

如果长时间不对本产品充电，电池寿命会大大缩短。因此建议您三个月至少为本产品充一次电。

为了更好地使用本产品，请确保在使用前先充电两个小时，然后再进行使用。当LED指示灯呈每1秒闪烁1次红色时，表示本产品正在充电；当LED指示灯变为红色常亮，表示本产品充电完成。



配对


在使用本产品前需要先与终端进行蓝牙配对，蓝牙配对成功后自动建立连接才能正常使用，后续使用时开机将自动建立连接。

1. 在关机状态下往电源图标方向拨【开关机/配对】键10秒，LED指示灯呈红蓝交替闪烁，进入蓝牙配对模式。
2. 操作终端与本产品进行蓝牙配对，具体操作请参见对应终端的《说明书》。


当本产品LED指示灯由红蓝交替闪烁变为每3秒闪烁1次蓝色时，说明本产品和终端配对与连接成功。

佩戴

1. 确定佩戴耳机的耳朵，以耳机右耳佩戴状态调整至左耳佩戴状态为例。
2. 调整麦克风调节活动杆与左右耳调节活动杆在一条直线上。

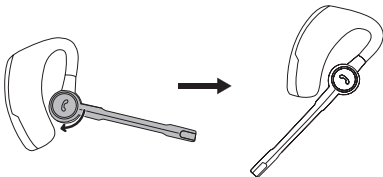


3. 左右旋转调整左右耳调节活动杆至左耳佩戴状态。

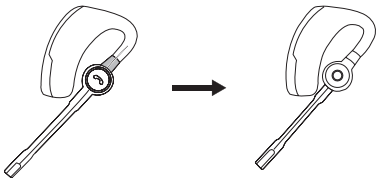

注意

切勿强制调整左右耳调节活动杆，根据可活动方向调整，否则将损坏本产品。

4. 调整麦克风调节活动杆靠近嘴巴位置。

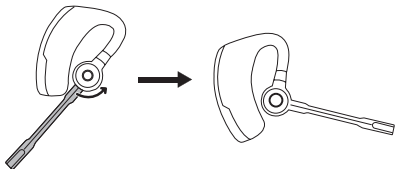

5. 将耳机挂在左耳上并将硅胶耳套塞入耳朵，调整耳机至最舒适状态。

基本功能

开机与关机

开机

在关机状态下往电源图标方向拨【开关机 / 配对】键 3 秒，LED 指示灯呈蓝色慢闪。

关机

在开机状态下往电源图标方向拨【开关机 / 配对】键 6 秒，LED 指示灯呈红色快闪。

发射与接收

本产品与终端连接成功后，本产品通过连接终端与其他终端进行通话。

发射

按住【PTT】键讲话，讲话完毕松开【PTT】键。

接收

如呼叫过程中有人讲话，您无需任何操作即可从扬声器中听到语音。

调节音量

增大音量

往音量“+”图标方向拨【音量调节】键并持续按住，音量将由小增大至最大音量。

减小音量

往音量“-”图标方向拨【音量调节】键并持续按住，音量将由大减小至最小音量。

保养与清洁

为了保证本产品发挥其良好性能，以及延长其使用寿命，请熟悉以下内容，以便更好地对本产品进行日常保养与清洁。

保养

- 请勿用硬物穿刺或刮花本产品。
- 请勿将本产品存放于含有腐蚀电子电路物质的环境。

清洁

注意

- 清洁之前，请取出 USB 线。
 - 清洁之后，务必保证本产品彻底干燥，否则请勿使用。
-
- 请定期使用洁净干燥的无绒布或毛刷拭去本产品表面及充电接口附着的粉尘。
 - 本产品表面和按键极易变脏。可用中性洗涤剂和无纺布对其进行清洁，请勿用去污剂、酒精、喷雾剂或石油制剂等化学药剂进行清洁，以避免产品表面和外壳受损。