

USER MANUAL | CZ-800/Quantum



# TABLE OF CONTENTS



## INTRO

Safety .....	3-5
Dimensions .....	6
Contents .....	7



## CHAIR

Move & Clearance .....	8
Components .....	9
Massage Points .....	10
Specifications .....	11



## MASSAGE

Widescreen Touch-Pad Interface .....	12-14
Try Me .....	15-17
Custom Program .....	18-23
Auto Program .....	24-25
Spot Program .....	26-27
Stretch Program .....	28-29
Spa Auto .....	30-31
Spa Manual .....	32-36
Chair Doctor .....	37-39
Heat Therapy .....	40-41
My Favorites .....	42-43
Recline .....	44-45
Settings .....	46-55
User Account .....	56-59

# TABLE OF CONTENTS



CARE

Grounding Instruction .....	60
Troubleshooting .....	60
Care and Storage .....	60
Warranty .....	61

# SAFETY PRECAUTIONS

We're looking out for you.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using (this appliance).

### DANGER

-To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Never use pins or other metallic fasteners with this appliance.
- Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- Keep Dry-Do not operate in a wet or moist condition.

### WARNING

-To reduce the risks of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Do not carry this appliance by supply cord or use cord as a handle.
- Keep the cord away from heated surfaces.
- Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Keep children away from extended foot support.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Temperatures sufficiently high to cause burns may occur regardless of the control setting.

- Do not use on an infant or invalid or on a sleeping or unconscious person.
- Do not use on insensitive skin or on a person with poor blood circulation.
- Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Do Not Crush – Avoid sharp folds.
- Do not use massager in close proximity to loose clothing or jewelry.
- Keep long hair away from massager while in use.



Warning

BURNS WILL RESULT FROM IMPROPER USE  
READ INSTRUCTIONS BEFORE USING  
DO NOT WET – DO NOT USE PINS  
NEVER REMOVE COVER.




Attention

DES BRULURES RÉSULTAT D'UNE UTILISATION INADÉQUATE  
LIRE LES INSTRUCTIONS AVANT L'UTILISATION  
NE PAS MOUILLER -NE PAS UTILISER DE  
BROCHES N'ENLEVEZ JAMAIS LE COUVERCLE.

### Warning:

When using the massage chair, the arm should not be placed on the wireless charger. The minimum distance between the arm and the wireless charger is 80mm.

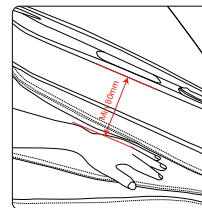

## SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only.

### 1. Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 104°F or higher.
- Do not expose the massage chair to heaters, stoves or direct sunlight.
- Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for home use and not for commercial purposes.



#### Caution

- This massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait for one hour before use. This is because its performance may not be at optimum level, as there may be water droplets on the mechanical parts due to consideration. Using the massage chair under such conditions may result in malfunction.

## 2. Safety Precautions

- It is not recommended to use the massage chair for more than 30 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you feel any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use. Please do not use the product if you are not feeling well.
- It is not recommended to use the massage chair for more than 30 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you feel any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use. Please do not use the product if you are not feeling well.

## 3. People with Medical Conditions

Consult your doctor before use if you:

- Are under medical rest as ordered by a doctor.
- Have spinal disorders, an abnormal spinal condition or have suffered a spinal injury.
- Have back problems.
- Have diabetes, osteoporosis or sensory impairment.
- Have joint dysfunction such as rheumatism, hammertoe or gout.
- Have a pacemaker or other electronic medical devices.
- May be pregnant.
- Have phlebitis or thrombosis.
- Have an increased risk for blood clots.
- Had recent surgery.
- Have surgical pins, screws, or anything mechanical in the legs, ankles or feet.



#### Caution

- This massage chair is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction or instruction concerning use of the massage chair by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the massage chair.
- Avoid using the massage chair under the influence of alcohol.
- Do not apply massage rollers directly on the head, elbow or knee joints, torso or abdomen.
- If your legs or feet slip off the leg rest during massage, do not force them back in as this may result in injury.
- Remove the power plug from the electrical outlet immediately should liquid be accidentally spilled onto the massage chair. Do not use wet hands to connect or disconnect the power plug from the electrical outlet.
- Do not tamper with the power cord or use the massage with a damaged cord as this may result in malfunction and electric shock.

## 4. Instances When the Massage Chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If liquid is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.

- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during operation.
- If there is power failure. Injury may occur when power is restored unexpectedly.
- If there is lightning.

## 5. Assembly and Repair of the Massage Chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electrical shock.
- This massage chair must only be professionally serviced or repaired. Do not attempt to disassemble or repair the massage chair by yourself.

## 6. Things to Be Noted About the Power Plug and Cord

- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock.
- When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch off the main power after use.
- Do not place the power cord under the massage chair or any other heavy objects.
- Do not wind the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage with a damaged cord or extension cord.
- Do not use the massage if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician.

# FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This equipment contains a certified radio transmission module:

FCC ID: YMX-ATS2853

IC: 7284A-ATS2853

FCC ID: 2A006-WLT8016

IC: 26141-WLT8016

## FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure requirement.  
The device can be used in portable exposure condition without RF striction.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:


- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :


- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

# DIMENSIONS

First, let's get your chair inside.

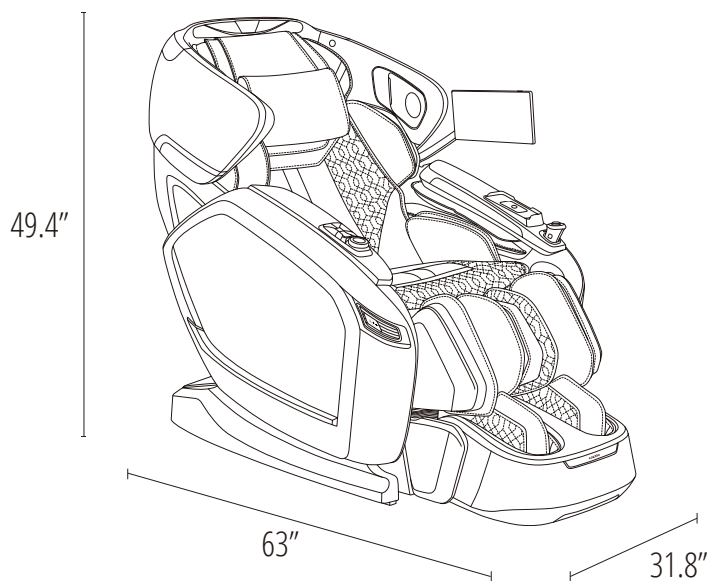


**Box 1**

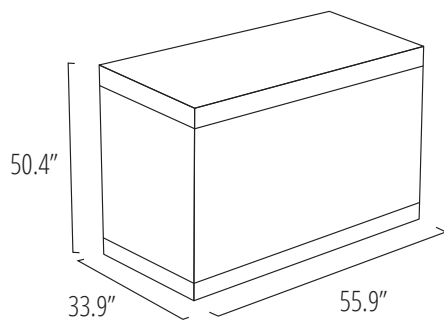

Base & Backrest


**Box 2**

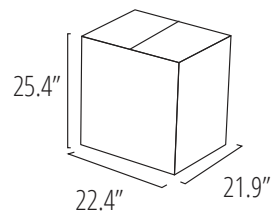

Footrest

# CONTENTS

Everything you need for a relaxing experience.

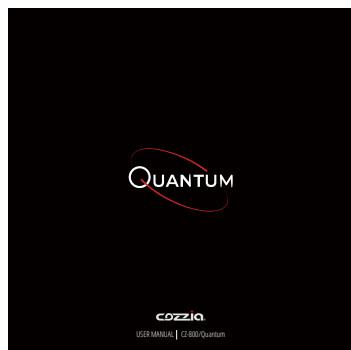


User Manual




Installation Manual




Warranty Postcard

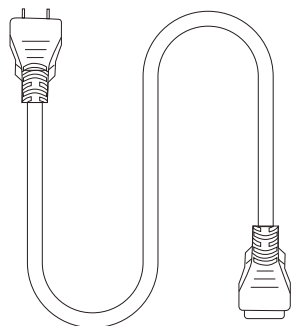

Power Cord

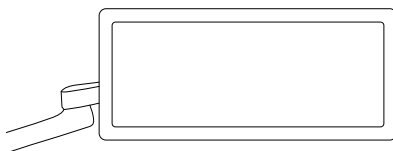

Widescreen Touch-Pad

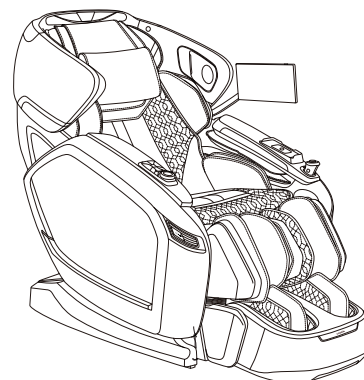


CZ-800/Quantum Massage Chair




# Move & Clearance

A few simple steps to find the best place for your new chair.

## HOW TO MOVE

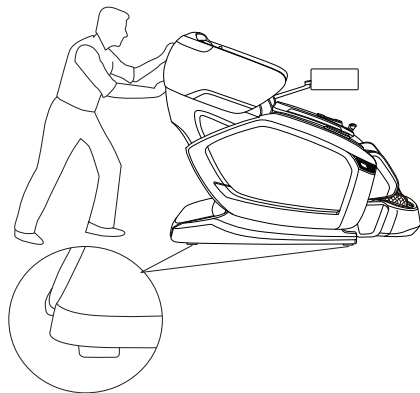


Move with a slight pull or push  
Caution: If you roll the chair on wood floor, marks may be left

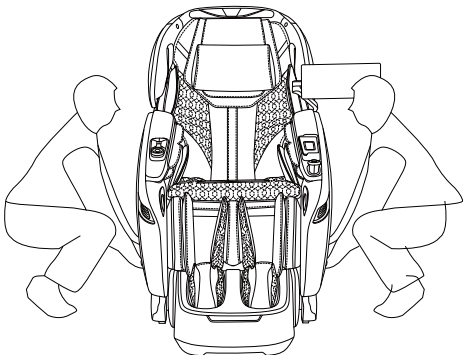


Two people are needed to lift the chair

## CLEARANCE

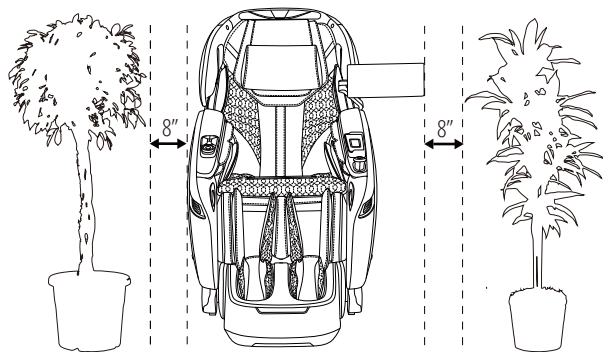


Reserve space on the left and right

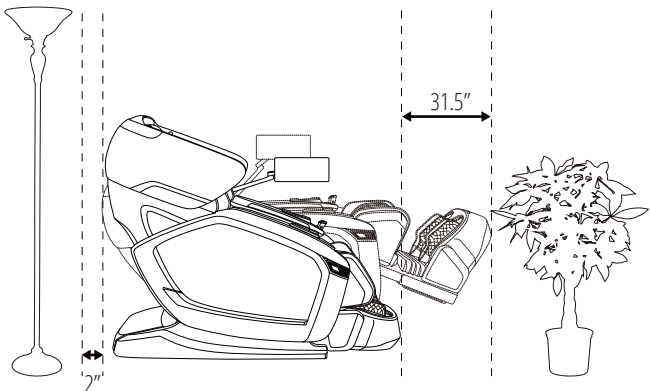

Reserve space on the front and back

# CHAIR COMPONENTS

Some of your chair's most important features.

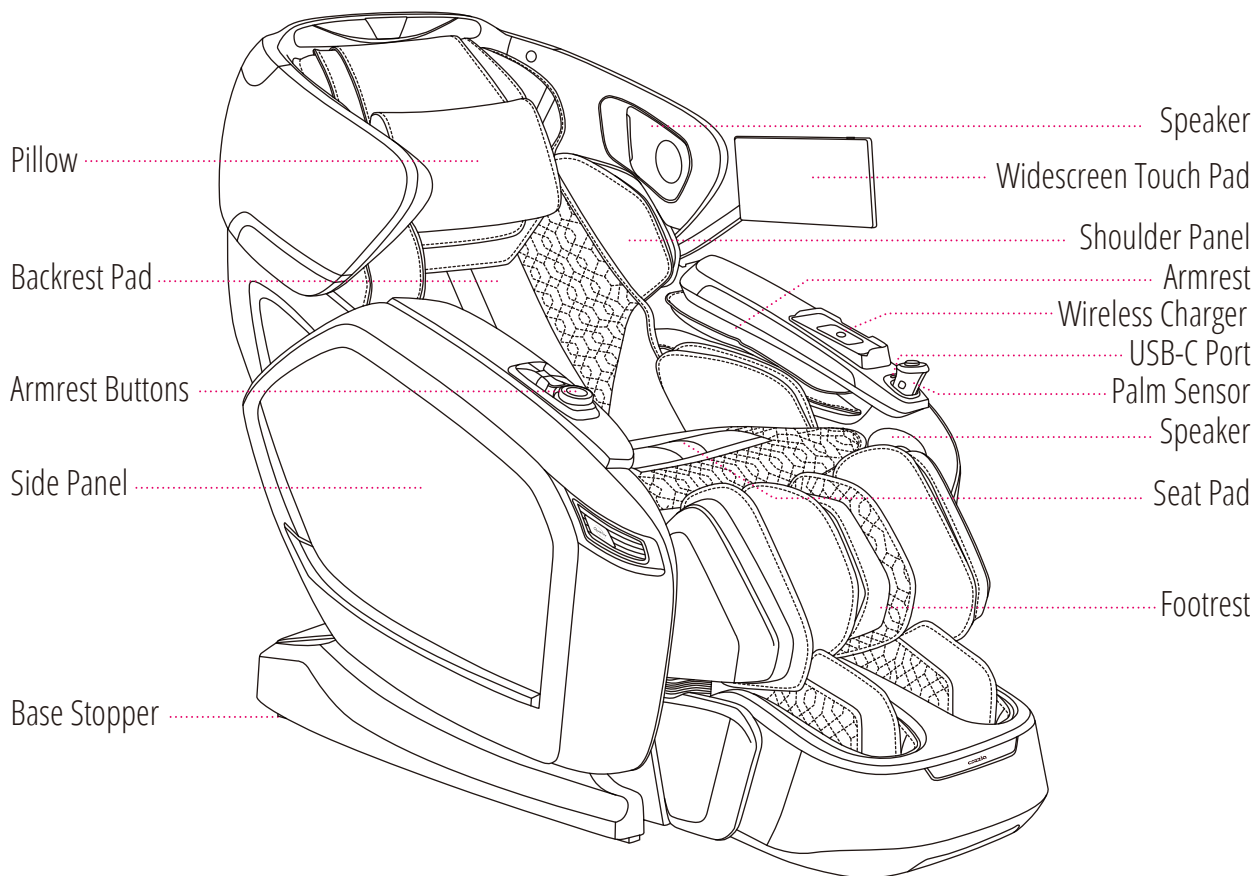


Note: The speaker will only operate when the massage chair is in operation



To play music using your massage chair's speakers, please connect your smartphone, tablet, or other electronic device to your chair using bluetooth. Note that the code to connect the bluetooth is "Cozzia Quantum".

# MASSAGE POINTS

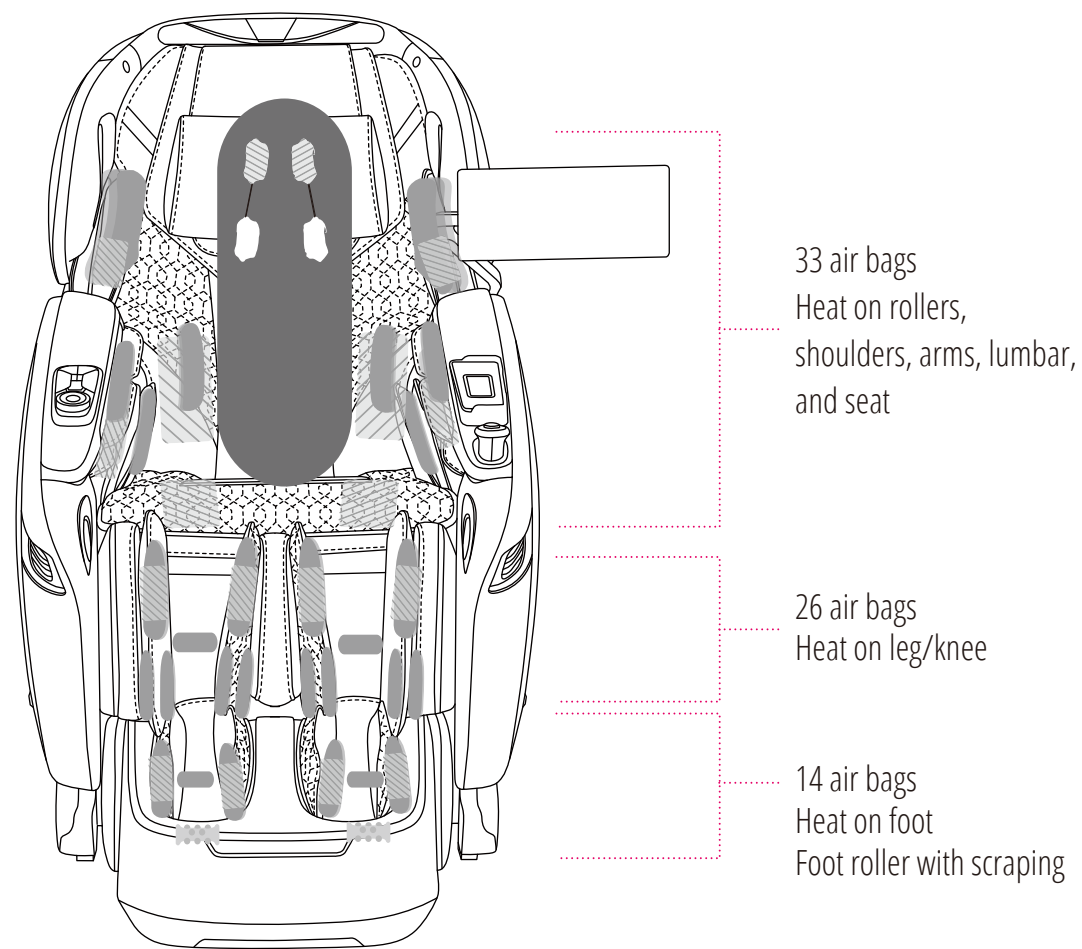


- Back Massage Mode
- Air Bag
- Heater
- Roller

# CHAIR SPECIFICATIONS


A few important facts about your massage chair.



**Model No.**  
CZ-800/Quantum




**Massage Time**  
5 to 30 minutes




**Dimensions (L x W x H)**  
Chair dimensions: 63" x 31.8" x 49.4"  
Reclined dimensions: 74.4" x 31.8" x 40.4"



**Shipping Weight**  
Gross weight: 334.9 lbs  
Net weight: 293.6 lbs



**Usage Condition**  
Environment temperature: 10°C-40°C  
Contrasting humidity: 30-85RH



**Storage Condition**  
Storage temperature: -20°C-60°C  
Storage humidity level: 30-85RH



**Rated Current**  
2.3A



**Rating**  
110-120V ~ 60Hz



**The maximum rated user weight**  
320 lbs



**Power of Monster Speakers**  
15x2W & 8x2W



**Length of Wiring**  
Power supply wiring: 70.9"




**Safety Feature**  
Equipped with child safety lock,  
leg rest safety sensor,  
and overheating and power surge detectors

# WIDESCREEN TOUCH-PAD INTERFACE

We have designed your massage chair’s tablet controller with a user-friendly interface to make using your chair even easier.

## Home Screen 1

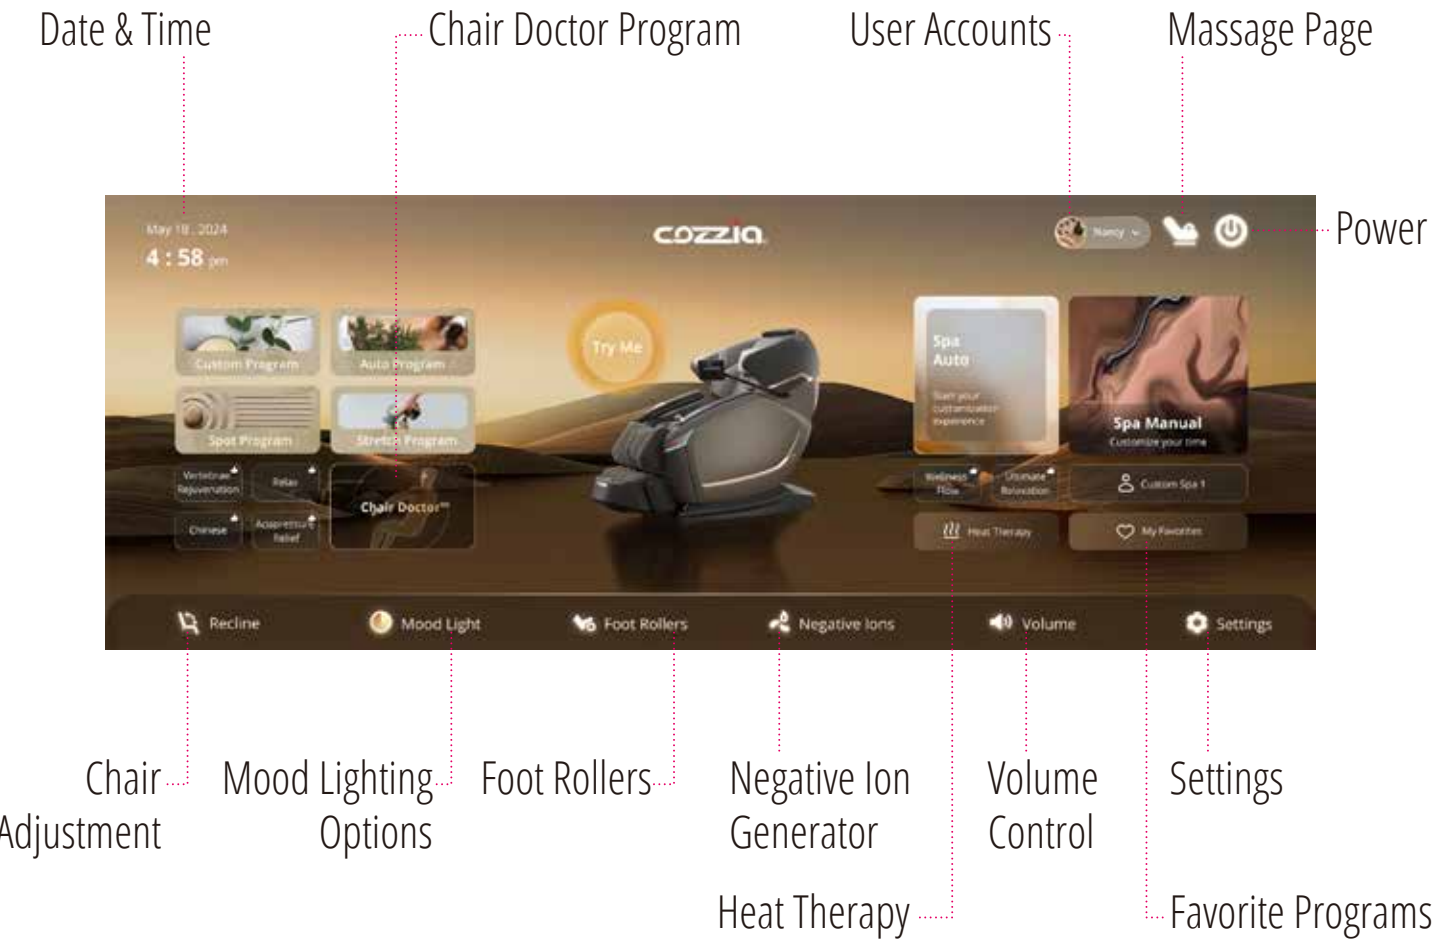

## Home Screen 2

Auto Programs

Stretch Programs

Spa Auto Programs

Try Me Program

Spa Manual Program



Recommended Massage Program


Spot Program

Custom Program

Custom Spa Program

Custom Spa Auto Program

## Massage Controls

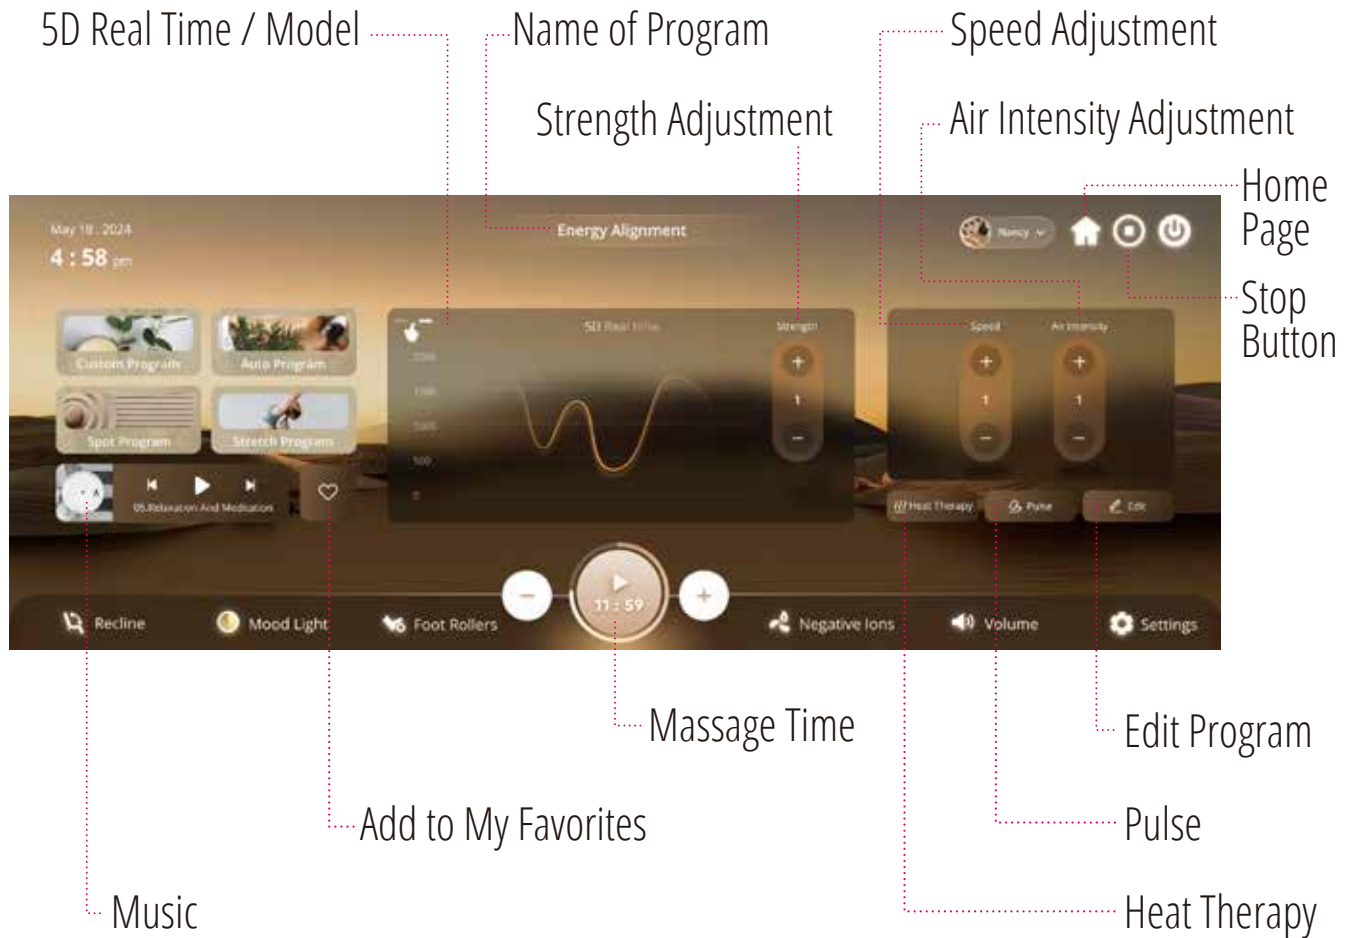

# TRY ME

In order to allow you to quickly understand the many features of this massage chair, we have created a Try Me program for you.



Choose the "Try Me" icon to begin the Try Me program




## Try Me Interface 1



The chair will scan your shoulder height before starting the program

## Try Me Interface 2

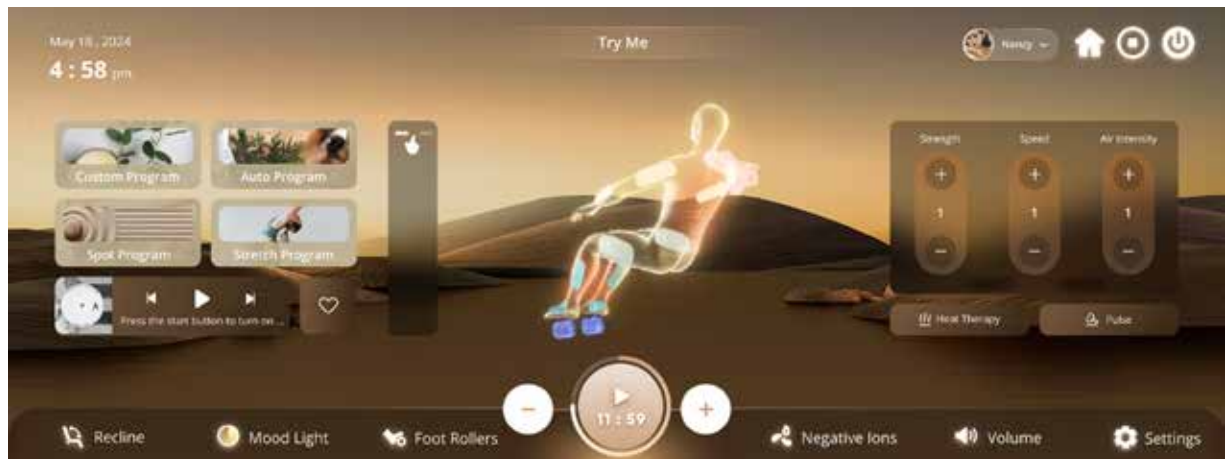


# CUSTOM PROGRAM

Every body is different. That's why we've given you the option to customize your massage to meet your specific needs. Follow these simple instructions to create a new custom massage.



Choose the "Custom Program" icon to create a massage program

## Custom Program Interface 1

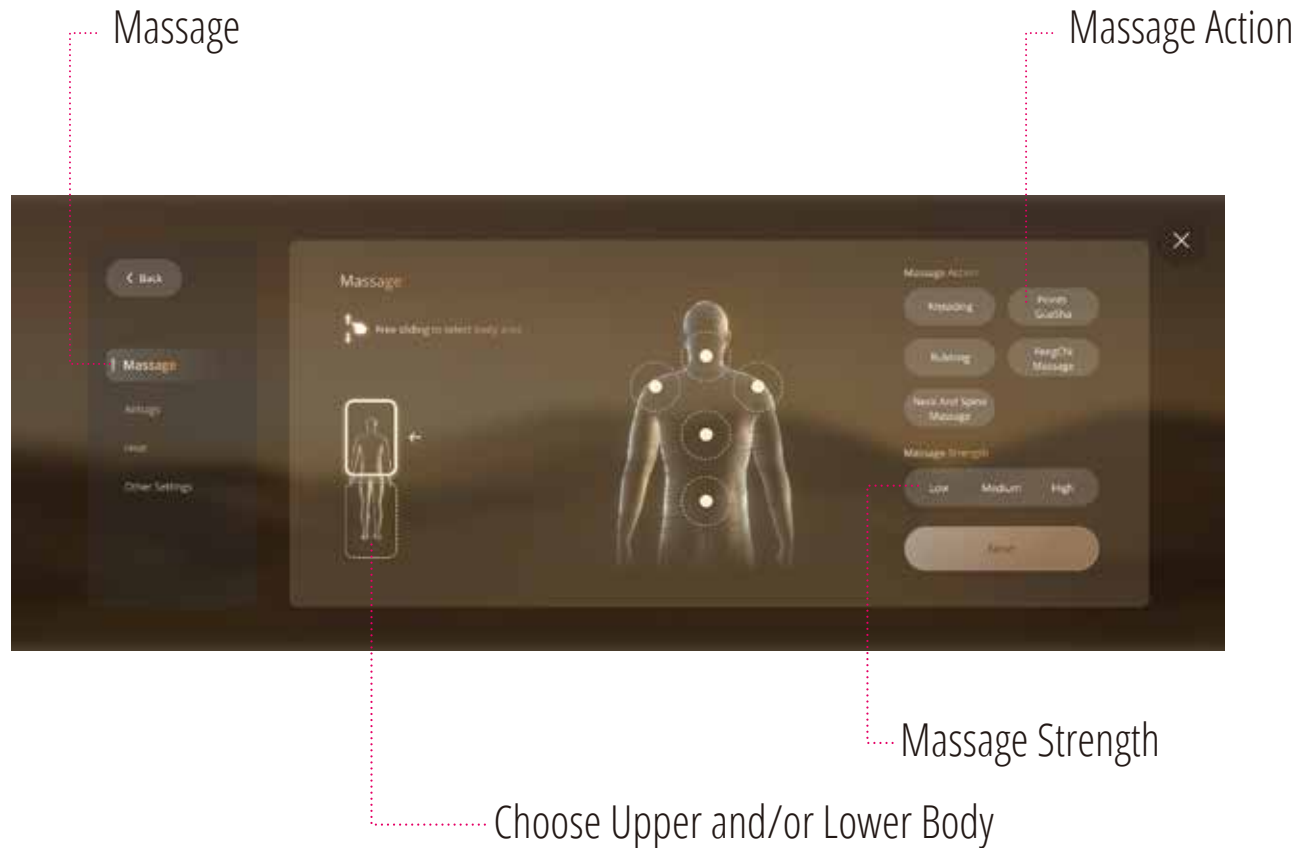

Select the massage areas, massage action and massage strength that you prefer

## Custom Program Interface 2

Airbags

Massage Areas




Select the airbag massage areas that you prefer

## Custom Program Interface 3

Heat

Temperature

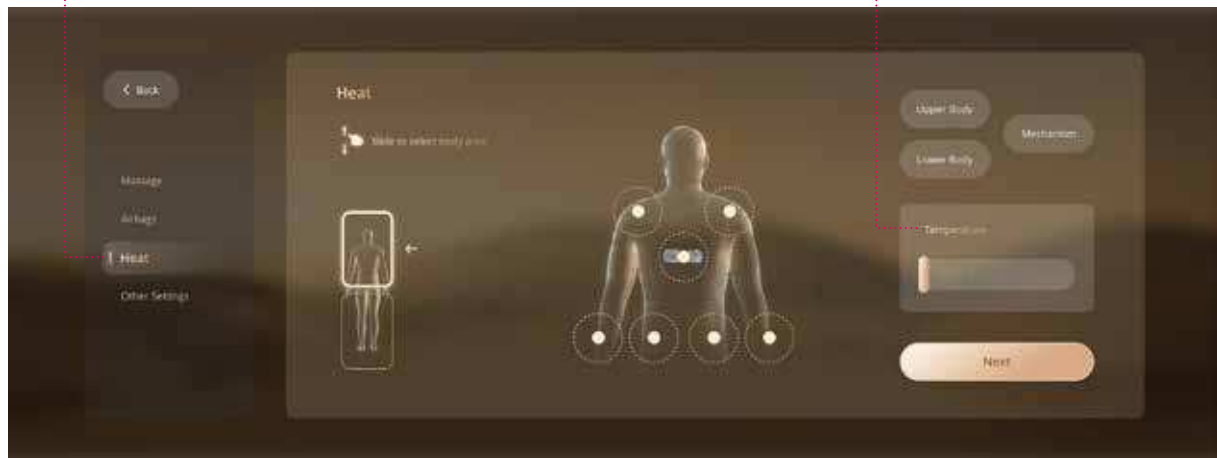


Select the heat areas and temperature that you prefer

## Custom Program Interface 4

LED Light Color

Negative Ions Switch

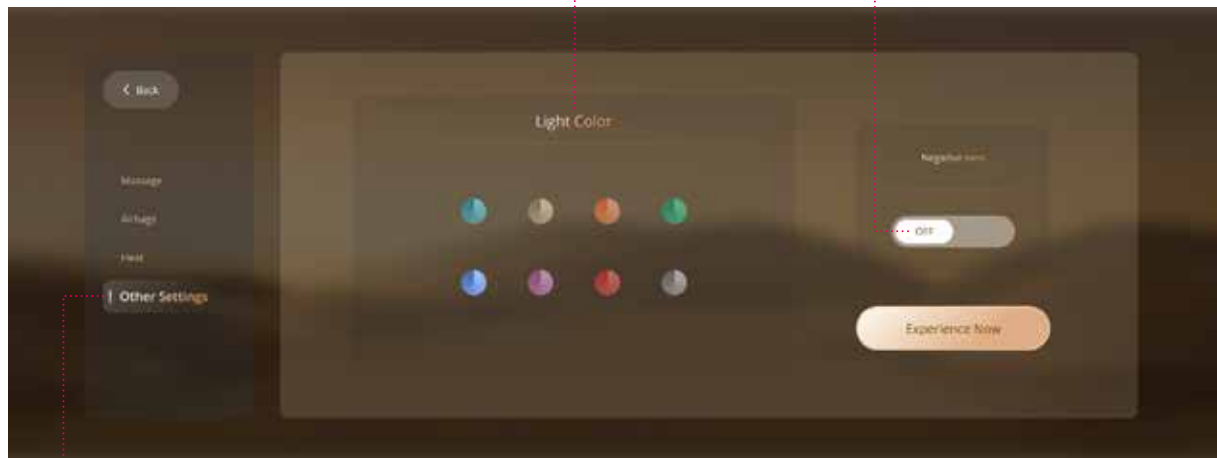

Other Settings

Select the light color and turn on/off the negative ion generator

## Custom Program Interface 5



After creating your custom program, you can click on the "Favorites" icon to name your custom program and save it to your favorites




# AUTO PROGRAM

We have designed your chair with multiple massage options for your changing needs. Follow these simple instructions to begin a new auto massage.



Choose the "Auto Program" icon to select your auto massage program


## Auto Program Interface

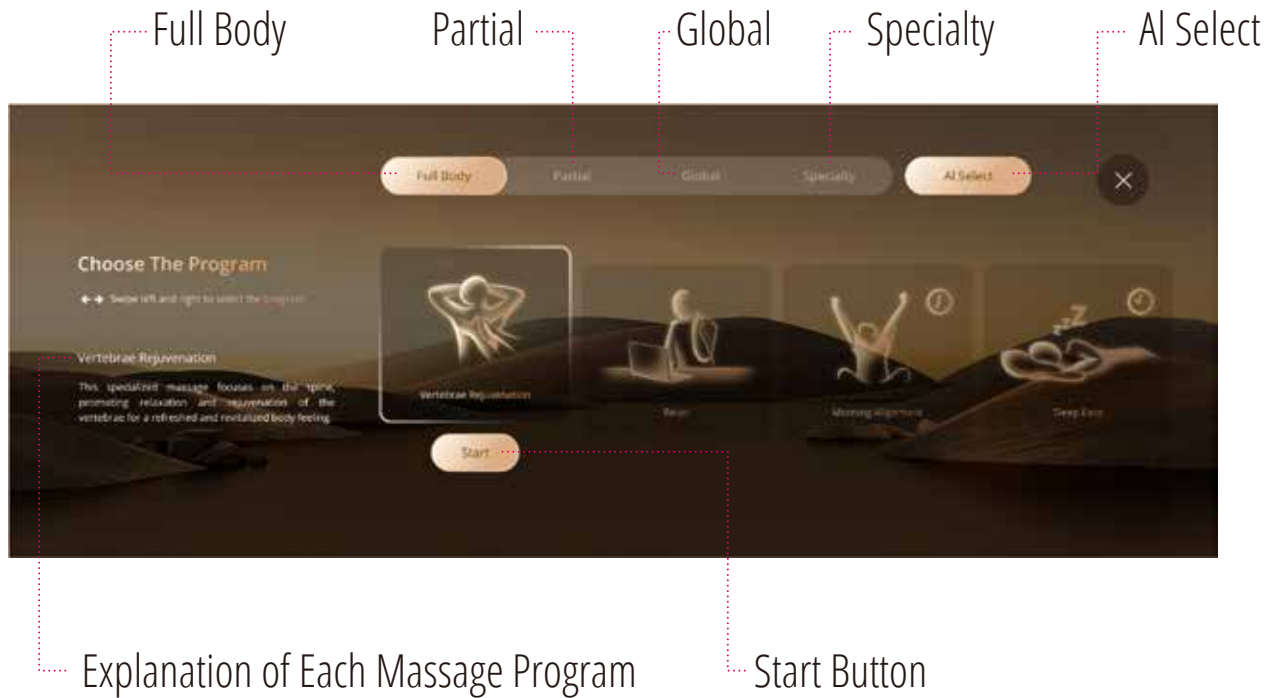

You can choose your favorite massage program icon and press the "Start" button to begin the massage, or you can click the "AI Select" button to randomly start a program

# SPOT PROGRAM


This is a fixed massage area and actions program.

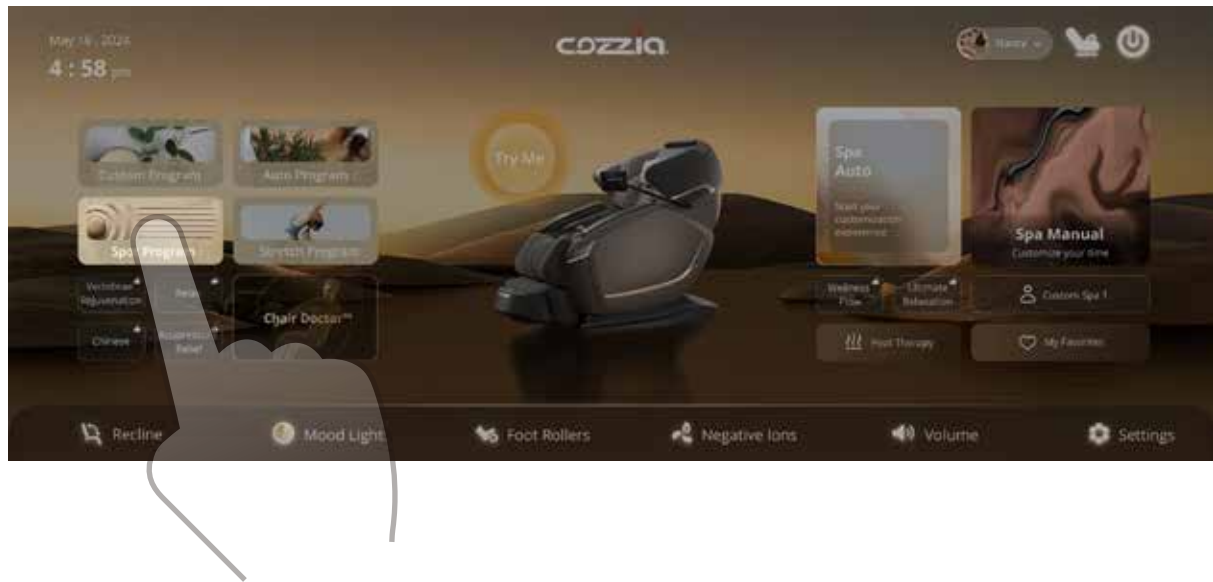

Choose the “Spot Program” button to take you to the spot massage page

## Spot Program Interface

Airbag Selection

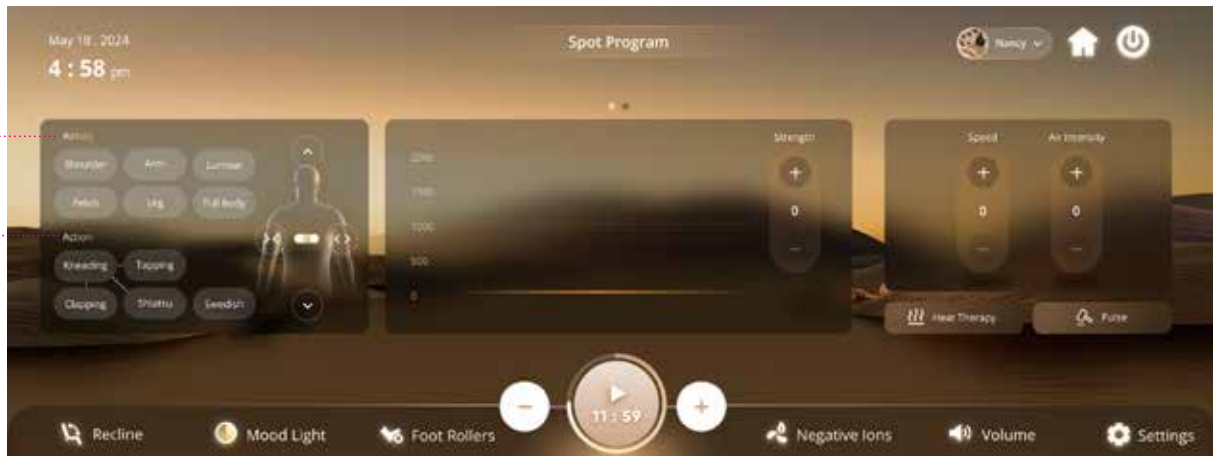

Massage Action


# STRETCH PROGRAM

Every body is different. That's why we've given you the option to customize your stretch massage to meet your specific needs. Please select the area that you want to stretch.



Choose the "Stretch Program" icon to go to the stretch programs selection

## Stretch Program Interface

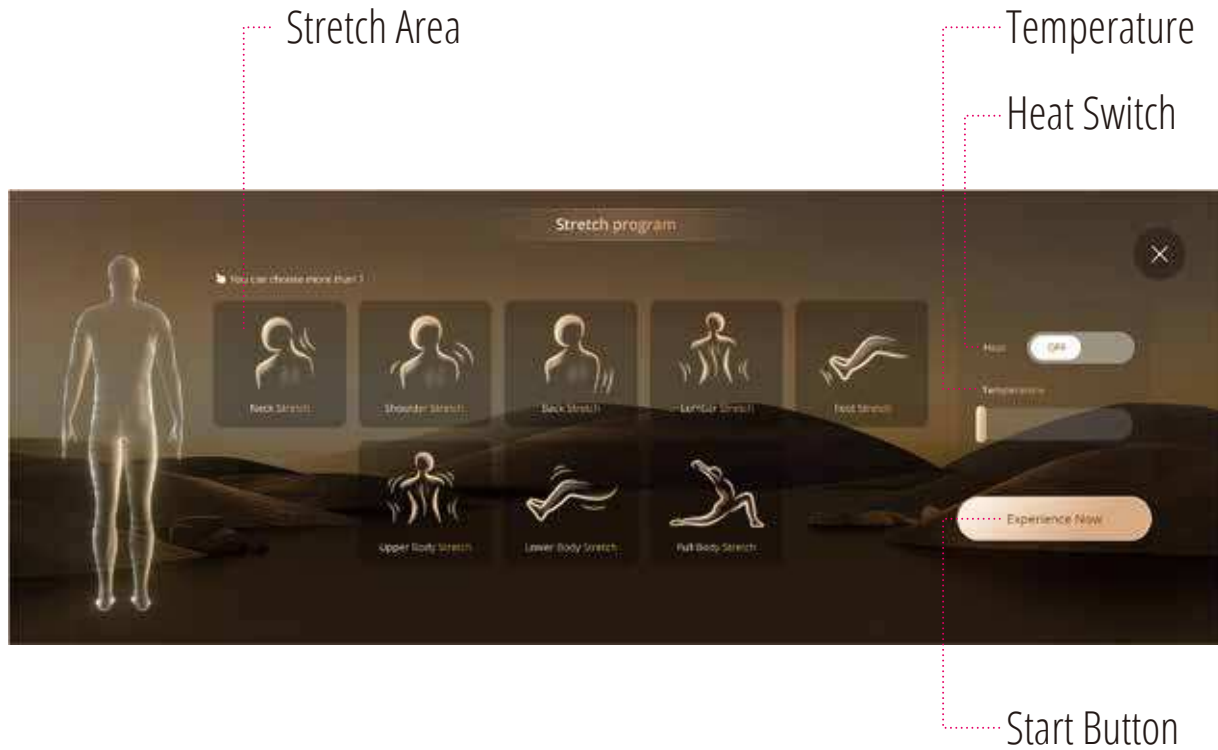

Select the stretch areas and temperature that you prefer


# SPA AUTO

Experience ultimate relaxation with the Quantum's Spa programs, designed to soothe your body and mind with a seamless blend of massage techniques tailored for your ultimate comfort.



Choose the "Spa Auto" icon to go to the spa programs selection

## Spa Auto Interface

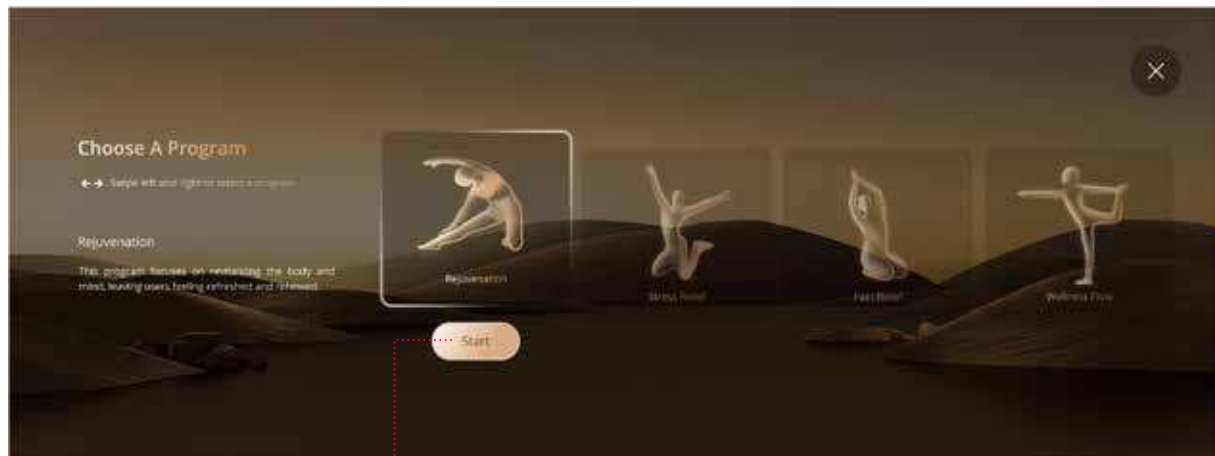

Start Button

Options Include: Rejuvenation / Stress Relief / Pain Relief / Wellness Flow / Ultimate Relaxation




# SPA MANUAL

Elevate your massage experience with the Spa Manual customization options. Design your own perfect massage routine, blending different massage styles and techniques to create a one-of-a-kind therapy session.



Choose the “Spa Manual” icon to customize your spa manual massage

## Spa Manual Interface 1

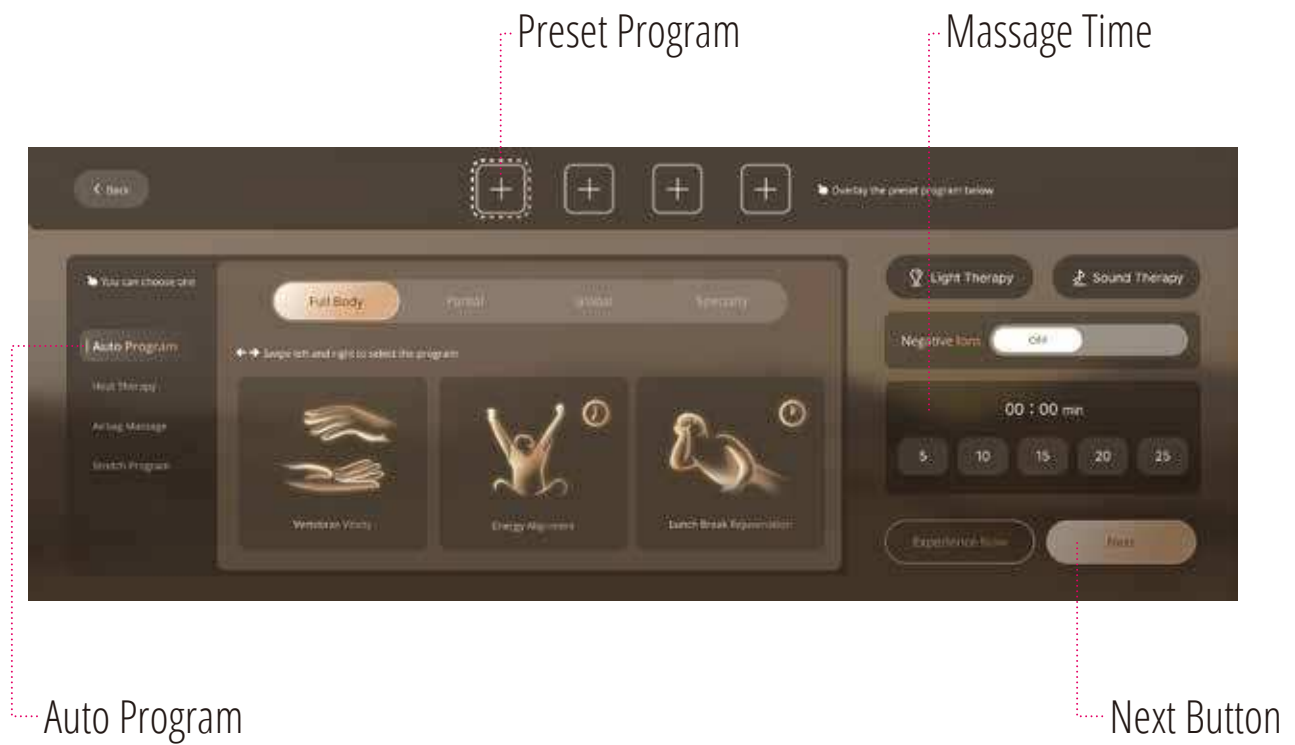

Choose the auto program you prefer

## Spa Manual Interface 2

Heat Area




Heat Therapy

Heat Temperature

Choose the heat area, temperature and massage time you prefer

## Spa Manual Interface 3

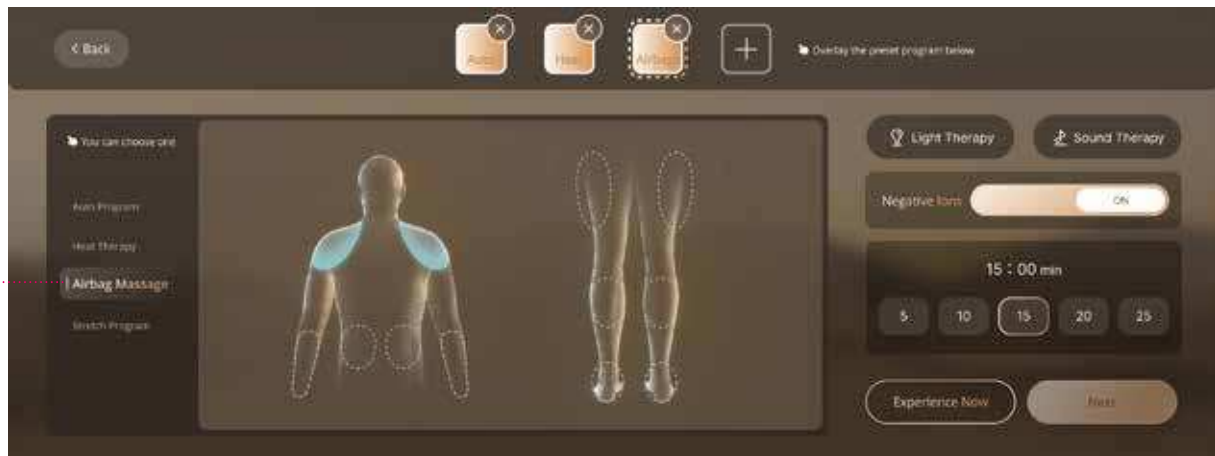

Airbag Massage

Choose the airbag massage areas and massage time you prefer

## Spa Manual Interface 4



Stretch Programs

Start Button

Choose the stretch program you prefer - there are multiple stretching programs to choose from

# CHAIR DOCTOR


An innovative tool that diagnoses your body tension, SpO2 (oxygen saturation), and heart rate, to customize a treatment for your unique body.



Choose the “Chair Doctor” icon to begin the program

## Chair Doctor Interface 1


Historical Health Data Page

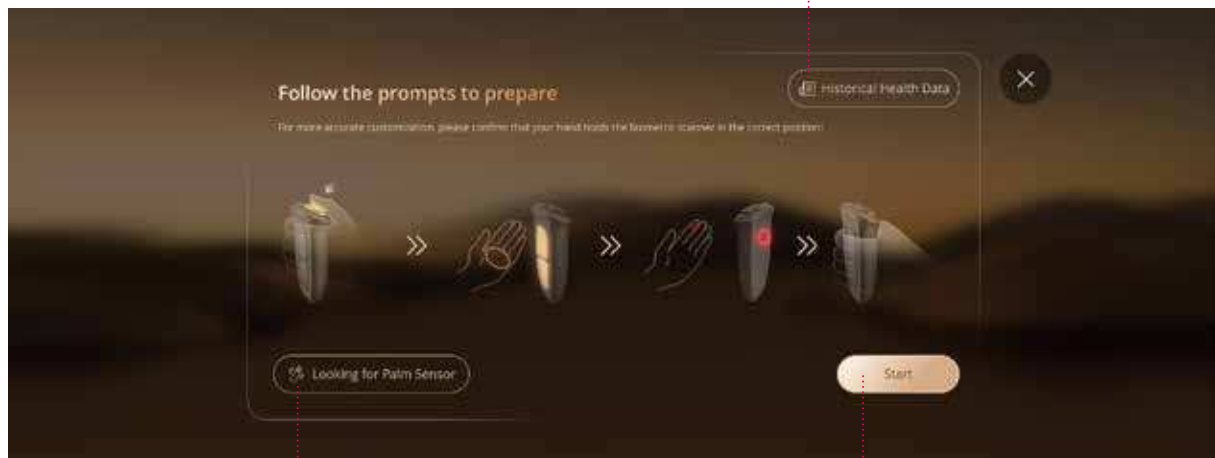

Palm Sensor Locator  
(If your palm sensor is lost, use this button to find it)

Start Button

## Chair Doctor Interface 2

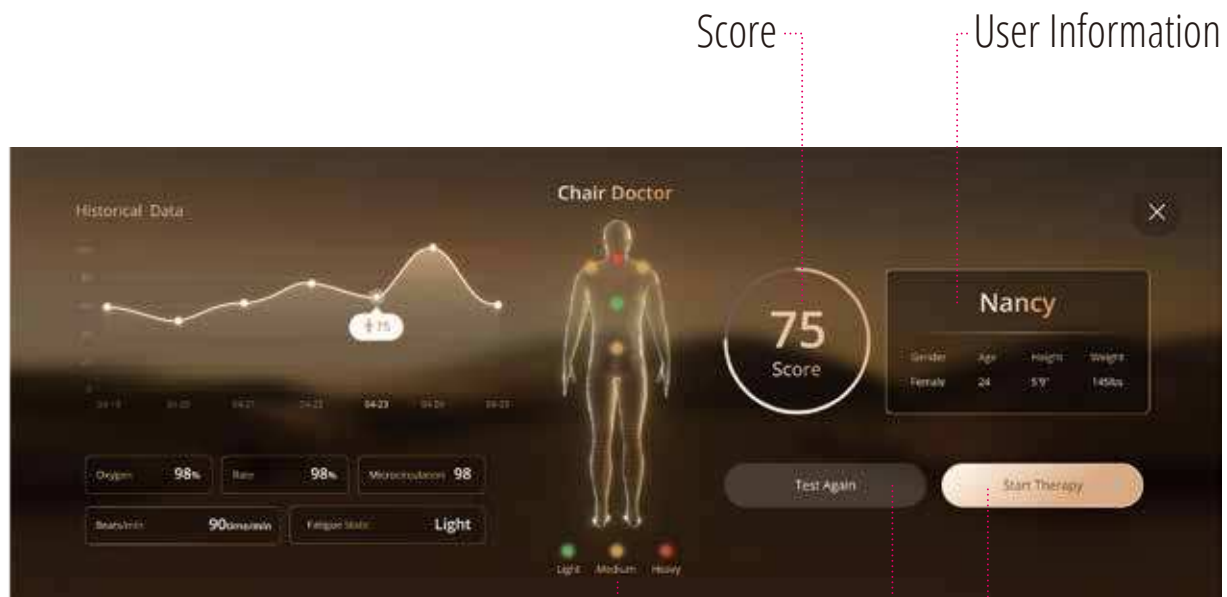



# HEAT THERAPY

Multi-zone heating with adjustable temperature settings for personalized comfort.



Choose the “Heat Therapy” icon to go to the heat settings page

## Heat Therapy Interface



# MY FAVORITES

Discover your Massage Favorites – a quick-access collection of your top massage program picks.



Choose the “My Favorites” icon to go to the favorite programs page

## My Favorites Interface 1



Edit the Home Page Recommended Program

Edit My Favorite Programs

# RECLINE



Choose the "Recline" icon to go to the chair adjustment page

## Recline Interface




Press and Hold the Arrows to Adjust the Seating Position

# SETTINGS



Choose the "Settings" icon to take you to the settings page

## Settings Interface

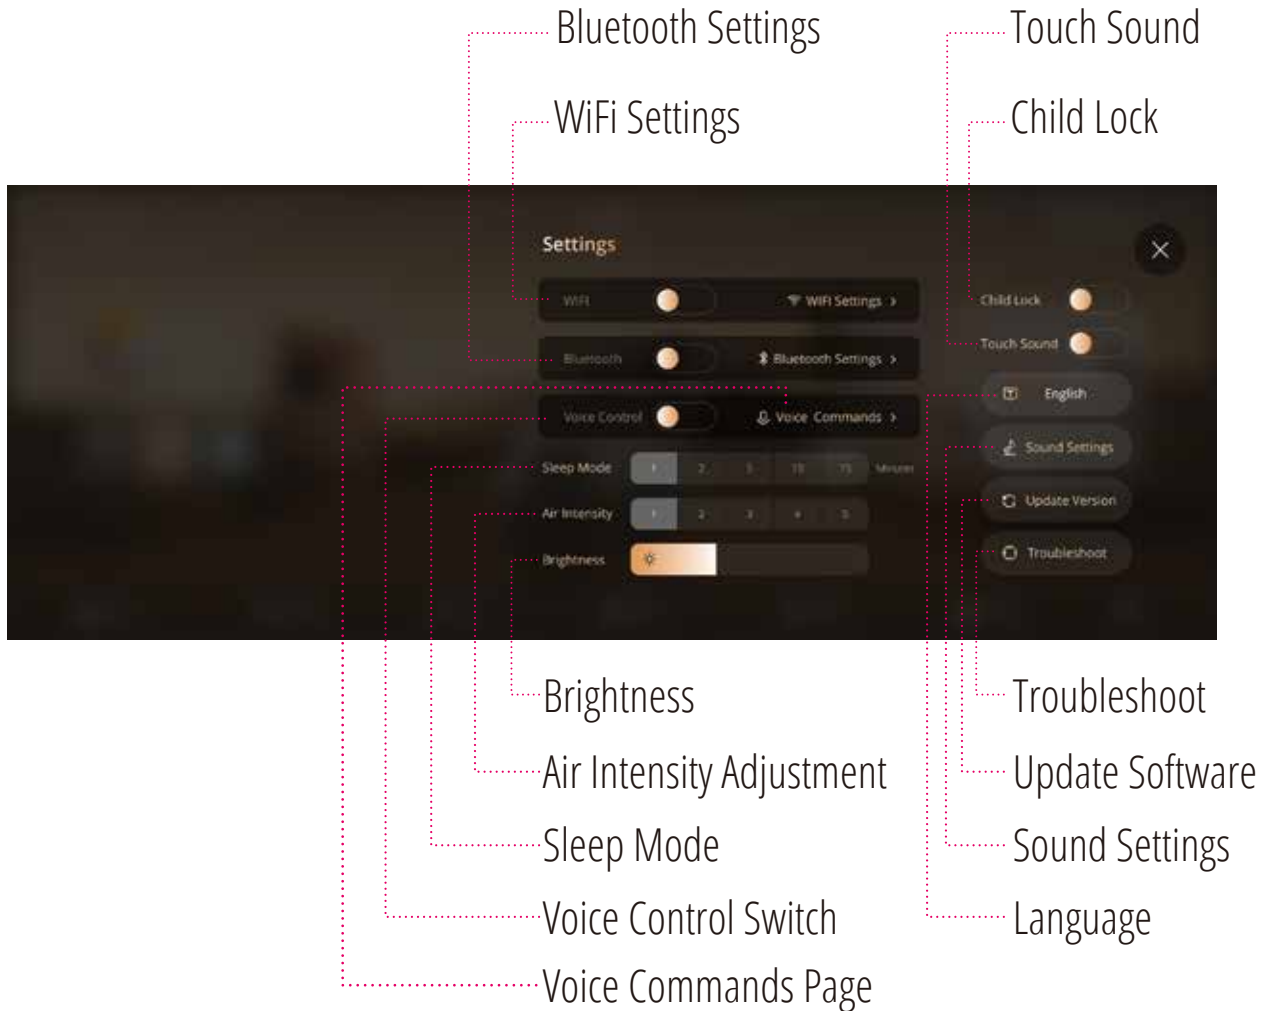



## Child Lock




To disable this chair for child safety, turn on the child lock switch

## Child Lock 1



Set a password and click the confirm button  
When the Child Safety Lock is on, the massage chair will be turned off and reset - all functions will be disabled

## Child Lock 2

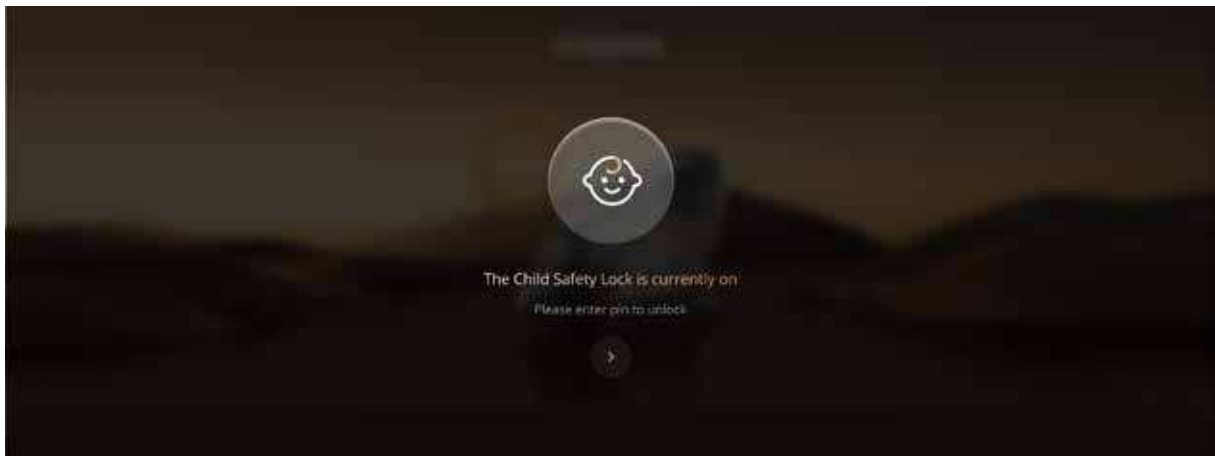


When the Child Safety Lock is enabled, this screen will appear at startup

## Child Lock 3



Please enter the password you set or "0304" to unlock your massage chair  
If you don't need the Child Safety Lock on anymore, go to the Settings page to turn off this function

## Trouble Shooting Interface

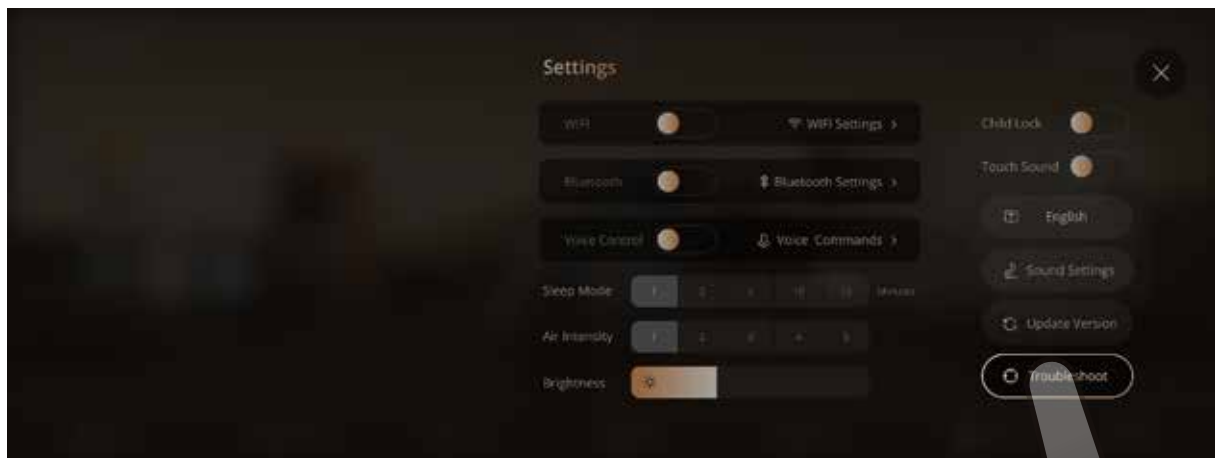

If your chair has any trouble, press the "Troubleshoot" icon for the chair to automatically detect problem areas  
Use the error code provided when contacting our customer service team

## Trouble Shooting Interface 1



Choose "Start" icon and make sure the chair is not occupied during chair detection

## Trouble Shooting Interface 2



Your chair is detecting possible malfunctions, please wait for the detection result

## Trouble Shooting Interface 3



You can use your detection code when contacting the customer service team about your chair's problems



# USER ACCOUNT



Choose the “User Account” icon to get to the account settings page  
\*A wifi connection is required before logging in to your account  
After logging in to your account, you can save your own favorite programs and health data

## Register an Account Interface



Enter your email address and click the "Code" button to get a verification code sent to your email

Enter the verification code from your email, then create your password


\*Before registering an account, you need to agree to the service agreement and privacy policy

## Account Login Interface



If you already have an account, you can log in with your password or email verification code

## Account Settings Interface

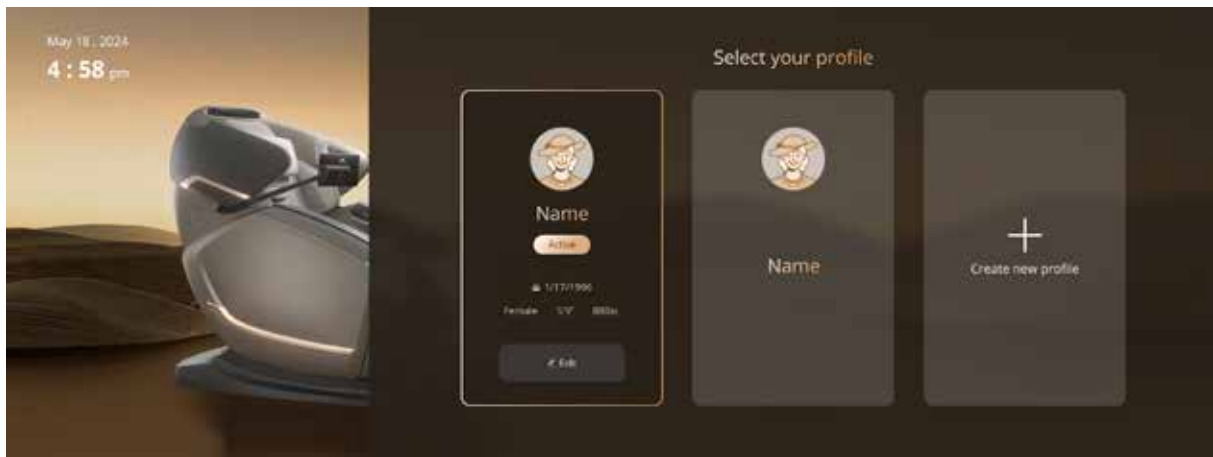


You can switch between accounts or edit your account information here

# GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord that has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**Danger -** Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service technician if it will not fit the outlet. Have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120V circuit and has a grounding plug that looks like that plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

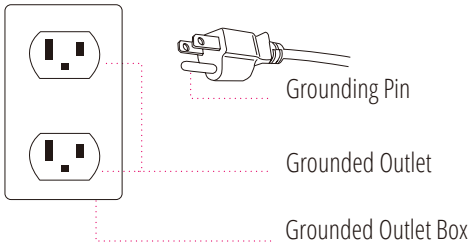

# TROUBLESHOOTING

This massage chair is controlled by a microcomputer and is thus susceptible to power surges of +10 to - 15%. The following situations may arise in the event of a power surge:

Situation	Solution
The massage chair is connected to the power supply but is not functioning	1. Check to see that the plug is properly connected and working 2. Ensure the massage chair switch is in the "I" position
The remote control works but the massage chair is not functioning	Possible overheating due to prolonged use. Turn off the power for at least 30 to 50 minutes
Both the remote control and the massage chair are not functioning	1. Ensure the chair is plugged into a working outlet 2. Turn the power OFF and ON again

If you continue to have problems, please read the warranty card and contact the Cozia service department.

# PRODUCT CARE AND STORAGE

## 1. Storing the Massage Chair

- Wipe off dust and dirt from the massage chair with a dry, soft, clean cloth after use.
- Keep the massage chair clean and away from places of high humidity.
- If the massage chair is not to be used for a long period of time, cover the massage chair with a dust cover and unplug its power plug from the electrical outlet.

### ! Caution

- Do not store the massage chair in direct sunlight or in places of high temperature. This may cause the color of the upholstery to fade.
- Do not allow the massage chair to remain in contact with vinyl or wallpaper for extended periods of time as this could lead to discoloration.

## 2. Cleaning the Massage Chair

- Before cleaning, ensure that the main power switch is off and the power plug is disconnected from the electrical outlet.
- Wipe off dust and dirt from the massage chair with a dry, soft, clean cloth after each use.
- This product can be cleaned thoroughly with a slightly damp cloth.
- Do not iron the upholstery.
- Do not wash the upholstery using a home washing machine as this may result in deterioration of the upholstery's quality.

### ! Caution

- Do not use abrasive cleaning agents like benzene or thinner to clean the massage chair. This may cause the upholstery to fade.

## 3. Cleaning the Controller

- Use only a clean, dry cloth to clean the controller.

### ! Caution

- Do not use a wet cloth to clean the controller. This may result in malfunction.

# COZZIA CONSUMER WARRANTY

This Cozzia product has the following warranty:

The Cozzia Quantum has a three-year in-home service and parts warranty. Cozzia customer service will not issue Return Material Authorizations (RMAs) for products. Cozzia products will be either repaired by the consumer or by an in-home technician. Cozzia will not issue Return Material Authorizations (RMAs) for buyer's remorse.

## Service And Technical Support

Consumers may contact Cozzia's customer service department at 1-877-977-0656 between 9:00 am and 5:30 pm PST, Monday through Friday, email us at [Service@cozziausa.com](mailto:Service@cozziausa.com), or visit our website at [www.cozzia.com](http://www.cozzia.com) for warranty or service issues.

Consumers are required to provide the unit serial number and dated proof of purchase (sales receipt) when they contact the Cozzia service department regarding a repair.

A Cozzia customer service representative will attend to most consumer inquiries, but in some cases a technical service specialist will provide advanced support.

Non-warranty repair is provided on a "per incident" basis. Cozzia customer service will verify that the unit has failed and provide instructions for repairing the unit. All applicable repairs, parts, shipping, handling, local tax and a "per incident" fee will be charged for non-warranty repairs and support calls.

Proof of purchase (original receipt) is required for all warranty repairs or service.

## Extended Warranties:

Cozzia offers extended warranty programs to enhance the ownership of your massage chair. Please call Cozzia customer service at 877-977-0656 for details and pricing.

## Product Repairs

- Floor Models and Demonstration Units have a prorated warranty period that begins the day the model is placed on the floor and connected to an electrical outlet by the retail partner. Proof of purchase is required in order to obtain warranty service and parts. Non-warranty parts and service are available at a "per incident" charge.
- Warranty Coverage Period - Warranty coverage starts at the time that the consumer PURCHASES their chair. Proof of purchase is required for all warranty repairs. The warranty time period is measured by continuous calendar days based on a seven-day week.
- Field Service - Cozzia customer service department will diagnose and schedule an authorized service provider to repair the chair in the consumer's residence.

- Parts - All parts deemed necessary for repairs will be shipped to the consumer at no charge by the Cozzia service department. Some Cozzia product repairs may be performed by the consumer in their own home with parts and instructions supplied by Cozzia, such as remote controller replacements that don't require a technician.

## CONSUMER WARRANTY LIMITATIONS AND EXCLUSIONS

- Warranties are only valid in the 48 contiguous United States and Canada and are contingent upon the consumer operating the chair according to the corresponding instruction manual.
  - The warranty only applies to Cozzia products and does not include any accessories or enhancements.
  - Field service requires pre-approval and must be performed by Cozzia's authorized field service personnel.
  - Field service is only available in the United States and in major metropolitan areas in Canada.
  - Softening of foams and filling composites in pillows, pads, and memory foam occurs naturally and does not constitute a defect under this warranty.
  - Fading, wear and piling of fabrics occurs naturally and does not constitute a defect under this warranty.
  - Warranties do not cover any loss or damage resulting from improper installation, unauthorized repairs or modifications, improper use of electrical/power supply, loss of power, dropped product, a malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance, transportation damage, theft, abuse, misuse, neglect, vandalism or environmental conditions (fire, floods, rust, corrosion, sand, dirt, windstorm, hail, earthquake or exposure to weather conditions).
  - Warranties do not cover any loss during the time spent waiting for parts or repairs.
  - Damage due to shipping and handling does not constitute a defect under this warranty.
  - Under no circumstance shall Cozzia or its representatives be liable for indirect, consequential, or incidental damages (including damages for lost profits, business interruption, bodily injury, medical and the like).
  - Warranties are non-transferable.
  - Cozzia's sole liability and the purchaser's exclusive remedy shall be for the repair, or at Cozzia's option, for the replacement of the defective part.
  - Notwithstanding the above, if replacement parts for defective materials are not available, Cozzia reserves the right to make substitutions in lieu of repair or replacement.
- 
- All warranties begin on the DATE OF PURCHASE; no allowance or extension is offered for delivery and/or installation.
  - Warranties do not apply to rental, business, commercial, institutional or other non-residential users.

#### FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### Specific Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. The SAR limit of USA (FCC) is 1.6 W/kg averaged. Device types: EC-638B Massage Chair (FCCID:YMX-EC638B) has also been tested against this SAR limit. SAR information can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested simulation typical 10mm to body. To maintain compliance with FCC RF exposure requirements, the use of accessories should maintain a separation distance between the user's bodies mentioned above, the use of accessories should not contain metallic components in its assembly, the use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



861 S. Oak Park Road,  
Covina, CA 91724

TEL: 1-877-977-0656  
FAX: 1-800-521-4712  
SERVICE@COZZIAUSA.COM

[WWW.COZZIA.COM](http://WWW.COZZIA.COM)