



**Shenzhen Anbotek Compliance Laboratory Limited**


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahqcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com

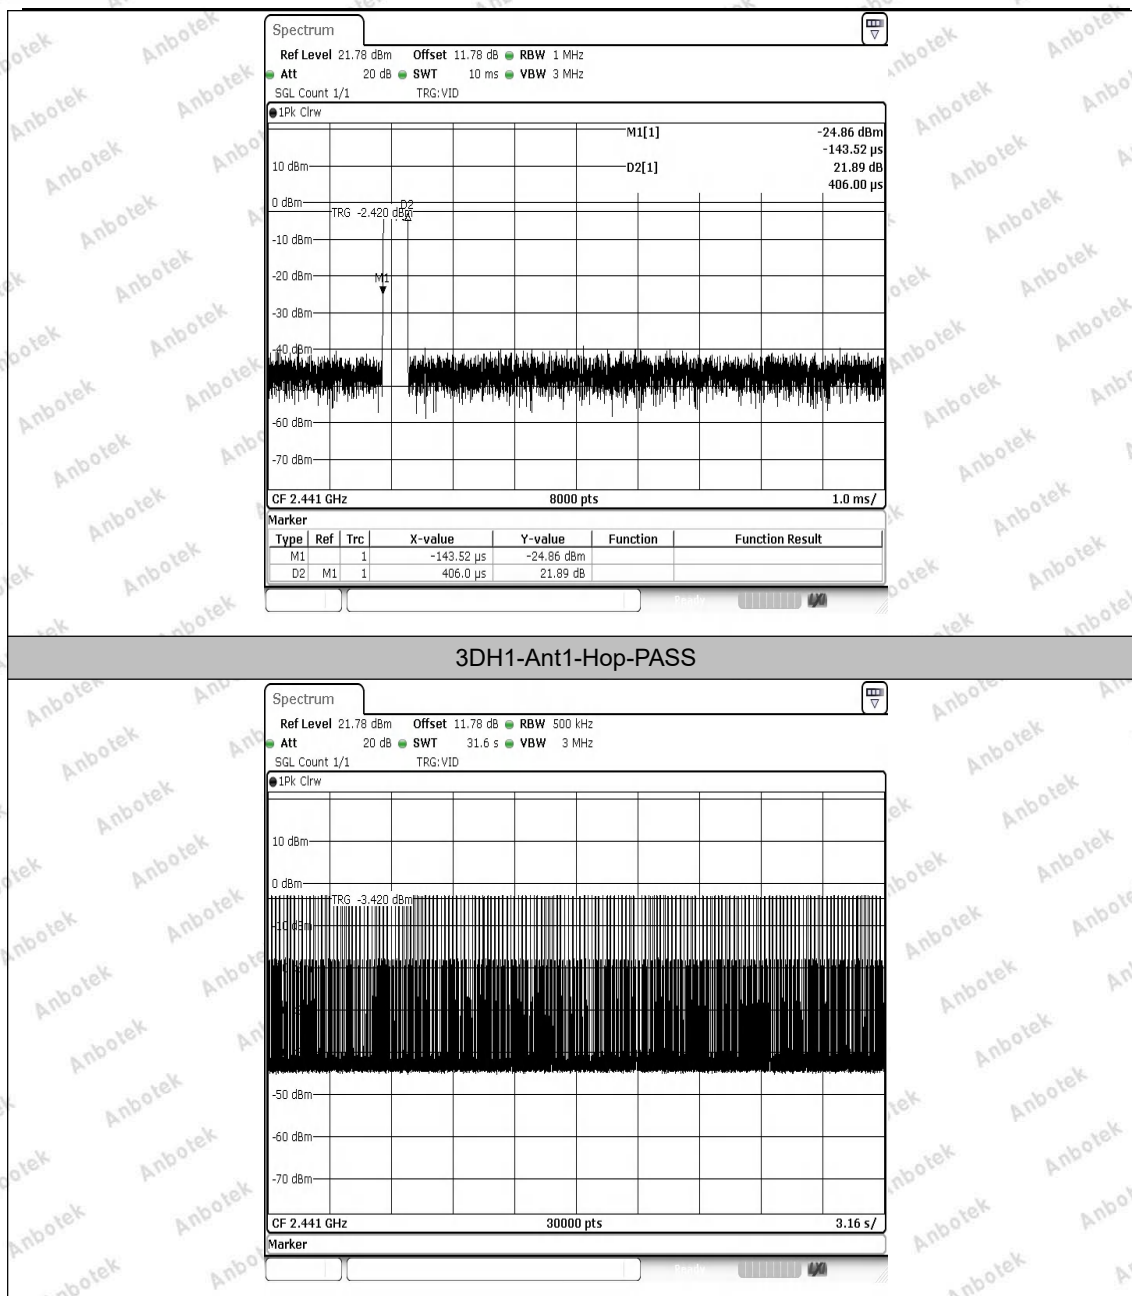

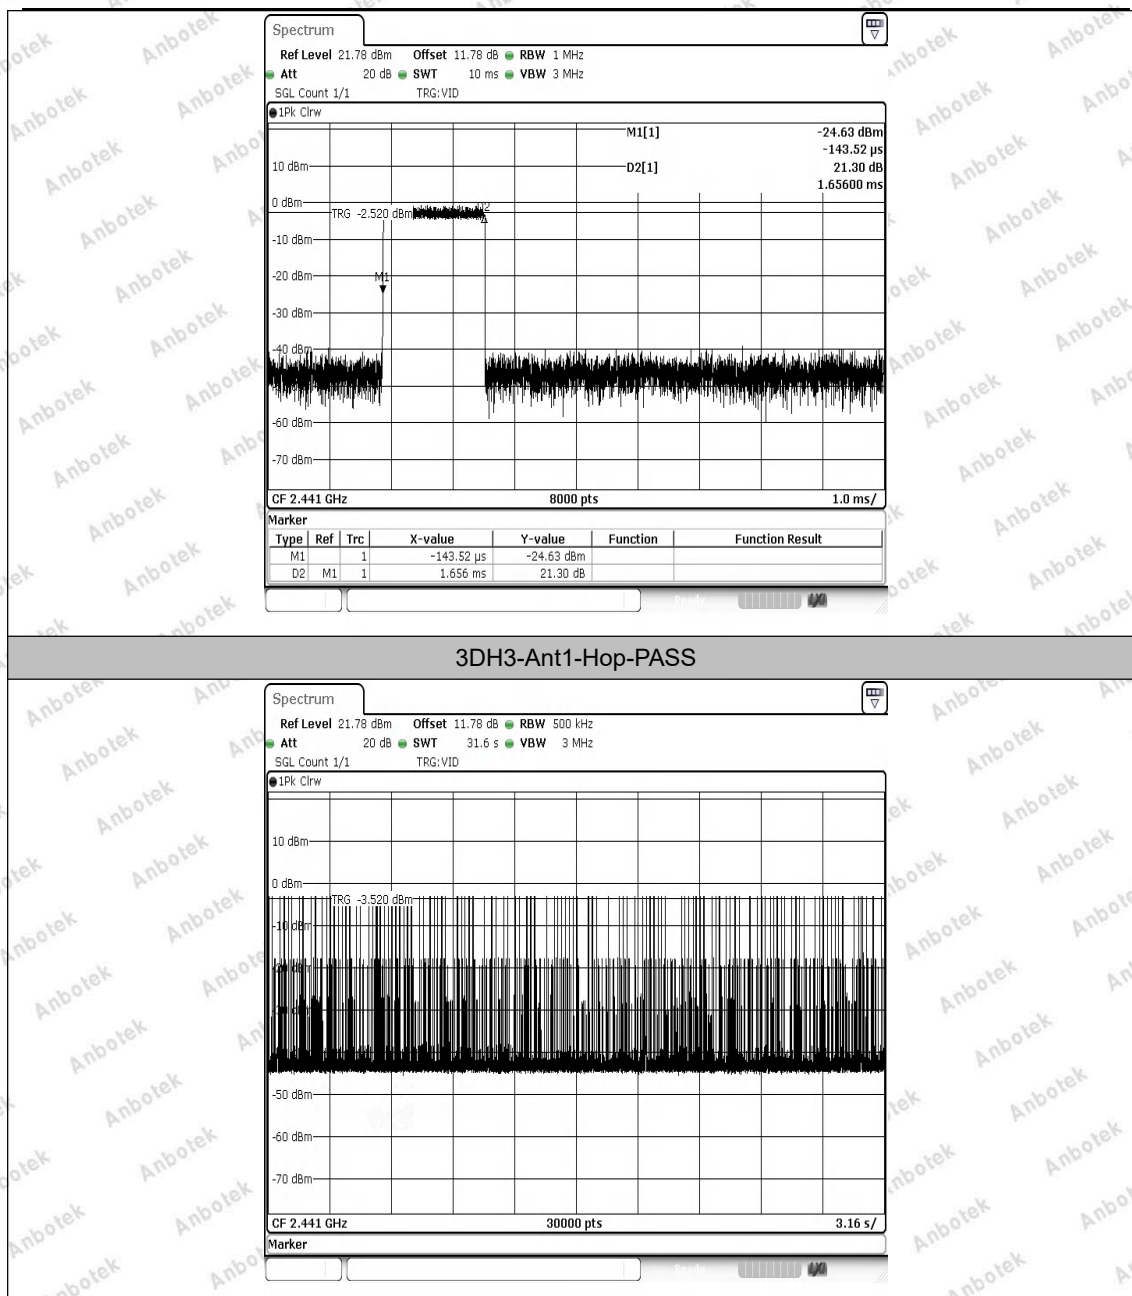

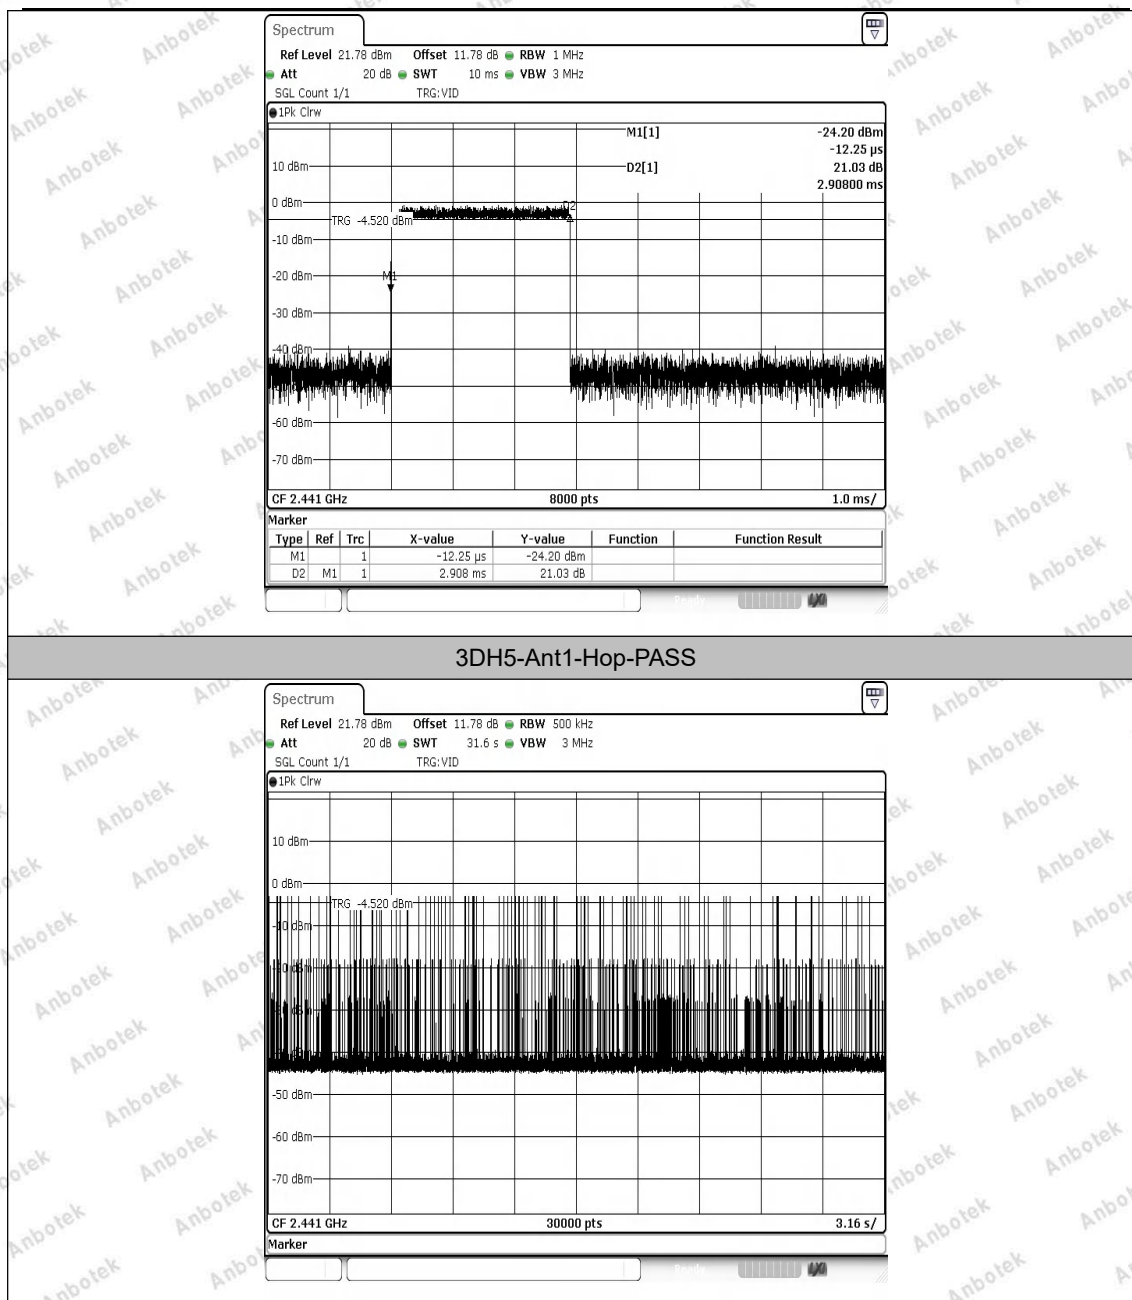


Appendix F: Number of hopping channels


Test Result

TestMode	Antenna	Frequency[MHz]	Result[Num]	Limit[Num]	Verdict
DH5	Ant1	Hop	79	≥15	PASS
2DH5	Ant1	Hop	79	≥15	PASS
3DH5	Ant1	Hop	79	≥15	PASS



Test Graphs

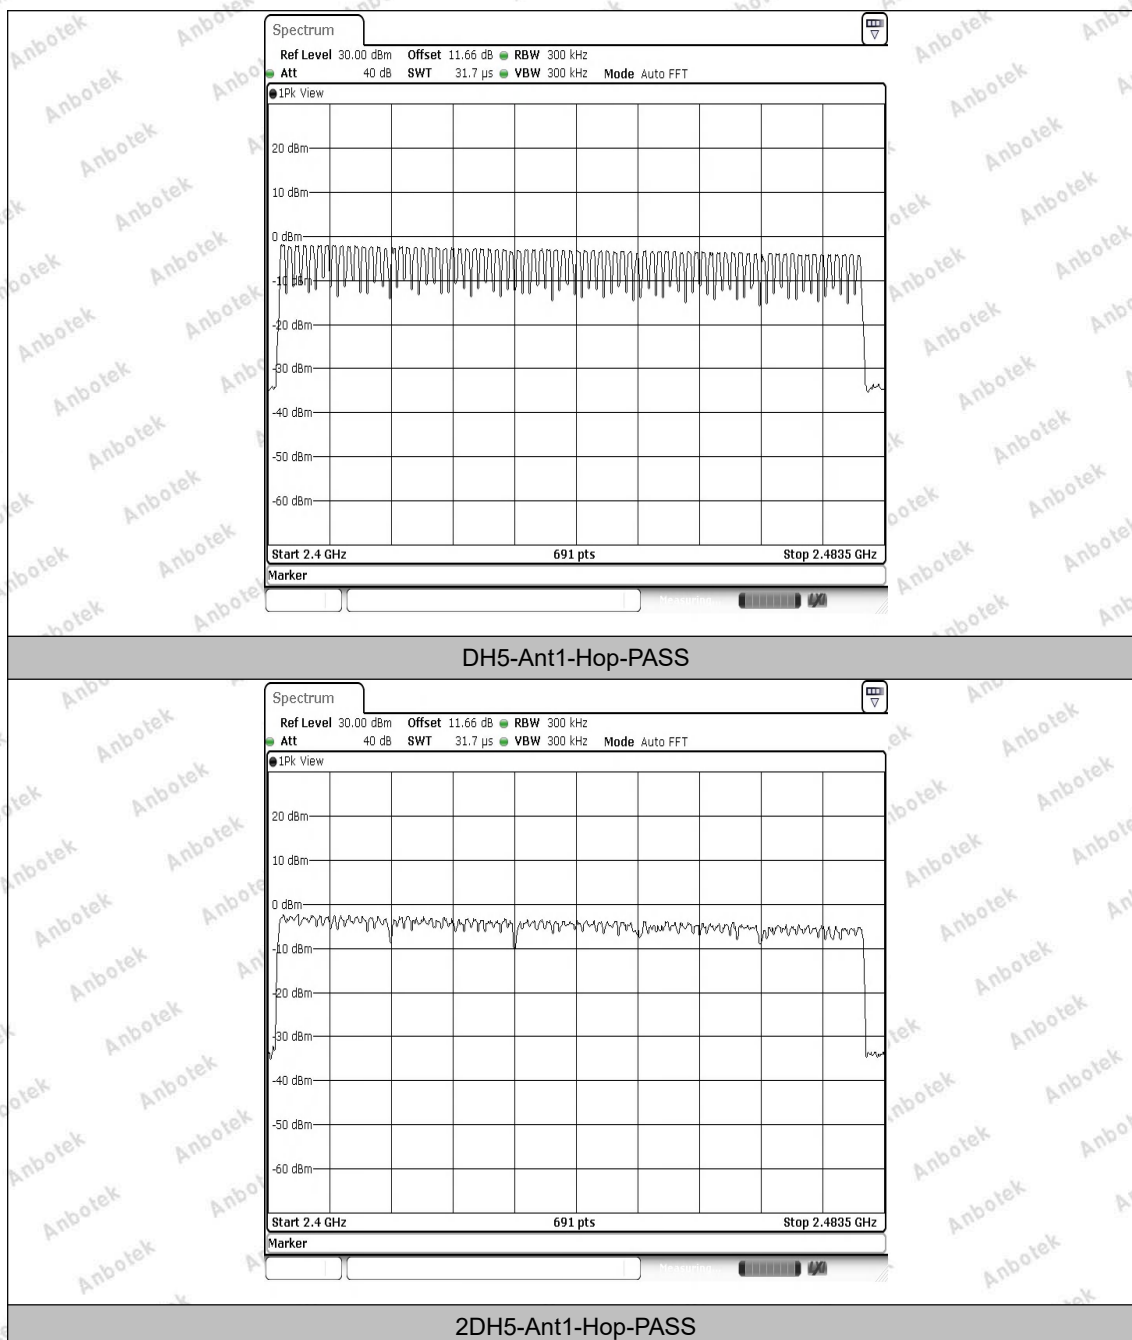

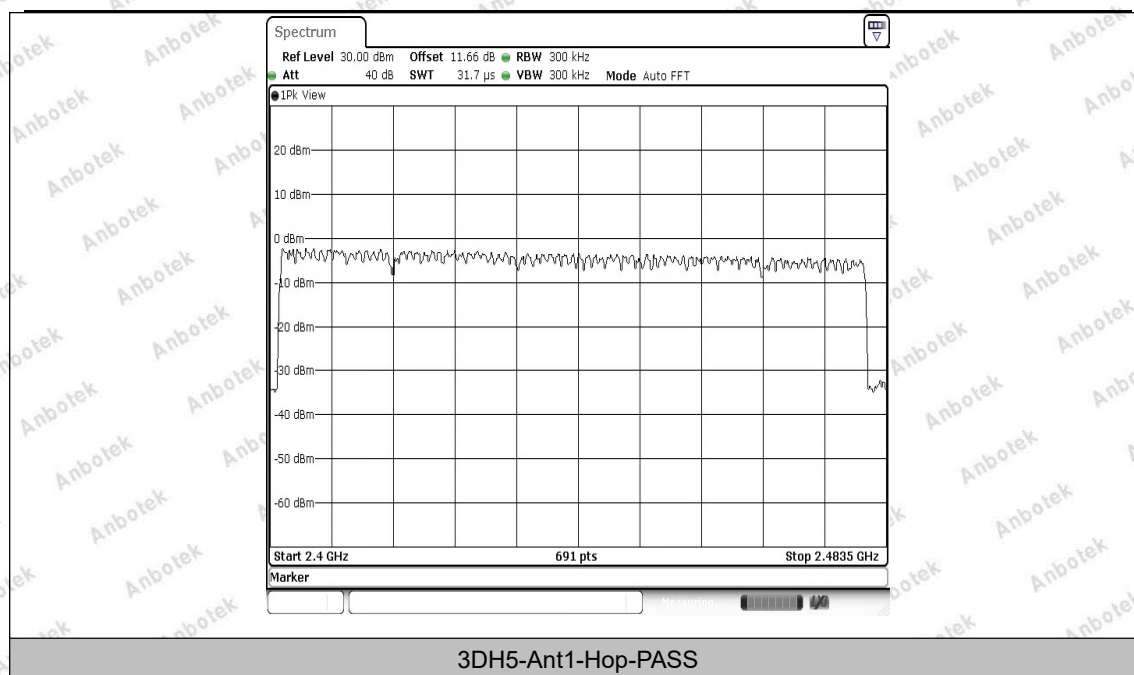

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com




Appendix G: Band edge measurements

Test Result

TestMode	Antenna	ChName	Frequency[MHz]	RefLevel [dBm]	Result [dBm]	Limit [dBm]	Verdict
DH5	Ant1	Low	2402	-2.22	-47.48	≤-22.22	PASS
DH5	Ant1	High	2480	-4.64	-45.28	≤-24.64	PASS
DH5	Ant1	Low	Hop_2402	-2.78	-47.33	≤-22.78	PASS
DH5	Ant1	High	Hop_2480	-4.54	-44.99	≤-24.54	PASS
2DH5	Ant1	Low	2402	-2.01	-47.89	≤-22.01	PASS
2DH5	Ant1	High	2480	-4.87	-46.61	≤-24.87	PASS
2DH5	Ant1	Low	Hop_2402	-4.13	-46.71	≤-24.13	PASS
2DH5	Ant1	High	Hop_2480	-7.79	-45.92	≤-27.79	PASS
3DH5	Ant1	Low	2402	-1.75	-47.1	≤-21.75	PASS
3DH5	Ant1	High	2480	-4.15	-46.09	≤-24.15	PASS
3DH5	Ant1	Low	Hop_2402	-3.13	-47.4	≤-23.13	PASS
3DH5	Ant1	High	Hop_2480	-4.44	-46.2	≤-24.44	PASS



Test Graphs

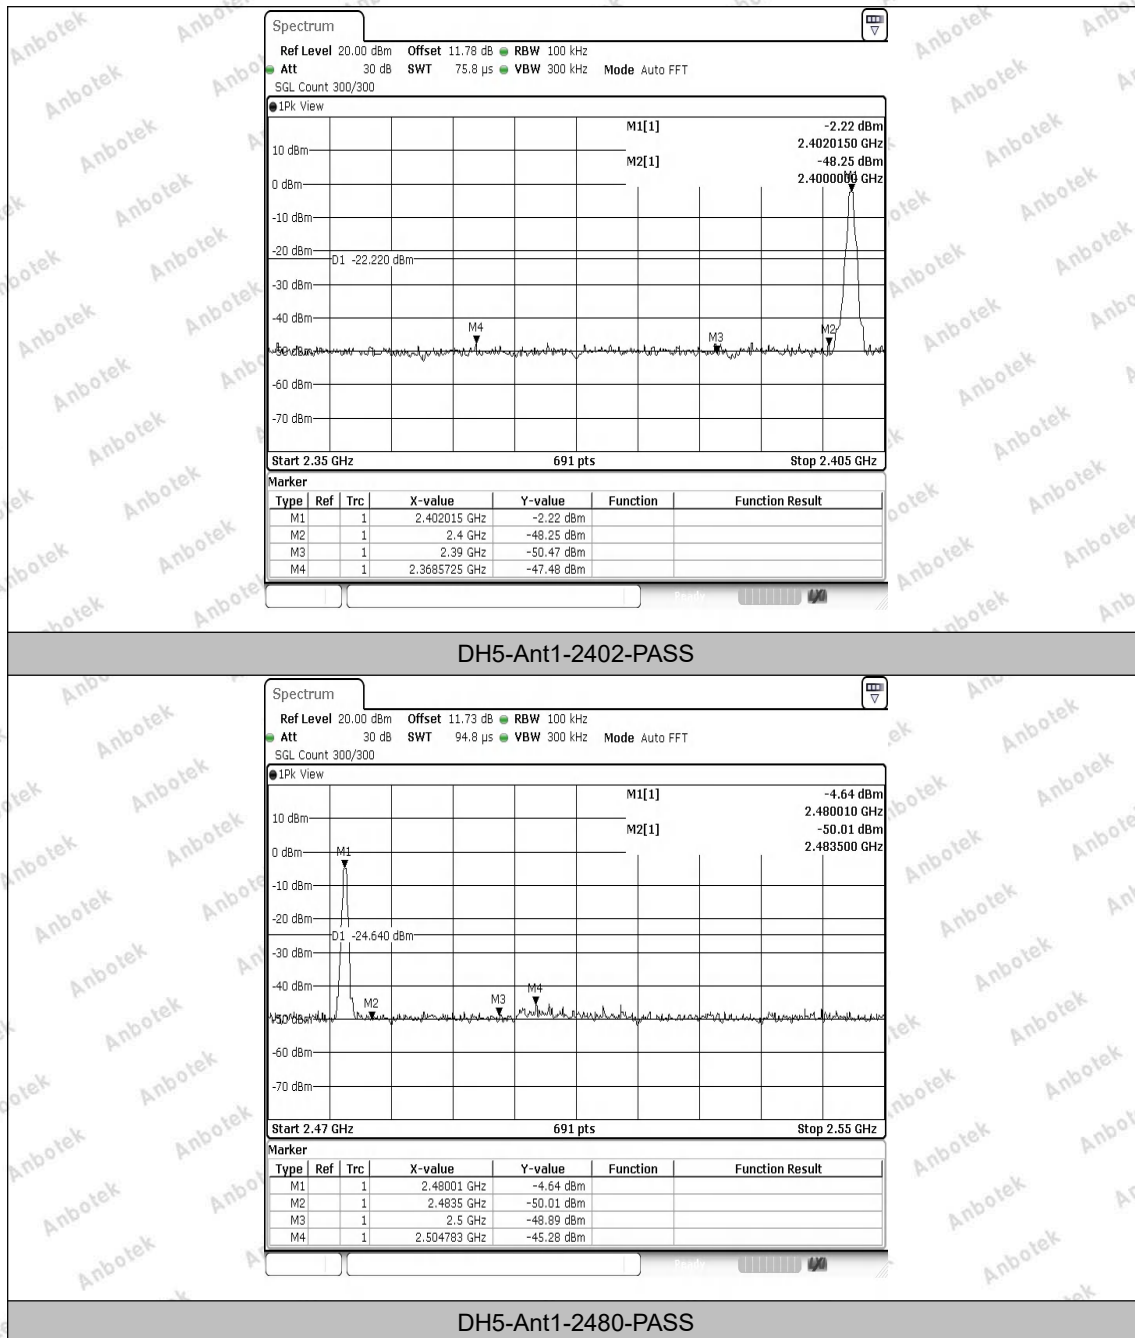


Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel: (86) 0755-26066440 Email: service@anbotek.com





Hotline
400-003-0500
www.anbotek.com




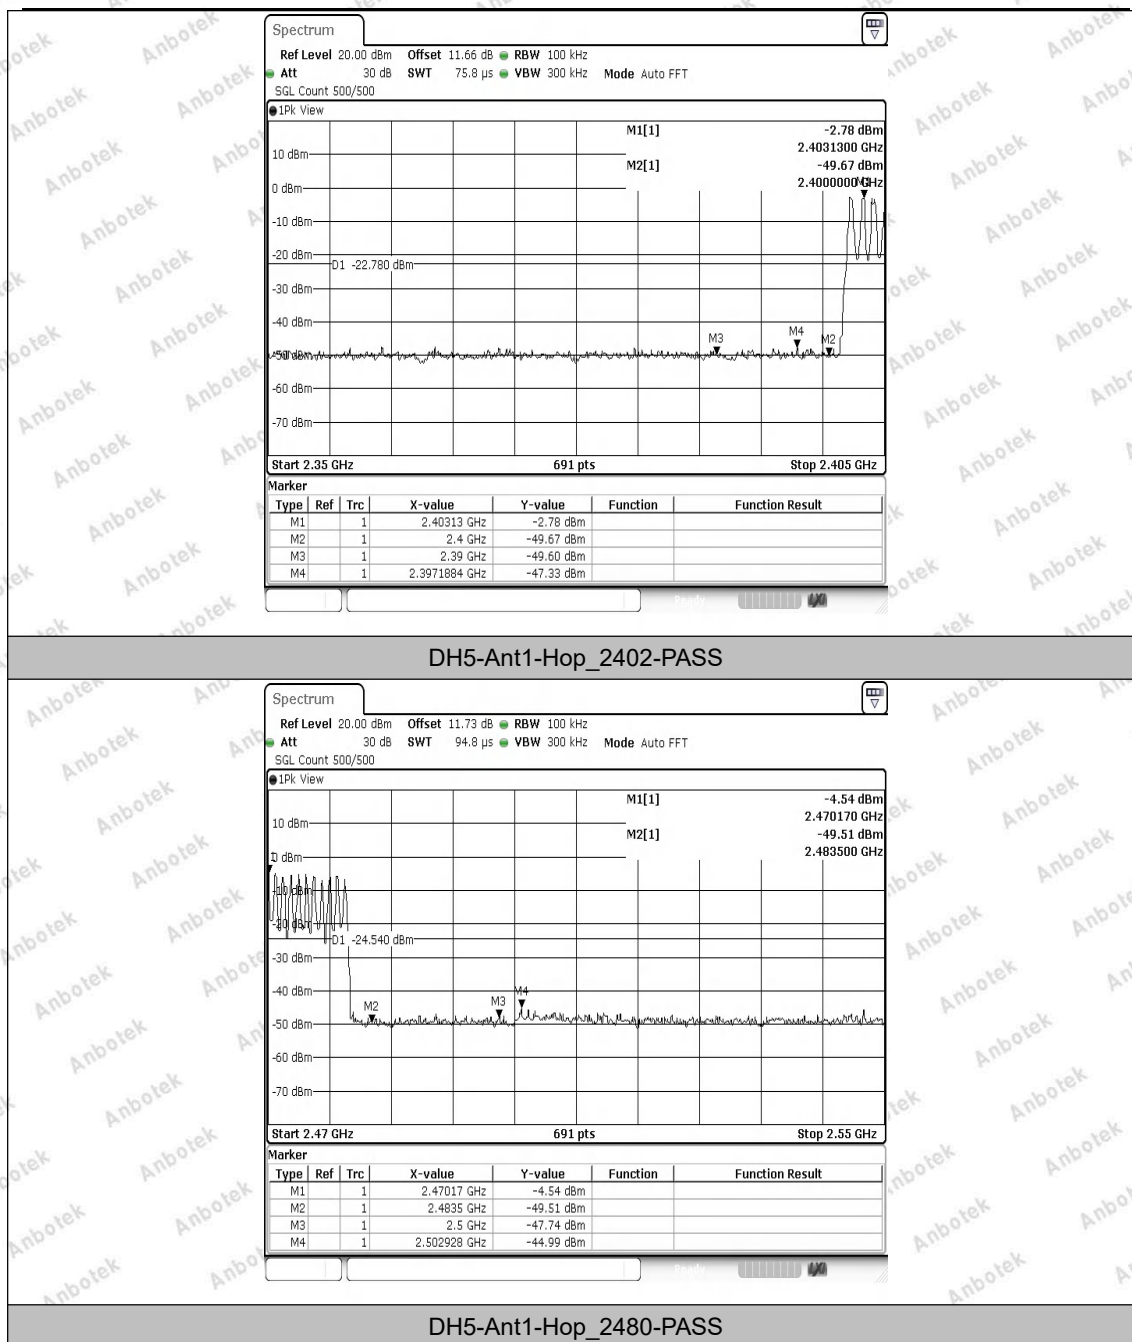

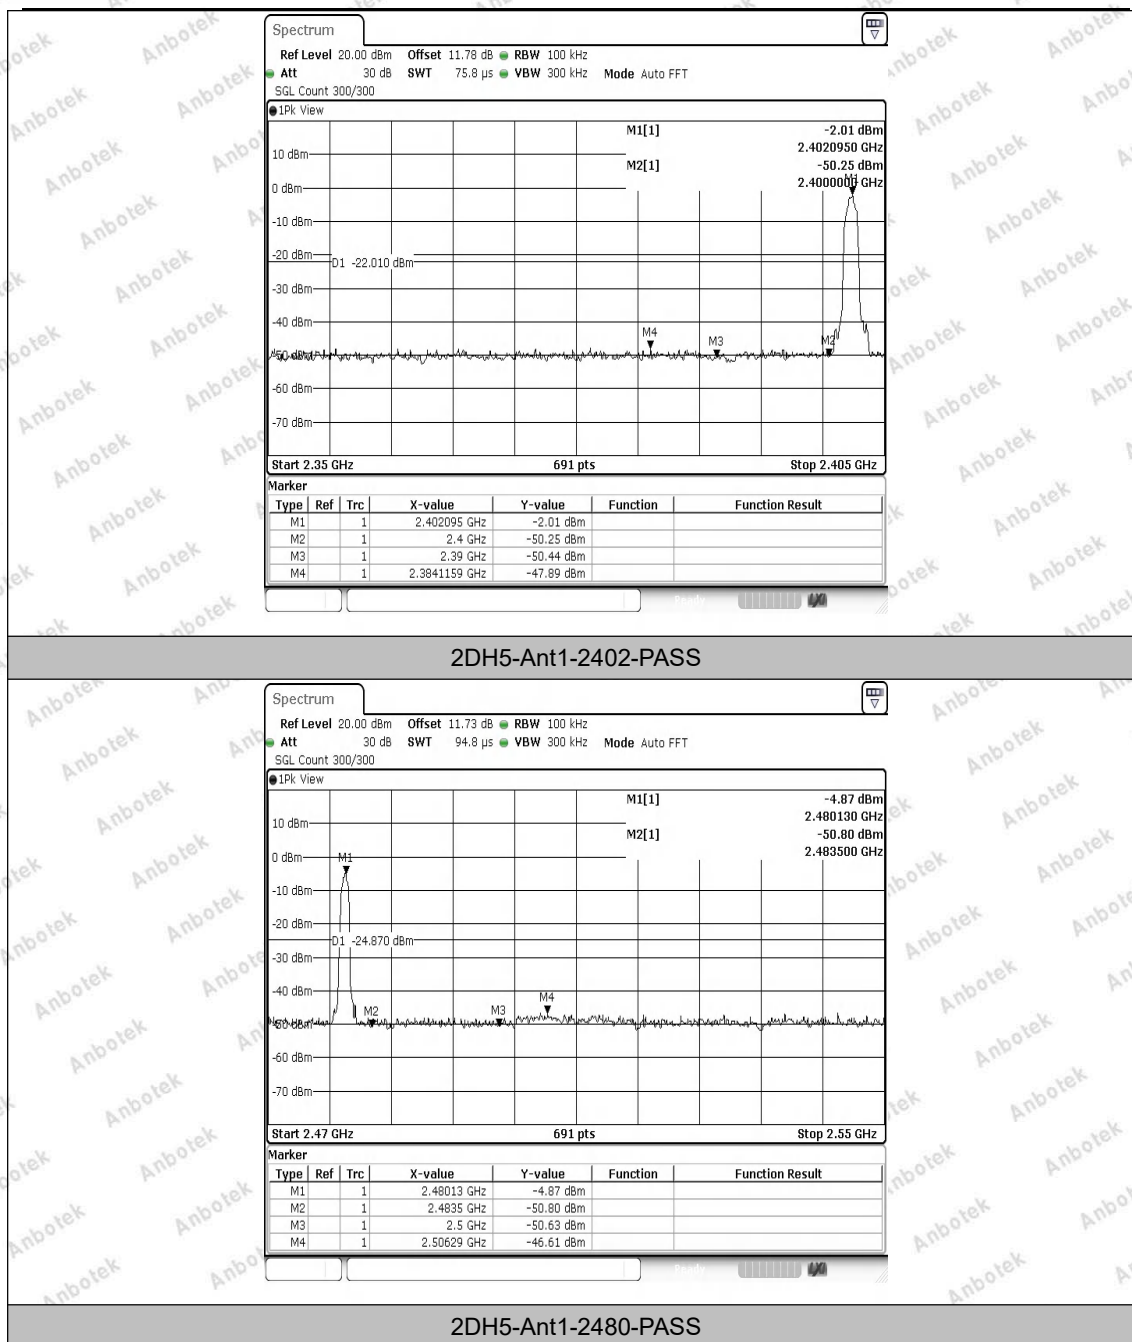

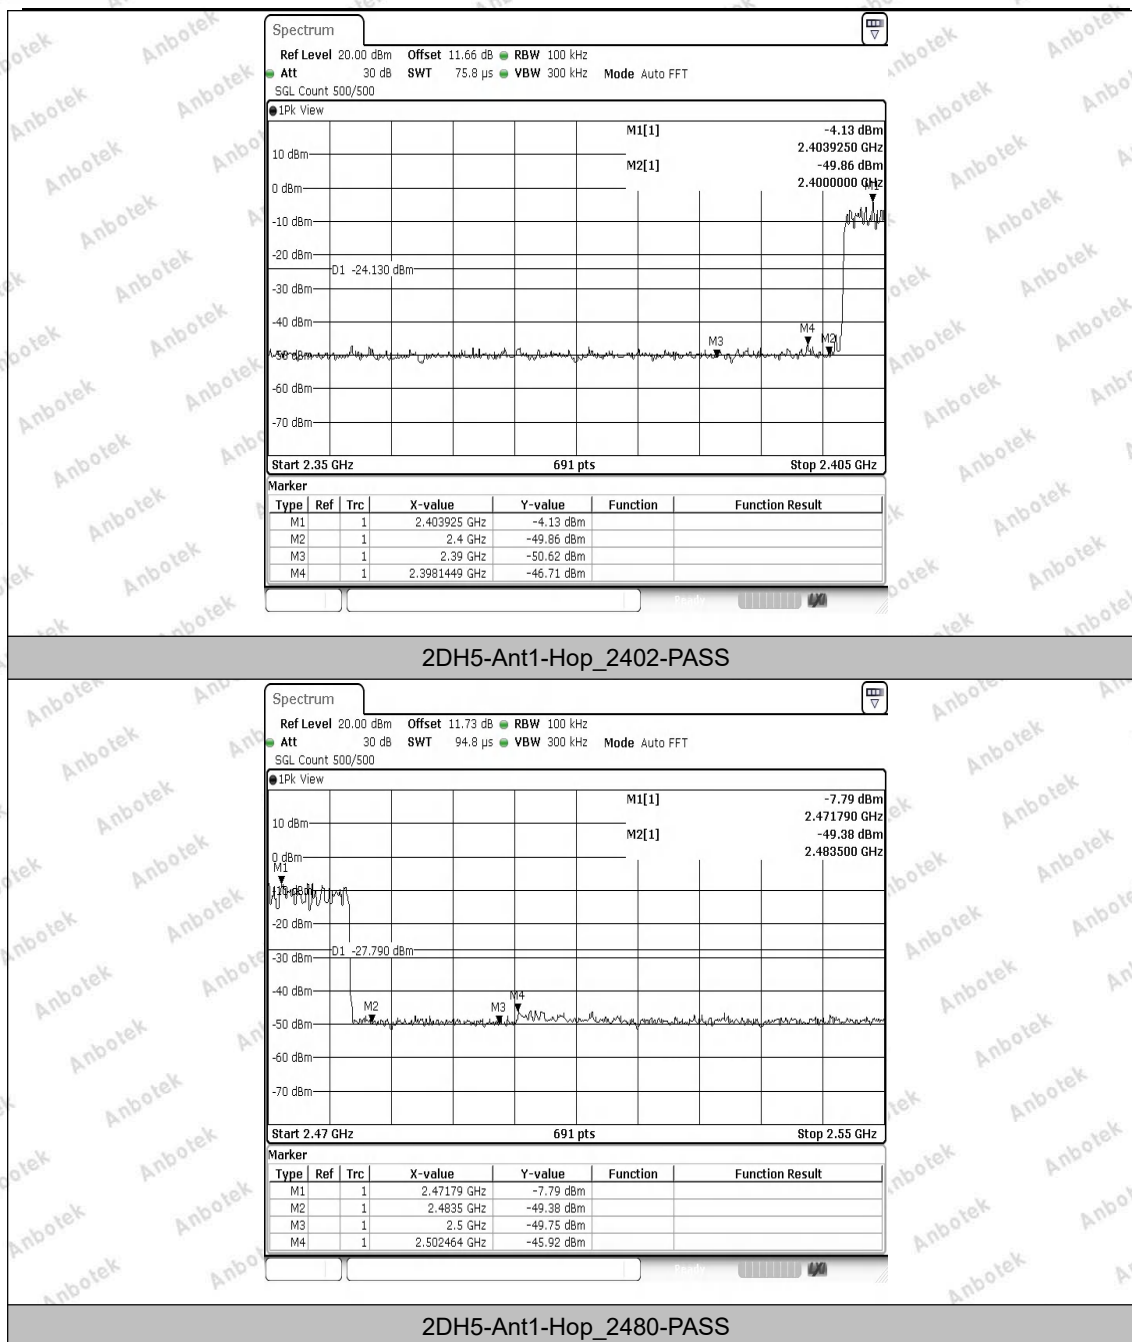

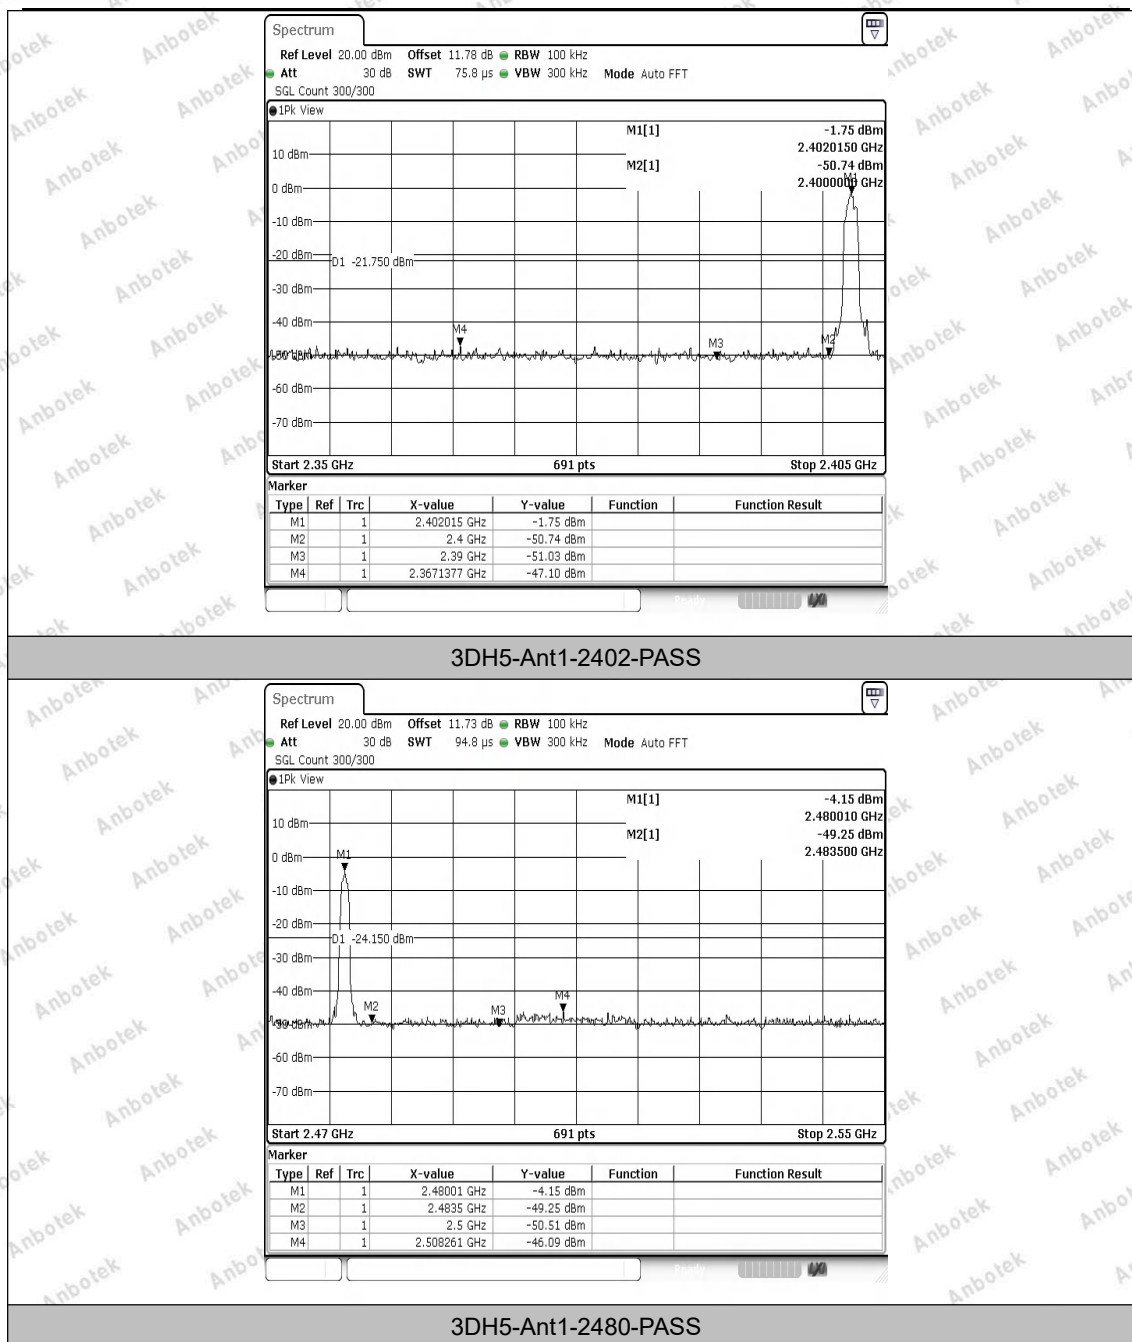

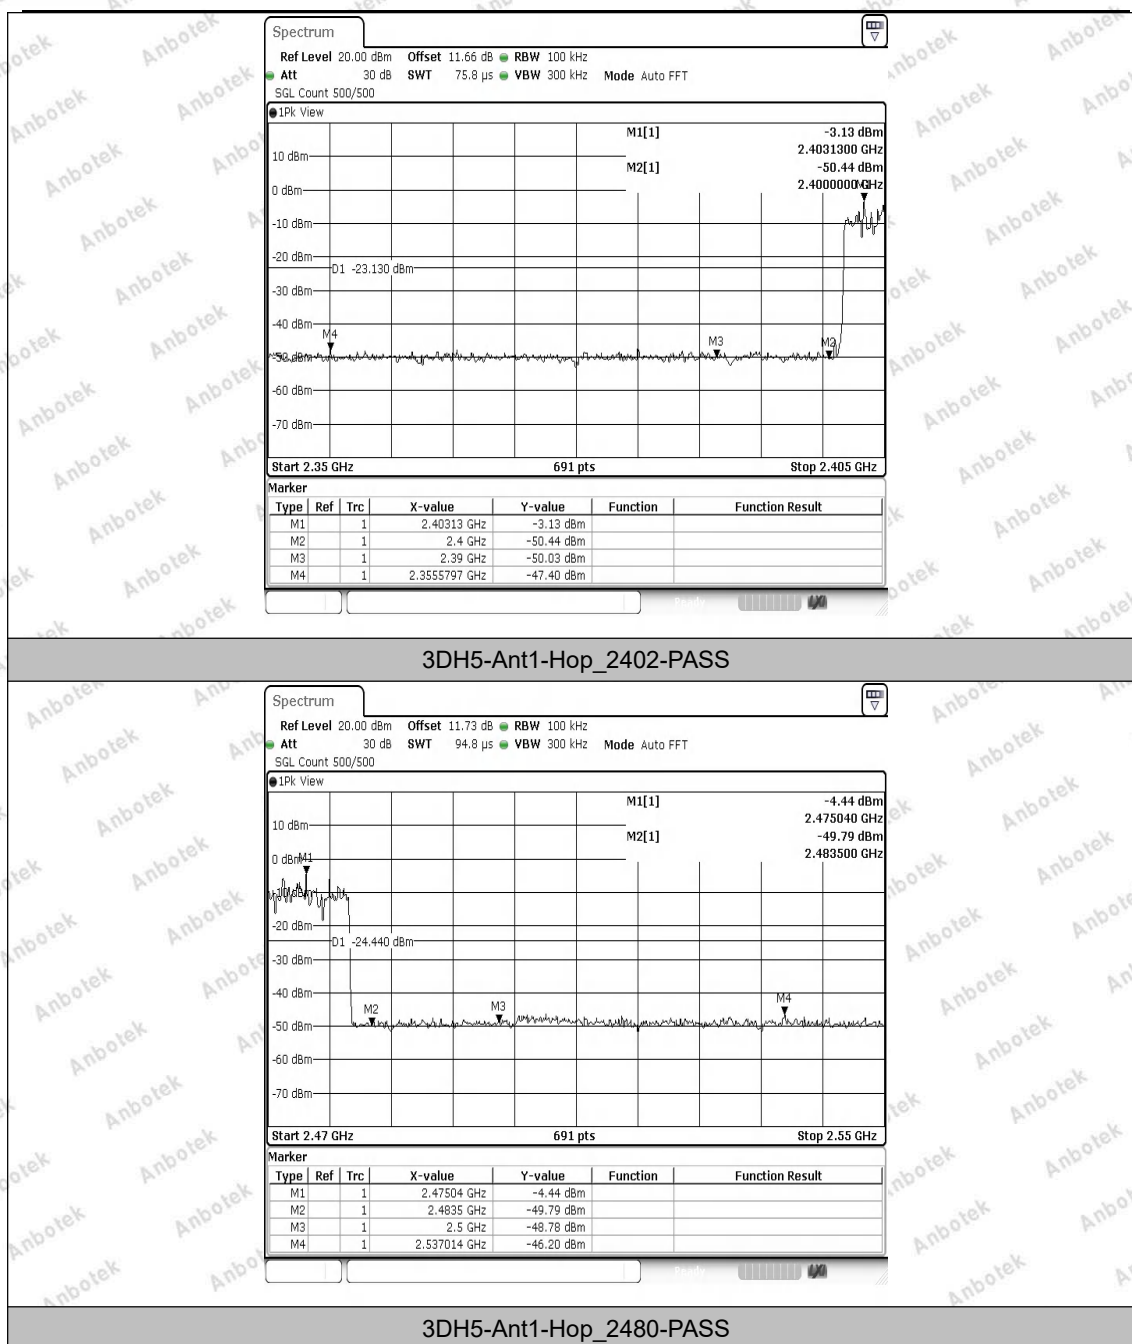


Appendix H: Conducted Spurious Emission

Test Result

TestMode	Antenna	Frequency[MHz]	FreqRange [MHz]	RefLevel [dBm]	Result [dBm]	Limit [dBm]	Verdict
DH5	Ant1	2402	0~Reference	-2.67	-2.67	---	PASS
DH5	Ant1	2402	30~1000	-2.67	-51	≤-22.67	PASS
DH5	Ant1	2402	1000~26500	-2.67	-38.38	≤-22.67	PASS
DH5	Ant1	2441	0~Reference	-3.75	-3.75	---	PASS
DH5	Ant1	2441	30~1000	-3.75	-50.54	≤-23.75	PASS
DH5	Ant1	2441	1000~26500	-3.75	-44.01	≤-23.75	PASS
DH5	Ant1	2480	0~Reference	-5.49	-5.49	---	PASS
DH5	Ant1	2480	30~1000	-5.49	-51.14	≤-25.49	PASS
DH5	Ant1	2480	1000~26500	-5.49	-43.56	≤-25.49	PASS
2DH5	Ant1	2402	0~Reference	-5.80	-5.80	---	PASS
2DH5	Ant1	2402	30~1000	-5.80	-51.39	≤-25.8	PASS
2DH5	Ant1	2402	1000~26500	-5.80	-43.86	≤-25.8	PASS
2DH5	Ant1	2441	0~Reference	-7.12	-7.12	---	PASS
2DH5	Ant1	2441	30~1000	-7.12	-50.9	≤-27.12	PASS
2DH5	Ant1	2441	1000~26500	-7.12	-43.44	≤-27.12	PASS
2DH5	Ant1	2480	0~Reference	-7.83	-7.83	---	PASS
2DH5	Ant1	2480	30~1000	-7.83	-51.35	≤-27.83	PASS
2DH5	Ant1	2480	1000~26500	-7.83	-43.14	≤-27.83	PASS
3DH5	Ant1	2402	0~Reference	-5.55	-5.55	---	PASS
3DH5	Ant1	2402	30~1000	-5.55	-50.96	≤-25.55	PASS
3DH5	Ant1	2402	1000~26500	-5.55	-44.07	≤-25.55	PASS
3DH5	Ant1	2441	0~Reference	-6.46	-6.46	---	PASS
3DH5	Ant1	2441	30~1000	-6.46	-48.26	≤-26.46	PASS
3DH5	Ant1	2441	1000~26500	-6.46	-44.39	≤-26.46	PASS
3DH5	Ant1	2480	0~Reference	-4.19	-4.19	---	PASS
3DH5	Ant1	2480	30~1000	-4.19	-51.14	≤-24.19	PASS
3DH5	Ant1	2480	1000~26500	-4.19	-44.17	≤-24.19	PASS



Test Graphs

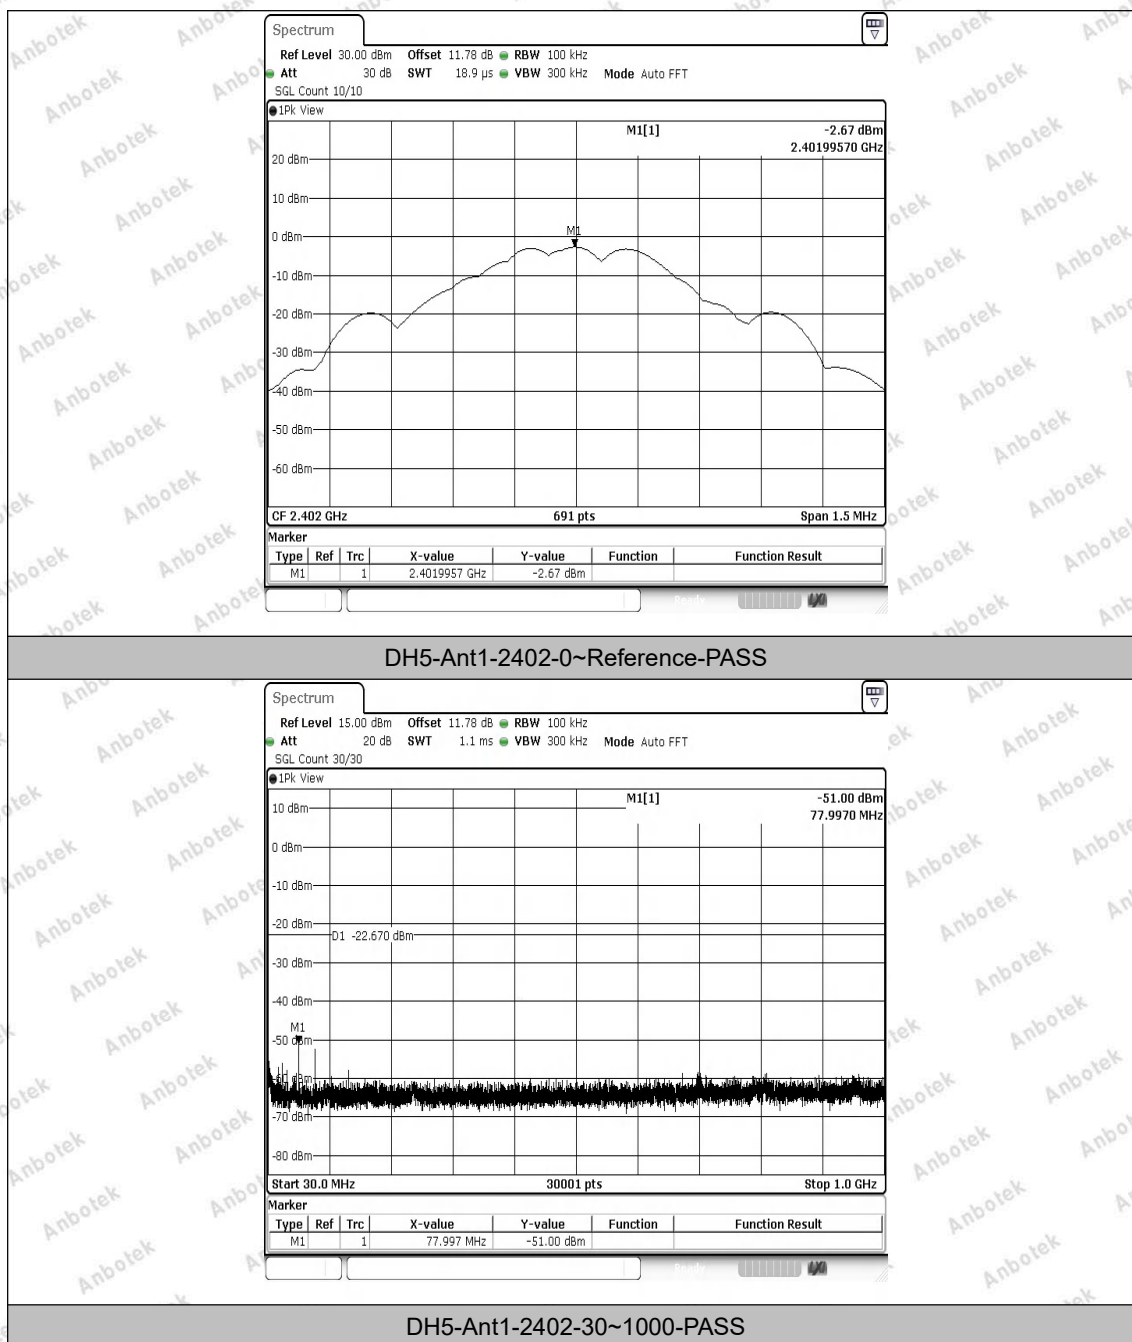


Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hahqcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China,
Tel: (86) 0755-26066440 Email: service@anbotek.com





Hotline
400-003-0500
www.anbotek.com



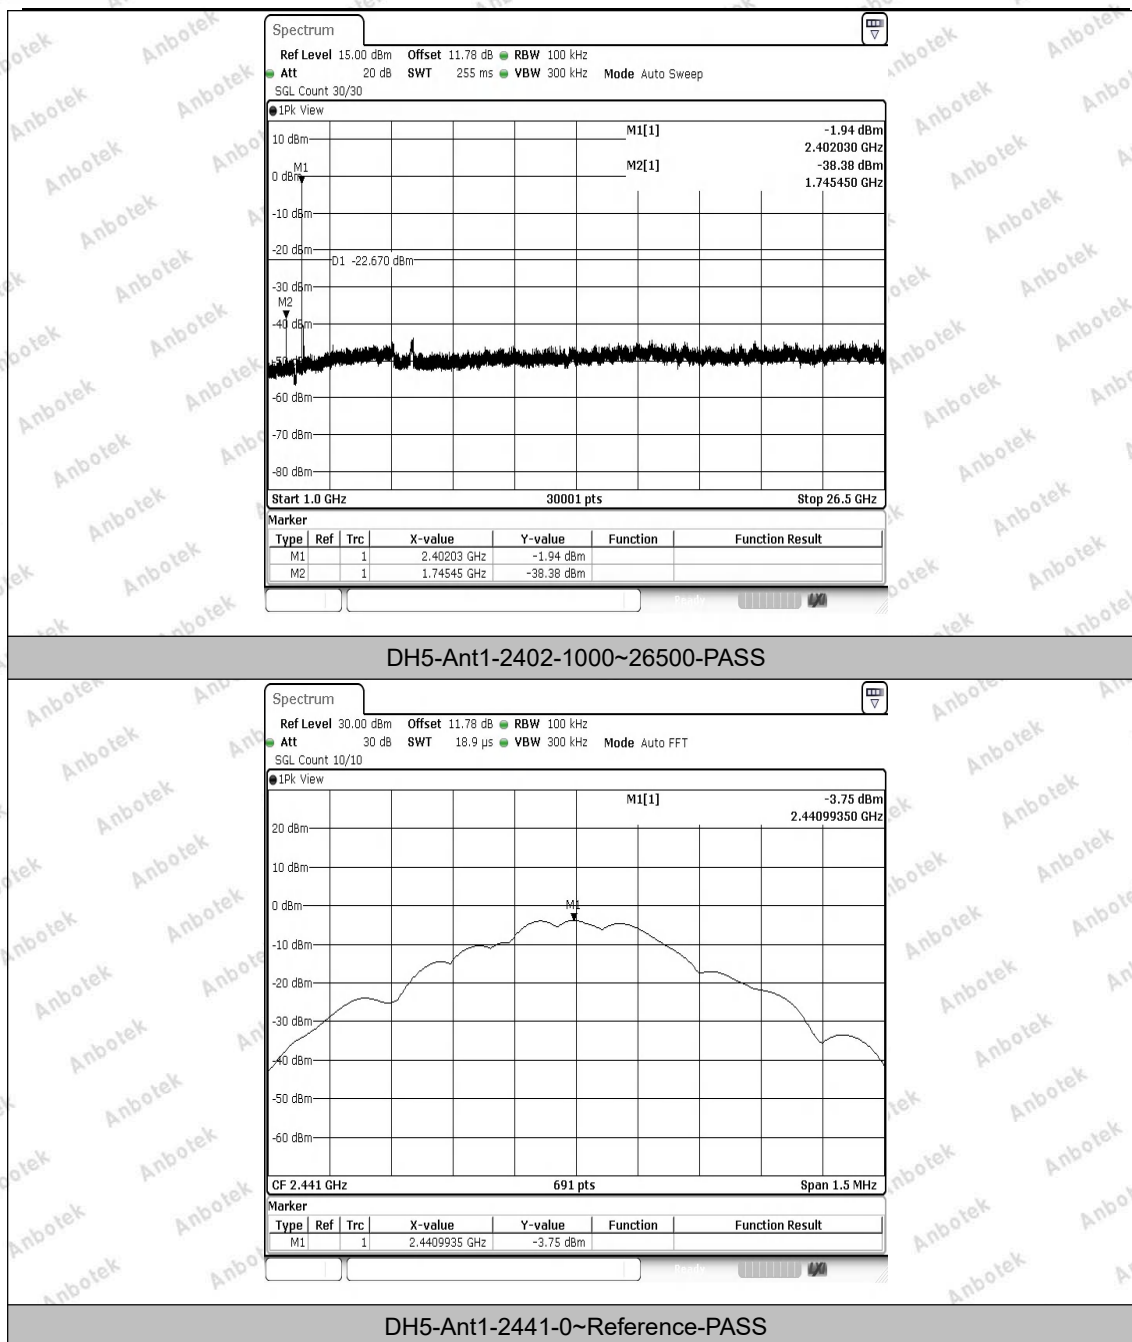


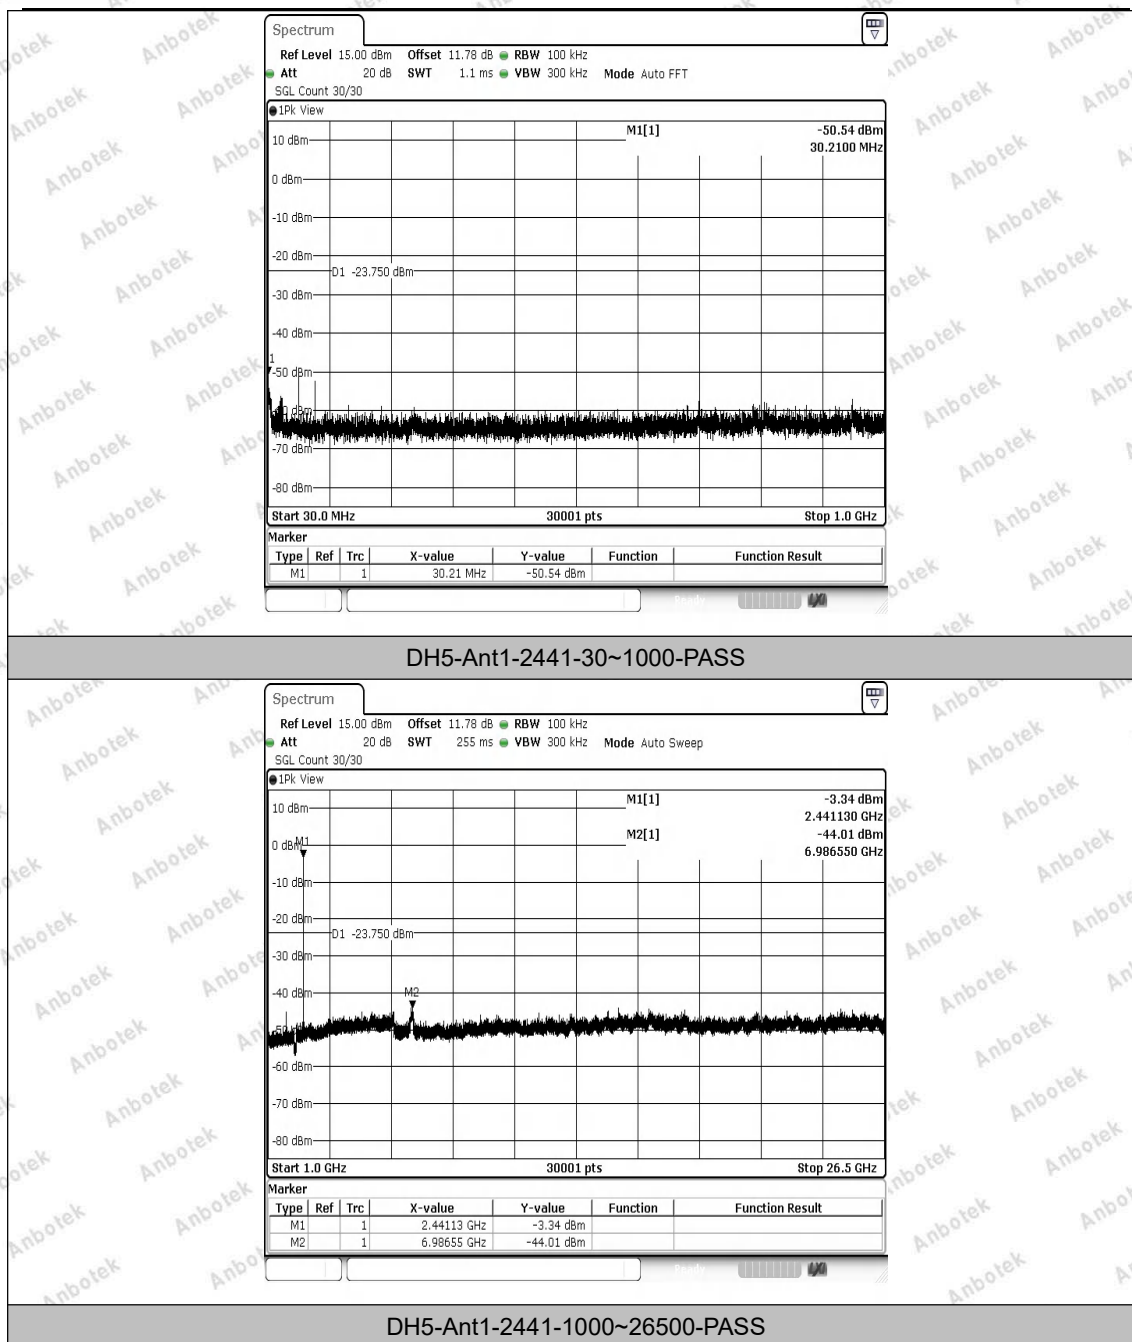

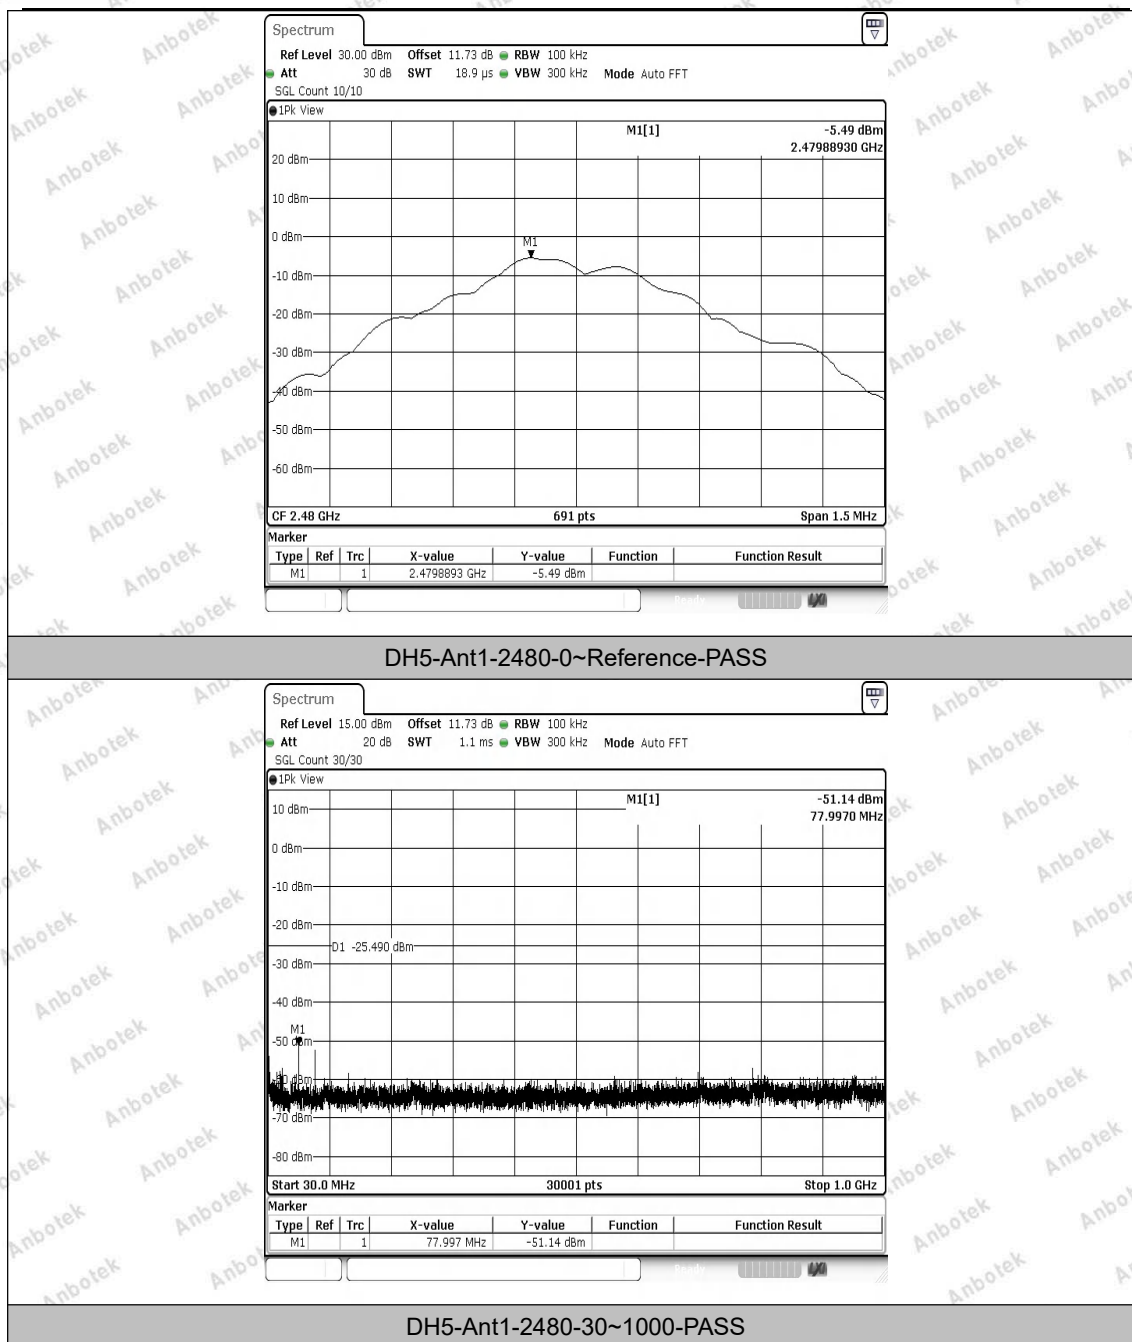

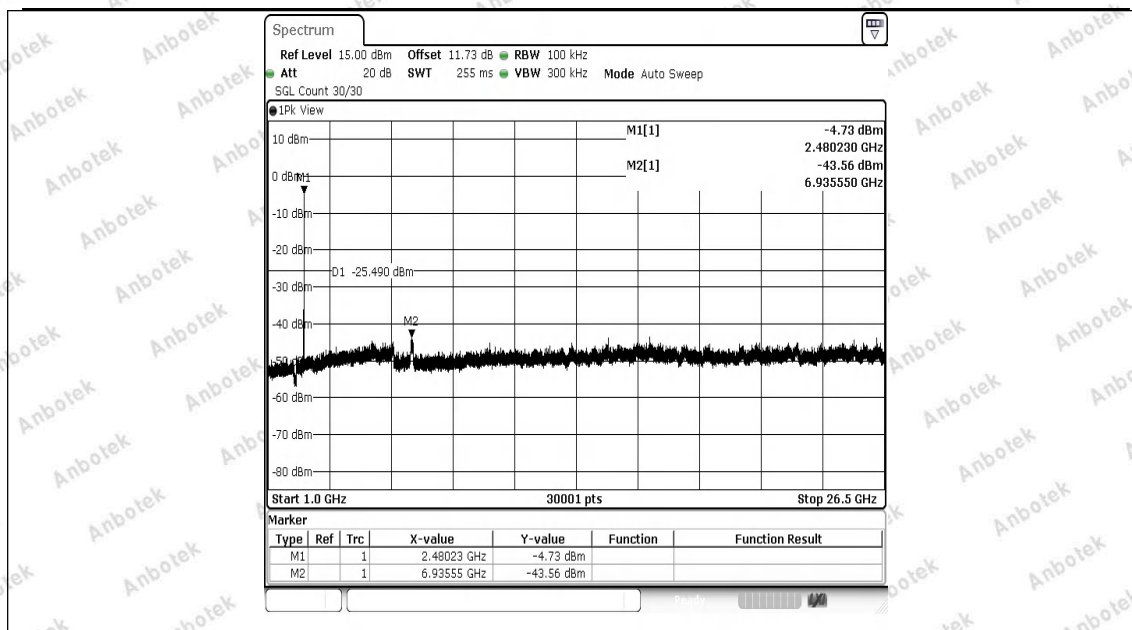



DH5-Ant1-2480-1000~26500-PASS

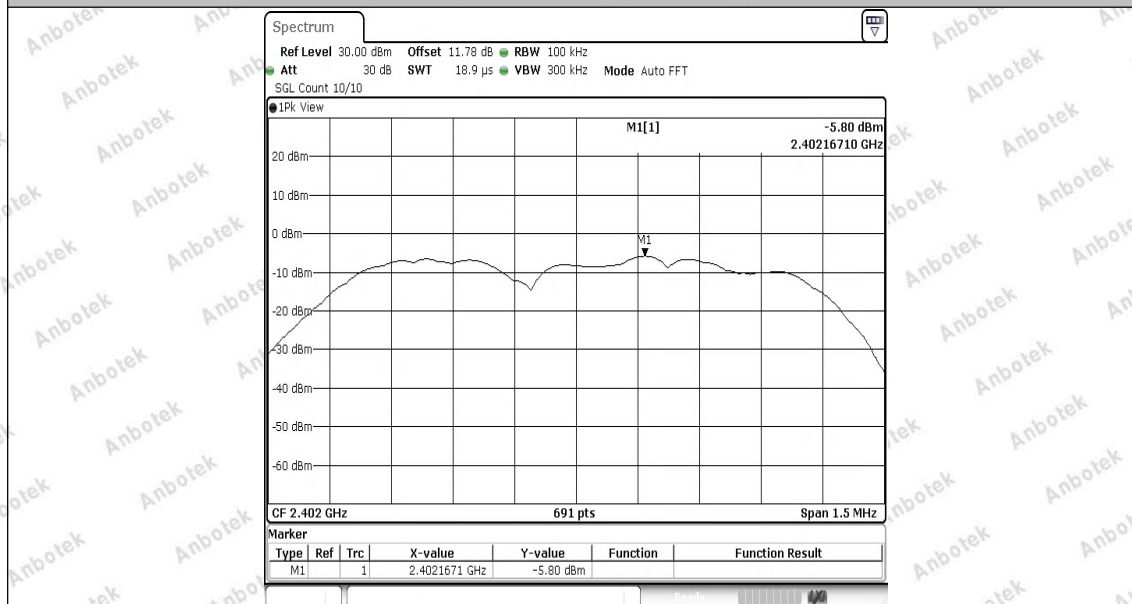


2DH5-Ant1-2402-0~Reference-PASS




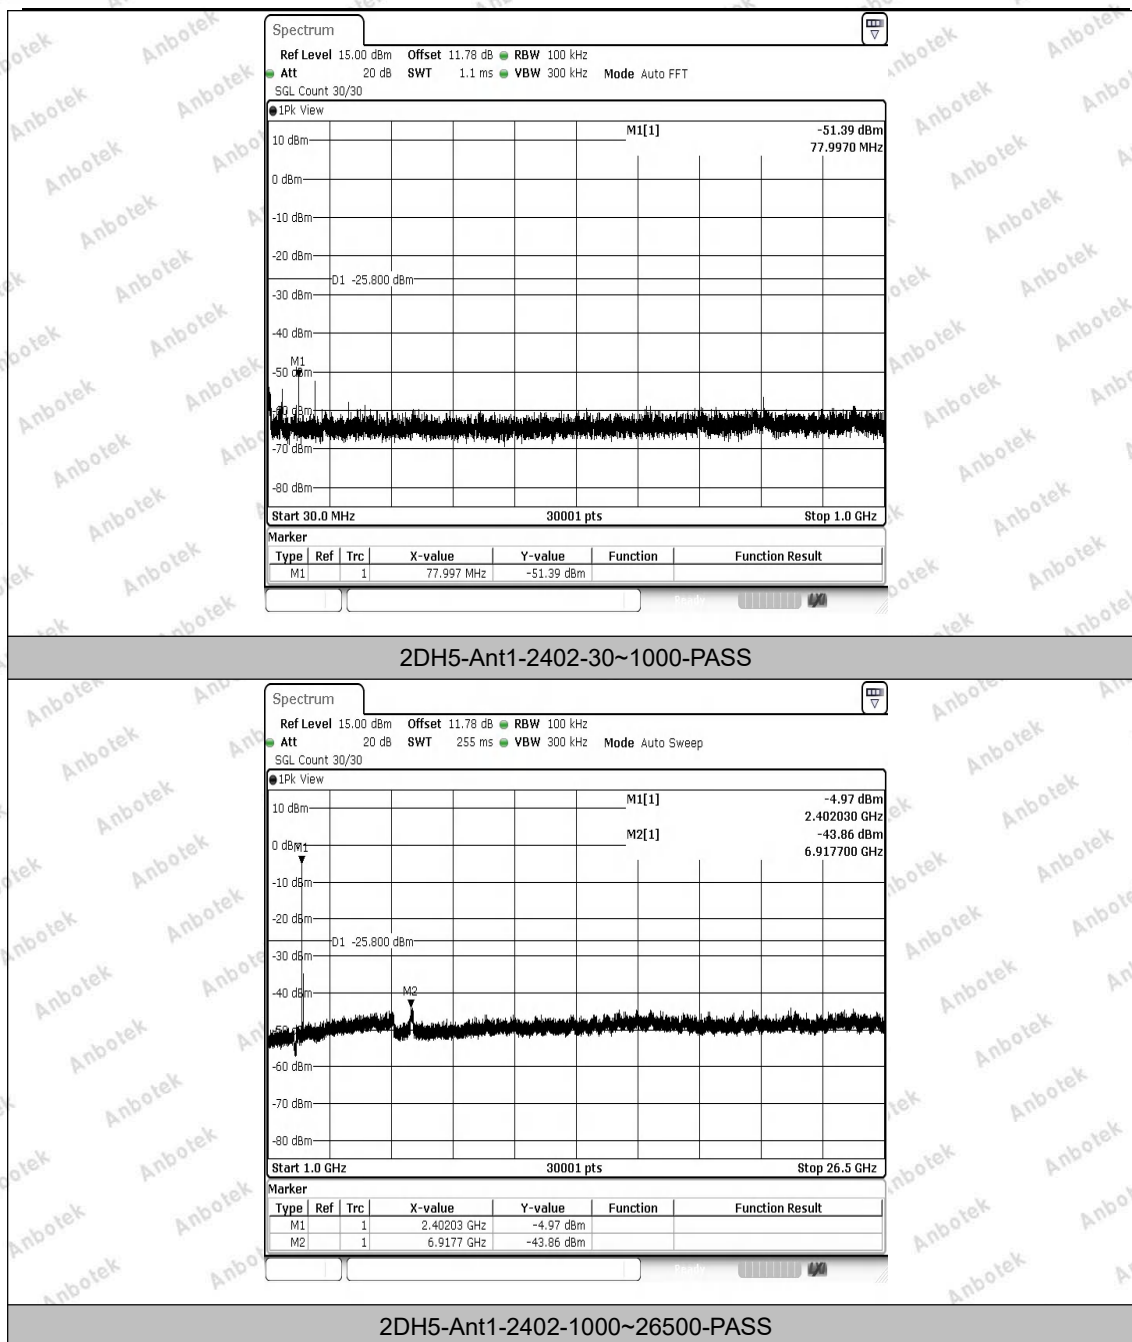

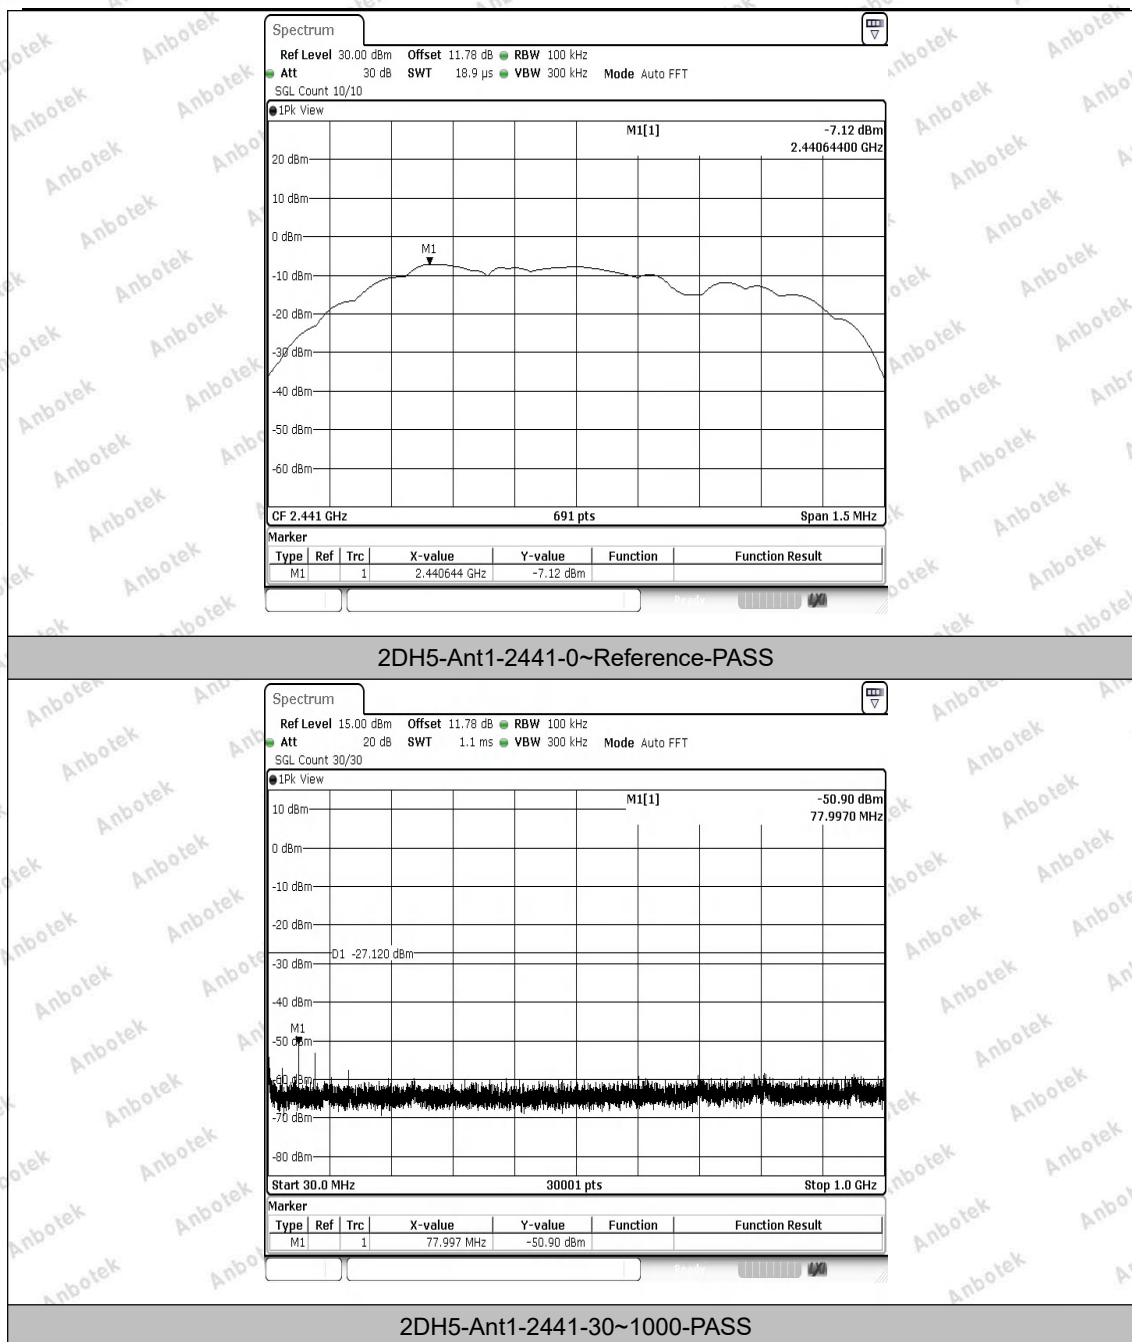

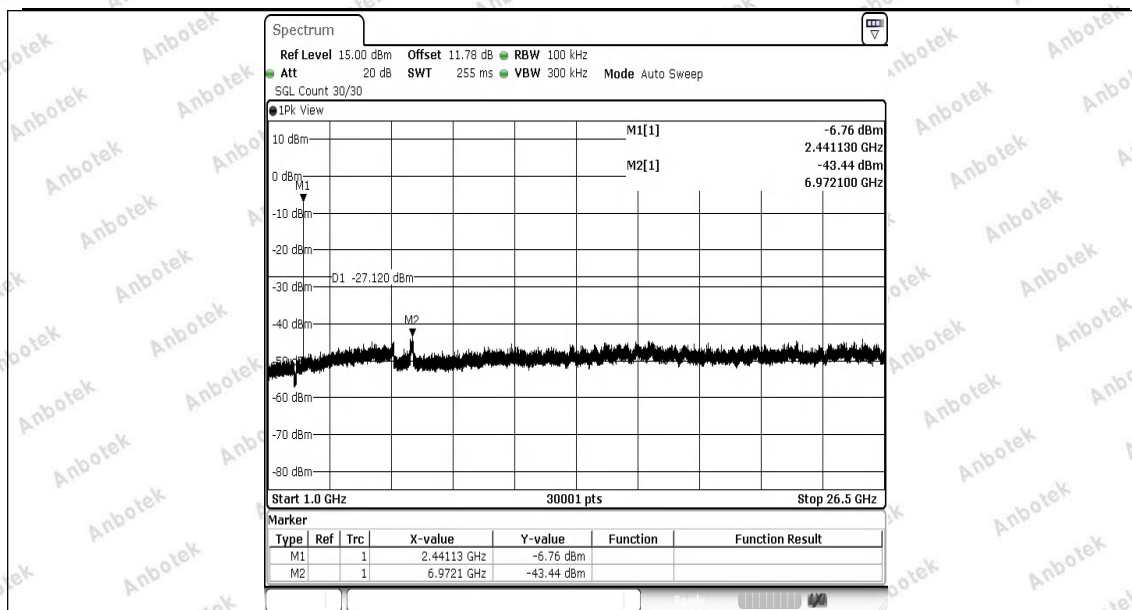



2DH5-Ant1-2441-1000~26500-PASS

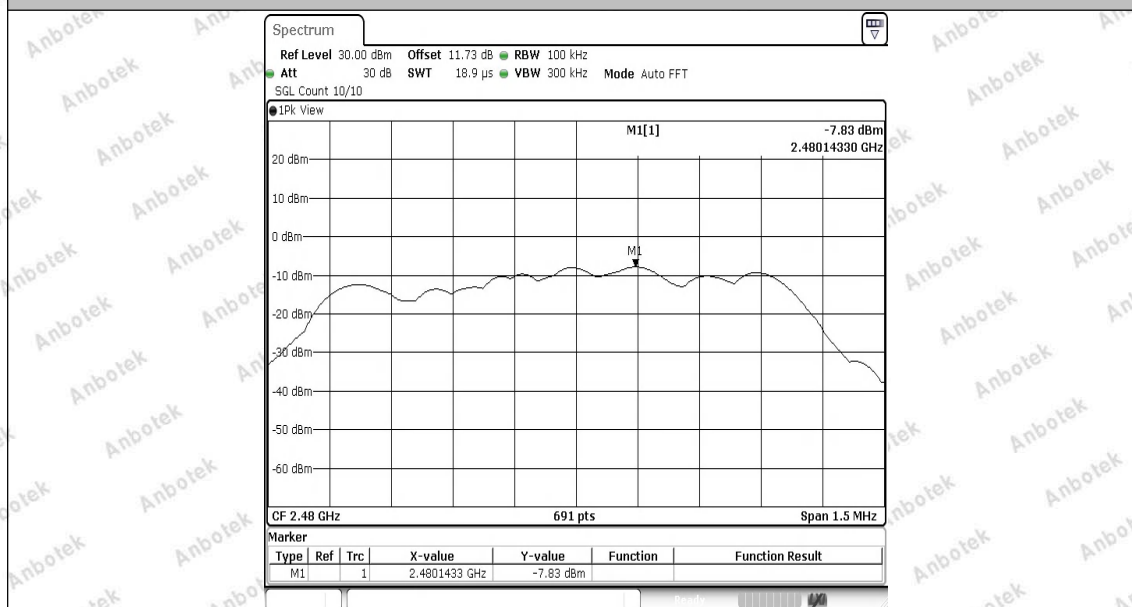


2DH5-Ant1-2480-0~Reference-PASS




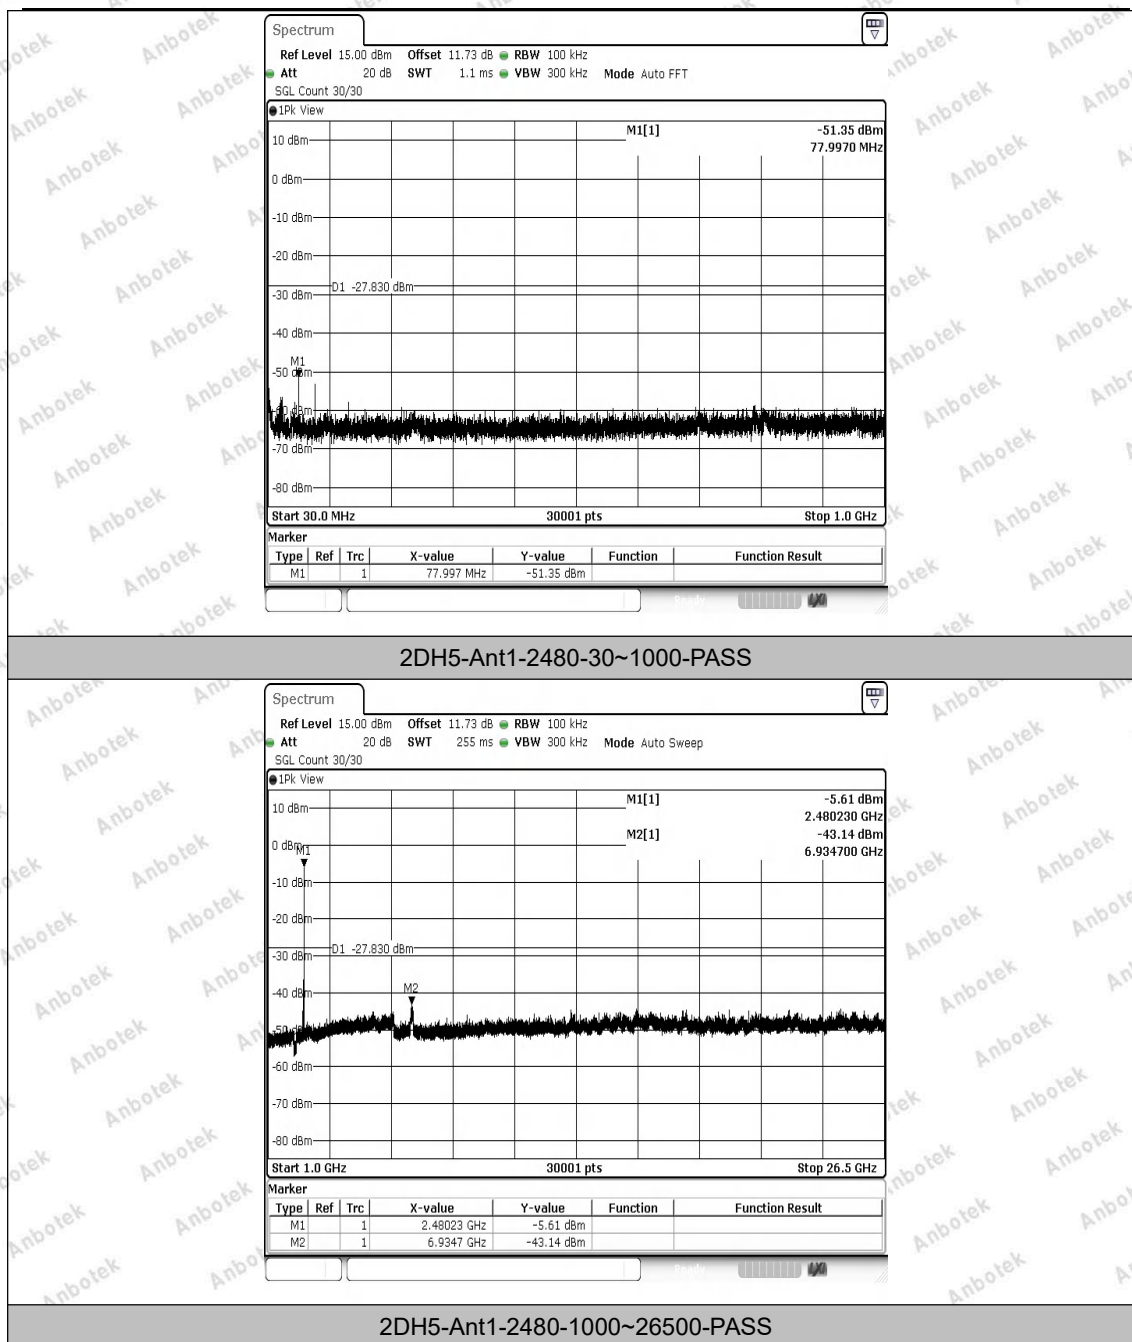

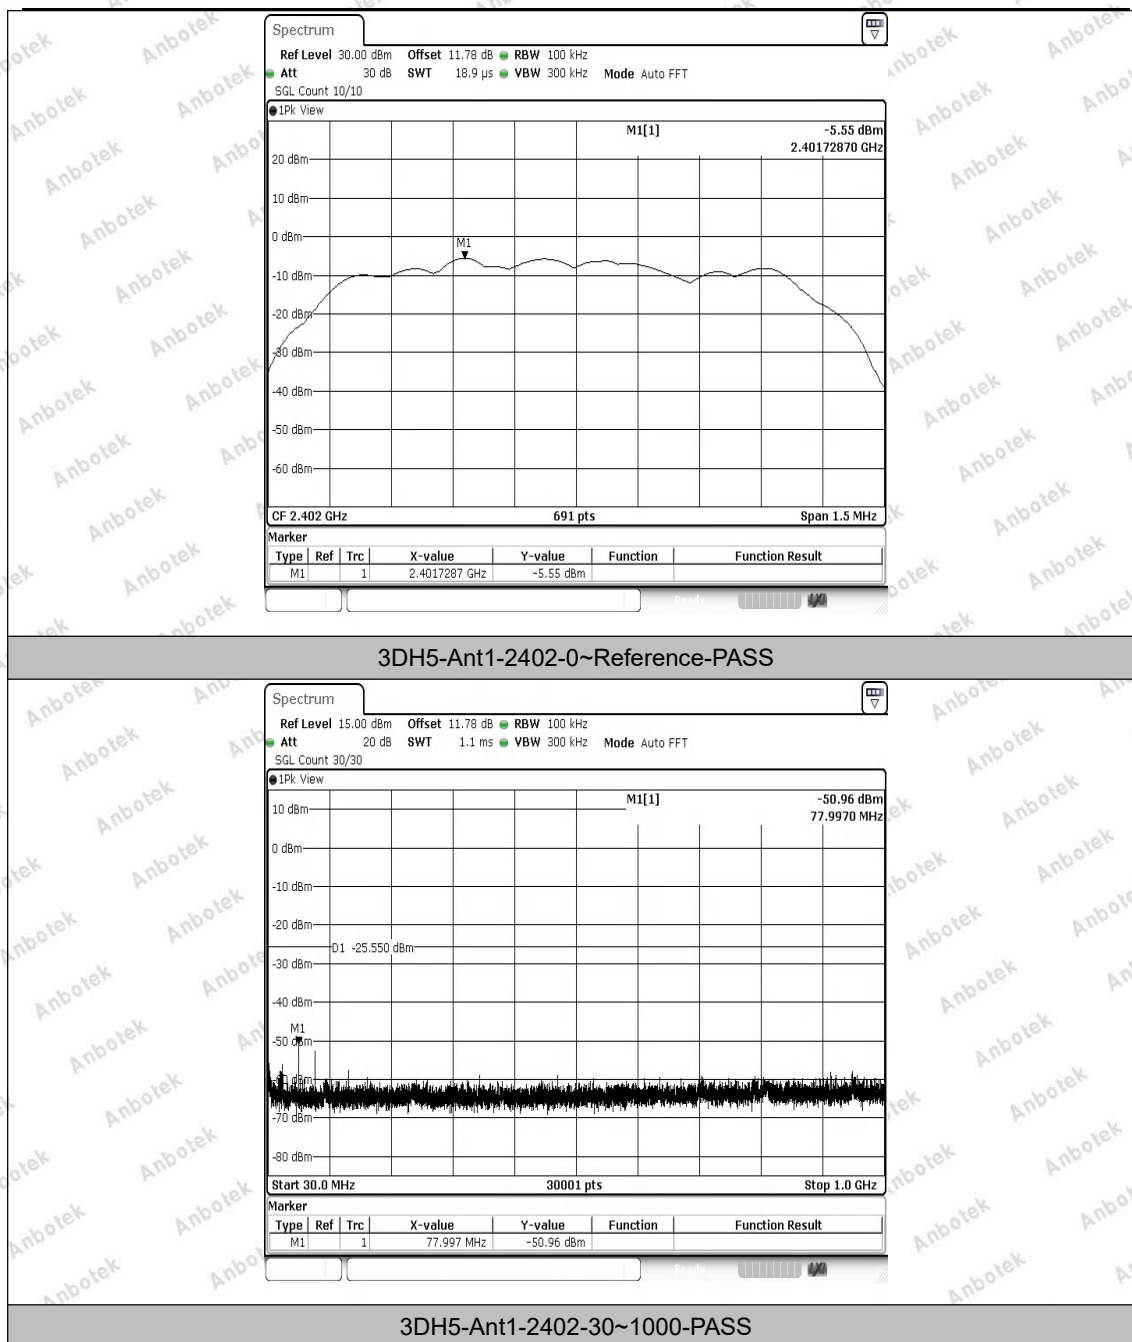

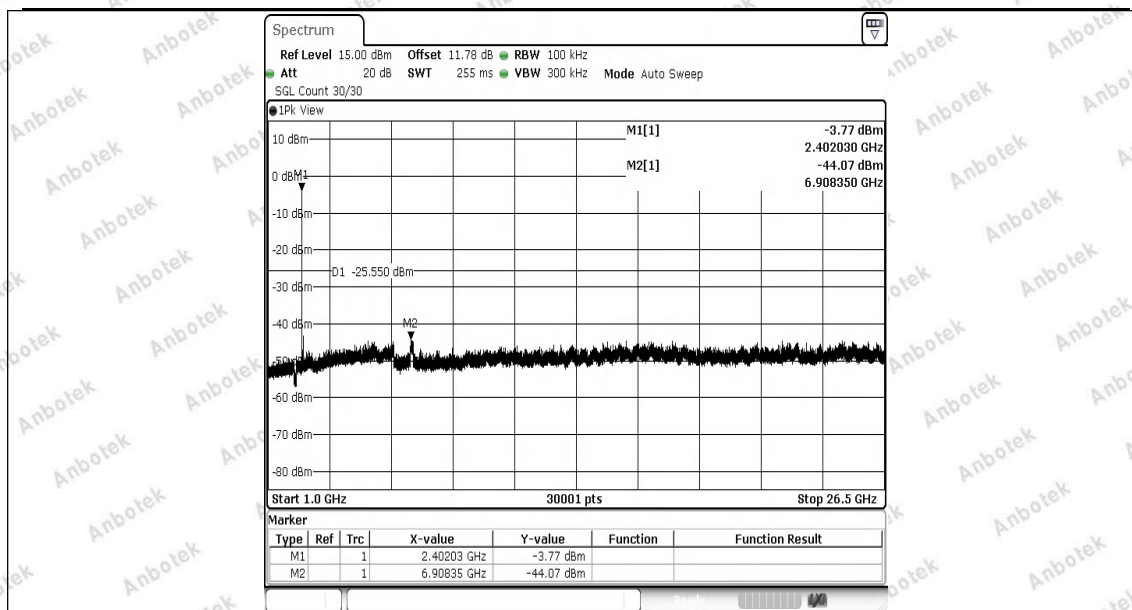



3DH5-Ant1-2402-1000~26500-PASS

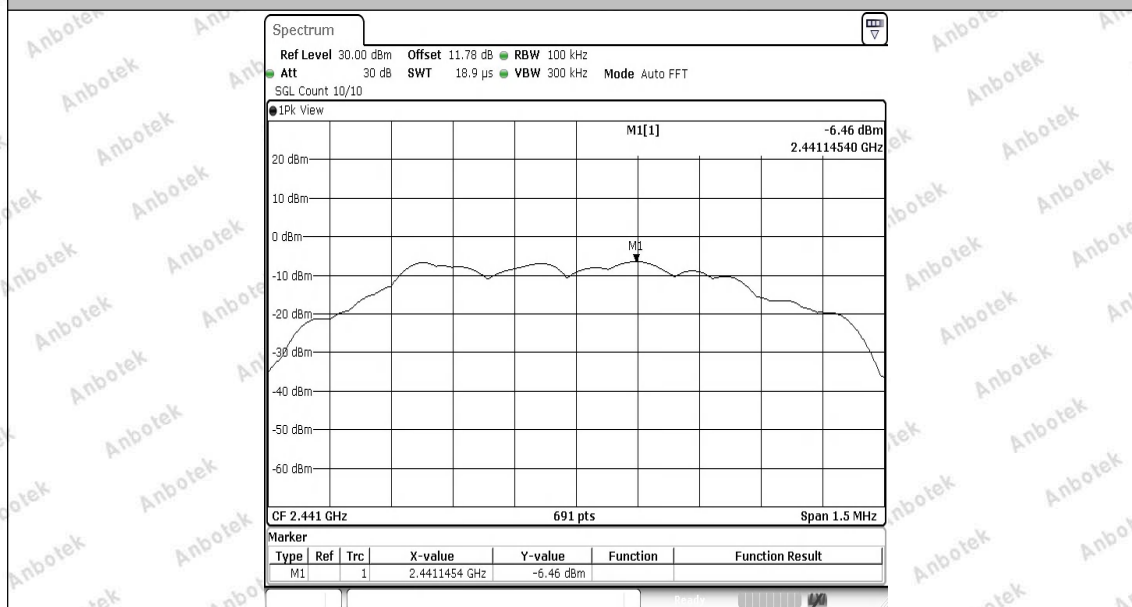


3DH5-Ant1-2441-0~Reference-PASS



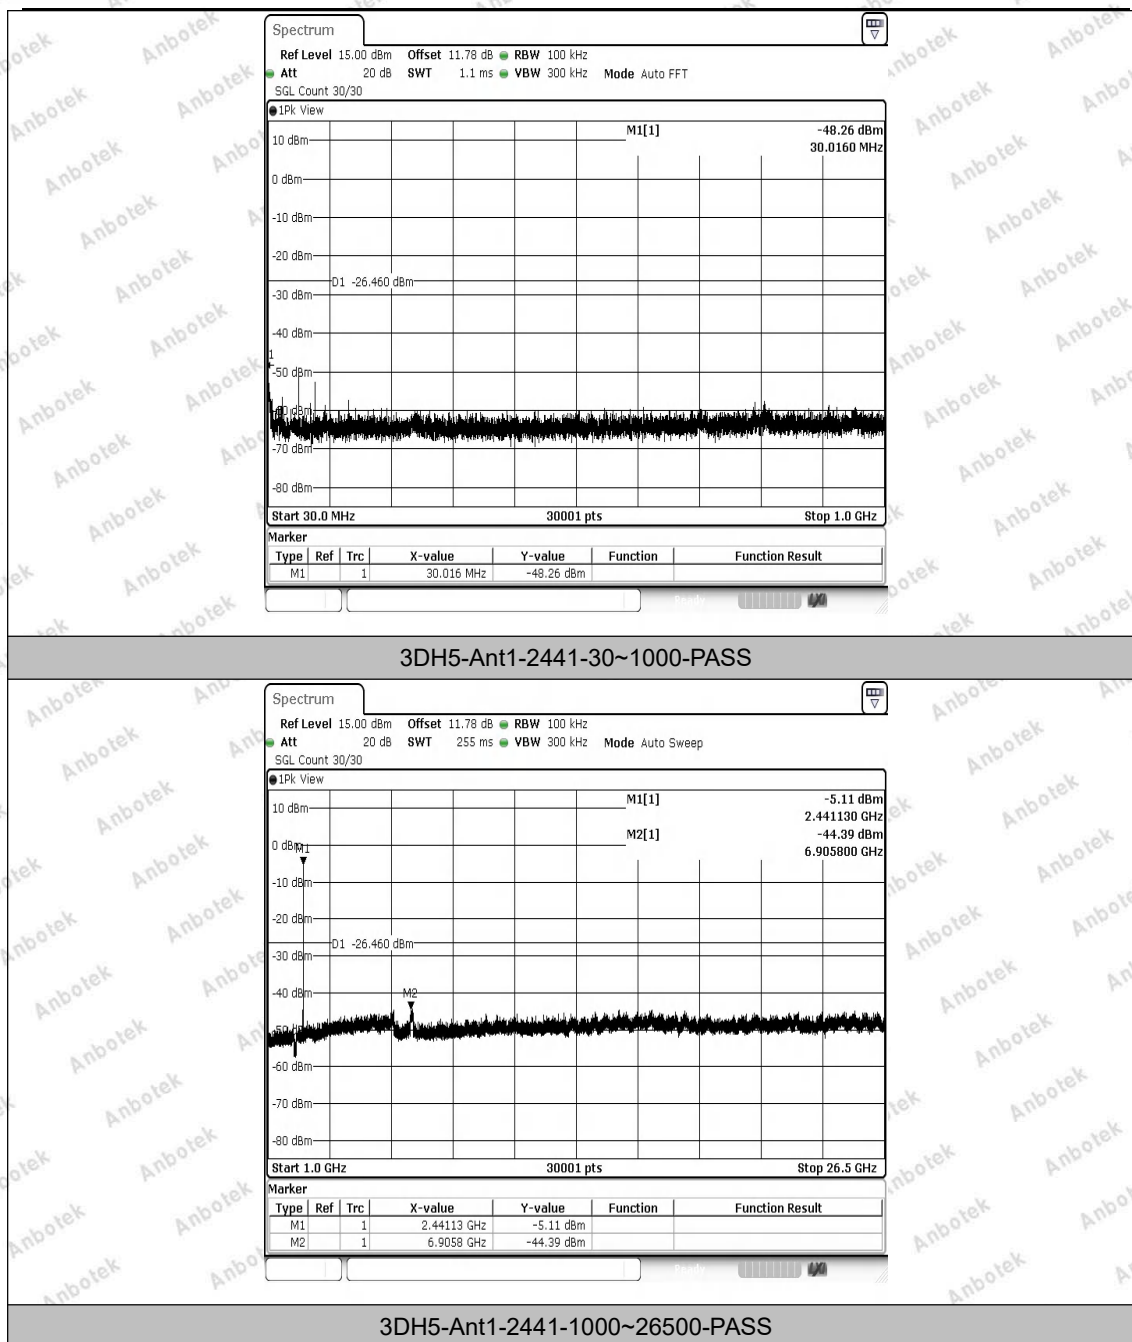

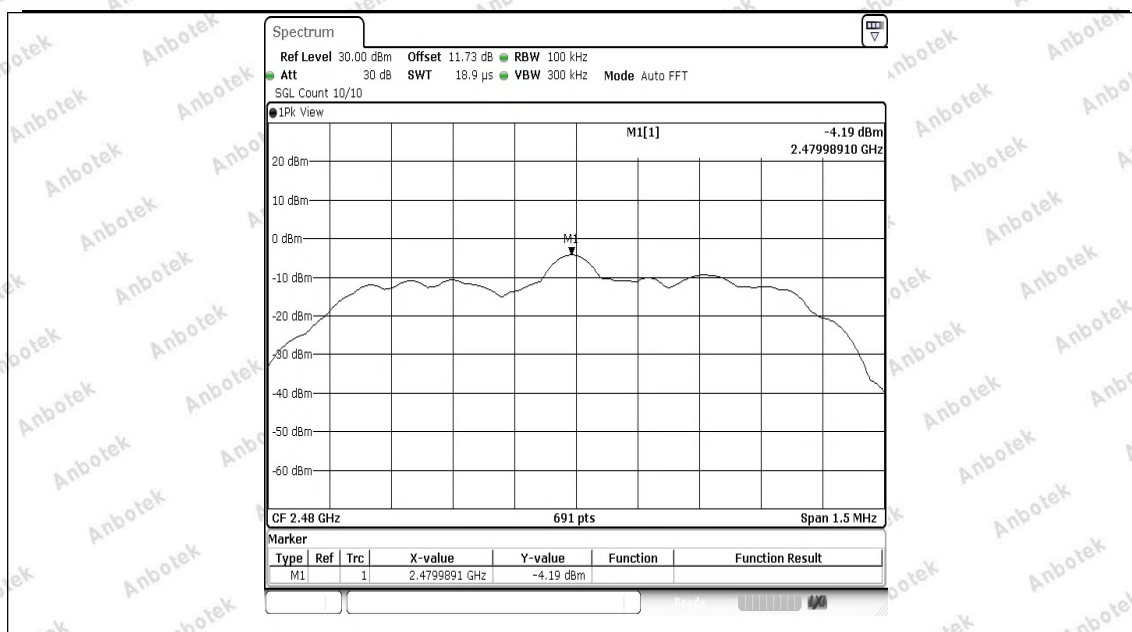


3DH5-Ant1-2480-0~Reference-PASS

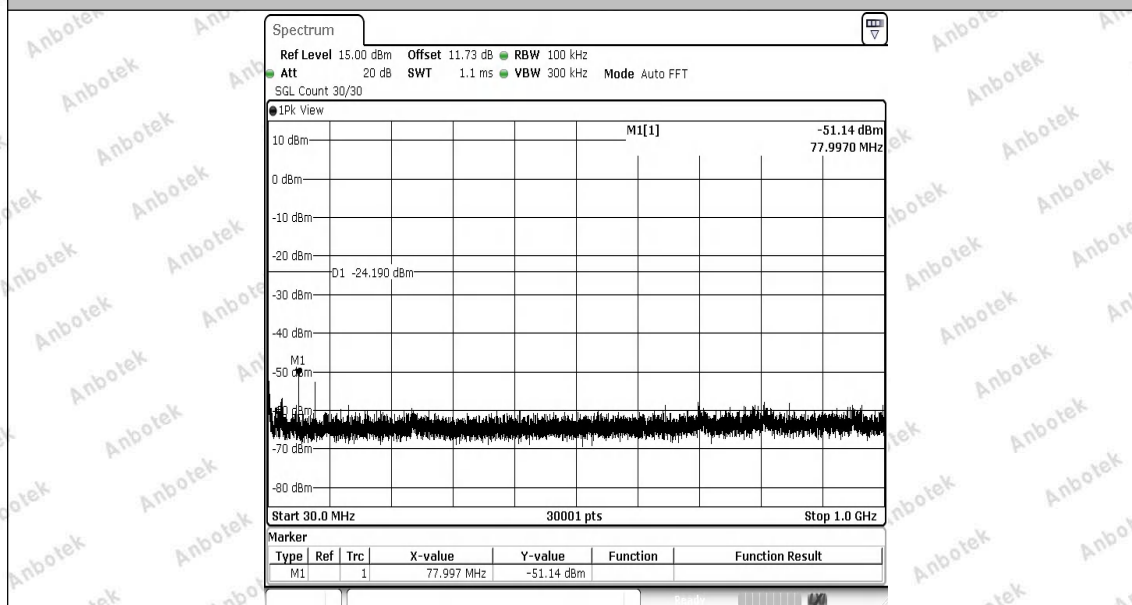

3DH5-Ant1-2480-30~1000-PASS



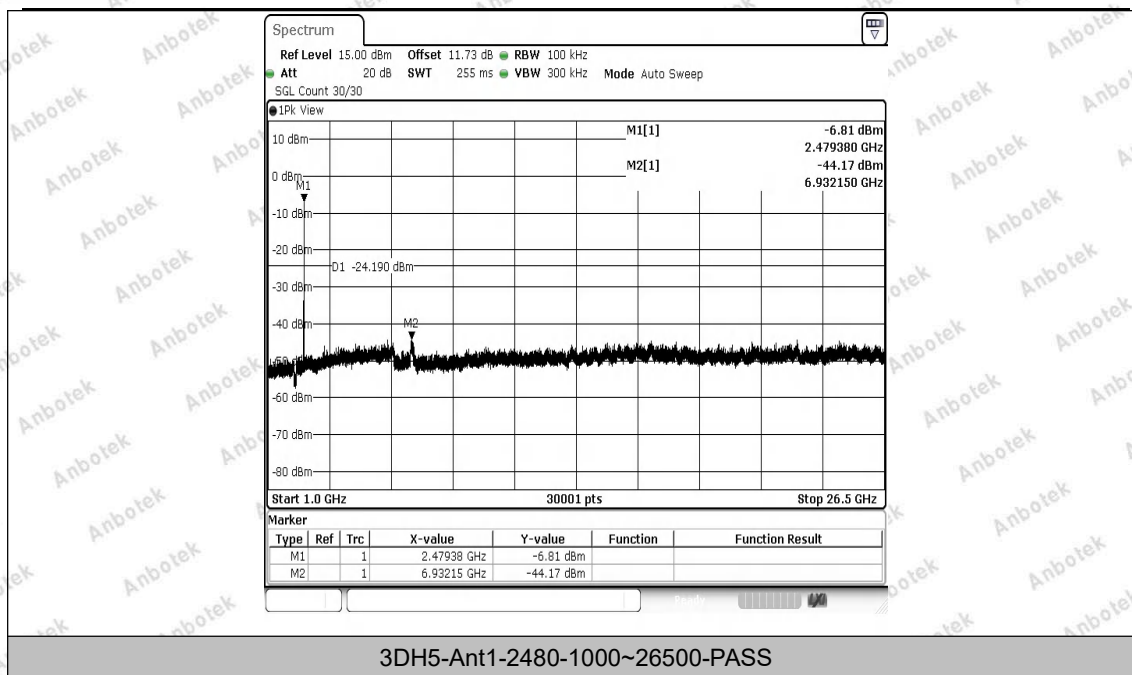

---END---

